Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

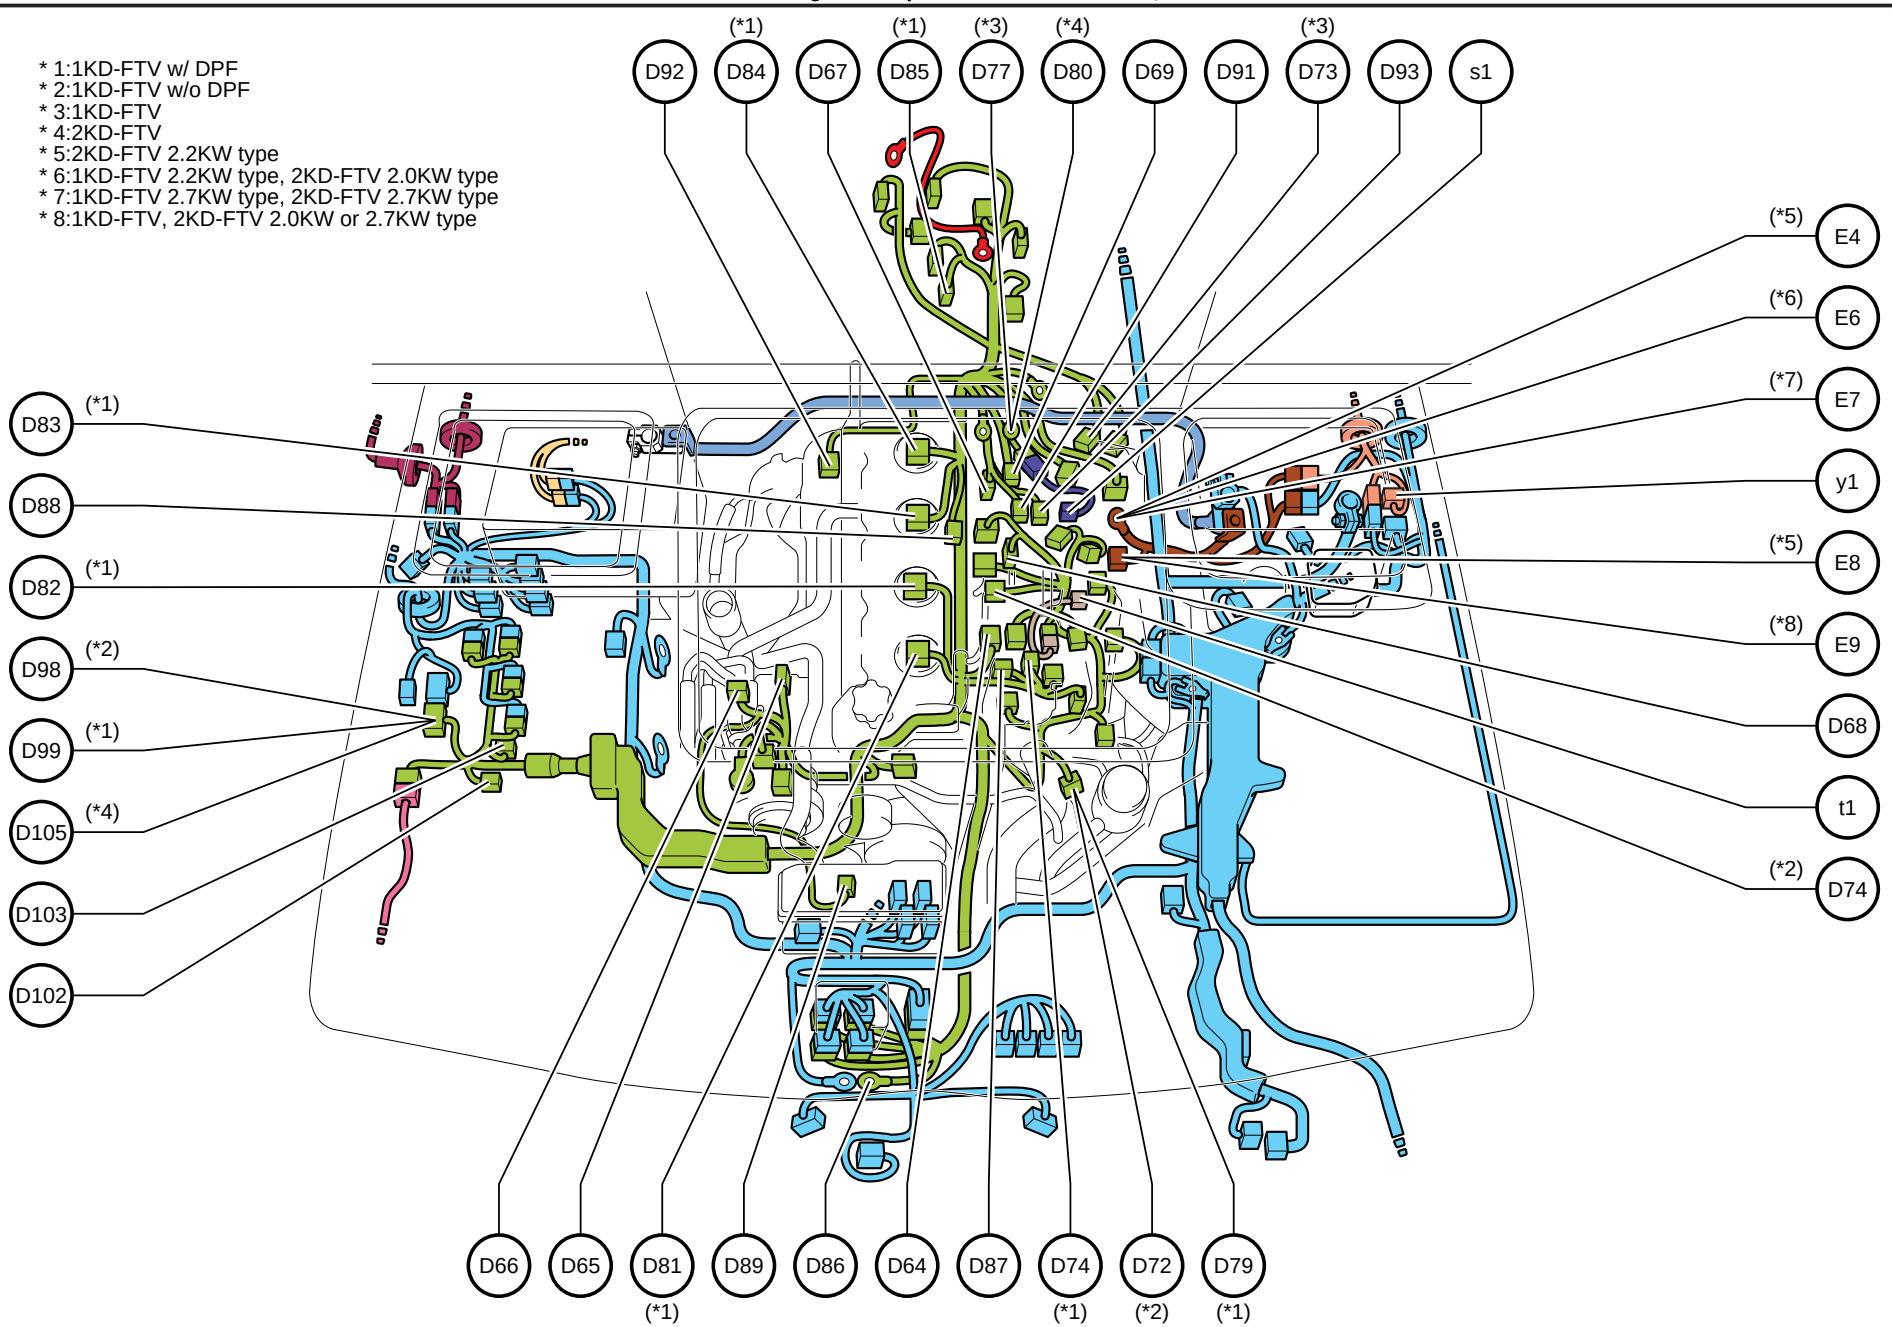

D 64 Pressure Discharge Valve
D 65 Turbocharger Variable Nozzle Motor Assembly
D 66 Turbocharger Variable Nozzle Motor Assembly
D 67 Swirl Control Valve
D 68 VSV (EGR Cut)
D 69 Fuel Pressure Sensor
D 72 Crankshaft Position Sensor
D 73 VRV (EGR)
D 74 VSV (EGR)
D 77 Glow Plug
D 79 Crankshaft Position Sensor
D 80 Glow Plug
D 81 Fuel Injector Assembly (No.1)
D 82 Fuel Injector Assembly (No.2)
D 83 Fuel Injector Assembly (No.3)
D 84 Fuel Injector Assembly (No.4)
D 85 A/T Fluid Temp. Sensor
D 86 Connector Holder NO.2
D 87 Pressure Discharge Valve
D 88 Glow Plug
D 89 Oil Pressure Switching Valve Assembly
D 91 Suction Control Valve Assembly
D 92 Exhaust Fuel Addition Injector Assembly
D 93 Oil Pressure Sender Gauge Assembly
D 98 Engine ECU
D 99 Engine ECU
D 102 Junction Connector
D 103 Junction Connector
D 105 Engine ECU

E 4 Starter
E 6 Starter
E 7 Starter
E 8 Starter
E 9 Starter

s 1 Electric EGR Control Valve Assembly

t 1 Diesel Throttle Body Assembly

y 1 Slide Door Control Junction (Male LH)

D64
Gray

D65
Black

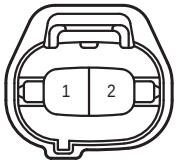

D66
Black

D67
Blue

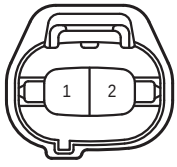

D68
Brown

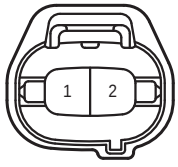

D69
Black

D72
Dark Gray

D73
Black

D74
Blue

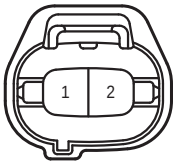

D77



D79
Dark Gray

D80



D81
Black

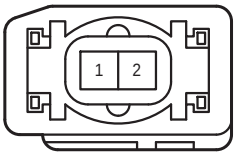

D82
Gray

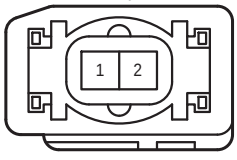

D83
Black

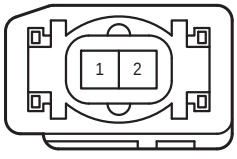

D84
Gray

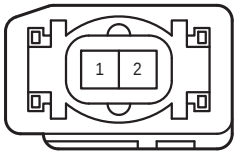

D85
Black

D86



D87
Gray

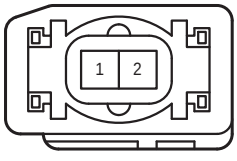

D88
Black

D89
Black

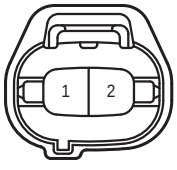

D91
Brown

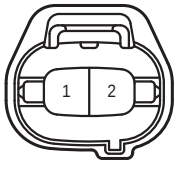

D92
Black

D93
Black

D98
Black

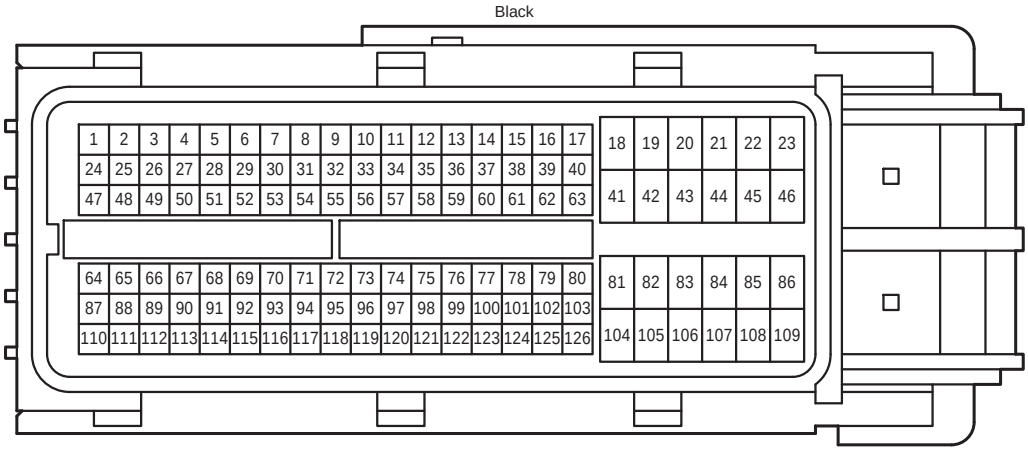

D99
Black

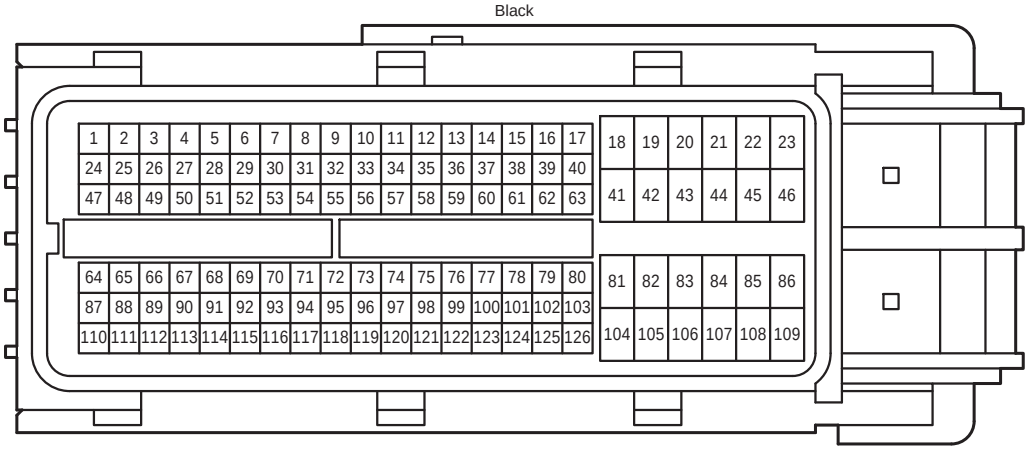

D102
Gray

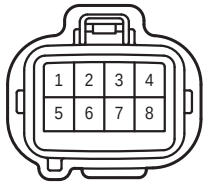

D103
Gray

D105
Black

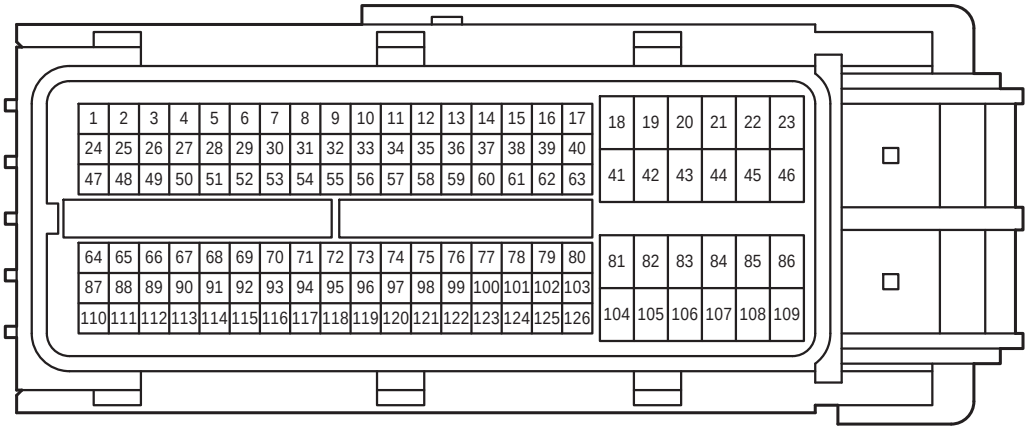

E4



E6



E7



E8
Black

E9
Black

s1
Black

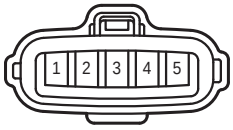

t1
Black

y1
White