Position of Parts in Engine Compartment <LHD 2TR-FE>

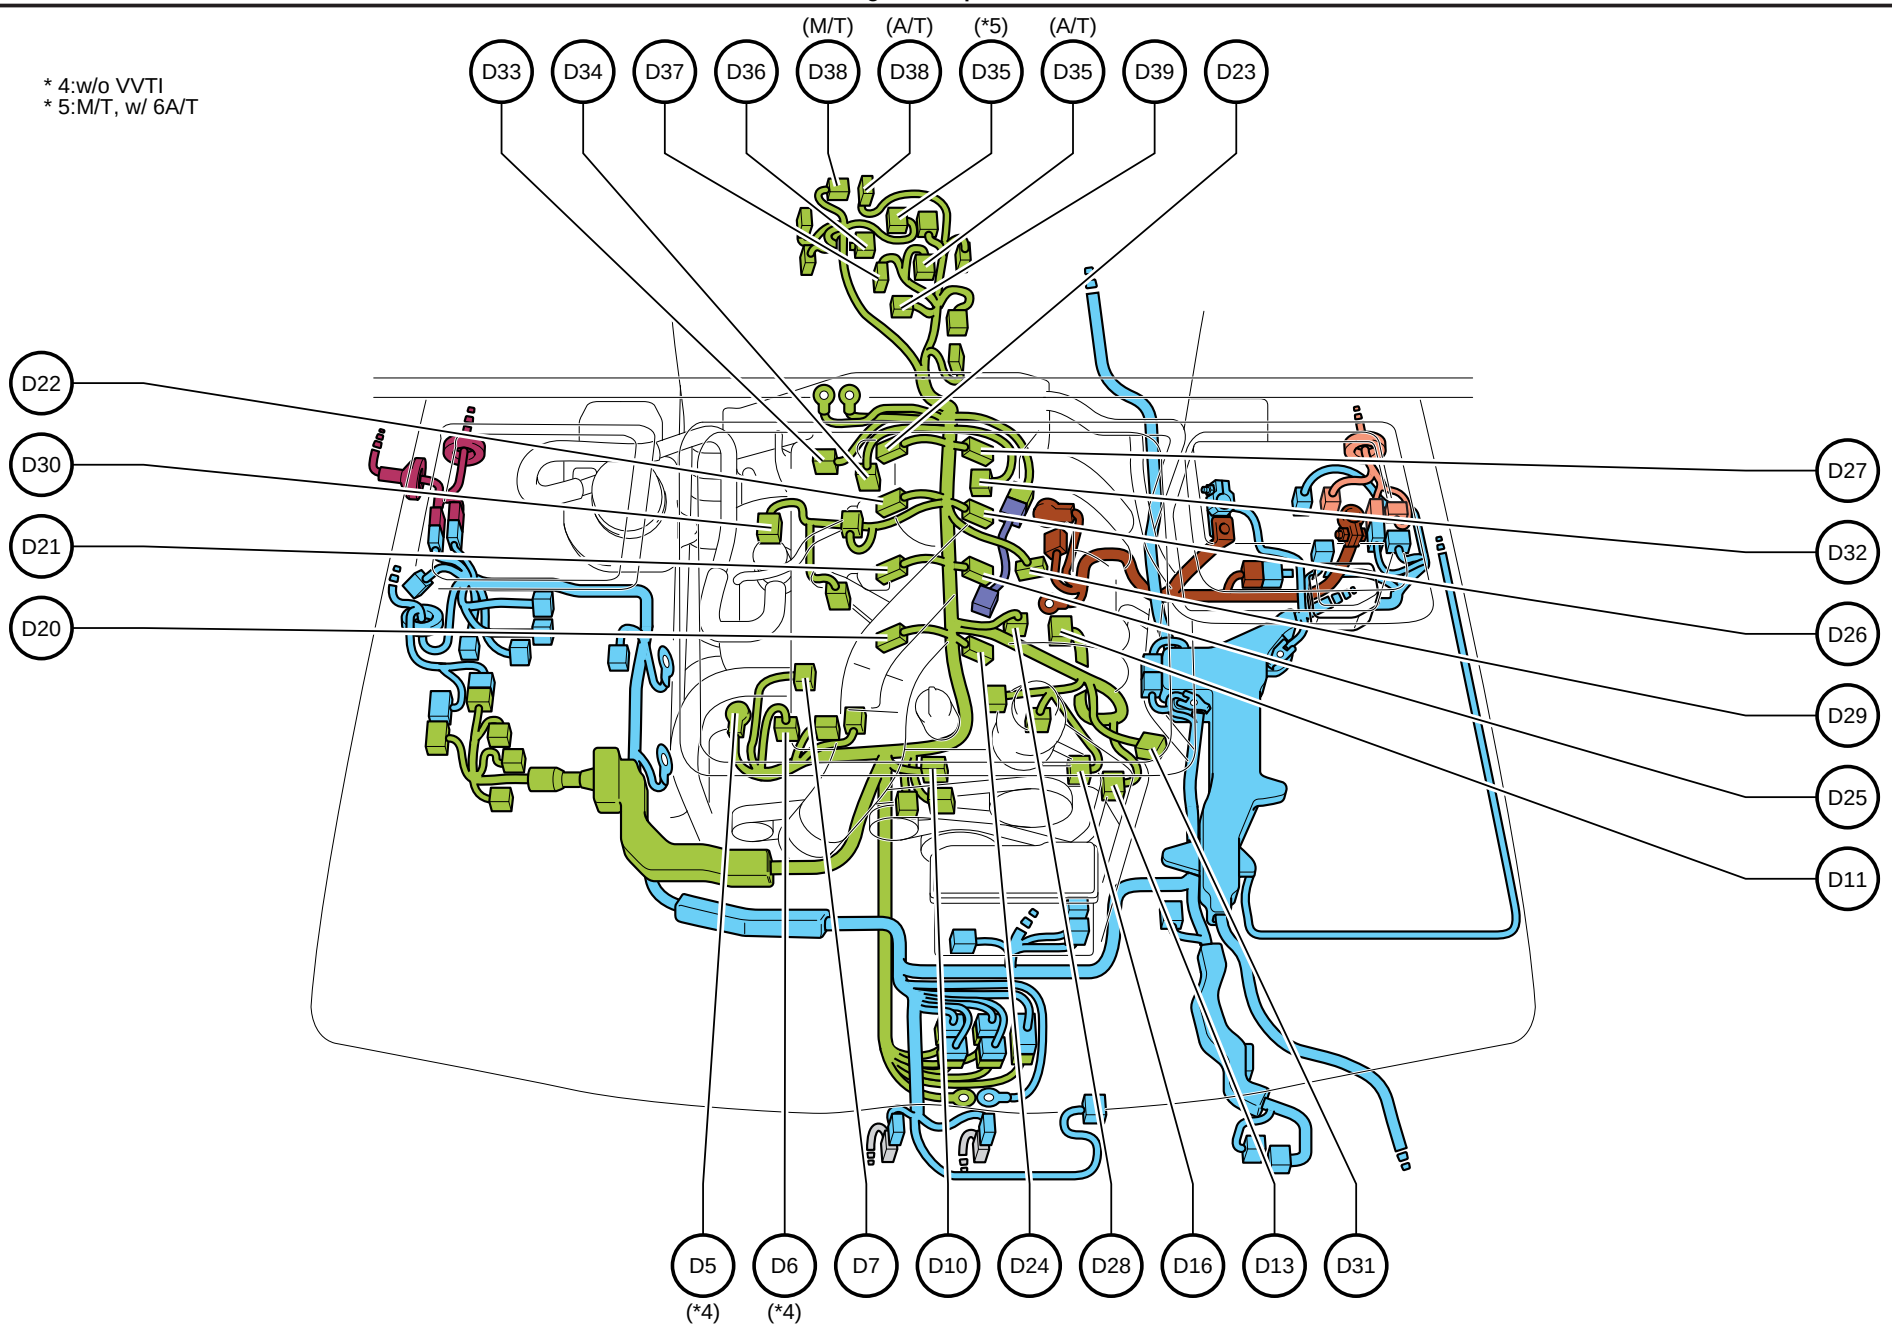

D	5	Alternator
D	6	Alternator
D	7	Engine Oil Pressure SW
D	10	Camshaft Position Sensor
D	11	Engine Oil Level Sensor
D	13	A/C Compressor
D	16	Power Steering Oil Pressure SW
D	20	Ignition Coil (No.1)
D	21	Ignition Coil (No.2)
D	22	Ignition Coil (No.3)
D	23	Ignition Coil (No.4)
D	24	Fuel Injector (No.1)
D	25	Fuel Injector (No.2)
D	26	Fuel Injector (No.3)
D	27	Fuel Injector (No.4)
D	28	Purge VSV
D	29	Throttle Body Assembly
D	30	Air Switching Valve
D	31	Variable Resistor
D	32	Water Temp. Sensor (Engine Coolant)
D	33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
D	34	Heated Oxygen Sensor (Bank 1 Sensor 1)
D	35	Heated Oxygen Sensor (Bank 1 Sensor 2)
D	36	Back-Up Lamp SW
D	37	Park/Neutral Position SW
D	38	Speed Sensor
D	39	A/T Fluid Temp. Sensor

D5



90980-09373/82675-26220

(Before Sep. 2007 Production/From Sep. 2007 Production)

D6
Green

90980-11964

D7
Black

90980-11363

D10
Black

90980-10947

D11
Gray

90980-11235

D13
Gray

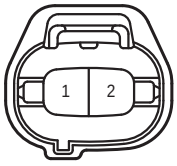

90980-11156

(Before Dec. 2013 Production)

D13
Black

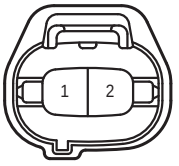

90980-11156

(From Dec. 2013 Production)

D16
Black

90980-11428

D20
Black

90980-11885

D21
Black

90980-11885

D22
Black

90980-11885

D23
Black

90980-11885

D24
Brown



90980-11875

D25
Gray

90980-11875

D26
Brown

90980-11875

D27
Gray

90980-11875

D28
Black

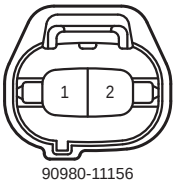

90980-11156

D29
Black

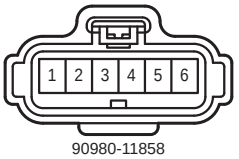

90980-11858

D30
Black

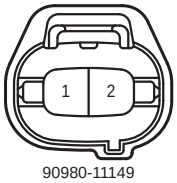

90980-11149

D31
Black

90980-10902

D32
Black

90980-10735

D33
Dark Gray

90980-10869

D34
Dark Gray

90980-10869

D35
Dark Gray

90980-11028

D36
Gray

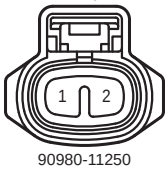

90980-11250

D37
Gray

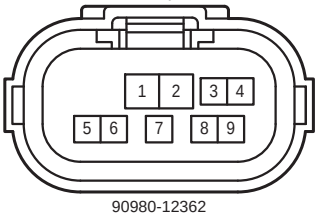

90980-12362

(Before Dec. 2013 Production)

D37
Black

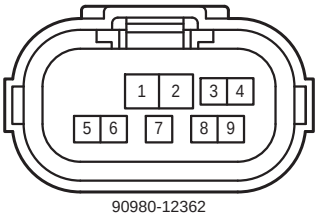

90980-12362

(From Dec. 2013 Production)

D38
Black

90980-11143

D39
Gray

90980-11162