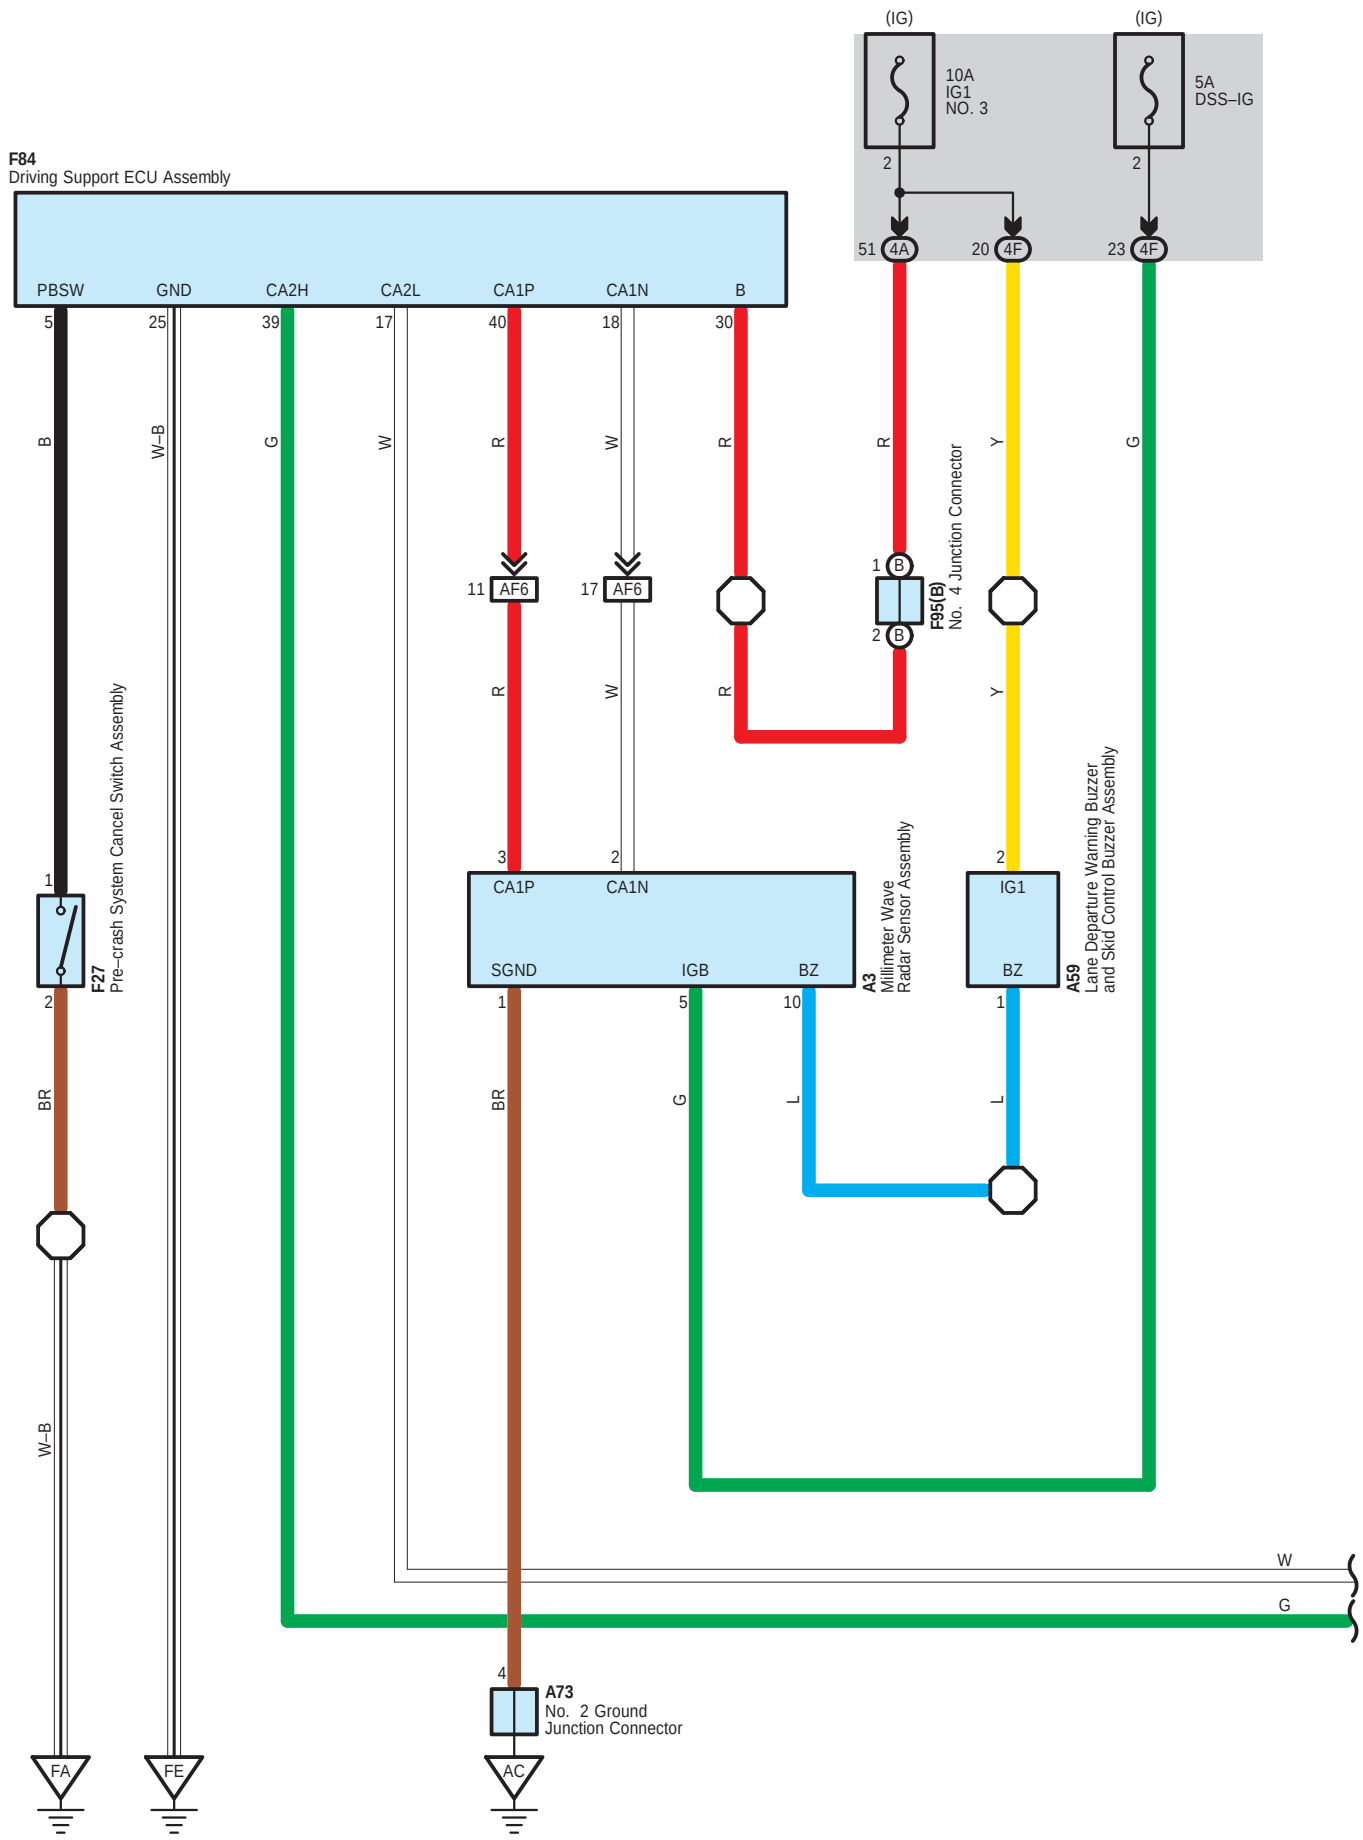
(IG)
10A
IG1
NO. 3
(IG)
5A
DSS–IG
F84
Driving Support ECU Assembly
PBSW
GND
CA2H
CA2L
CA1P
CA1N
B
51 4A
20 4F
23 4F
11 AF6
17 AF6
F95(B)
No. 4 Junction Connector
F27
Pre–crash System Cancel Switch Assembly
CA1P
CA1N
SGND
IGB
BZ
A3
Millimeter Wave
Radar Sensor Assembly
IG1
BZ
A59
Lane Departure Warning Buzzer
and Skid Control Buzzer Assembly
A73
No. 2 Ground
Junction Connector
FA
FE
AC

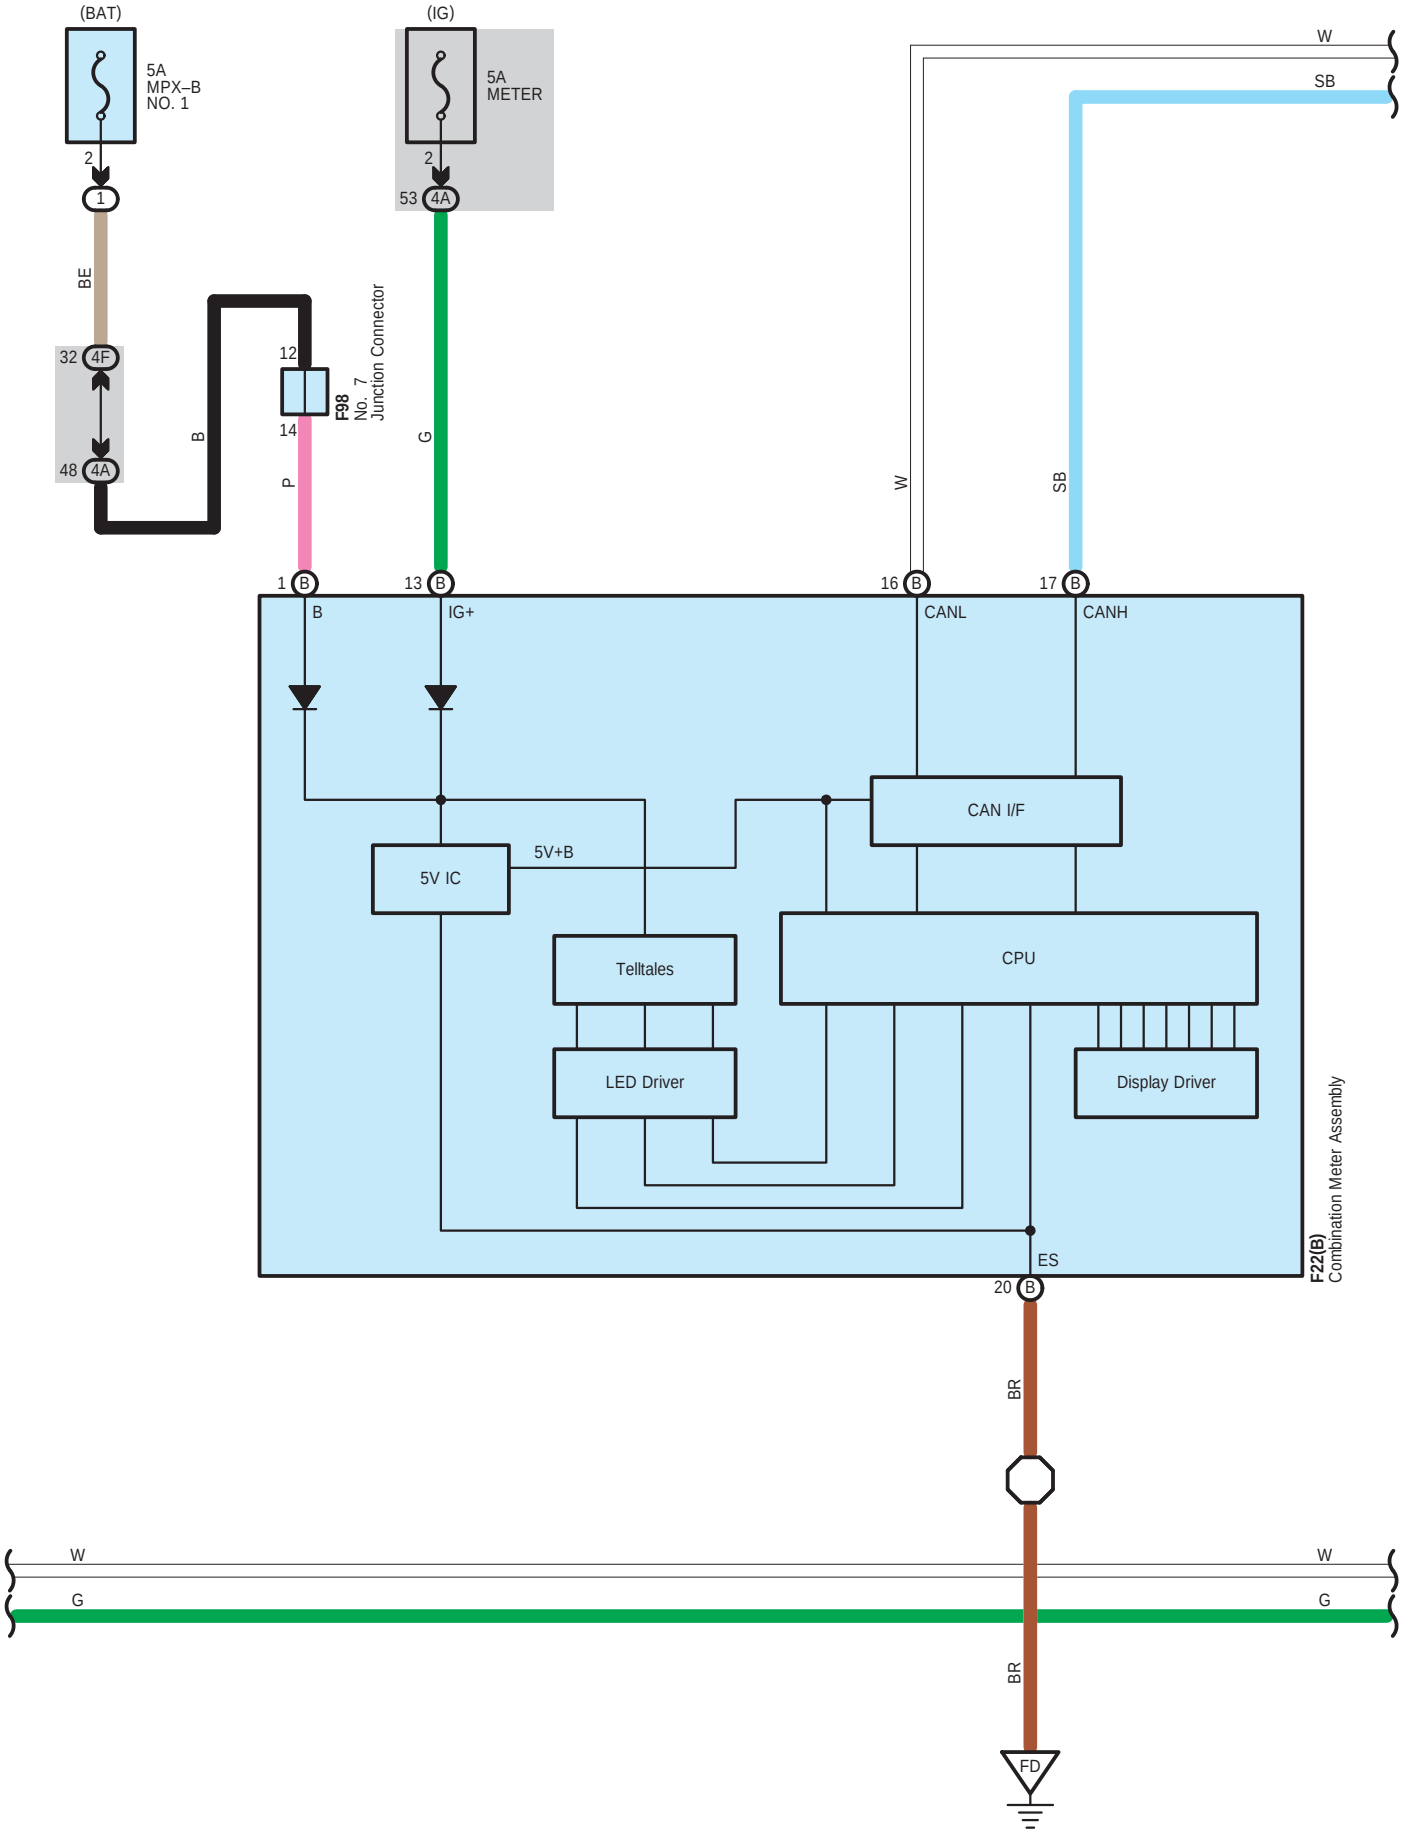
(BAT)
5A
MPX–B
NO. 1
2
1
BE
32 4F
48 4A
B
12
14
F98
No. 7
Junction Connector
P
(IG)
5A
METER
2
53 4A
G
W
SB
W
SB
1 B
13 B
16 B
17 B
B
IG+
CANL
CANH
CAN I/F
5V IC
5V+B
Telltales
CPU
LED Driver
Display Driver
ES
20 B
F22(B)
Combination Meter Assembly
BR
W
G
W
G
BR
FD

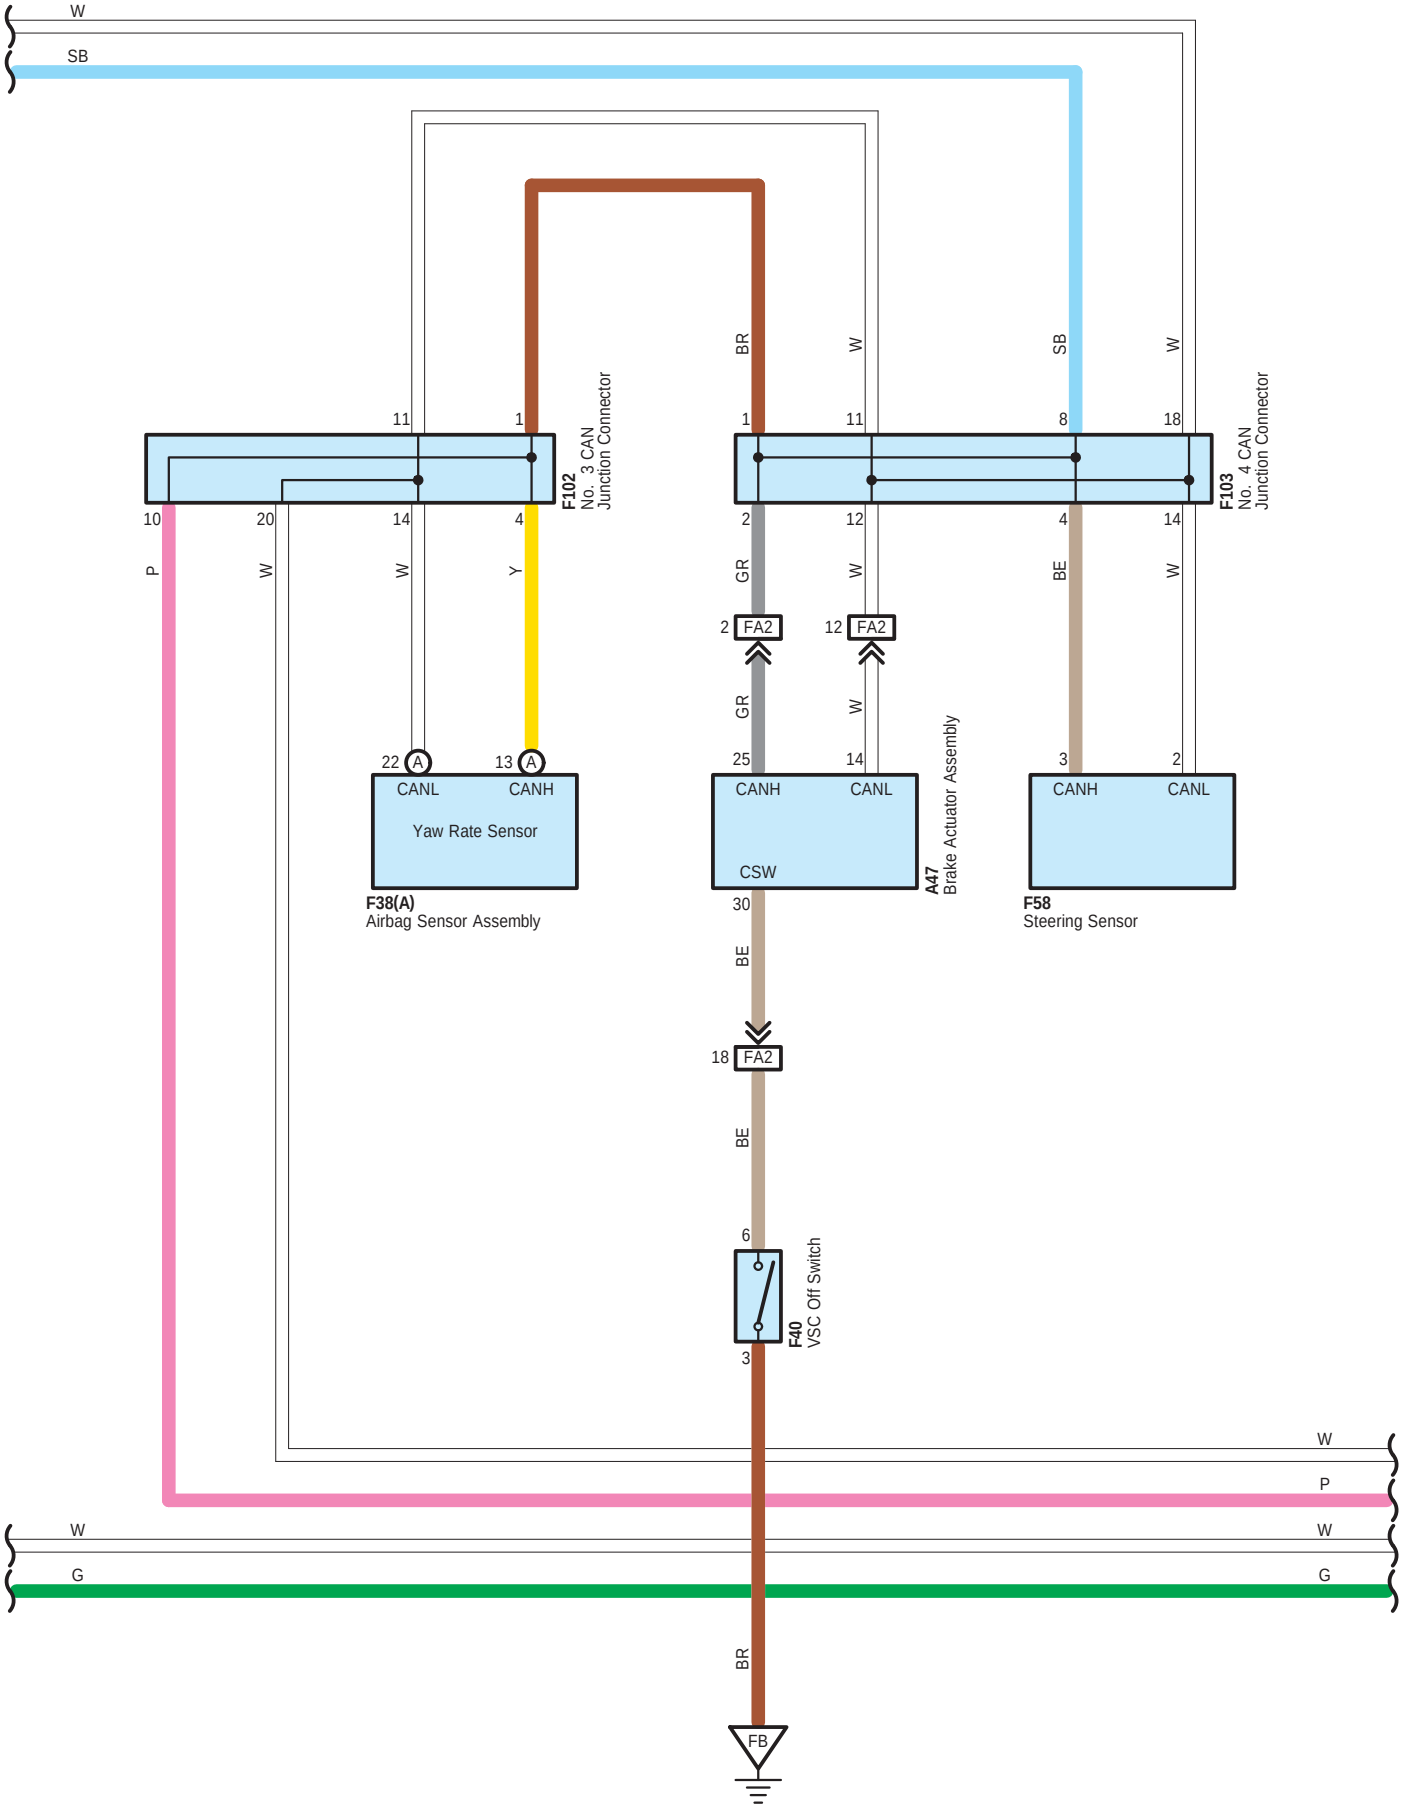
W
SB
F102
No. 3 CAN
Junction Connector
F103
No. 4 CAN
Junction Connector
BR
W
SB
W
11
1
1
11
8
18
10
20
14
4
2
12
4
14
P
W
W
Y
GR
W
BE
W
2 FA2
12 FA2
GR
W
22 A
13 A
25
14
3
2
CANL
CANH
CANH
CANL
CANH
CANL
Yaw Rate Sensor
CSW
A47
Brake Actuator Assembly
F38(A)
Airbag Sensor Assembly
30
F58
Steering Sensor
BE
18 FA2
BE
6
F40
VSC Off Switch
3
W
P
W
W
G
G
BR
FB

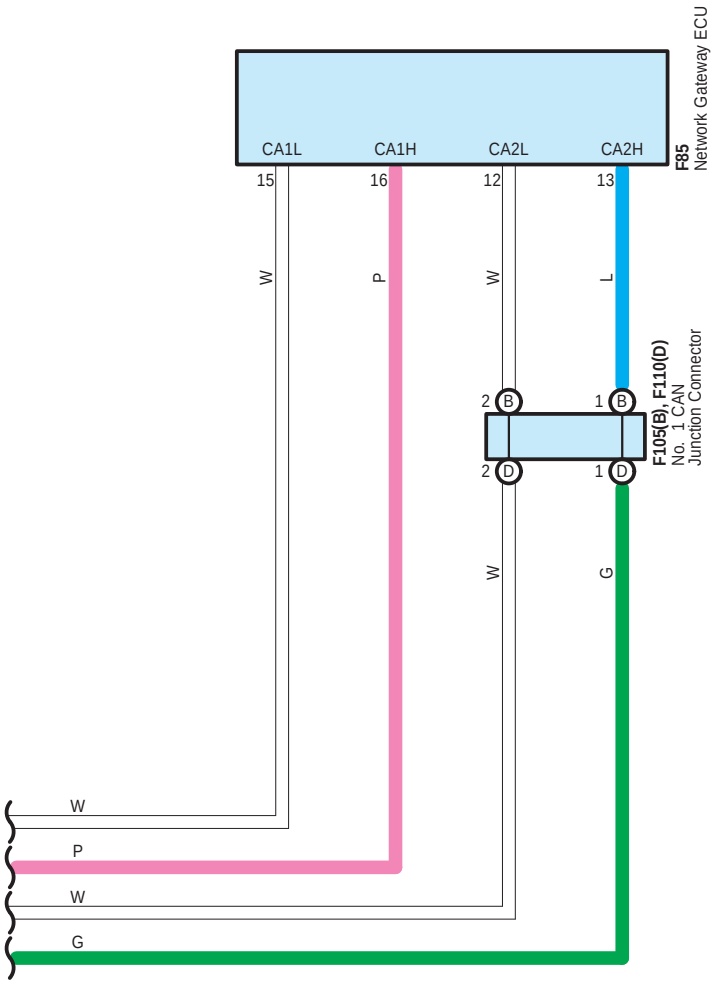
F85
Network Gateway ECU
CA1L
CA1H
CA2L
CA2H
15
16
12
13
W
P
W
L
F105(B), F110(D)
No. 1 CAN
Junction Connector
2 B
1 B
2 D
1 D
W
G
W
P
W
G

A3
Black

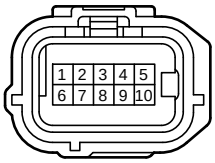

90980-12380

A47
Black

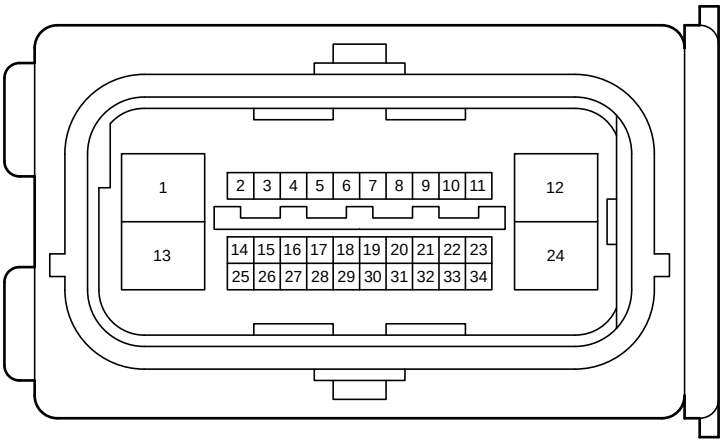

90980-12686

A59
Blue



90980-10860

A73
Black

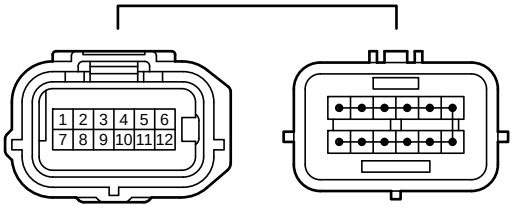

90980-12356

F22
Black

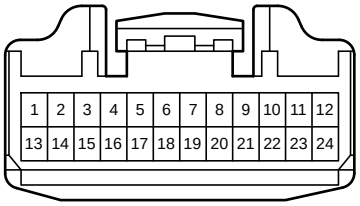

90980-12554

F27
Black



90980-10825

F38
Yellow

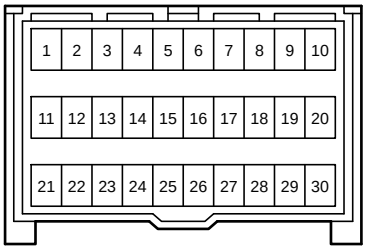

90980-12391

F40
Black

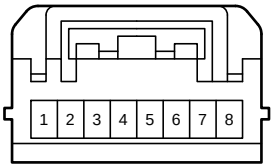

90980-12550

F58
Blue

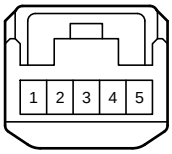

90980-12366

F84
White

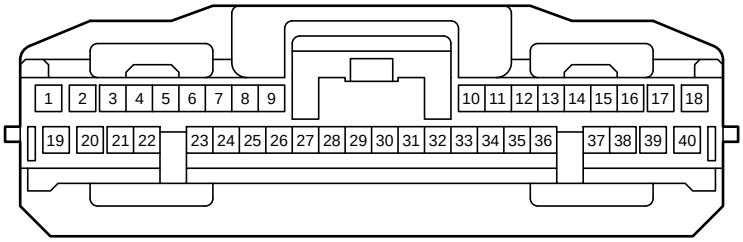

90980-12708

F85
White

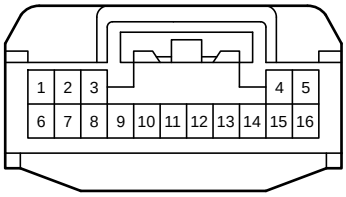

90980-12423

F95
Black

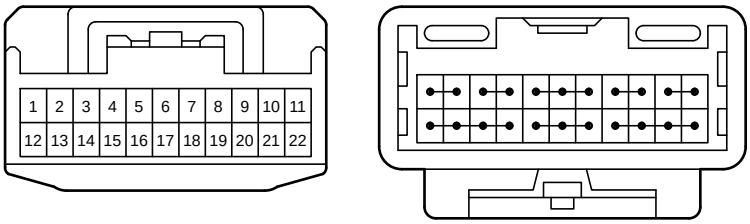

90980-12372

F98
Gray

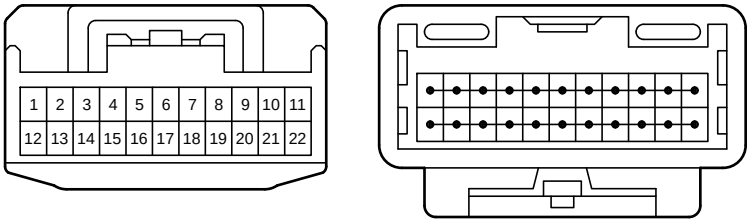

90980-12372

F102
White

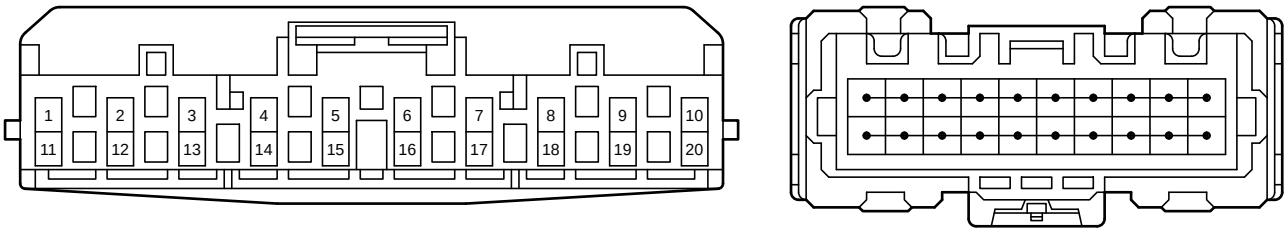

90980-12A58

F103
White

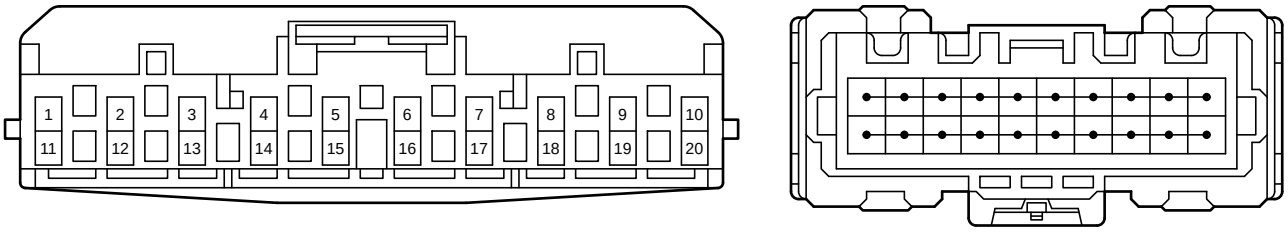

90980-12A58

F105
White



90980-12827

F110
White



90980-12827

4A
White

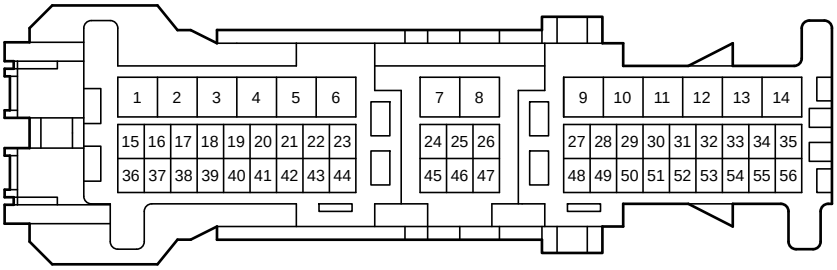

90980-12890

4F
White

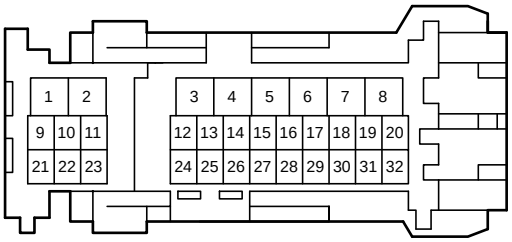

90980-12A47

AF6
White

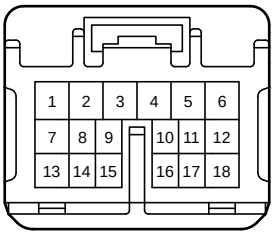

90980-12745

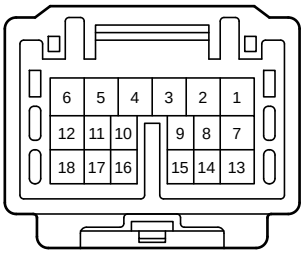

90980-12744

FA2
Blue

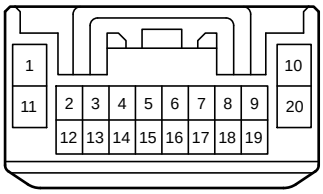

90980-12378

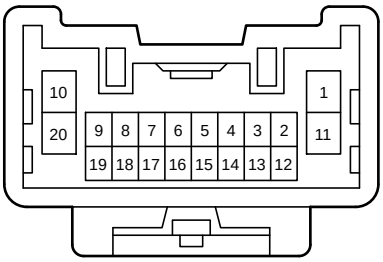

90980-12377