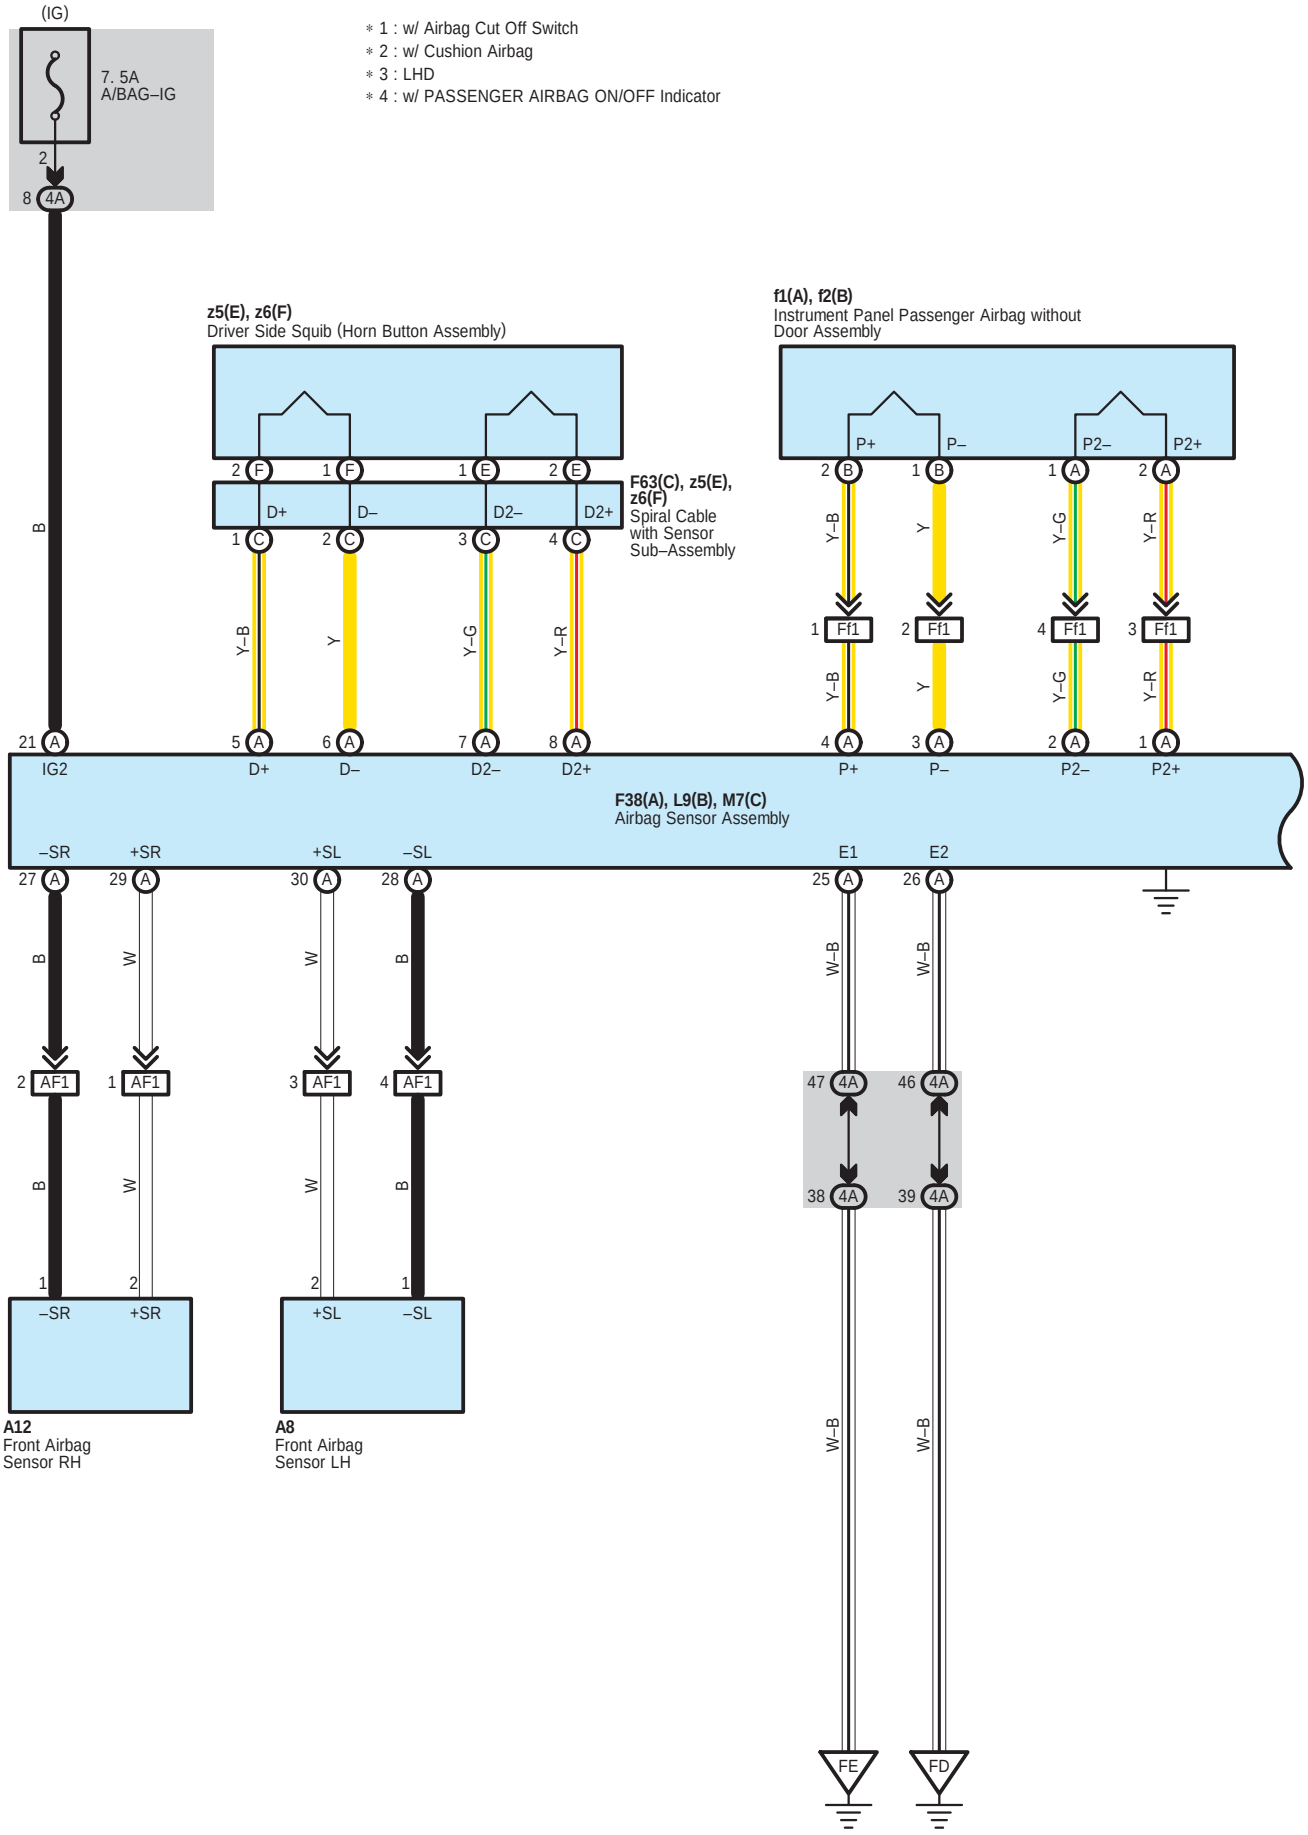
(IG)
7. 5A
A/BAG–IG
* 1 : w/ Airbag Cut Off Switch
* 2 : w/ Cushion Airbag
* 3 : LHD
* 4 : w/ PASSENGER AIRBAG ON/OFF Indicator
z5(E), z6(F)
Driver Side Squib (Horn Button Assembly)
f1(A), f2(B)
Instrument Panel Passenger Airbag without Door Assembly
F63(C), z5(E), z6(F)
Spiral Cable with Sensor Sub–Assembly
F38(A), L9(B), M7(C)
Airbag Sensor Assembly
IG2
D+
D–
D2–
D2+
P+
P–
P2–
P2+
–SR
+SR
+SL
–SL
E1
E2
A12
Front Airbag Sensor RH
A8
Front Airbag Sensor LH
FE
FD

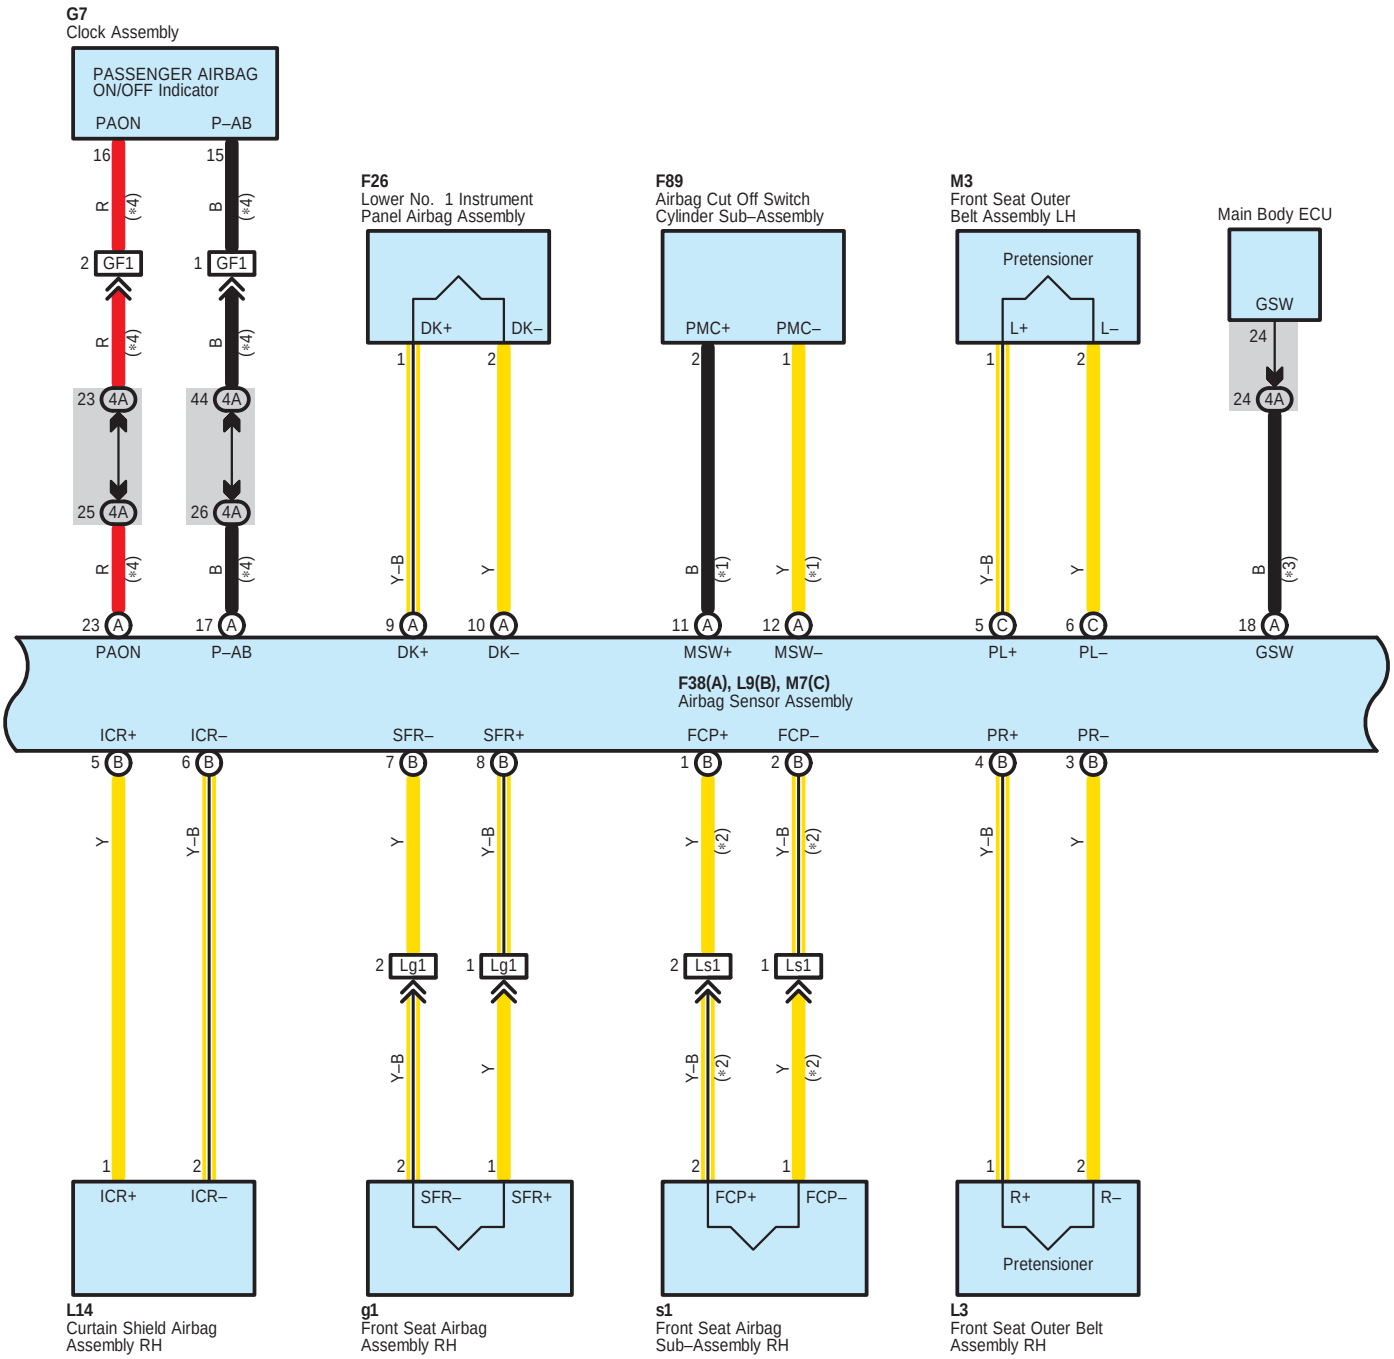
G7
Clock Assembly
PASSENGER AIRBAG ON/OFF Indicator
PAON
P–AB
F26
Lower No. 1 Instrument Panel Airbag Assembly
DK+
DK–
F89
Airbag Cut Off Switch Cylinder Sub–Assembly
PMC+
PMC–
M3
Front Seat Outer Belt Assembly LH
Pretensioner
L+
L–
Main Body ECU
GSW
F38(A), L9(B), M7(C)
Airbag Sensor Assembly
ICR+
ICR–
SFR–
SFR+
FCP+
FCP–
PR+
PR–
PL+
PL–
MSW+
MSW–
L14
Curtain Shield Airbag Assembly RH
g1
Front Seat Airbag Assembly RH
s1
Front Seat Airbag Sub–Assembly RH
L3
Front Seat Outer Belt Assembly RH

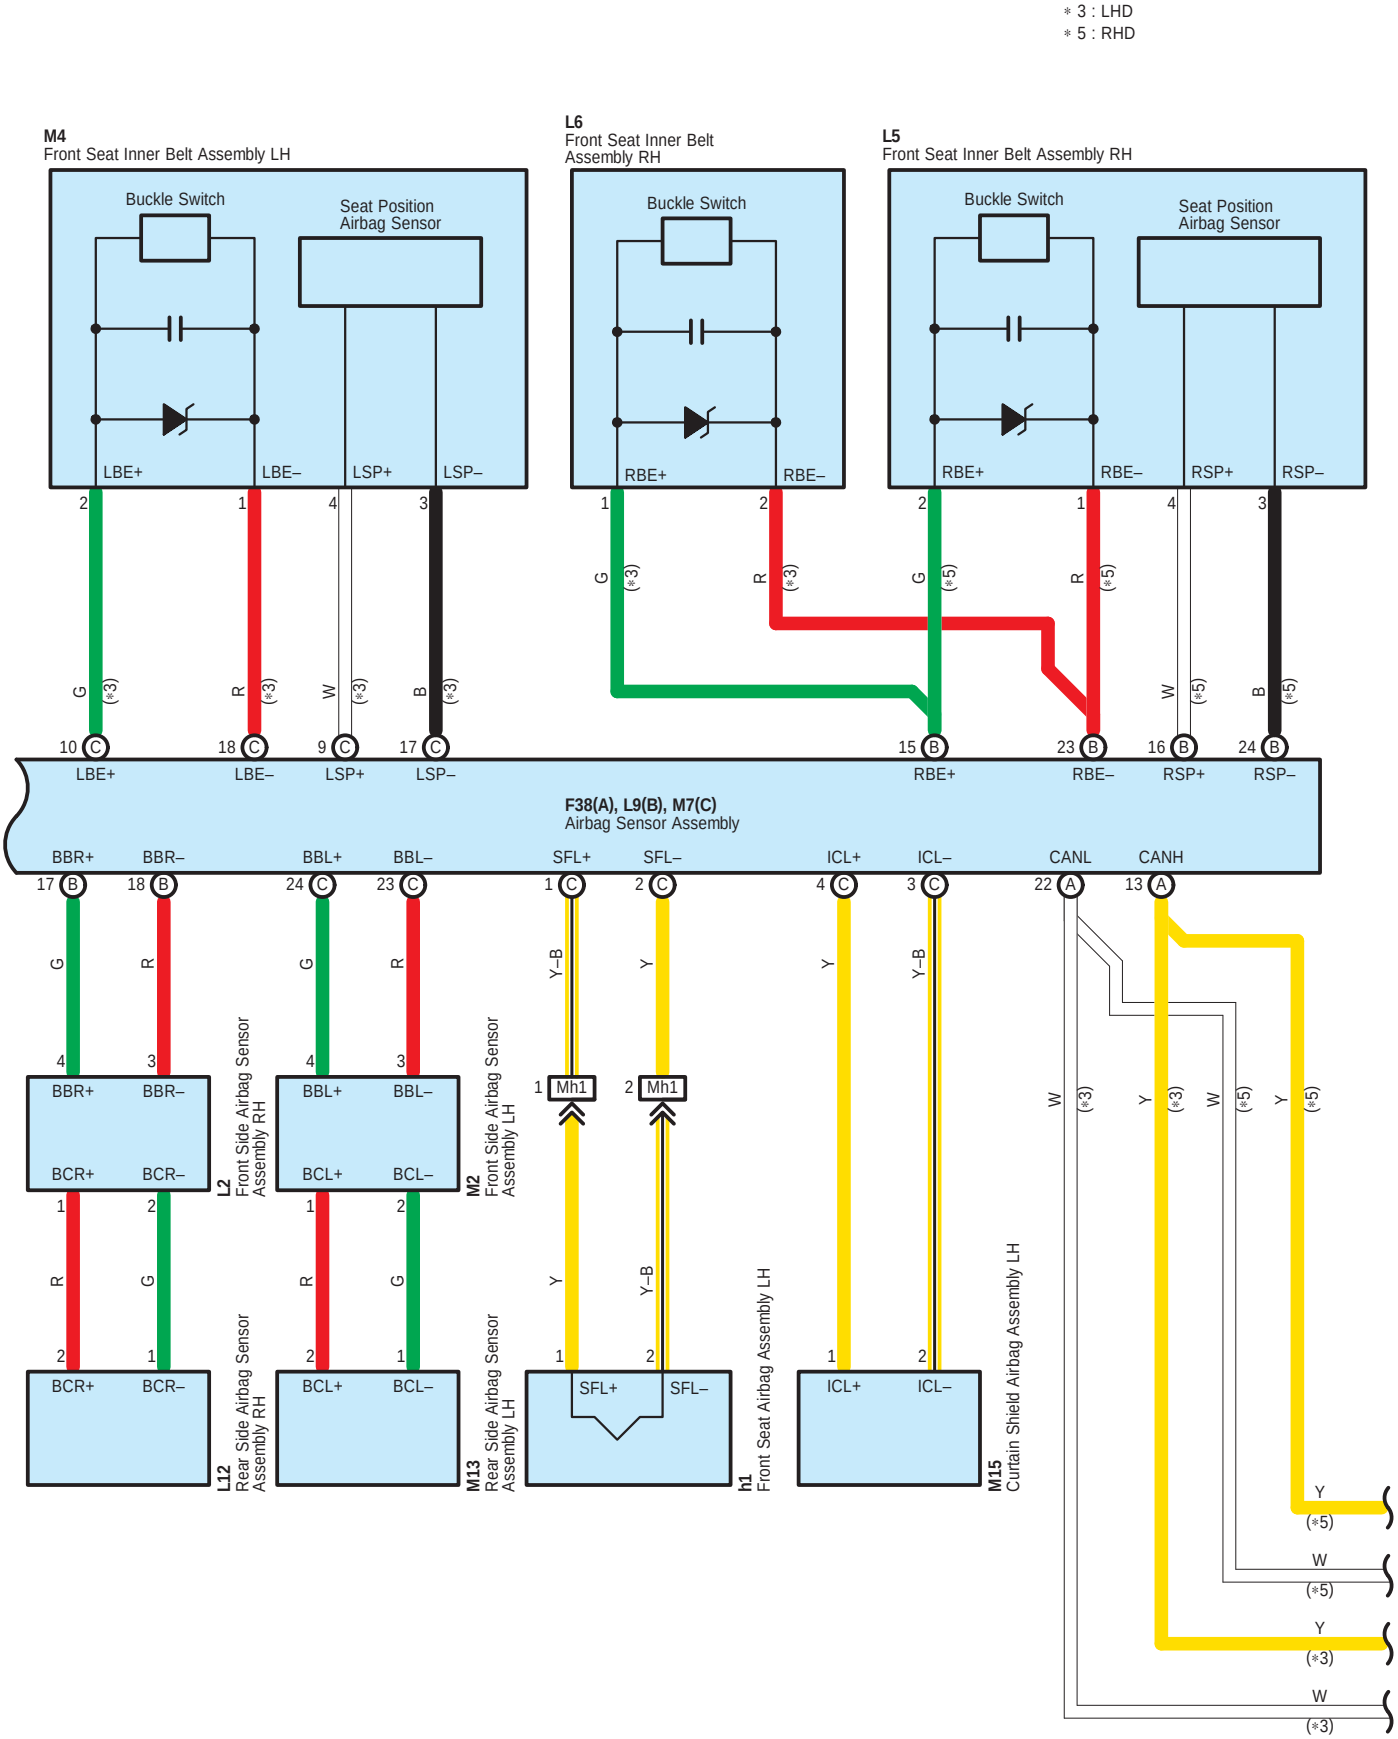
∗ 3 : LHD
∗ 5 : RHD
M4
Front Seat Inner Belt Assembly LH
Buckle Switch
Seat Position Airbag Sensor
LBE+
LBE–
LSP+
LSP–
L6
Front Seat Inner Belt Assembly RH
Buckle Switch
RBE+
RBE–
L5
Front Seat Inner Belt Assembly RH
Buckle Switch
Seat Position Airbag Sensor
RBE+
RBE–
RSP+
RSP–
F38(A), L9(B), M7(C)
Airbag Sensor Assembly
BBR+
BBR–
BBL+
BBL–
SFL+
SFL–
ICL+
ICL–
CANL
CANH
L2
Front Side Airbag Sensor Assembly RH
M2
Front Side Airbag Sensor Assembly LH
L12
Rear Side Airbag Sensor Assembly RH
M13
Rear Side Airbag Sensor Assembly LH
h1
Front Seat Airbag Assembly LH
M15
Curtain Shield Airbag Assembly LH
Mh1
BCR+
BCR–
BCL+
BCL–

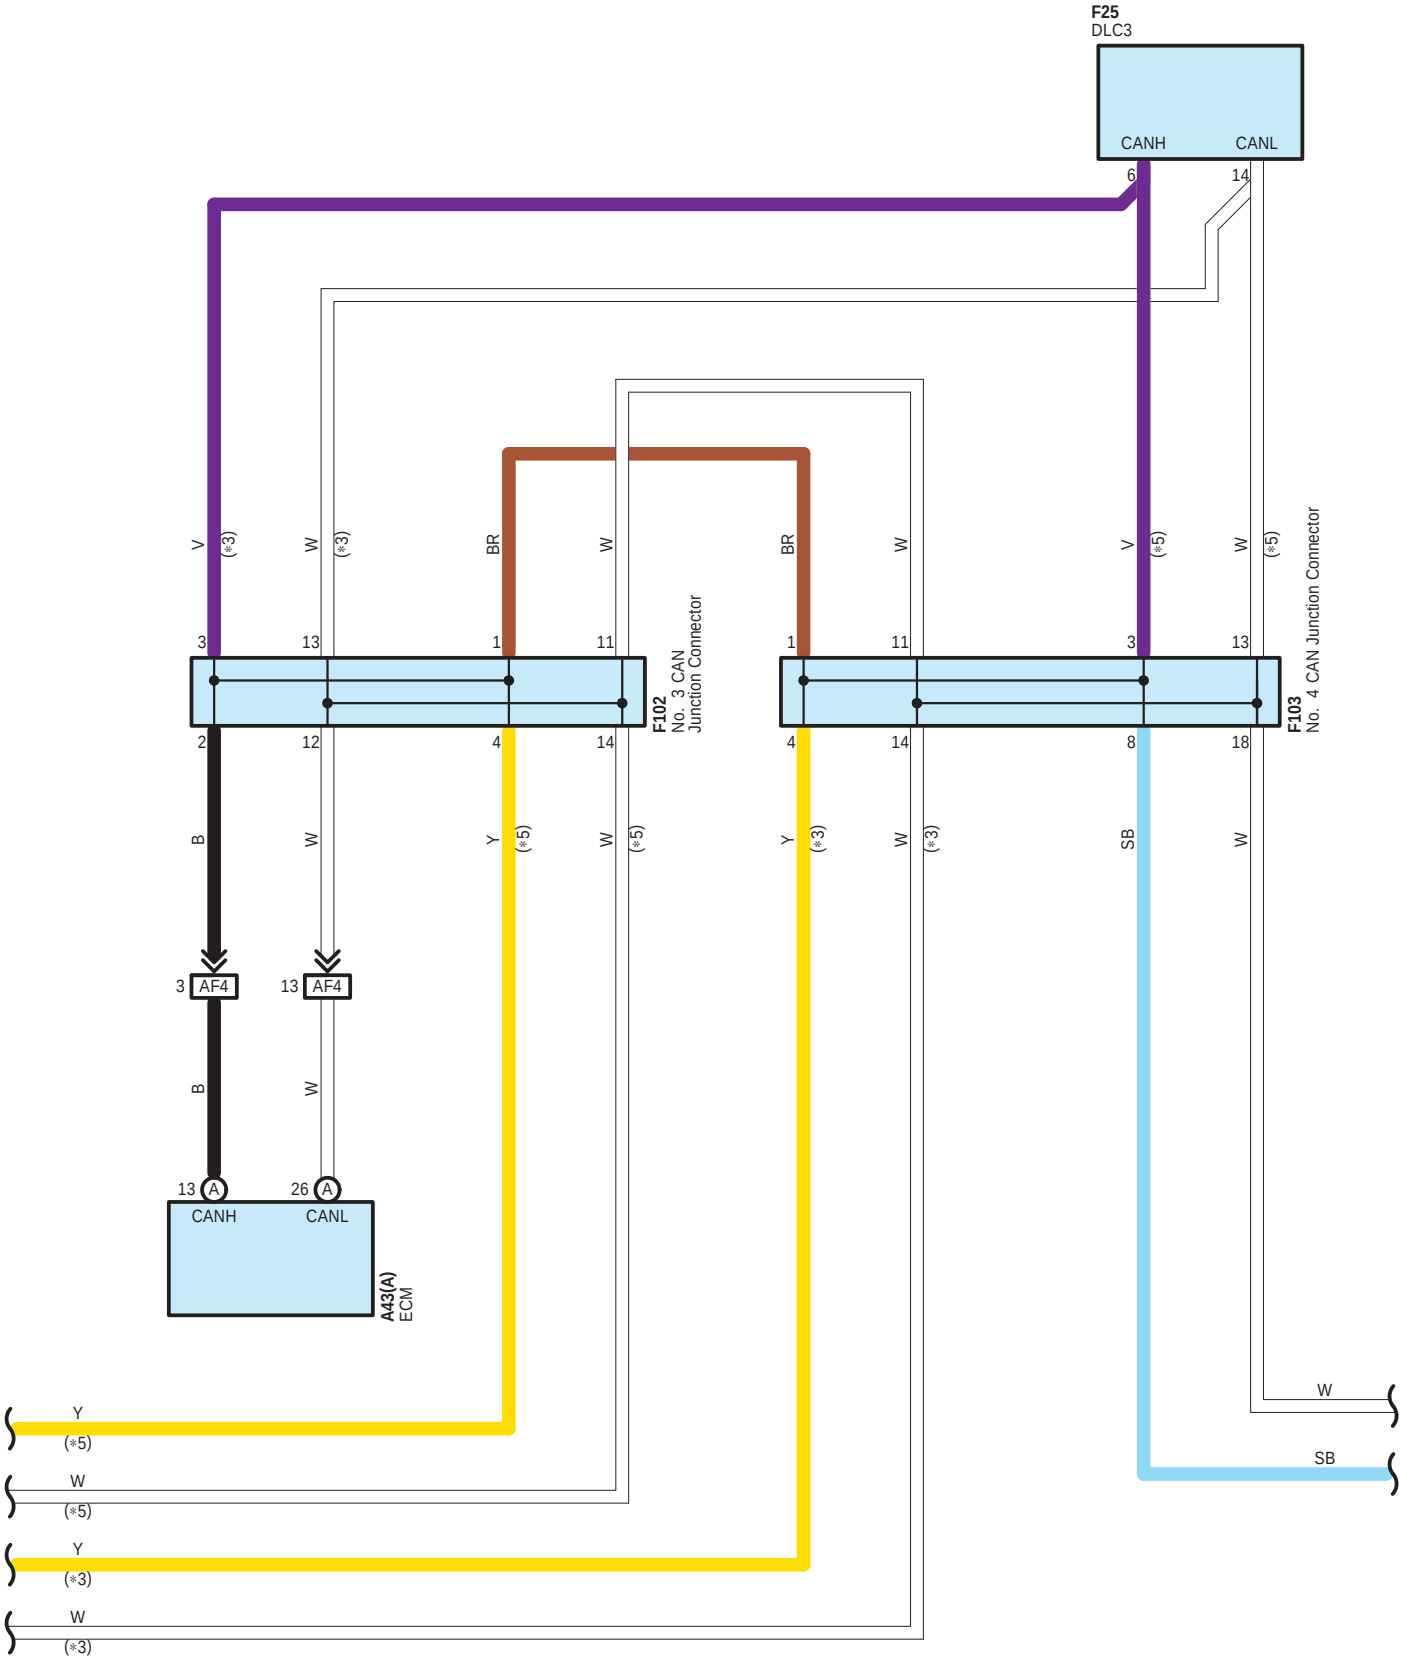
F25
DLC3
CANH
CANL
6
14
V
(*3)
W
(*3)
BR
W
BR
W
V
(*5)
W
(*5)
3
13
1
11
1
11
3
13
F102
No. 3 CAN
Junction Connector
F103
No. 4 CAN Junction Connector
2
12
4
14
4
14
8
18
B
W
Y
(*5)
W
(*5)
Y
(*3)
W
(*3)
SB
W
3 AF4
13 AF4
B
W
13 A
26 A
CANH
CANL
A43(A)
ECM
Y
(*5)
W
(*5)
Y
(*3)
W
(*3)
W
SB

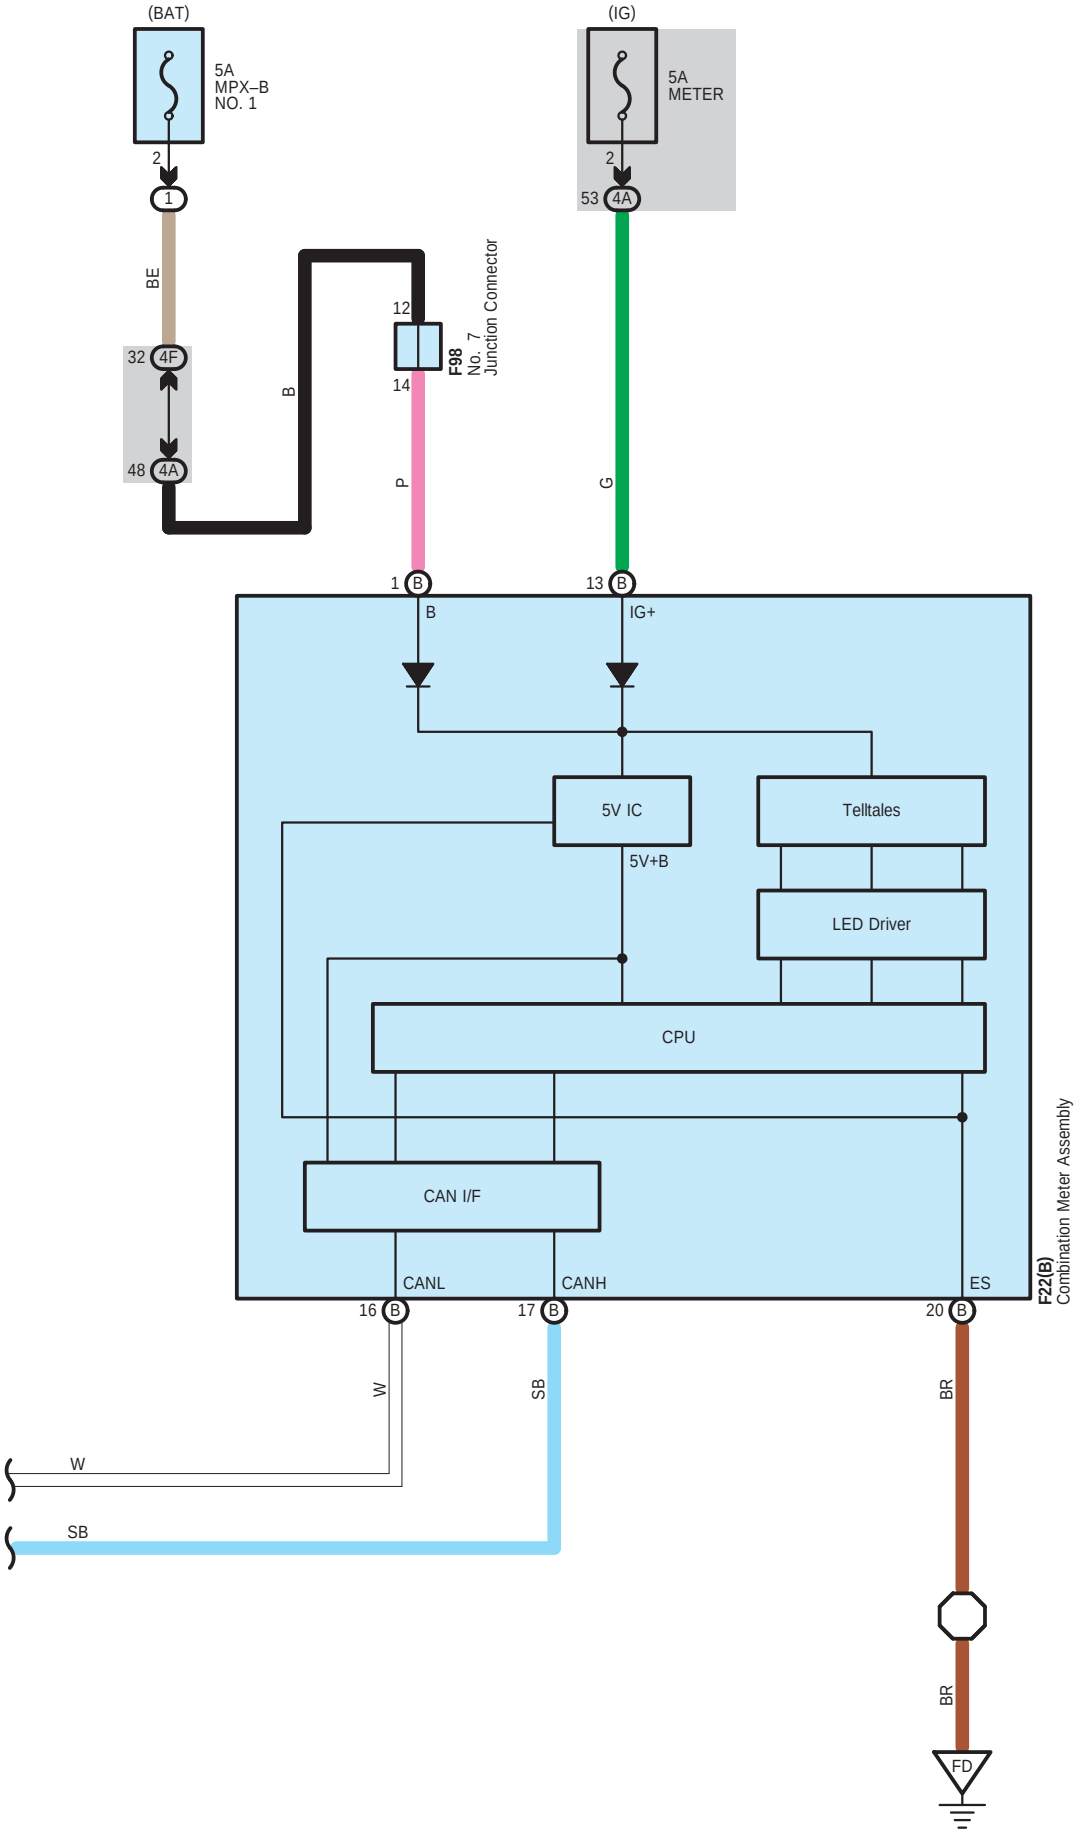
(BAT)
5A
MPX–B
NO. 1
2
1
BE
32 4F
48 4A
B
12
14
F98
No. 7
Junction Connector
P
(IG)
5A
METER
2
53 4A
G
1 B
B
13 B
IG+
5V IC
5V+B
Telltales
LED Driver
CPU
CAN I/F
CANL
CANH
ES
16 B
17 B
20 B
F22(B)
Combination Meter Assembly
W
SB
BR
W
SB
BR
FD

A8
Yellow

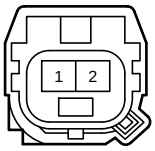

90980-12490

A12
Yellow

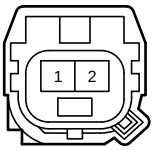

90980-12490

A43
Black

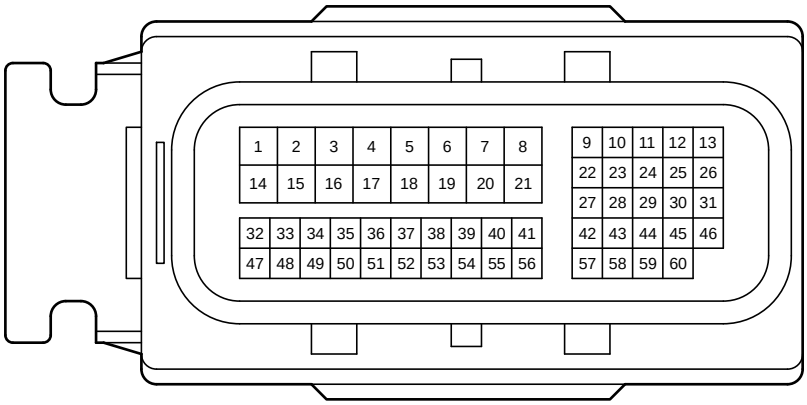

90980-12931

F22
Black

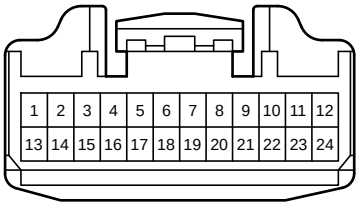

90980-12554

F25
White

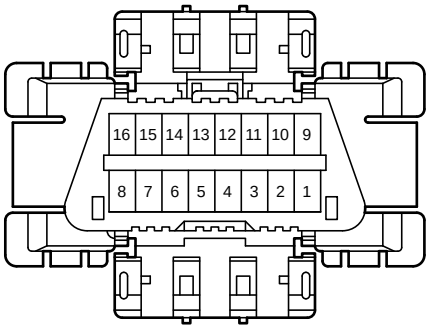

90980-11665

F26
Black



90980-12452

F38
Yellow

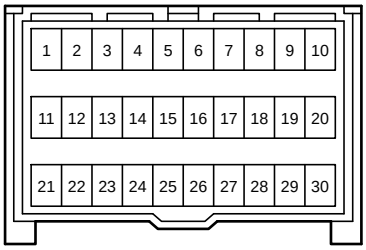

90980-12391

F63
Yellow

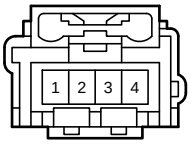

90980-12160

F89
White



90980-12063

F98
Gray

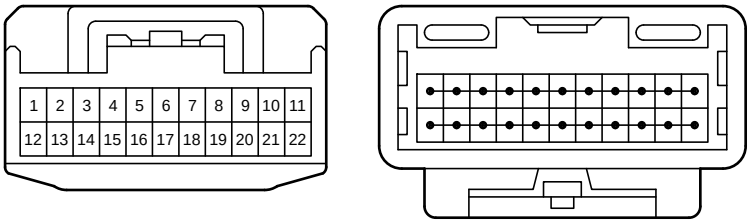

90980-12372

F102
White

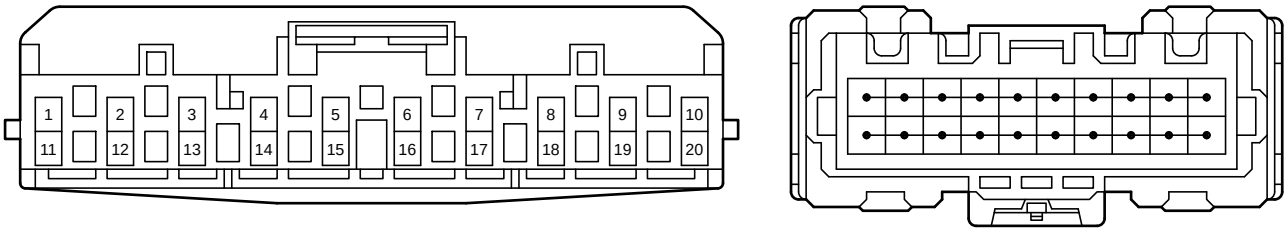

90980-12A58

F103
White

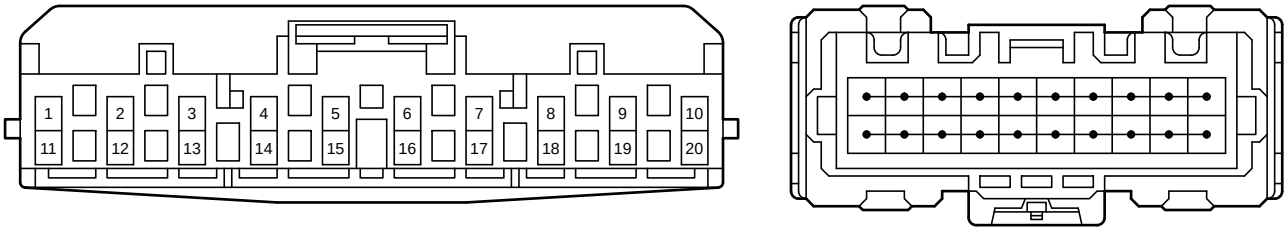

90980-12A58

G7
Black

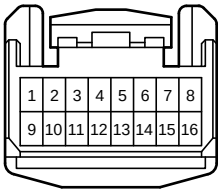

90980-12553

L2
Yellow

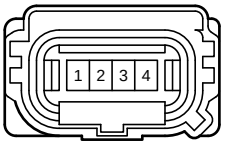

90980-12699

L3
Black



90980-12452

L5
White

90980-10942

L6
White

90980-10942

L9
Yellow

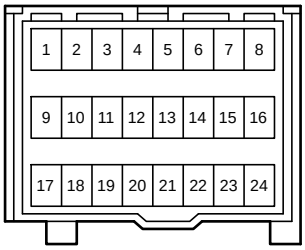

90980-12390

L12
Yellow

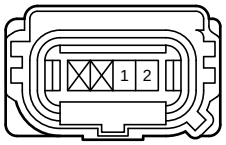

90980-12717

L14
Black



90980-12219

M2
Yellow

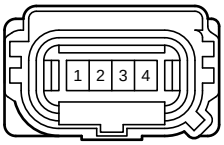

90980-12699

M3
Black



90980-12452

M4
White

90980-10942

M7
Yellow

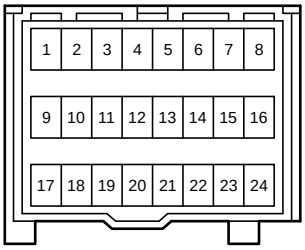

90980-12392

M13
Yellow

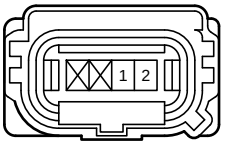

90980-12717

M15
Black



90980-12219

f1
Black



90980-12219

f2
Orange



90980-12224

g1
Black



90980-12452

h1
Black



90980-12452

s1
Black



90980-12452

z5
Black



90980-12219

z6
Orange



90980-12224

4A
White

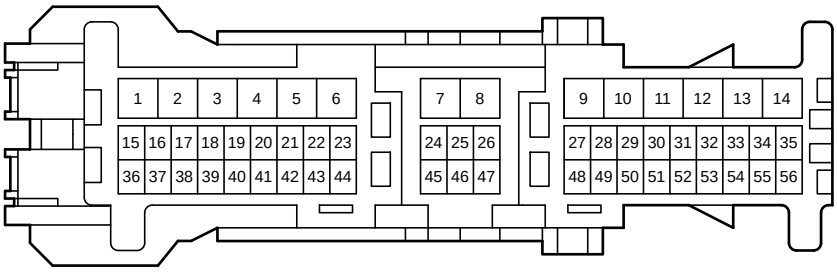

90980-12890

4F
White

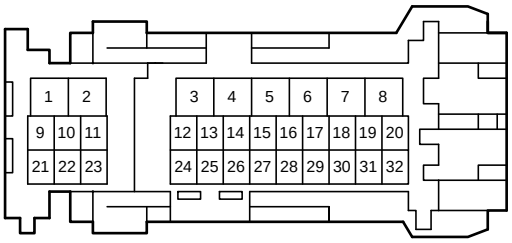

90980-12A47

AF1
Yellow

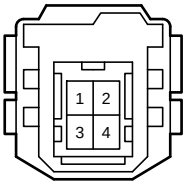

90980-12989

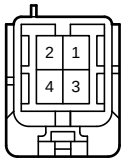

90980-12988

AF4
Black

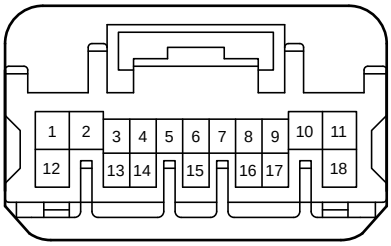

90980-12743

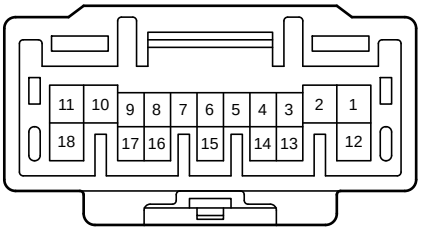

90980-12742

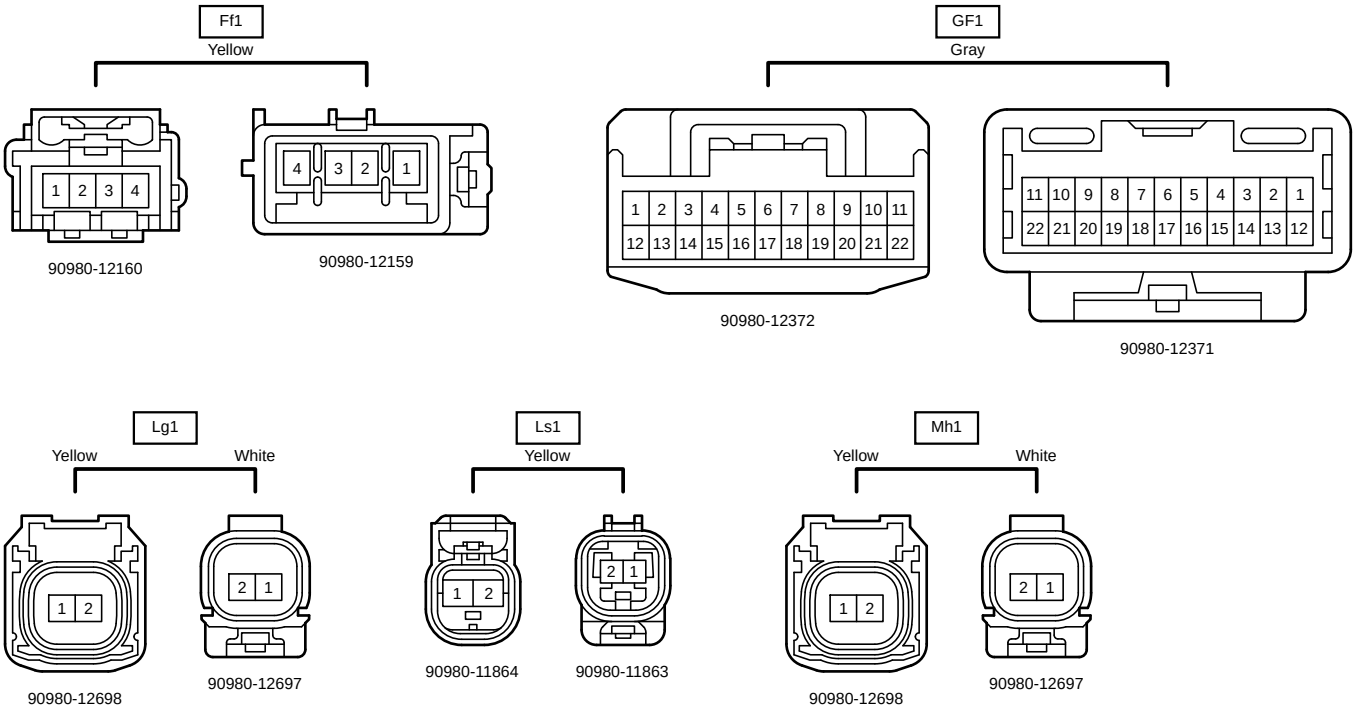
Ff1
Yellow
1 2 3 4
90980-12160
4 3 2 1
90980-12159
GF1
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
90980-12372
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
90980-12371
Lg1
Yellow
White
1 2
90980-12698
2 1
90980-12697
Ls1
Yellow
1 2
90980-11864
2 1
90980-11863
Mh1
Yellow
White
1 2
90980-12698
2 1
90980-12697