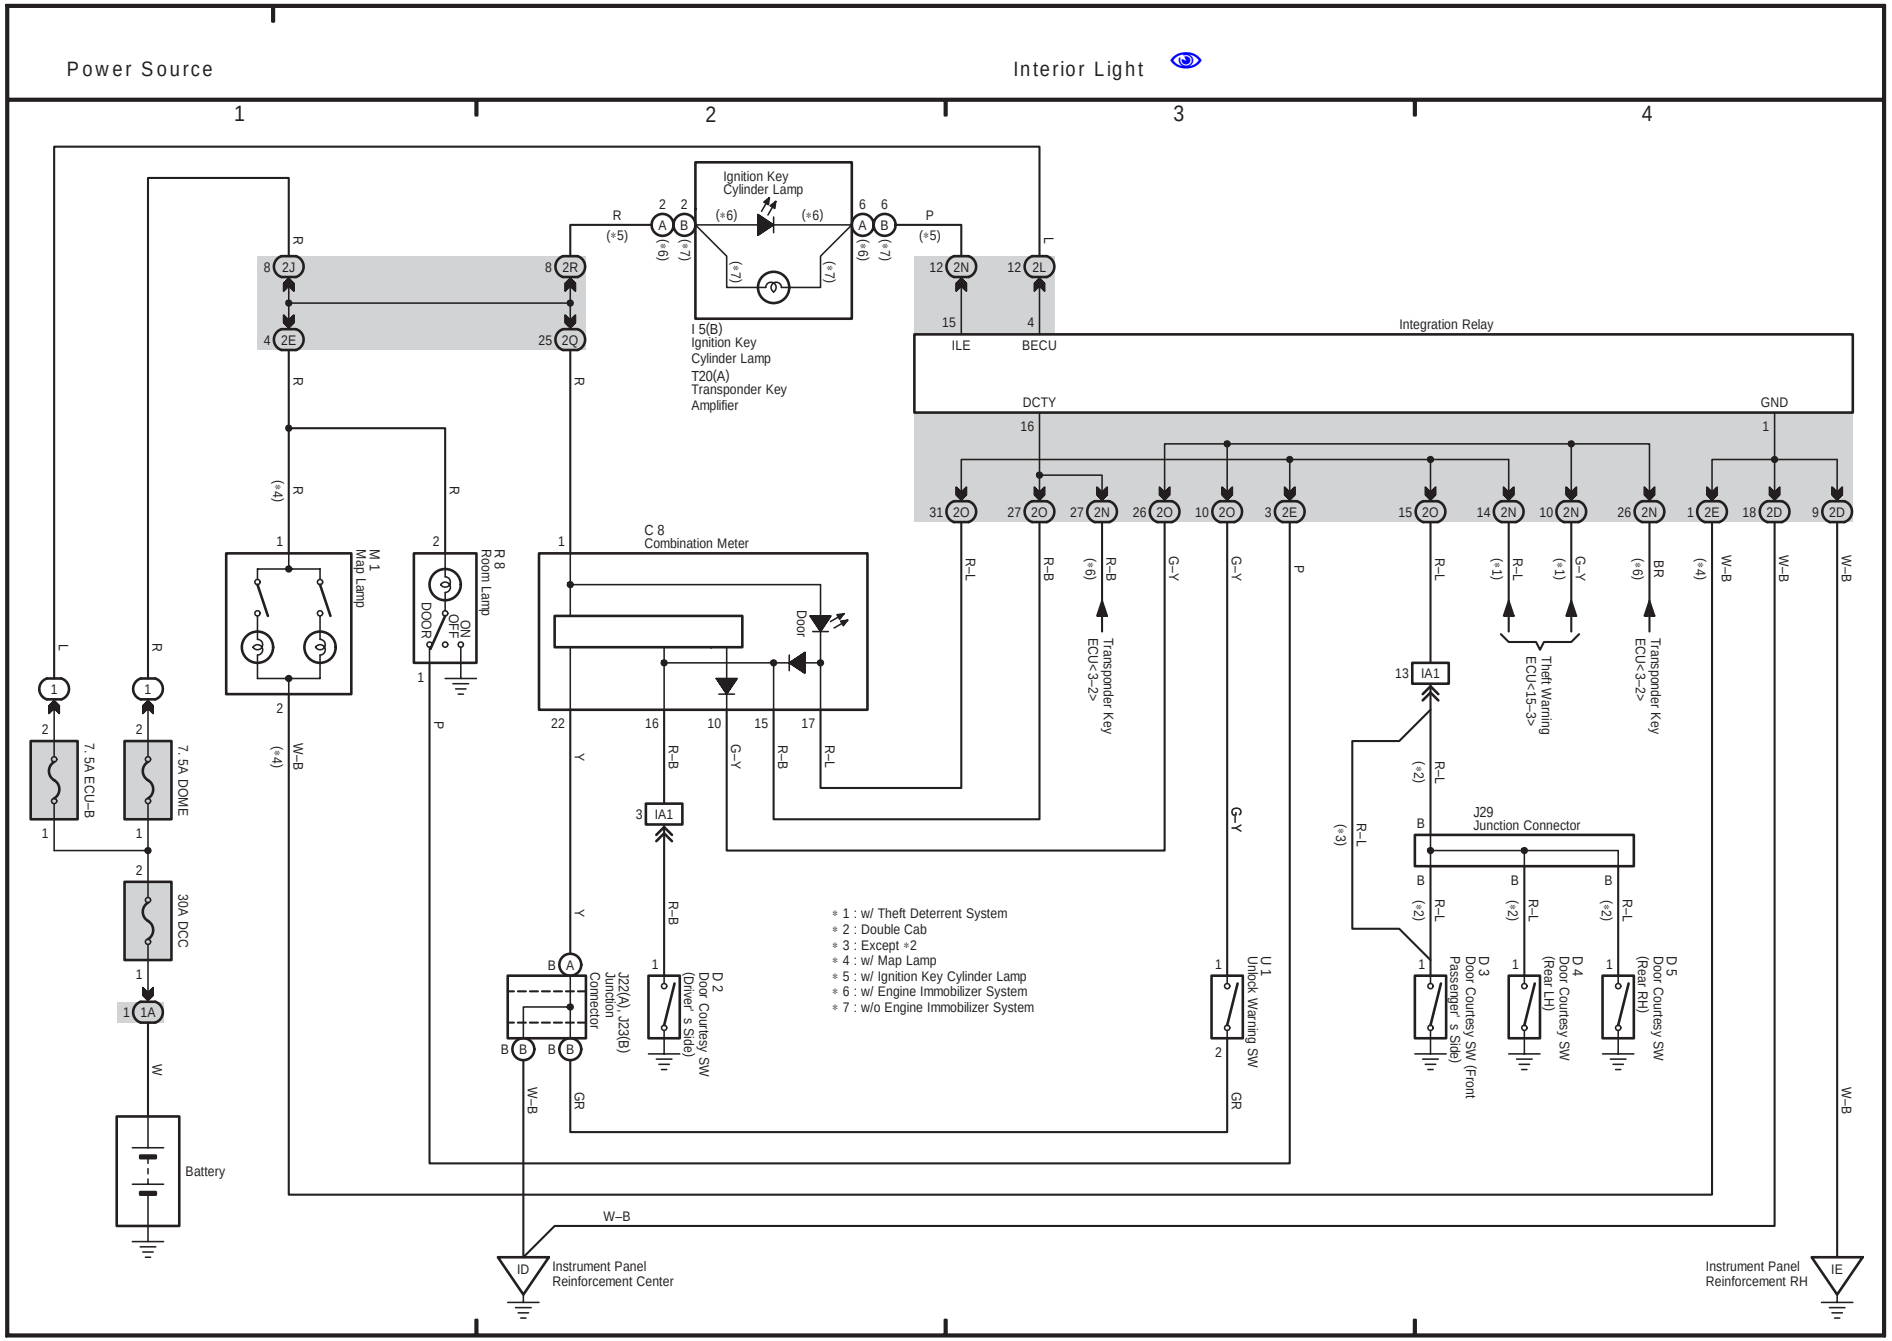
Power Source
Interior Light
1
2
3
4
Ignition Key Cylinder Lamp
I 5(B) Ignition Key Cylinder Lamp
T20(A) Transponder Key Amplifier
Integration Relay
ILE
BECU
DCTY
GND
C 8 Combination Meter
Door
M 1 Map Lamp
R 8 Room Lamp
DOOR
ON
OFF
7. 5A ECU–B
7. 5A DOME
30A DCC
Battery
J22(A), J23(B) Junction Connector
D 2 Door Courtesy SW (Driver's Side)
U 1 Unlock Warning SW
D 3 Door Courtesy SW (Front Passenger's Side)
D 4 Door Courtesy SW (Rear LH)
D 5 Door Courtesy SW (Rear RH)
J29 Junction Connector
Theft Warning ECU<15–3>
Transponder Key ECU<3–2>
Instrument Panel Reinforcement Center
Instrument Panel Reinforcement RH
∗ 1 : w/ Theft Deterrent System
∗ 2 : Double Cab
∗ 3 : Except ∗2
∗ 4 : w/ Map Lamp
∗ 5 : w/ Ignition Key Cylinder Lamp
∗ 6 : w/ Engine Immobilizer System
∗ 7 : w/o Engine Immobilizer System