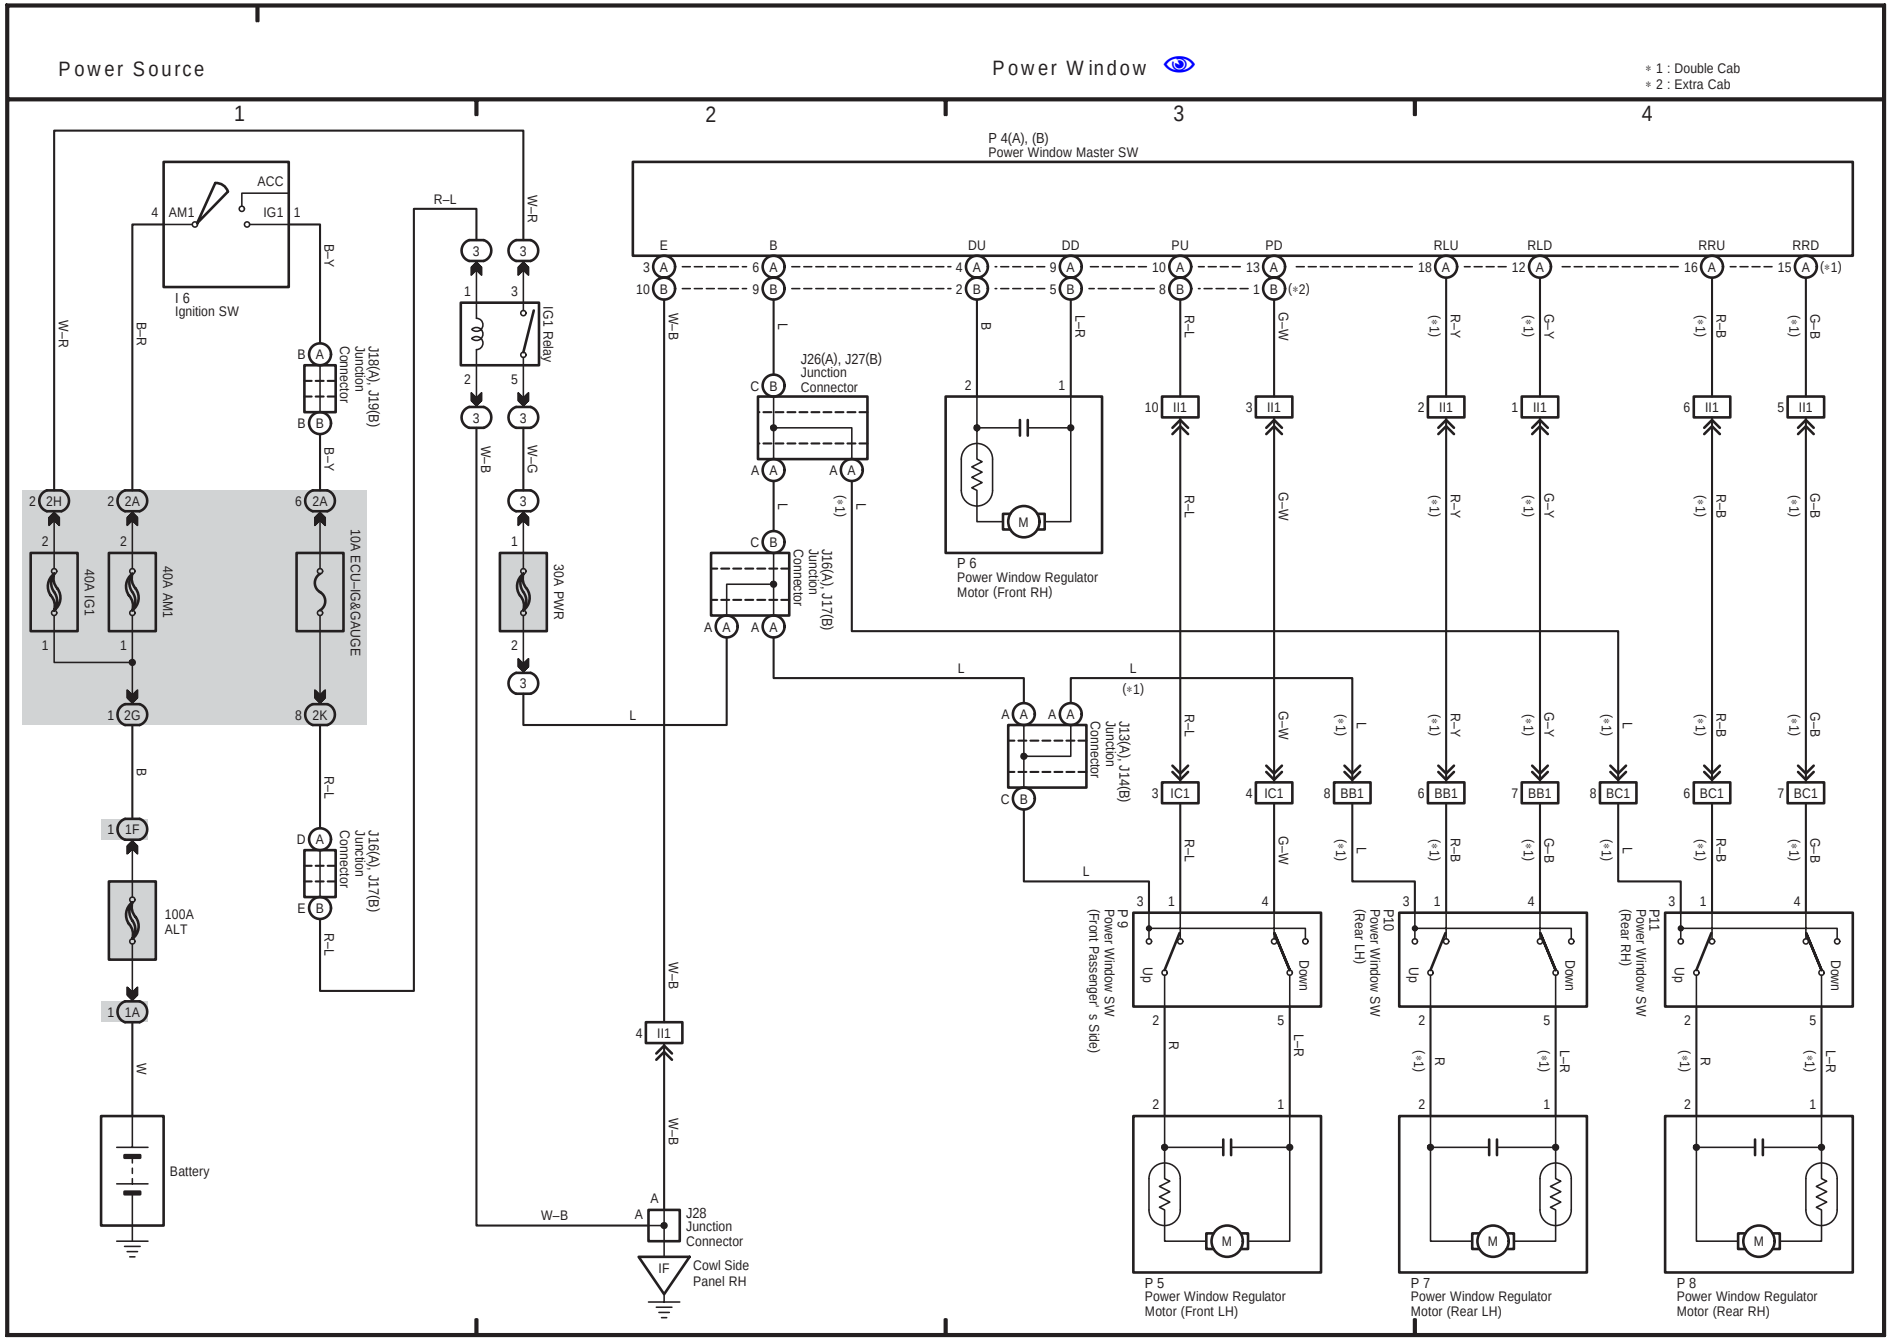
Power Source
Power Window
* 1 : Double Cab
* 2 : Extra Cab
1
2
3
4
P 4(A), (B)
Power Window Master SW
I 6
Ignition SW
ACC
AM1
IG1
IG1 Relay
J18(A), J19(B)
Junction
Connector
J26(A), J27(B)
Junction
Connector
J16(A), J17(B)
Junction
Connector
J13(A), J14(B)
Junction
Connector
J28
Junction
Connector
Cowl Side
Panel RH
40A IG1
40A AM1
10A ECU-IG&GAUGE
30A PWR
100A
ALT
Battery
P 6
Power Window Regulator
Motor (Front RH)
P 9
Power Window SW
(Front Passenger's Side)
P 10
Power Window SW
(Rear LH)
P 11
Power Window SW
(Rear RH)
Up
Down
P 5
Power Window Regulator
Motor (Front LH)
P 7
Power Window Regulator
Motor (Rear LH)
P 8
Power Window Regulator
Motor (Rear RH)