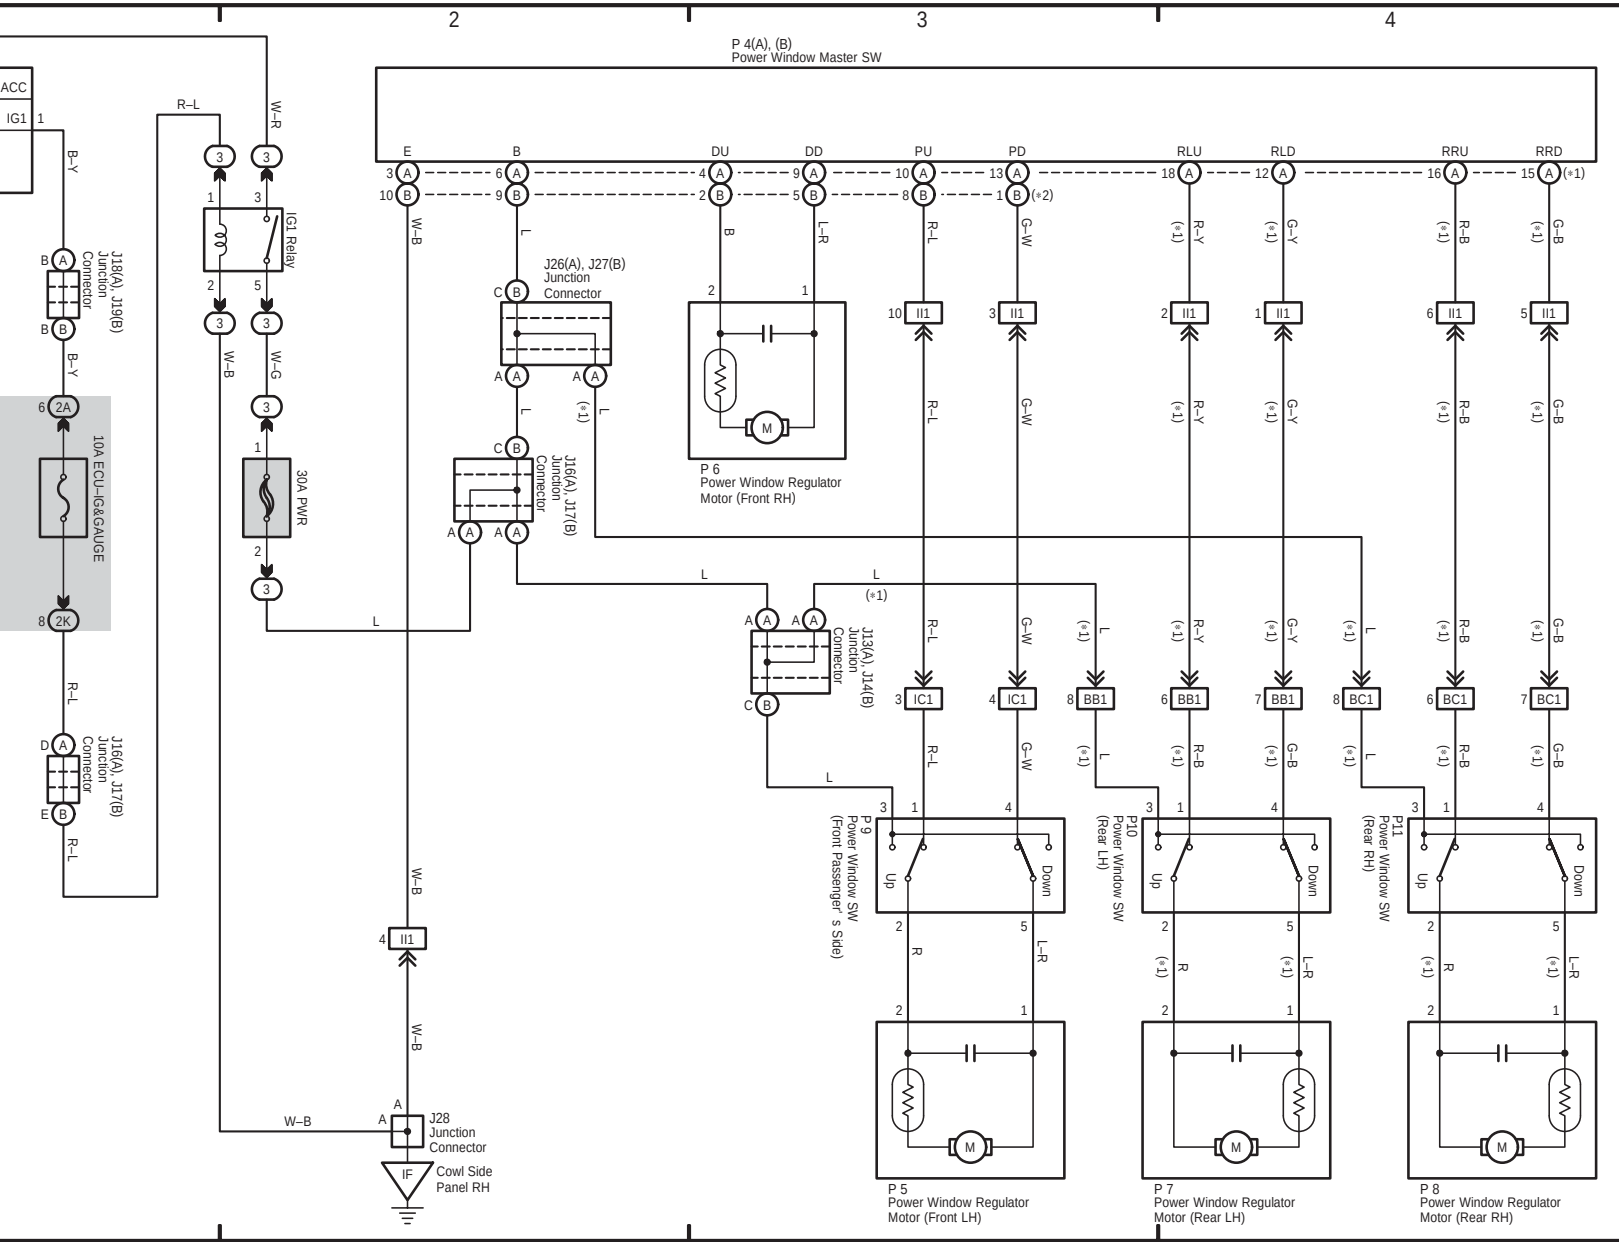
2
3
4
P 4(A), (B)
Power Window Master SW
E
B
DU
DD
PU
PD
RLU
RLD
RRU
RRD
ACC
IG1
IG1 Relay
J18(A), J19(B)
Junction
Connector
10A ECU–IG&GAUGE
30A PWR
J16(A), J17(B)
Junction
Connector
J26(A), J27(B)
Junction
Connector
J16(A), J17(B)
Junction
Connector
J13(A), J14(B)
Junction
Connector
P 6
Power Window Regulator
Motor (Front RH)
P 9
Power Window SW
(Front Passenger's Side)
P10
Power Window SW
(Rear LH)
P11
Power Window SW
(Rear RH)
Up
Down
P 5
Power Window Regulator
Motor (Front LH)
P 7
Power Window Regulator
Motor (Rear LH)
P 8
Power Window Regulator
Motor (Rear RH)
J28
Junction
Connector
Cowl Side
Panel RH
IF
M
(*1)
(*2)