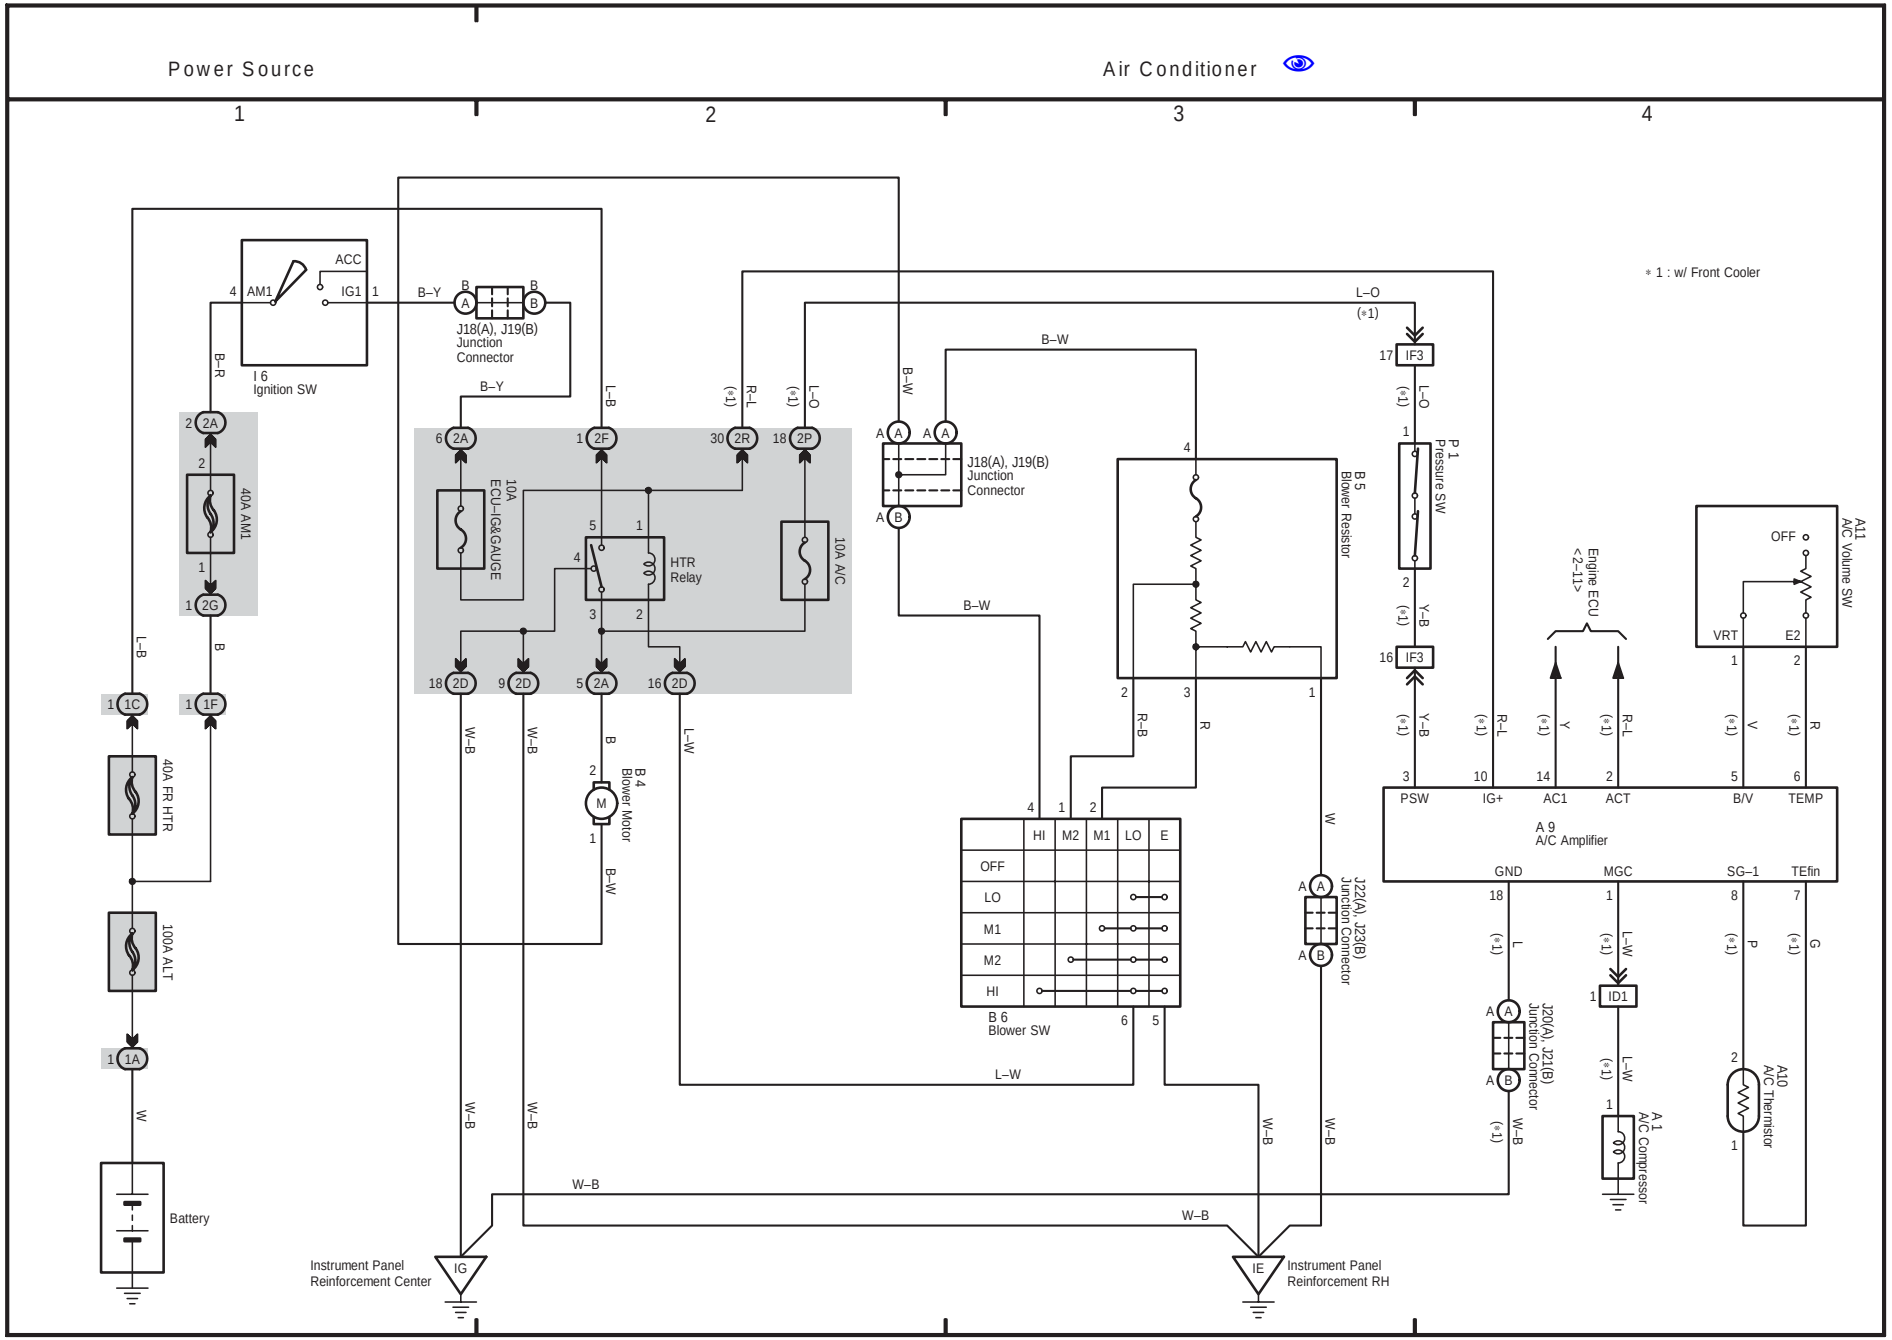
Power Source
Air Conditioner
1
2
3
4
∗1 : w/ Front Cooler
ACC
AM1
IG1
I 6
Ignition SW
J18(A), J19(B)
Junction
Connector
40A AM1
10A
ECU–IG&GAUGE
HTR
Relay
10A A/C
40A FR HTR
100A ALT
Battery
B 4
Blower Motor
B 5
Blower Resistor
B 6
Blower SW
HI
M2
M1
LO
E
OFF
J22(A), J23(B)
Junction Connector
P 1
Pressure SW
IF3
Engine ECU
<2–11>
A 9
A/C Amplifier
PSW
IG+
AC1
ACT
B/V
TEMP
GND
MGC
SG–1
TEfin
J20(A), J21(B)
Junction Connector
ID1
A 1
A/C Compressor
A11
A/C Volume SW
VRT
E2
A10
A/C Thermistor
Instrument Panel
Reinforcement Center
IG
IE
Instrument Panel
Reinforcement RH