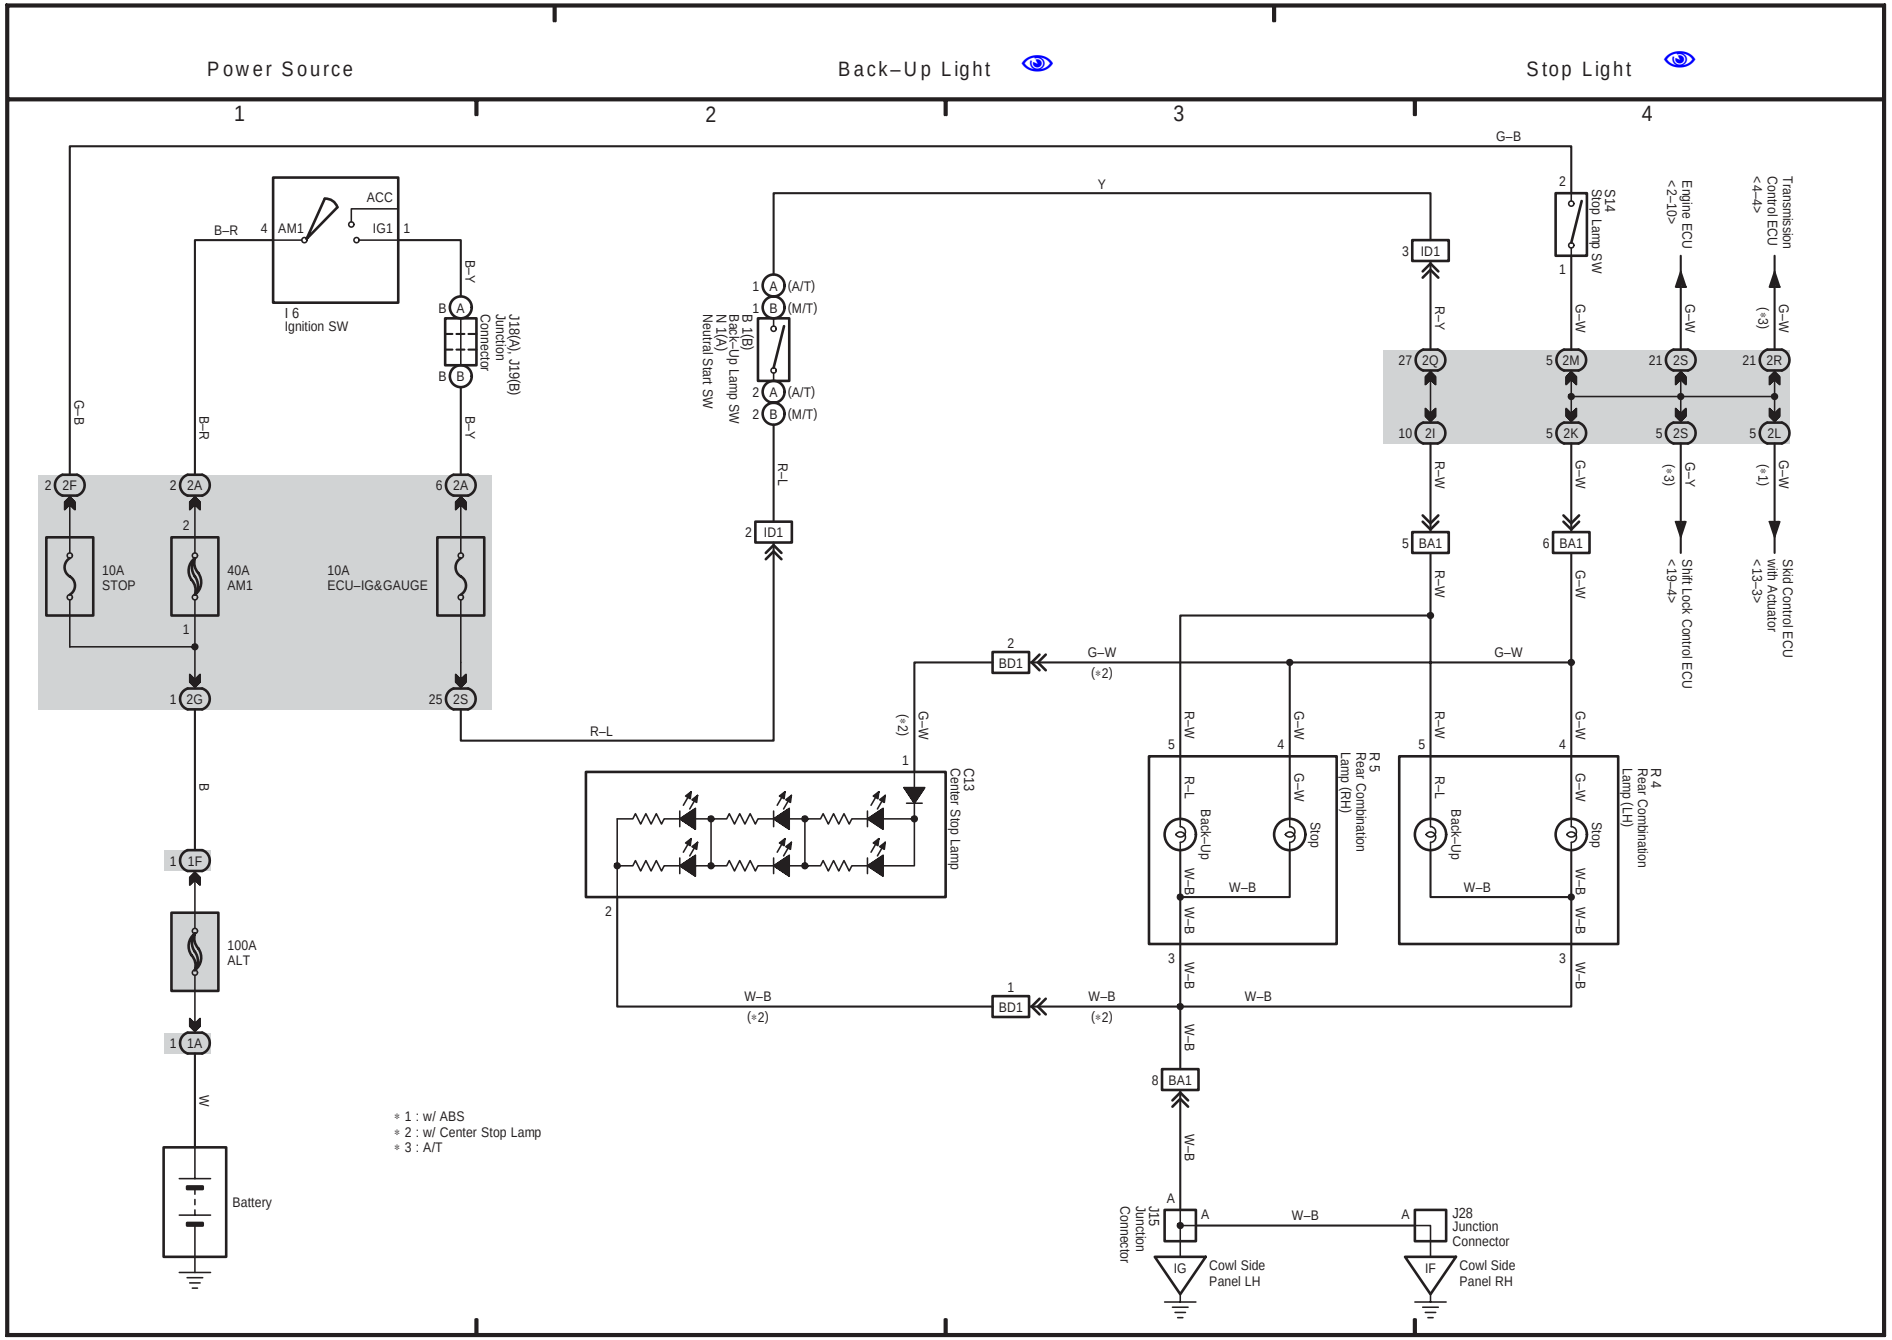
Power Source
Back–Up Light
Stop Light
1
2
3
4
G–B
Y
ACC
AM1
IG1
B–R
B–Y
I 6
Ignition SW
J18(A), J19(B)
Junction
Connector
I 6(B)
Back–Up Lamp SW
N 1(A)
Neutral Start SW
(A/T)
(M/T)
R–L
ID1
S14
Stop Lamp SW
Engine ECU
<2–10>
Transmission
Control ECU
<4–4>
G–W
G–Y
R–Y
R–W
BA1
Shift Lock Control ECU
<19–4>
Skid Control ECU
with Actuator
<13–3>
10A
STOP
40A
AM1
10A
ECU–IG&GAUGE
BD1
(*2)
C13
Center Stop Lamp
R 5
Rear Combination
Lamp (RH)
R 4
Rear Combination
Lamp (LH)
Back–Up
Stop
W–B
B
100A
ALT
W
Battery
J15
Junction
Connector
J28
Junction
Connector
IG
IF
Cowl Side
Panel LH
Cowl Side
Panel RH
* 1 : w/ ABS
* 2 : w/ Center Stop Lamp
* 3 : A/T