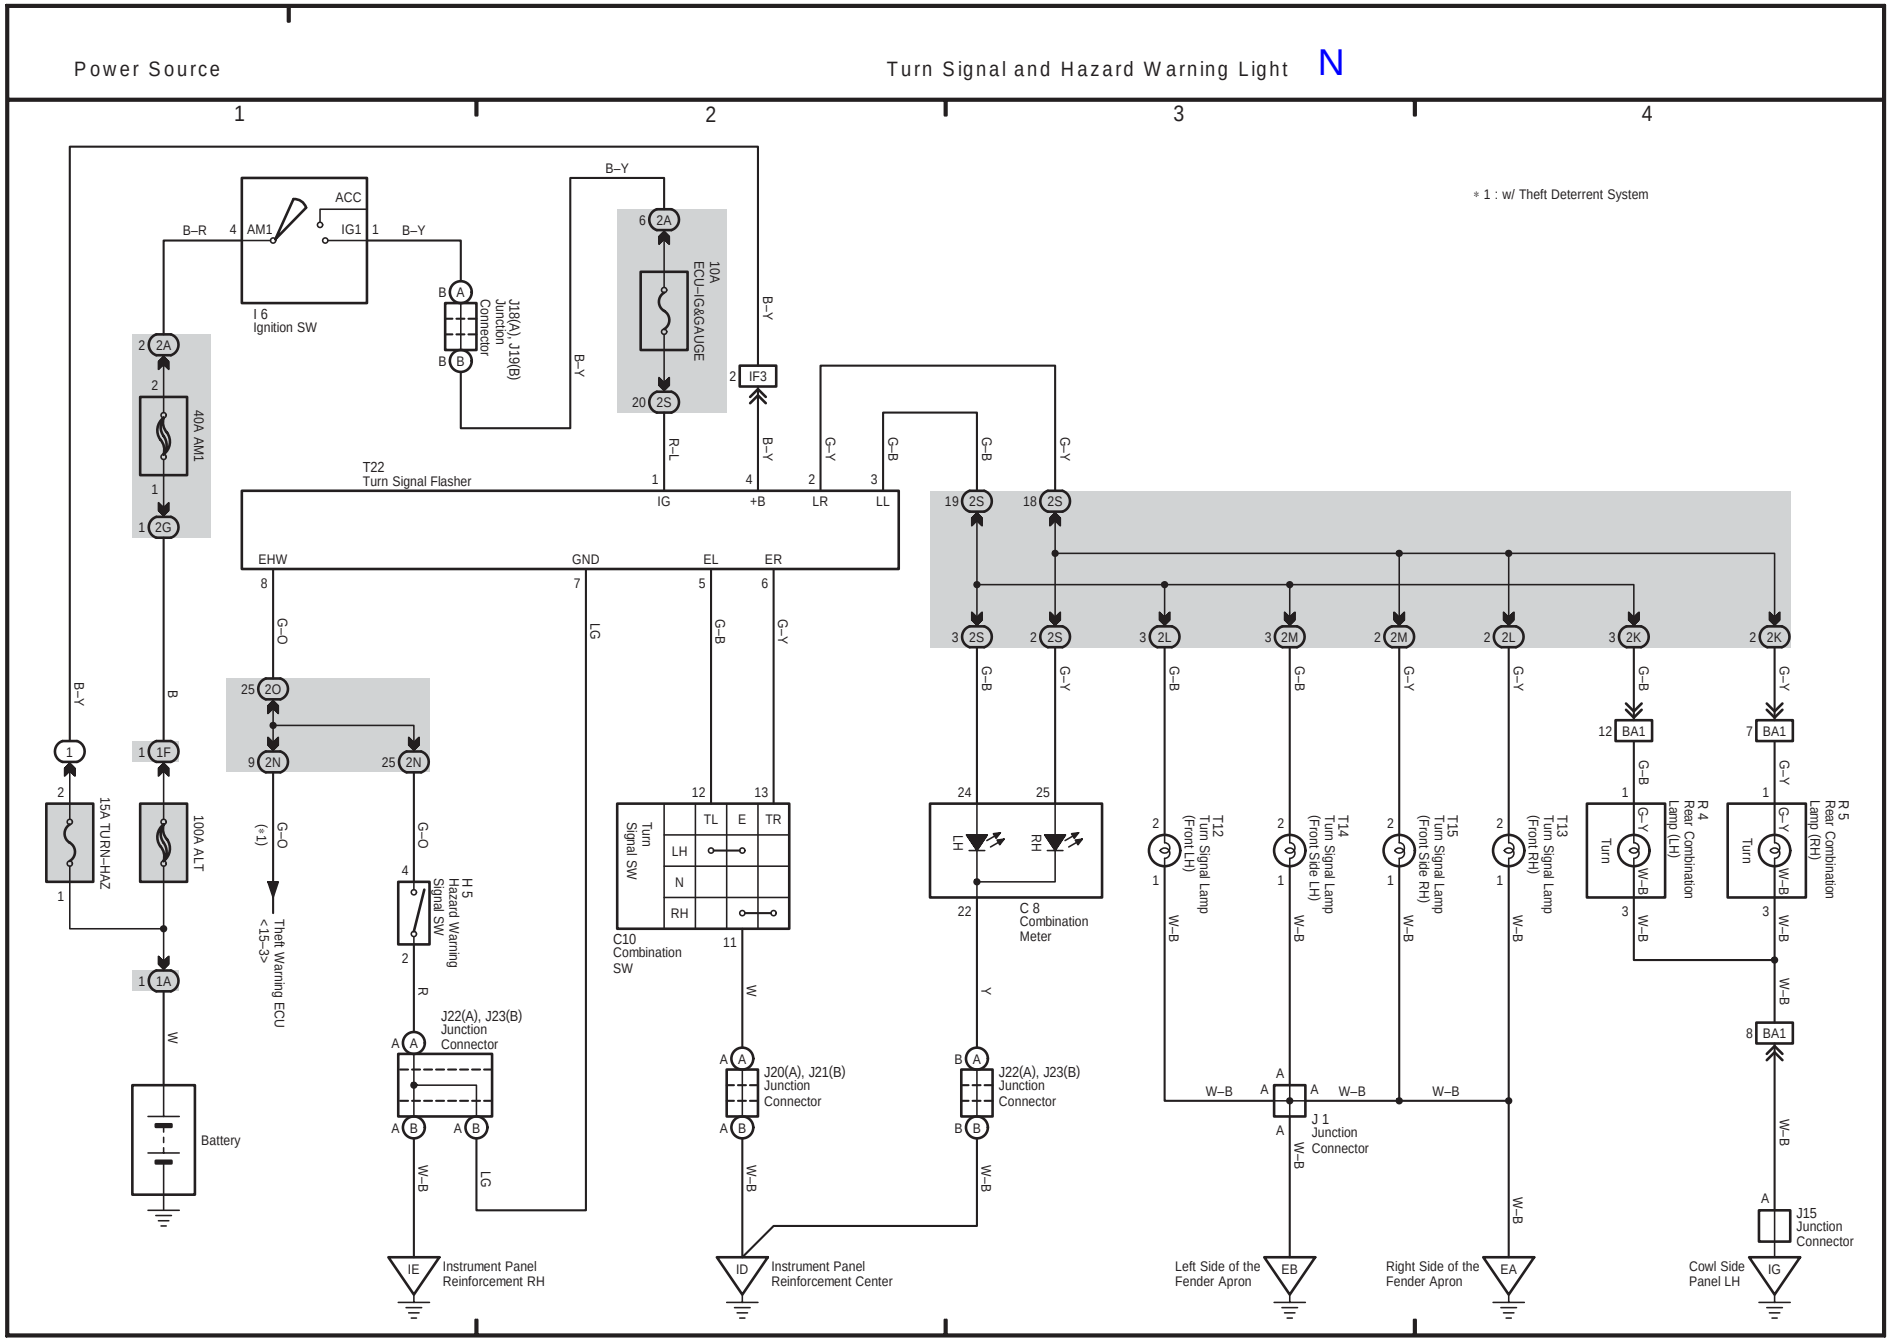
Power Source
Turn Signal and Hazard Warning Light
N
1
2
3
4
* 1 : w/ Theft Deterrent System
ACC
AM1
IG1
I 6
Ignition SW
J18(A), J19(B)
Junction
Connector
10A
ECU–IG&GAUGE
IF3
40A AM1
T22
Turn Signal Flasher
IG
+B
LR
LL
EHW
GND
EL
ER
15A TURN–HAZ
100A ALT
Battery
Theft Warning ECU
<15–3>
H 5
Hazard Warning
Signal SW
J22(A), J23(B)
Junction
Connector
Turn
Signal SW
TL
E
TR
LH
N
RH
C10
Combination
SW
J20(A), J21(B)
Junction
Connector
C 8
Combination
Meter
T12
Turn Signal Lamp
(Front LH)
T14
Turn Signal Lamp
(Front Side LH)
T15
Turn Signal Lamp
(Front Side RH)
T13
Turn Signal Lamp
(Front RH)
R 4
Rear Combination
Lamp (LH)
R 5
Rear Combination
Lamp (RH)
J 1
Junction
Connector
J15
Junction
Connector
Instrument Panel
Reinforcement RH
Instrument Panel
Reinforcement Center
Left Side of the
Fender Apron
Right Side of the
Fender Apron
Cowl Side
Panel LH