(Cont. next page)

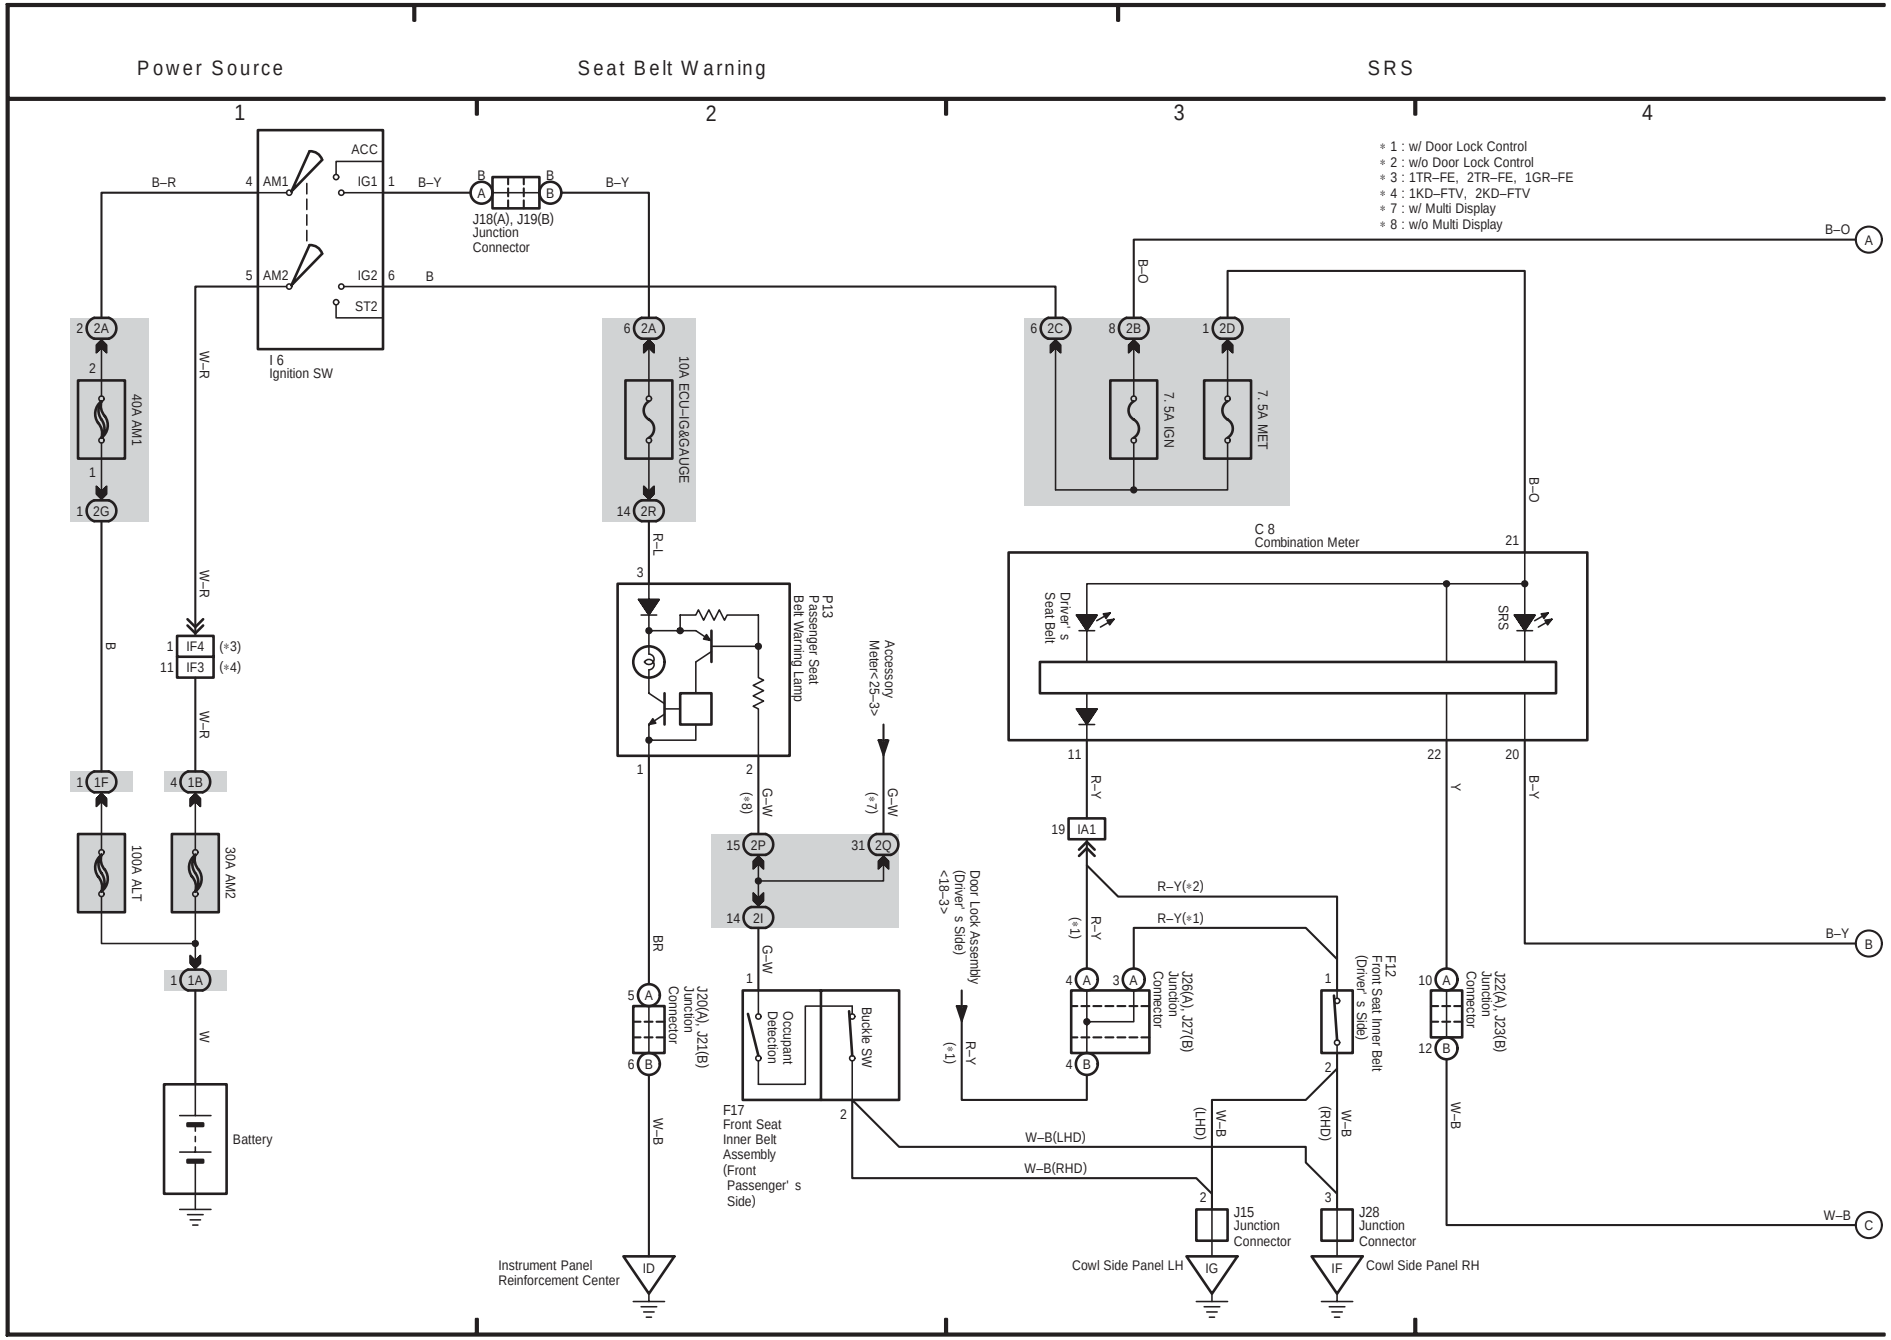

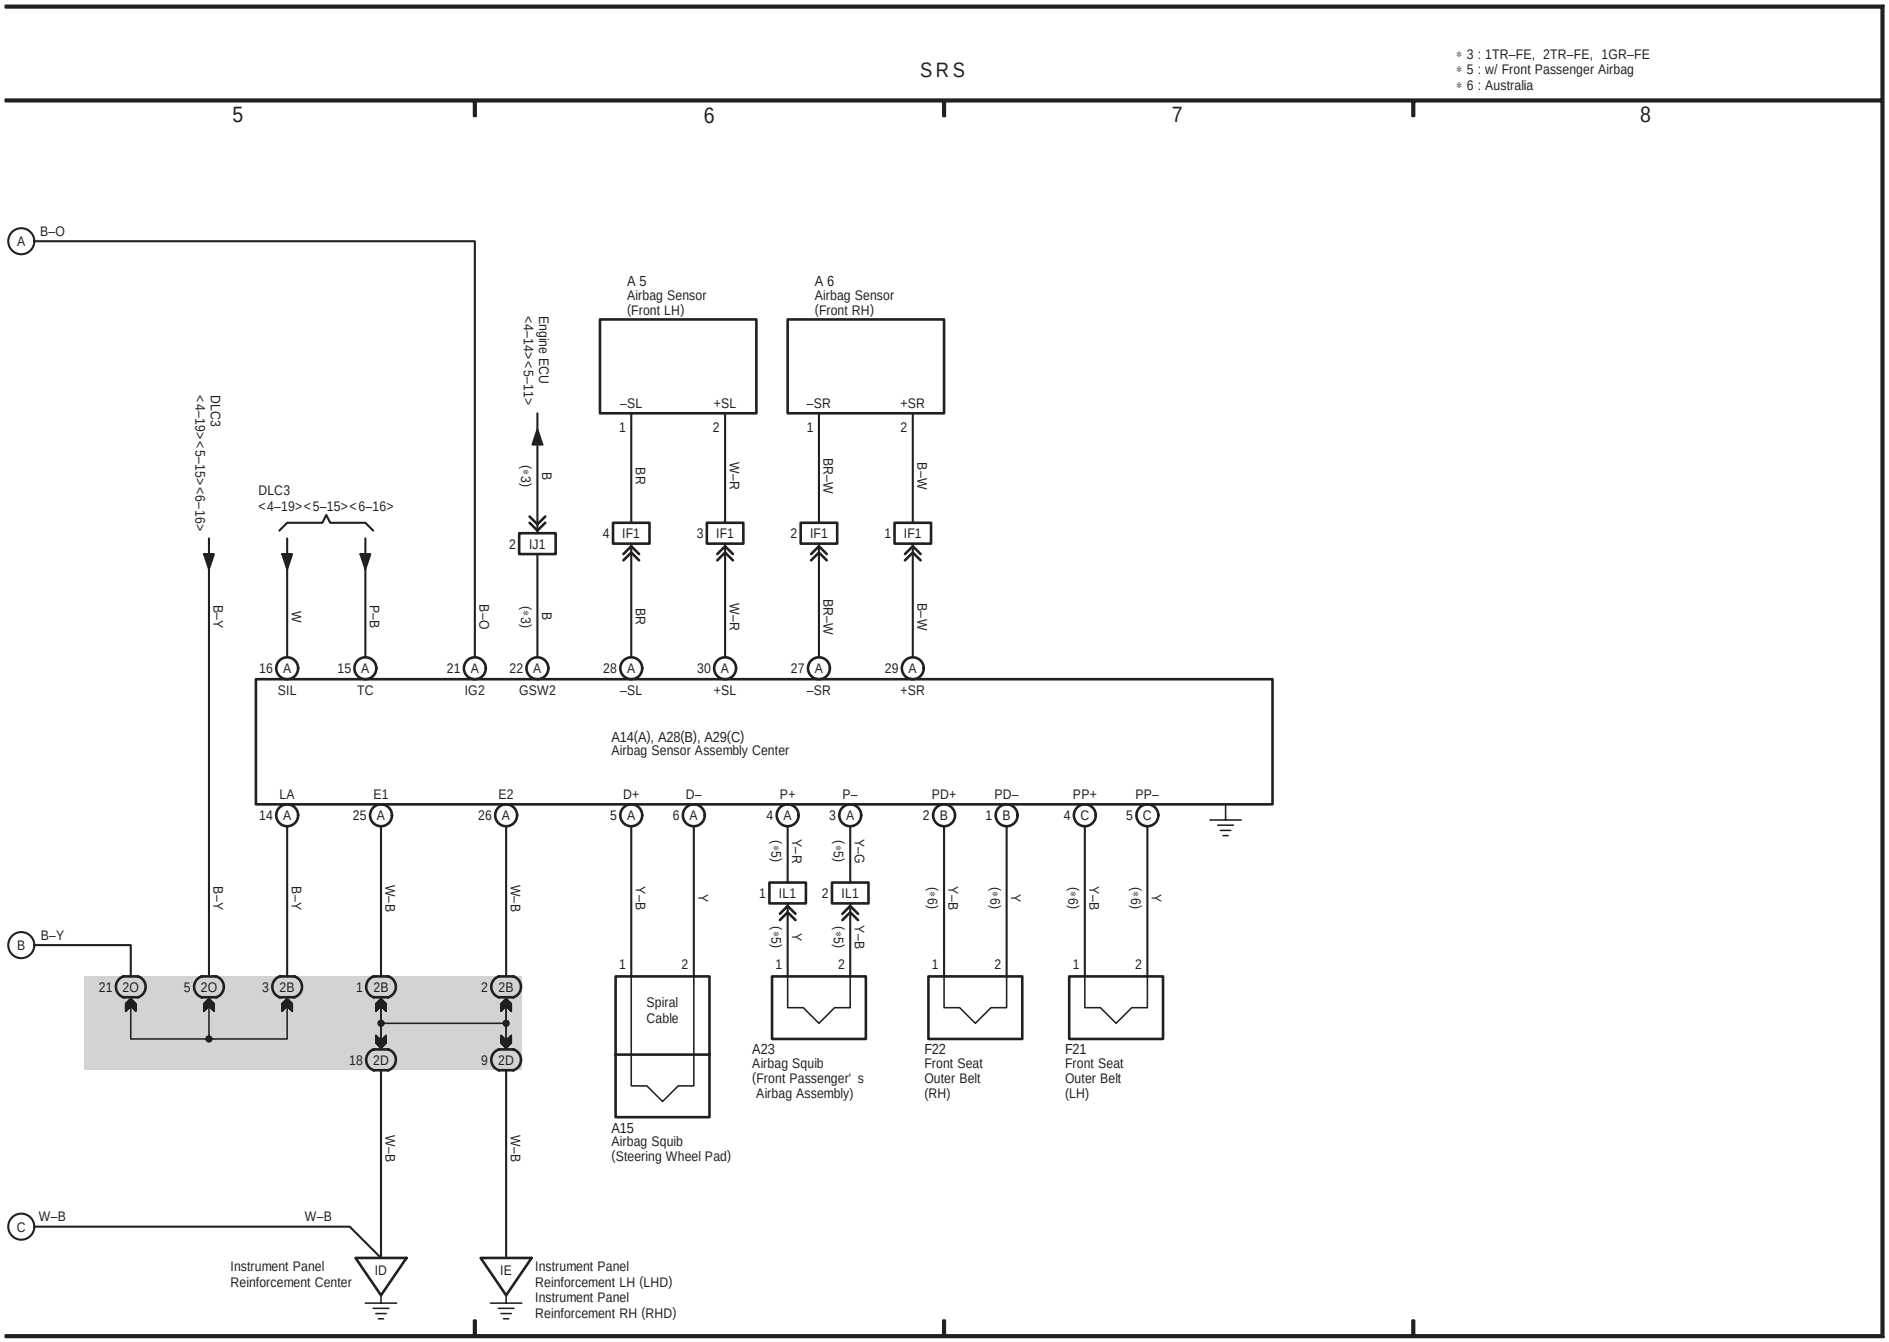
SRS
* 3 : 1TR–FE, 2TR–FE, 1GR–FE
* 5 : w/ Front Passenger Airbag
* 6 : Australia
5
6
7
8
A 5
Airbag Sensor
(Front LH)
A 6
Airbag Sensor
(Front RH)
Engine ECU
<4–14><5–11>
DLC3
<4–19><5–15><6–16>
DLC3
<4–19><5–15><6–16>
–SL
+SL
–SR
+SR
IF1
IJ1
SIL
TC
IG2
GSW2
A14(A), A28(B), A29(C)
Airbag Sensor Assembly Center
LA
E1
E2
D+
D–
P+
P–
PD+
PD–
PP+
PP–
IL1
Spiral
Cable
A15
Airbag Squib
(Steering Wheel Pad)
A23
Airbag Squib
(Front Passenger' s
Airbag Assembly)
F22
Front Seat
Outer Belt
(RH)
F21
Front Seat
Outer Belt
(LH)
Instrument Panel
Reinforcement Center
ID
IE
Instrument Panel
Reinforcement LH (LHD)
Instrument Panel
Reinforcement RH (RHD)