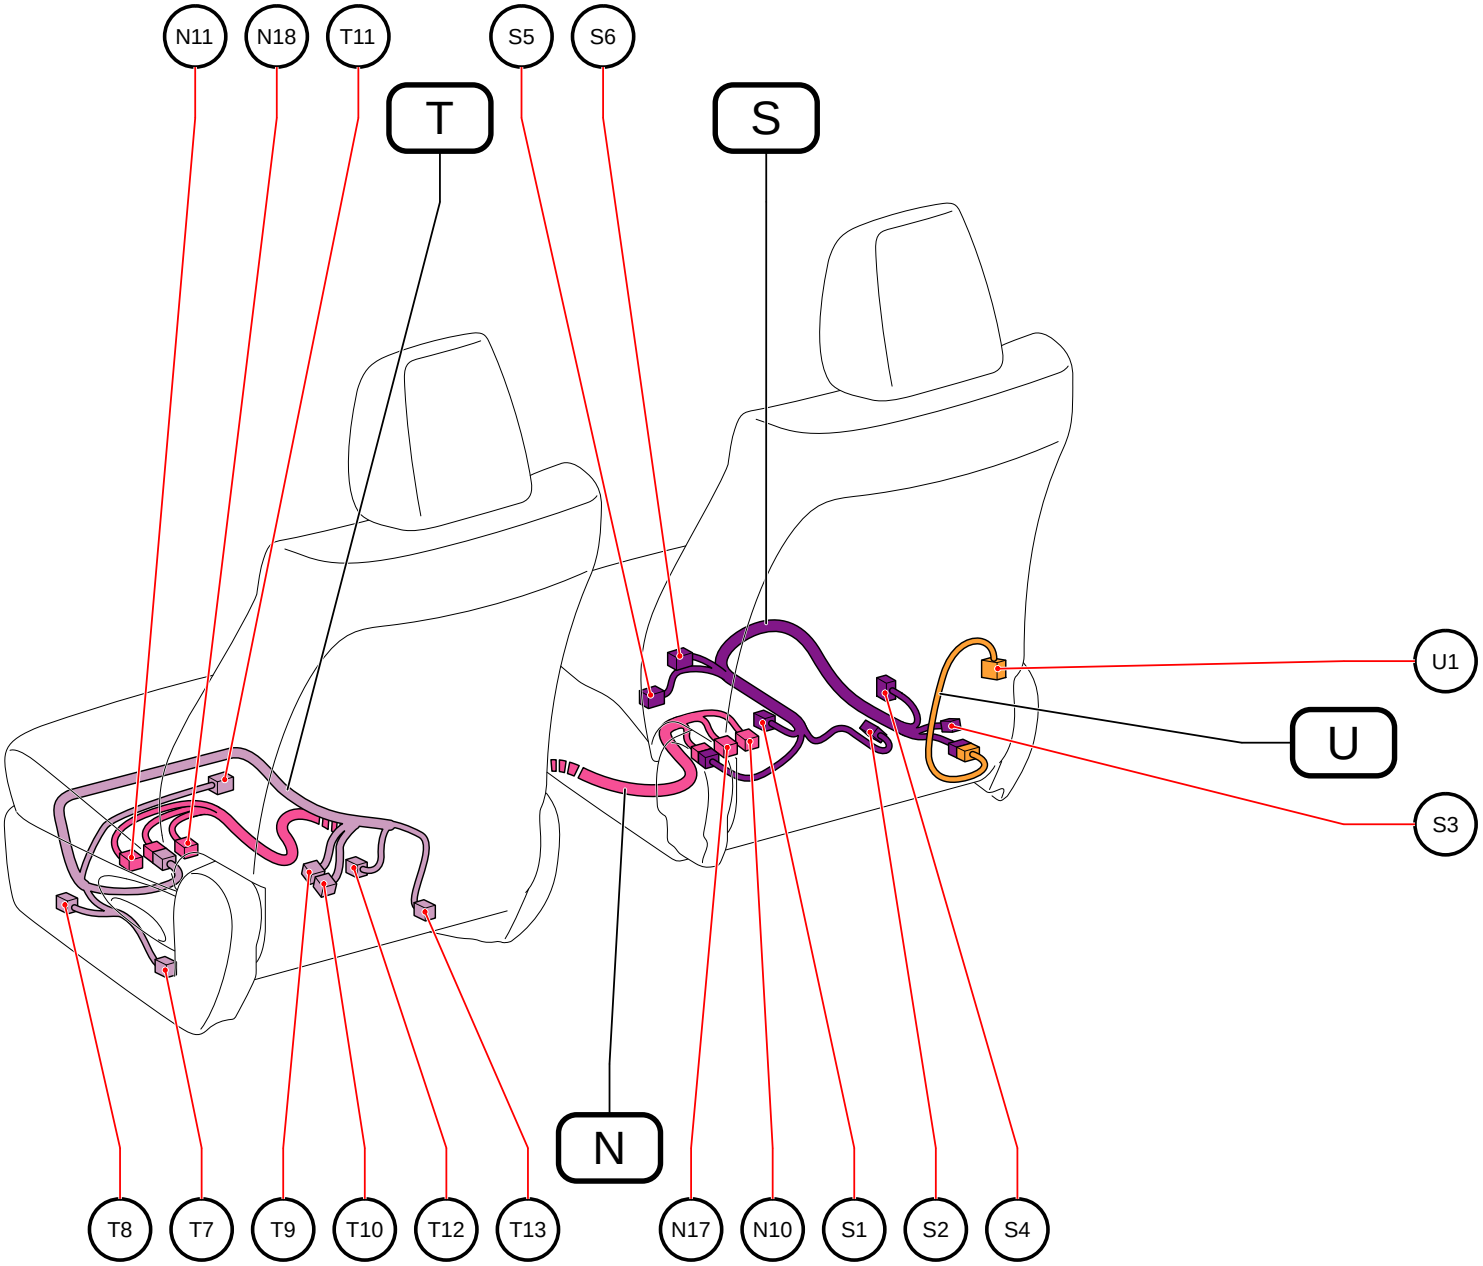
N11
N18
T11
S5
S6
T
S
U1
U
S3
N
T8
T7
T9
T10
T12
T13
N17
N10
S1
S2
S4

N10 Front Seat Airbag Assembly RH
N11 Front Seat Airbag Assembly LH
N17 Front Seat Inner Belt Assembly RH
N18 Front Seat Inner Belt Assembly LH

S1 Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
S2 Front Power Seat Tilt Position Motor RH (Front Seat Adjuster Assembly RH)
S3 Front Power Seat Lift Position Motor RH (Front Seat Adjuster Assembly RH)
S4 Front Power Seat Switch RH
S5 Front Seat Cushion Heater Assembly RH
S6 No. 54 Junction Connector

T7 Rear Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T8 Front Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T9 Occupant Detection ECU
T10 Occupant Detection ECU
T11 Front Seat Inner Belt Assembly LH
T12 Front In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T13 Rear In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)

U1 Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)

Position of Parts in Seat (RHD)

N10
Yellow

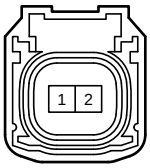

90980-12698

N11
Yellow

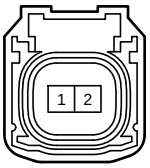

90980-12698

N17
White

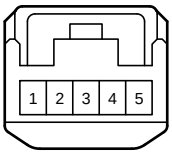

90980-12366

N18
White

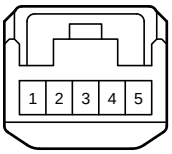

90980-12366

S1
Blue

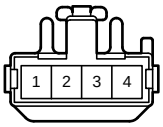

90980-12335

S2
White

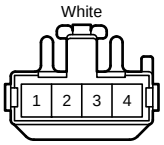

90980-12335

S3
Blue



90980-12341

S4
White



90980-10807

S5
White



90980-11735

S6
Black

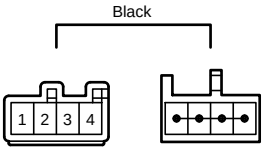

90980-11398

T7
Gray

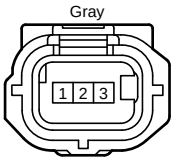

90980-12354

T8
Black

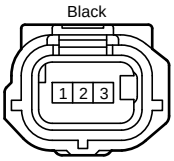

90980-12353

T9
Gray

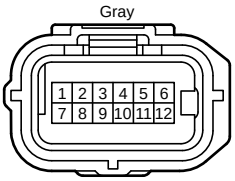

90980-12357

T10
Black

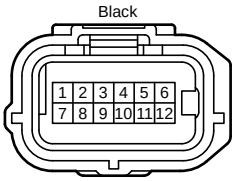

90980-12356

T11
Gray

90980-11155

T12
Gray

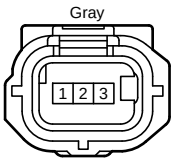

90980-12354

T13
Black

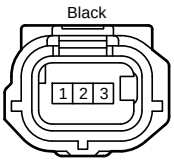

90980-12353

U1
White

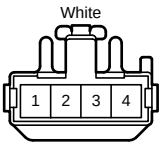

90980-12335