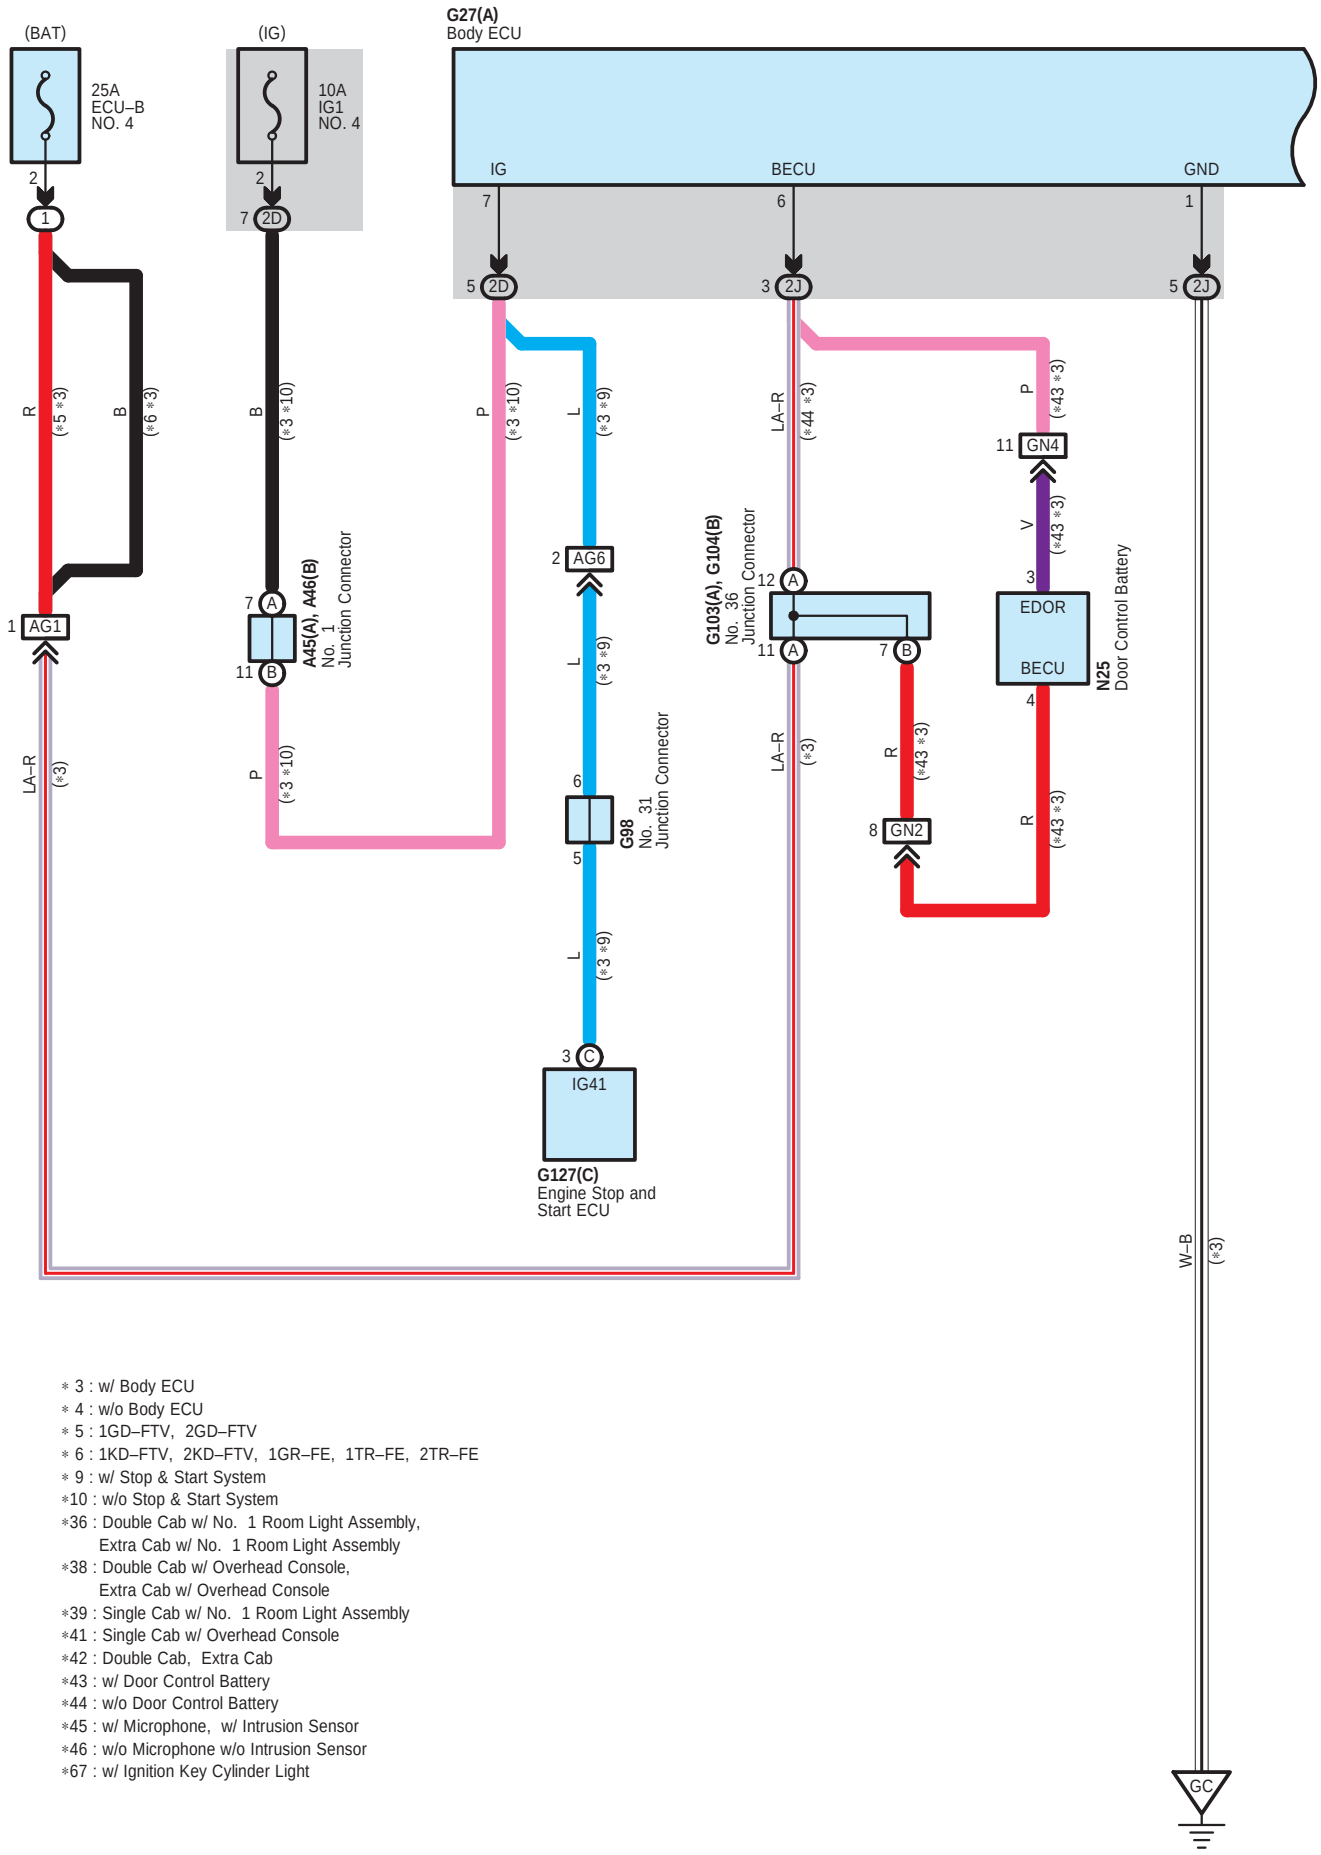

* 3 : w/ Body ECU
* 4 : w/o Body ECU
* 5 : 1GD–FTV, 2GD–FTV
* 6 : 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
* 9 : w/ Stop & Start System
*10 : w/o Stop & Start System
*36 : Double Cab w/ No. 1 Room Light Assembly,
Extra Cab w/ No. 1 Room Light Assembly
*38 : Double Cab w/ Overhead Console,
Extra Cab w/ Overhead Console
*39 : Single Cab w/ No. 1 Room Light Assembly
*41 : Single Cab w/ Overhead Console
*42 : Double Cab, Extra Cab
*43 : w/ Door Control Battery
*44 : w/o Door Control Battery
*45 : w/ Microphone, w/ Intrusion Sensor
*46 : w/o Microphone w/o Intrusion Sensor
*67 : w/ Ignition Key Cylinder Light

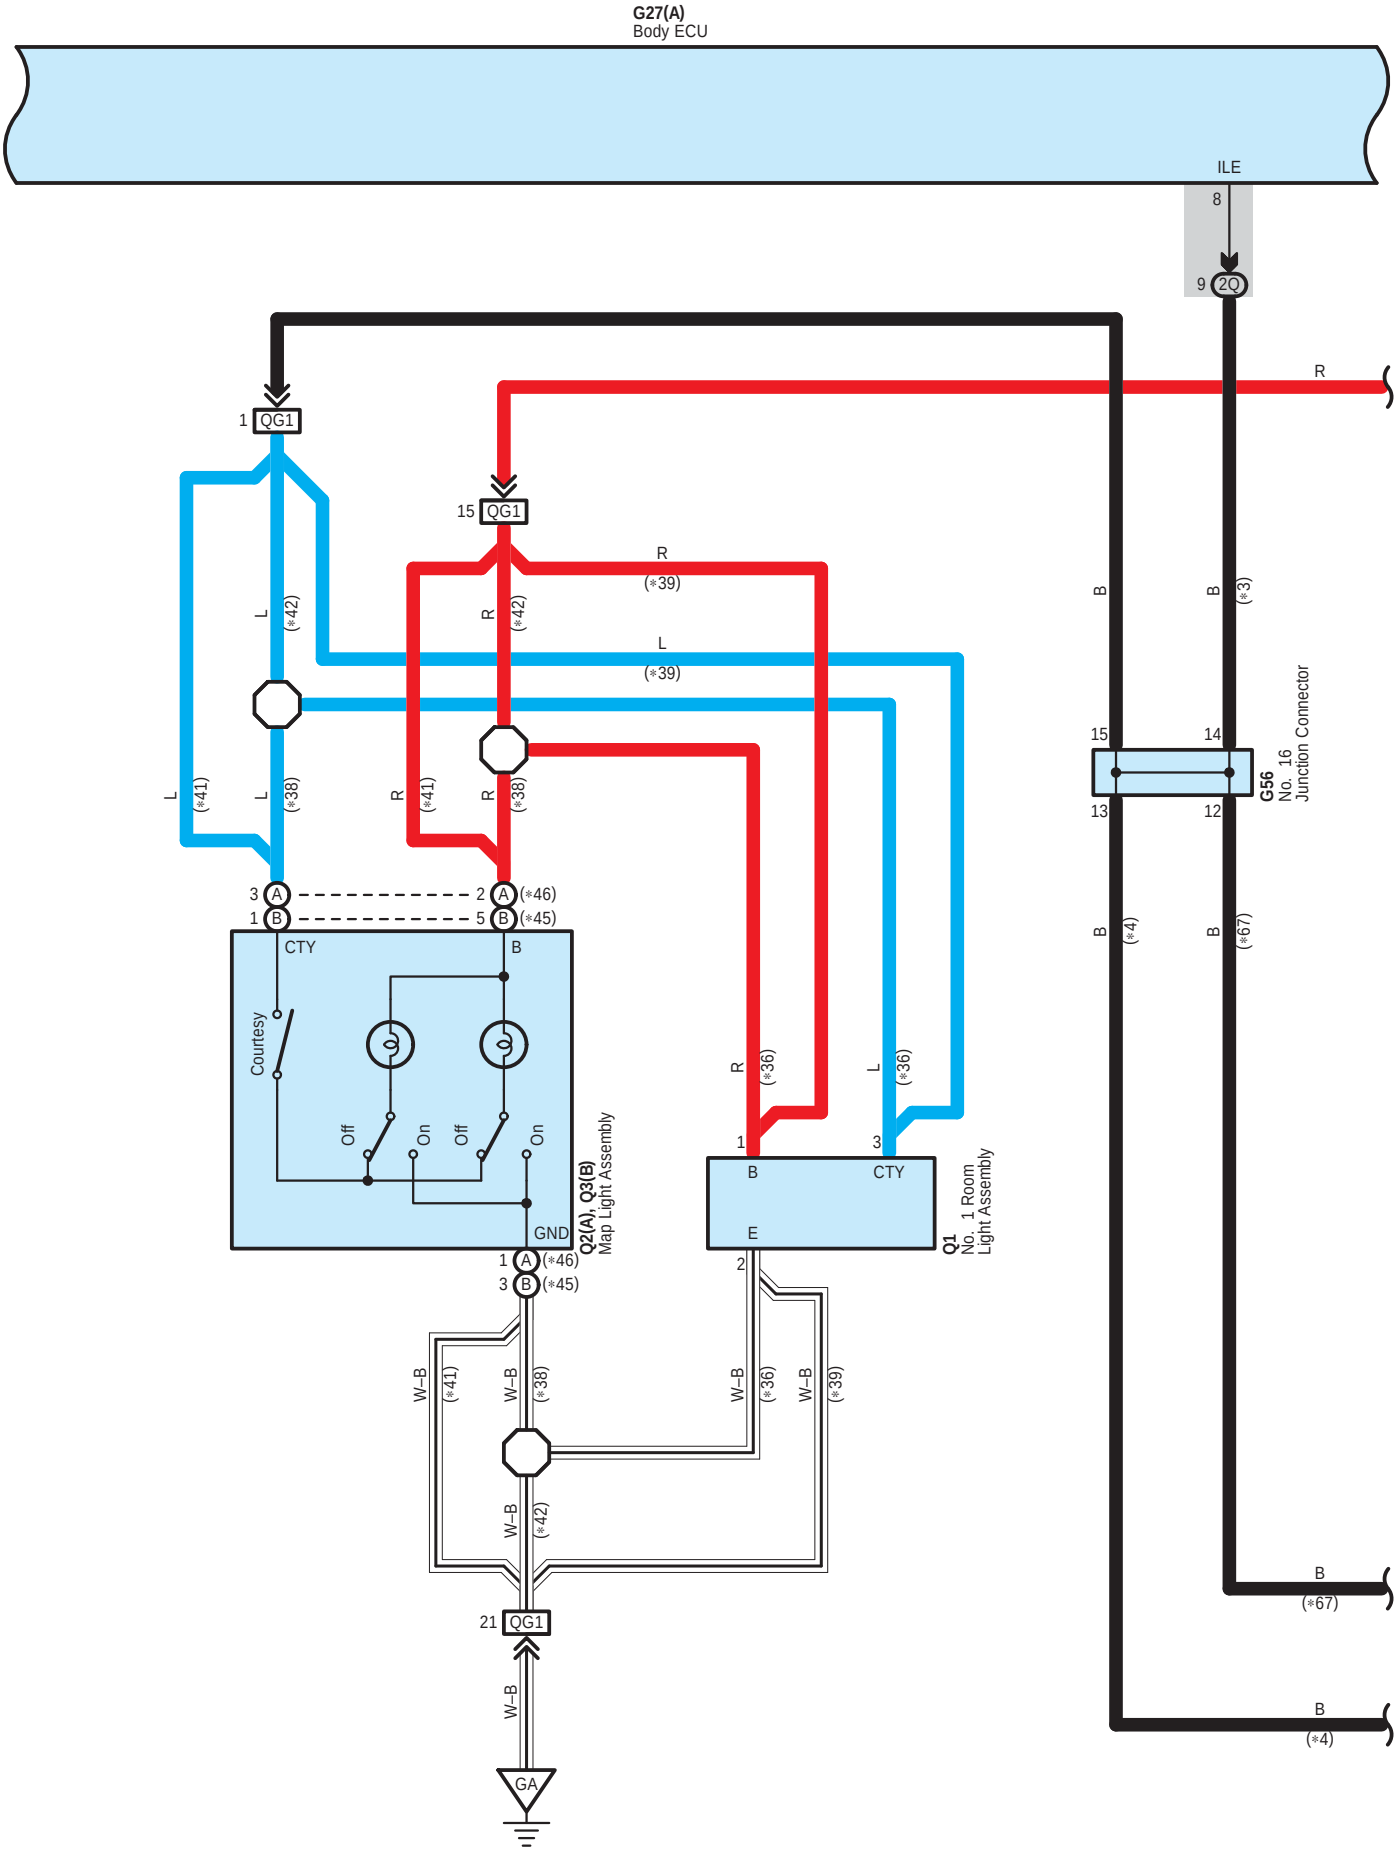
G27(A)
Body ECU
ILE
8
9 2Q
R
1 QG1
15 QG1
R
(*39)
L
(*39)
L
(*42)
R
(*42)
L
(*41)
L
(*38)
R
(*41)
R
(*38)
B
B
(*3)
15
14
13
12
G56
No. 16
Junction Connector
B
(*4)
B
(*67)
3 A
1 B
2 A (*46)
5 B (*45)
CTY
B
Courtesy
Off
On
Off
On
GND
1 A (*46)
3 B (*45)
Q2(A), Q3(B)
Map Light Assembly
R
(*36)
L
(*36)
1
3
B
CTY
E
2
Q1
No. 1 Room
Light Assembly
W–B
(*41)
W–B
(*38)
W–B
(*36)
W–B
(*39)
W–B
(*42)
21 QG1
W–B
GA
B
(*67)
B
(*4)

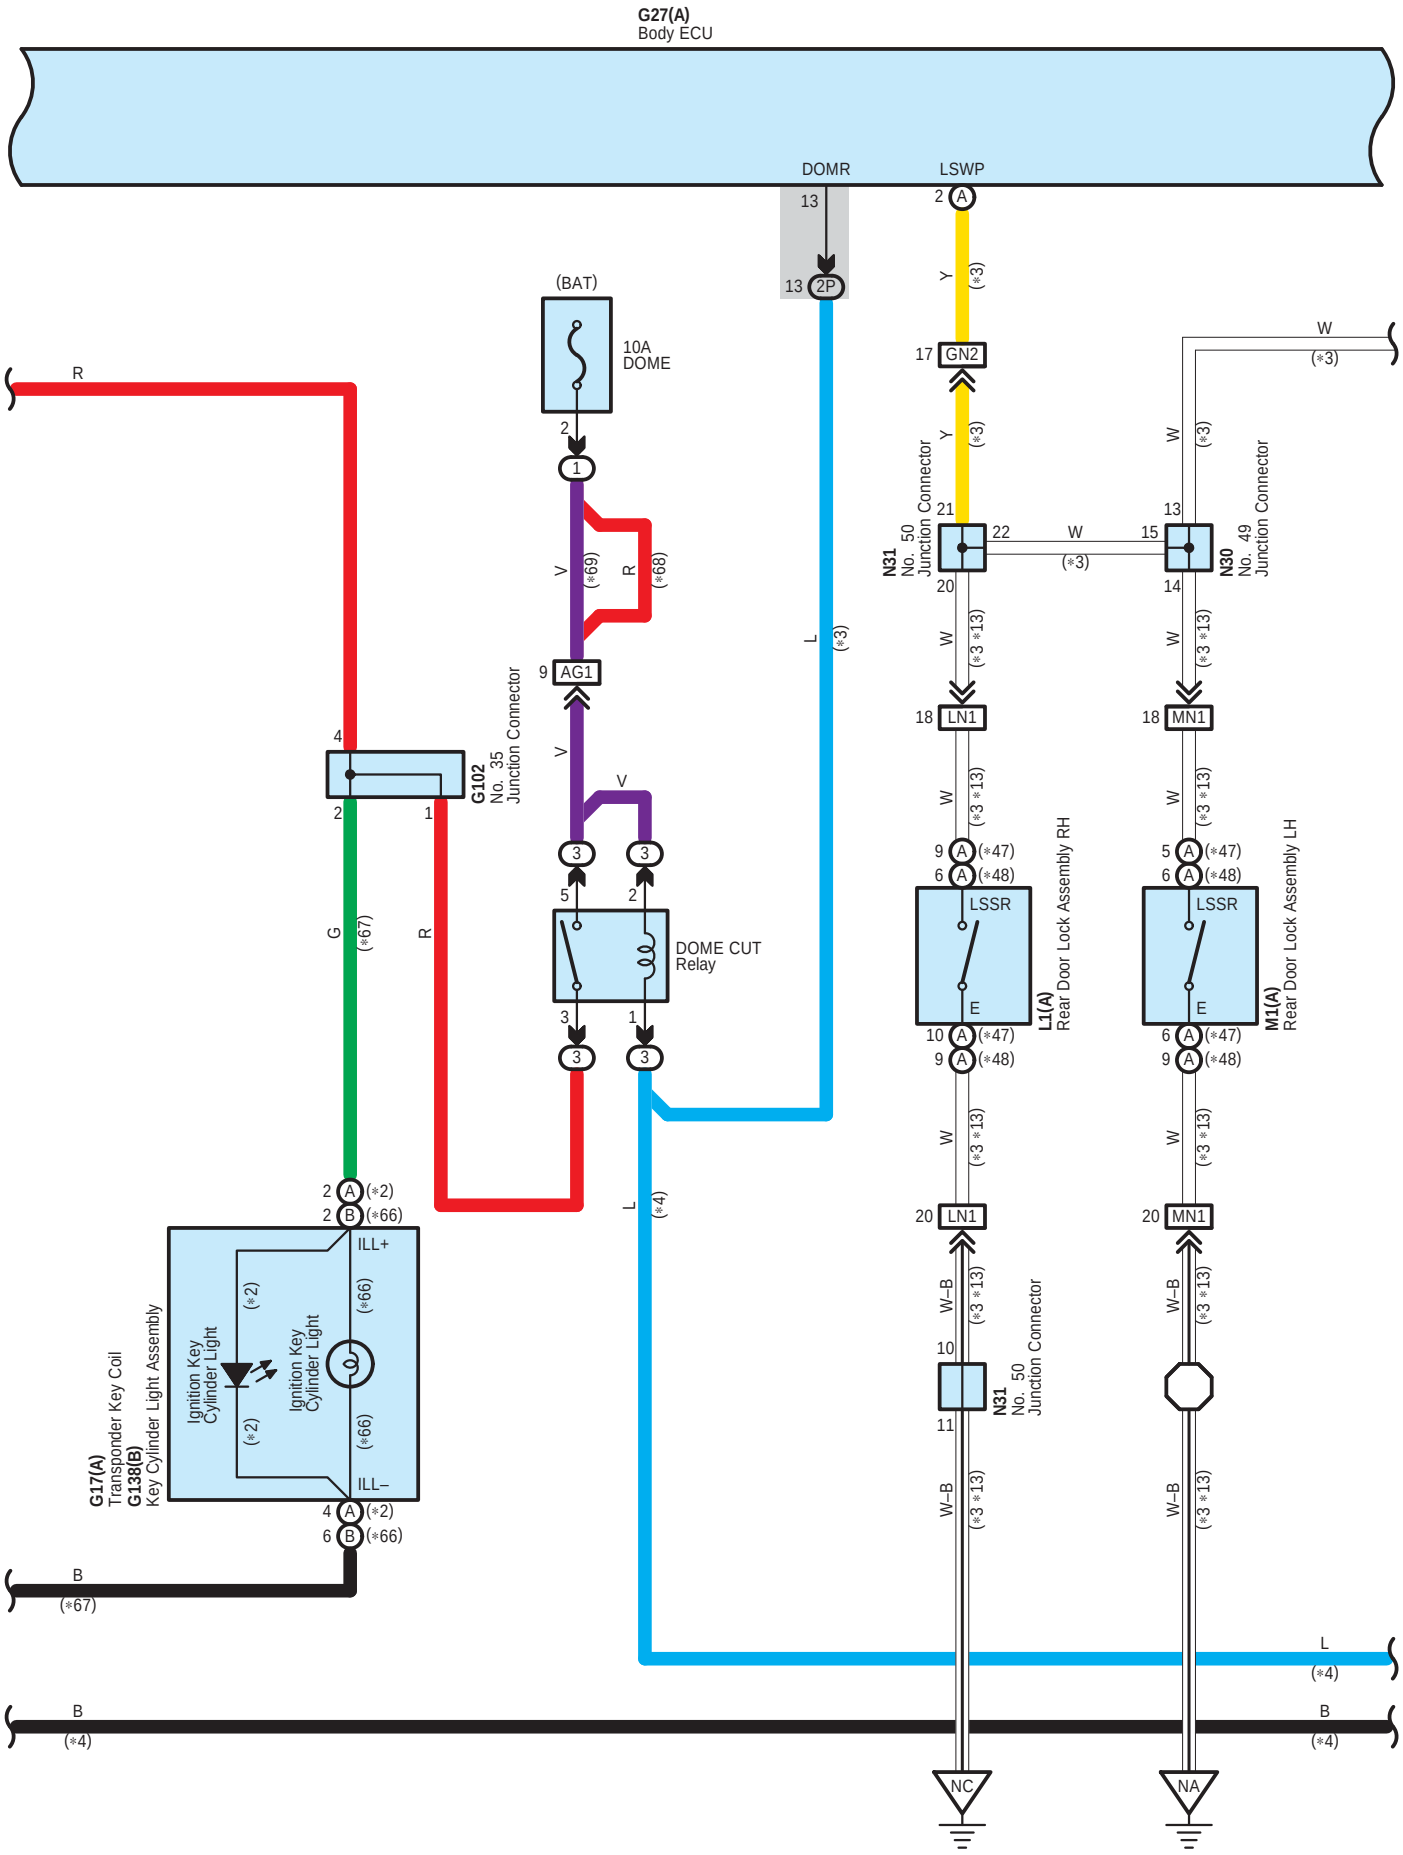
G27(A)
Body ECU
DOMR
LSWP
13
13 2P
2 A
Y
(*3)
(BAT)
10A
DOME
17 GN2
W
(*3)
R
2
1
V
(*69)
R
(*68)
9 AG1
V
L
(*3)
N31
No. 50
Junction Connector
21
22
W
15
13
N30
No. 49
Junction Connector
20
14
W
(*3 *13)
18 LN1
18 MN1
4
G102
No. 35
Junction Connector
2
1
3
5
2
DOME CUT
Relay
3
1
9 A (*47)
6 A (*48)
LSSR
E
L1(A)
Rear Door Lock Assembly RH
10 A (*47)
9 A (*48)
5 A (*47)
6 A (*48)
M1(A)
Rear Door Lock Assembly LH
6 A (*47)
9 A (*48)
G
(*67)
2 A (*2)
2 B (*66)
ILL+
(*2)
(*66)
Ignition Key
Cylinder Light
ILL–
4 A (*2)
6 B (*66)
G17(A)
Transponder Key Coil
G138(B)
Key Cylinder Light Assembly
B
(*67)
L
(*4)
20 LN1
20 MN1
W–B
10
11
N31
No. 50
Junction Connector
B
(*4)
NC
NA

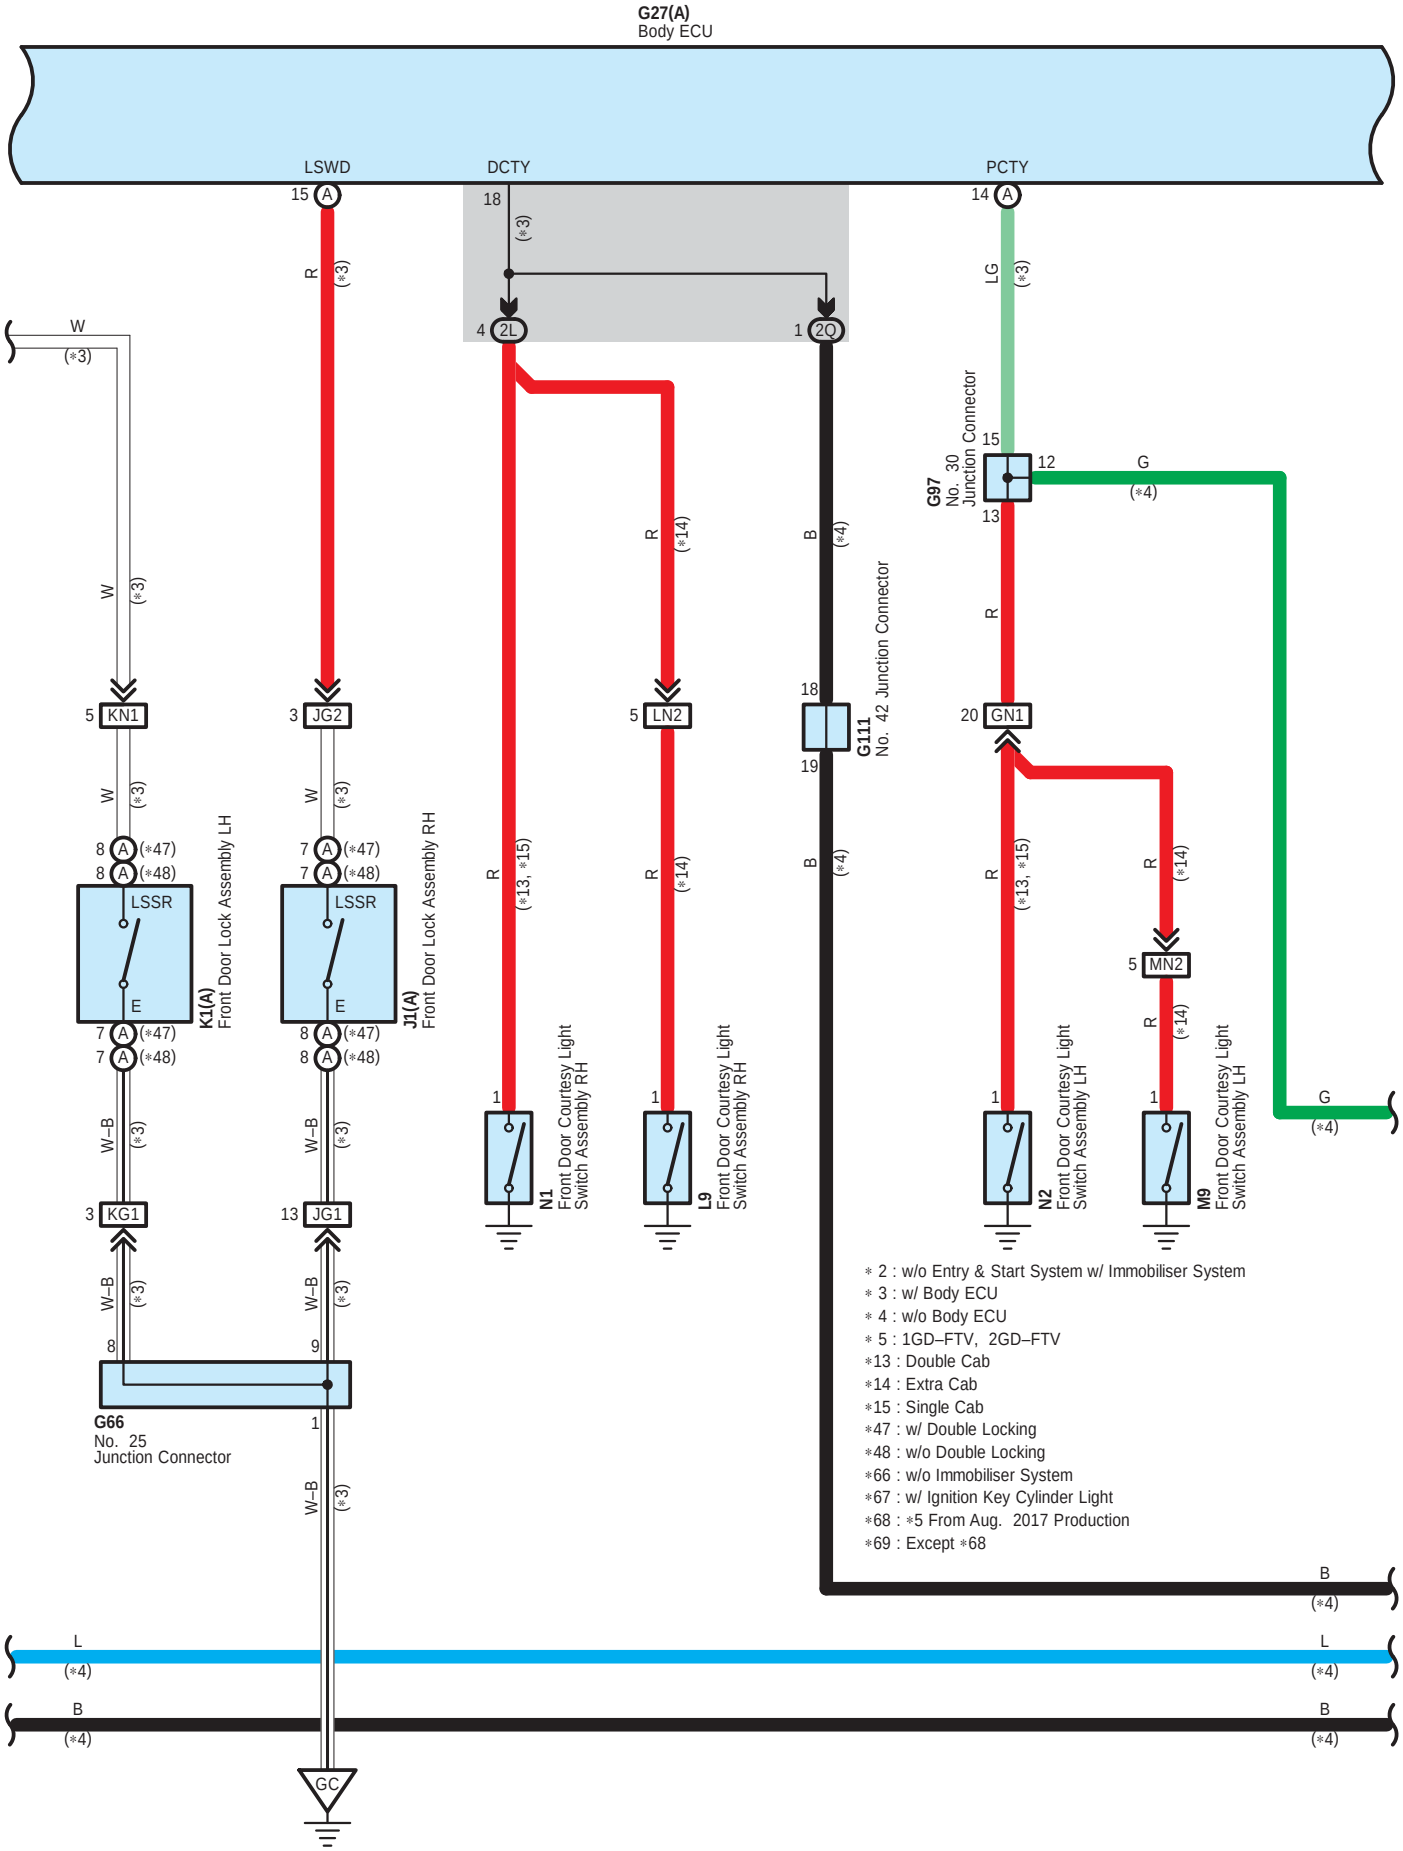
G27(A)
Body ECU
LSWD
DCTY
PCTY
15 A
18
14 A
R (*3)
(*3)
LG (*3)
4 2L
1 2Q
W
(*3)
G97
No. 30
Junction Connector
15
12
13
G
(*4)
R (*14)
B (*4)
R
5 KN1
3 JG2
5 LN2
18
19
G111
No. 42 Junction Connector
20 GN1
W (*3)
8 A (*47)
8 A (*48)
7 A (*47)
7 A (*48)
LSSR
E
K1(A)
Front Door Lock Assembly LH
J1(A)
Front Door Lock Assembly RH
R (*13, *15)
R (*14)
B (*4)
5 MN2
W–B (*3)
3 KG1
13 JG1
1
N1
Front Door Courtesy Light
Switch Assembly RH
L9
Front Door Courtesy Light
Switch Assembly RH
N2
Front Door Courtesy Light
Switch Assembly LH
M9
Front Door Courtesy Light
Switch Assembly LH
8
9
G66
No. 25
Junction Connector
GC
L (*4)
B (*4)
∗ 2 : w/o Entry & Start System w/ Immobiliser System
∗ 3 : w/ Body ECU
∗ 4 : w/o Body ECU
∗ 5 : 1GD–FTV, 2GD–FTV
∗13 : Double Cab
∗14 : Extra Cab
∗15 : Single Cab
∗47 : w/ Double Locking
∗48 : w/o Double Locking
∗66 : w/o Immobiliser System
∗67 : w/ Ignition Key Cylinder Light
∗68 : ∗5 From Aug. 2017 Production
∗69 : Except ∗68

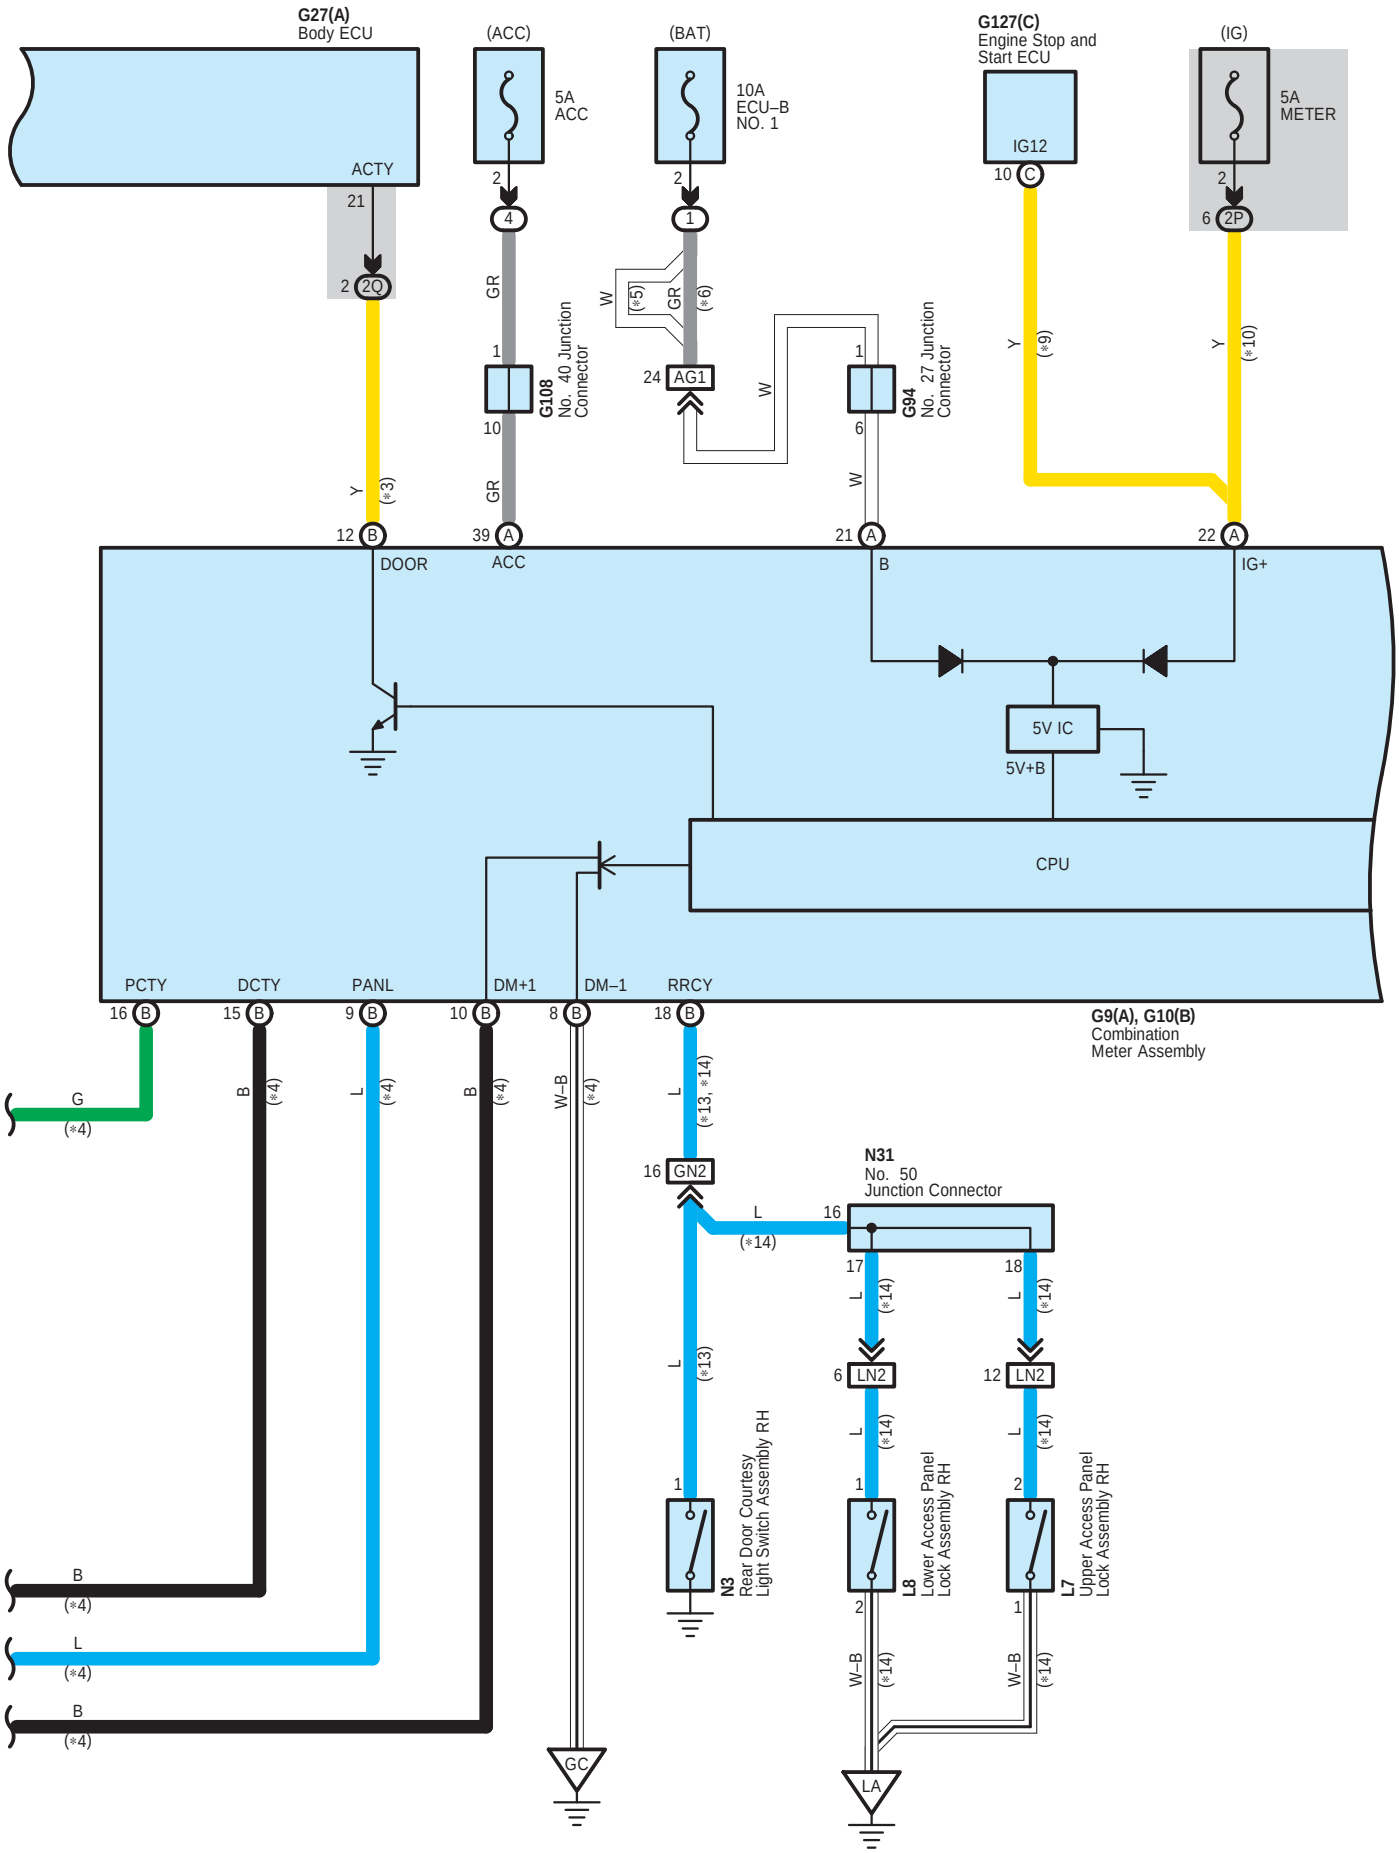
G27(A)
Body ECU
ACTY
21
2 2Q
Y
(*3)
12 B
DOOR
(ACC)
5A
ACC
2
4
GR
1
10
G108
No. 40 Junction
Connector
GR
39 A
ACC
(BAT)
10A
ECU–B
NO. 1
2
1
W
(*5)
GR
(*6)
24 AG1
W
1
6
G94
No. 27 Junction
Connector
W
21 A
B
G127(C)
Engine Stop and
Start ECU
IG12
10 C
Y
(*9)
(IG)
5A
METER
2
6 2P
Y
(*10)
22 A
IG+
5V IC
5V+B
CPU
PCTY
DCTY
PANL
DM+1
DM–1
RRCY
16 B
15 B
9 B
10 B
8 B
18 B
G9(A), G10(B)
Combination
Meter Assembly
G
(*4)
B
(*4)
L
(*4)
B
(*4)
W–B
(*4)
L
(*13, *14)
16 GN2
L
(*14)
N31
No. 50
Junction Connector
16
17
18
L
(*14)
L
(*14)
L
(*13)
6 LN2
12 LN2
L
(*14)
L
(*14)
1
1
2
N3
Rear Door Courtesy
Light Switch Assembly RH
L8
Lower Access Panel
Lock Assembly RH
L7
Upper Access Panel
Lock Assembly RH
B
(*4)
L
(*4)
B
(*4)
2
1
W–B
(*14)
W–B
(*14)
GC
LA

∗ 1 : w/ Entry & Start System
∗ 3 : w/ Body ECU
∗ 4 : w/o Body ECU
∗ 5 : 1GD–FTV, 2GD–FTV
∗ 6 : 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
∗ 8 : w/ TFT Display
∗ 9 : w/ Stop & Start System
∗10 : w/o Stop & Start System
∗13 : Double Cab
∗14 : Extra Cab

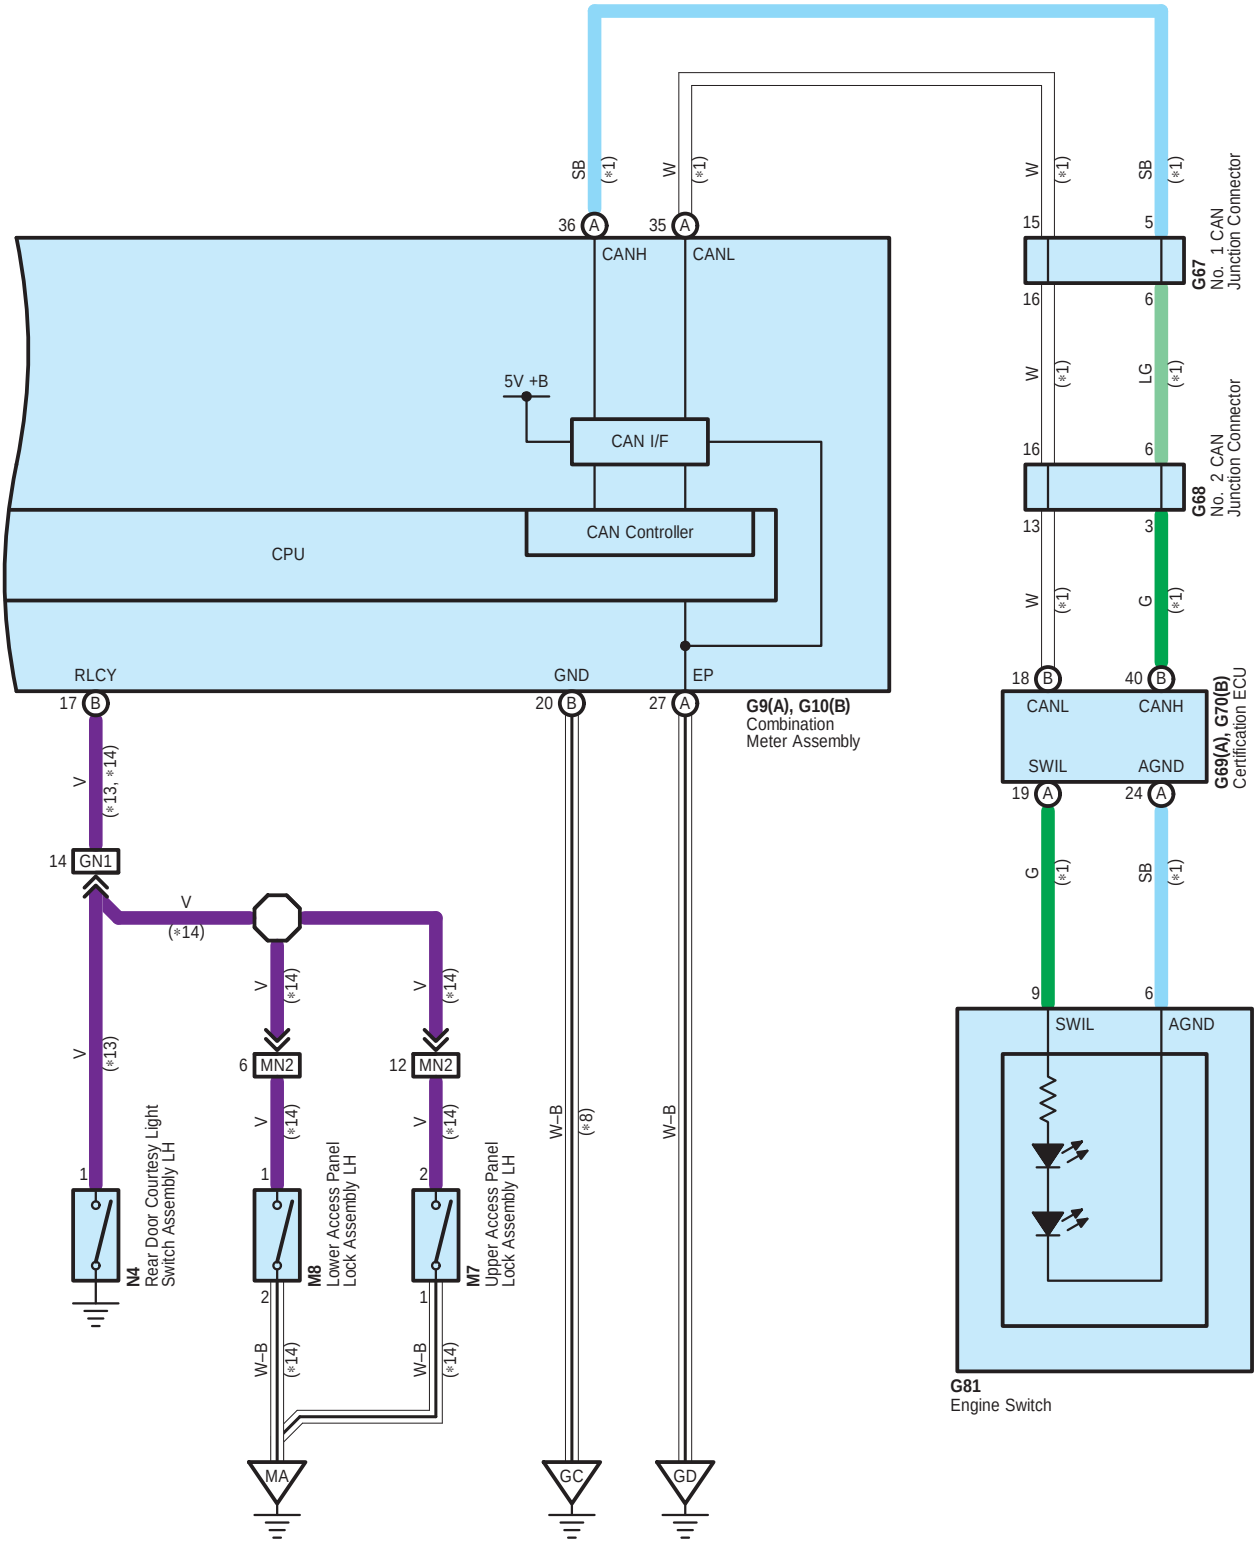

A45
White

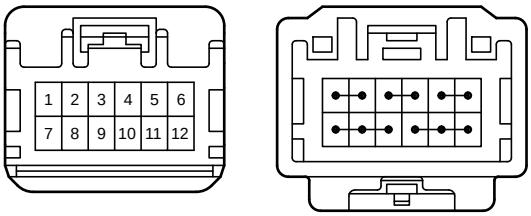

90980-12737

A46
White

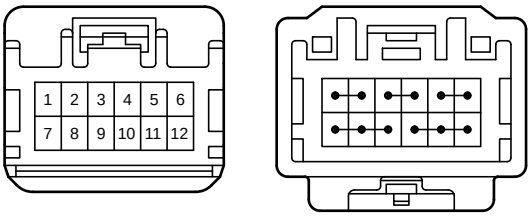

90980-12737

G9
White

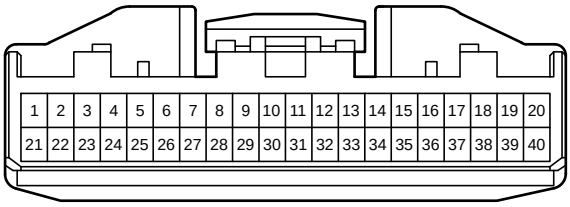

90980-12557

G10
White

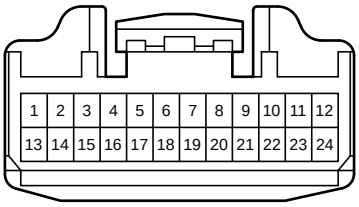

90980-12554

G17
Black

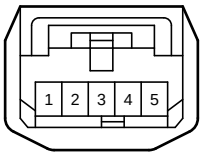

90980-12954

G27
White

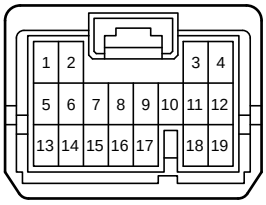

90980-12A45

G56
Black

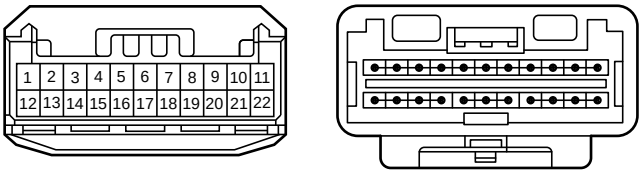

90980-12B54

G66
Black

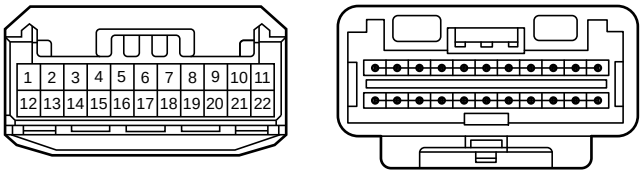

90980-12B54

G67
White

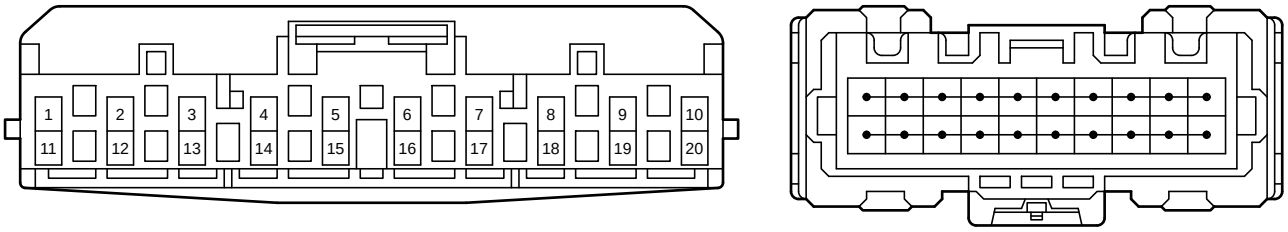

90980-12A58

G68
White

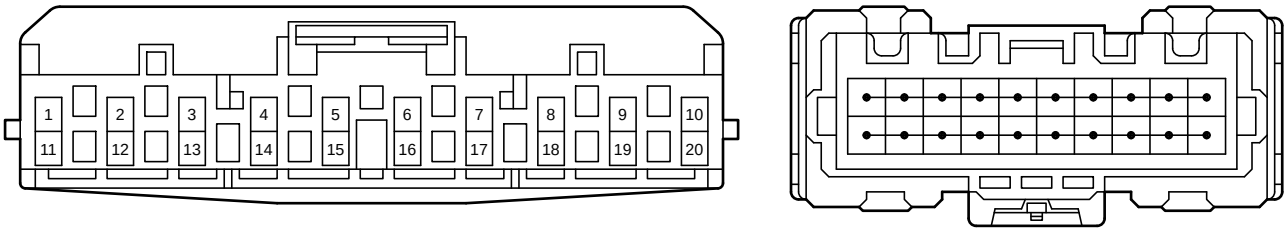

90980-12A58

G69
Black

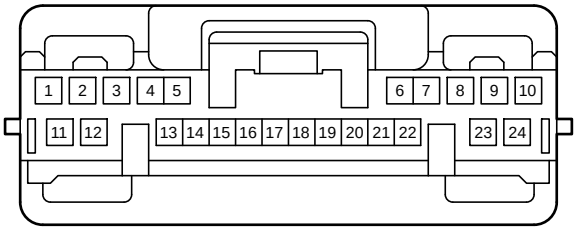

90980-12912

G70
White

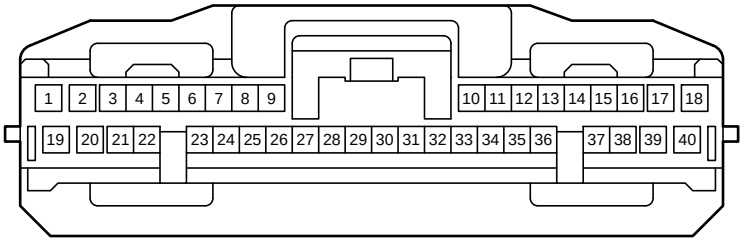

90980-12708

G81
Black

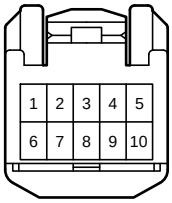

90980-12361

G94
Black

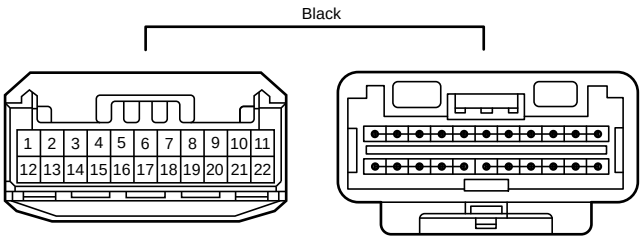

90980-12B54

G97
Black

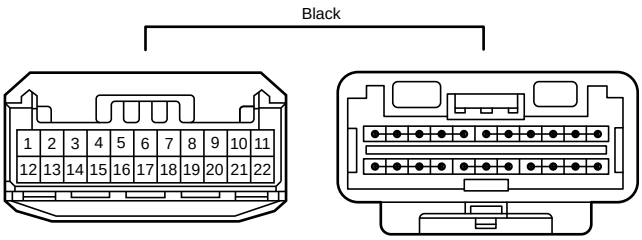

90980-12B54

G98
Black

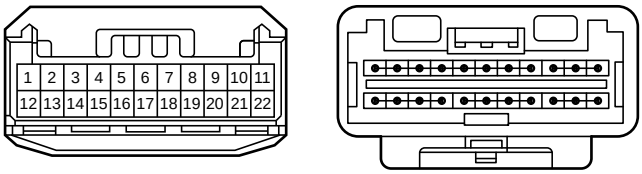

90980-12B54

G102
Black

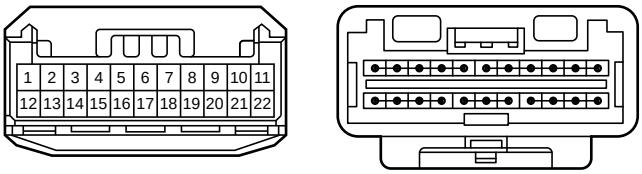

90980-12B54

G103
White

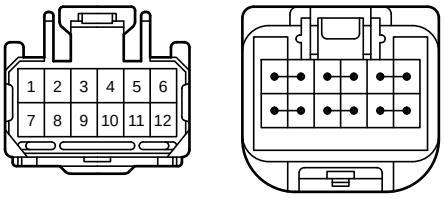

90980-11661

G104
White

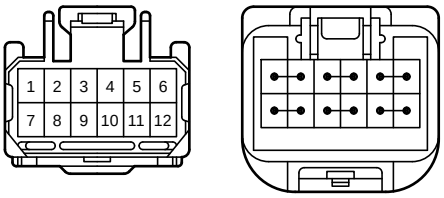

90980-11661

G108
Black

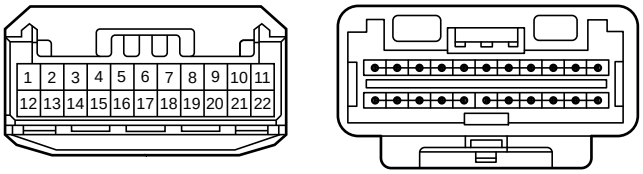

90980-12B54

G111
Black

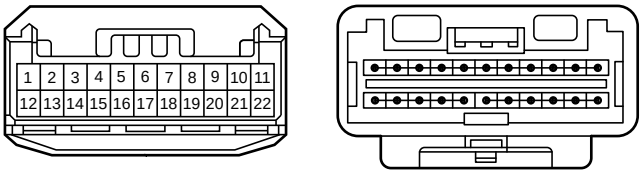

90980-12B54

G127
Black

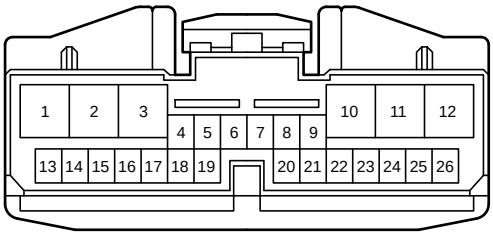

82824-12510

G138
Black

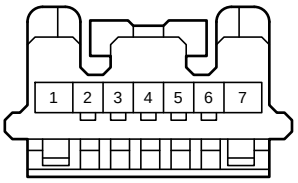

90980-12092

J1
White

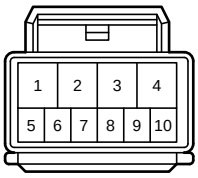

90980-12226

K1
White

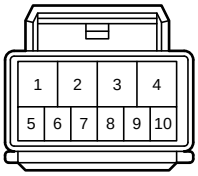

90980-12226

L1
White

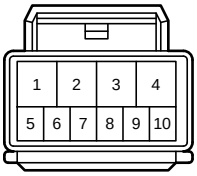

90980-12226

L7
White

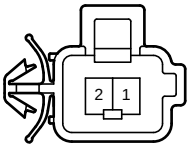

90980-11299

L8
White



90980-11918

L9
Black

90980-10871

M1
White

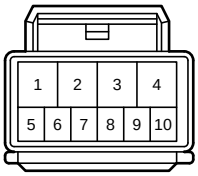

90980-12226

M7
White

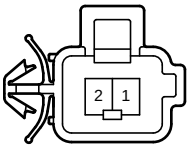

90980-11299

M8
White



90980-11918

M9
Black

90980-10871

N1
Black

90980-10871

N2
Black

90980-10871

N3
Black

90980-10871

N4
Black

90980-10871

N25
White

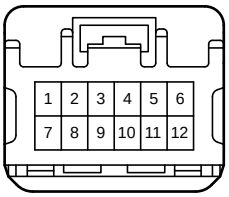

90980-12737

N30
Black

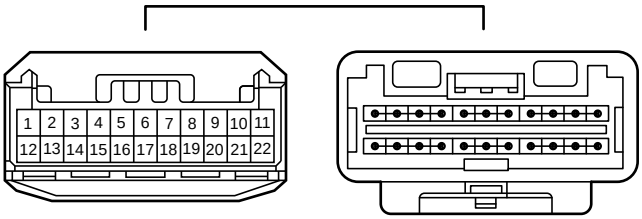

90980-12B54

N31
Black

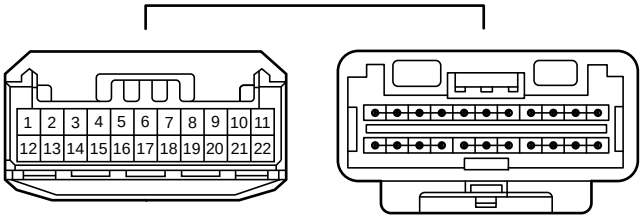

90980-12B54

Q1
Gray

Q2
White

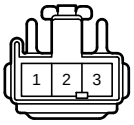

90980-10908

Q3
White

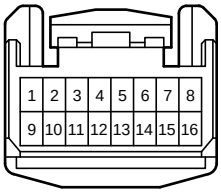

90980-12553

2D
White

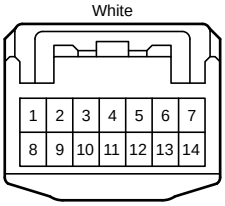

90980-12370

2J
White

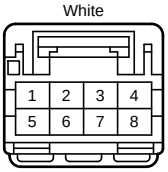

90980-12A54

2L
White

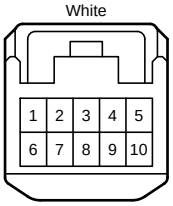

90980-12368

2P
White

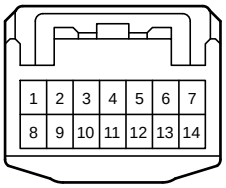

90980-12370

2Q
White

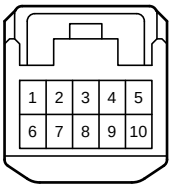

90980-12368

AG1
White

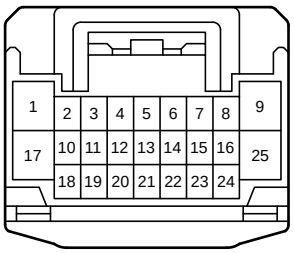

90980-12414

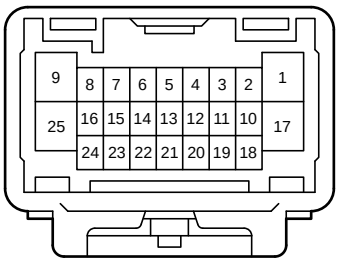

90980-12413

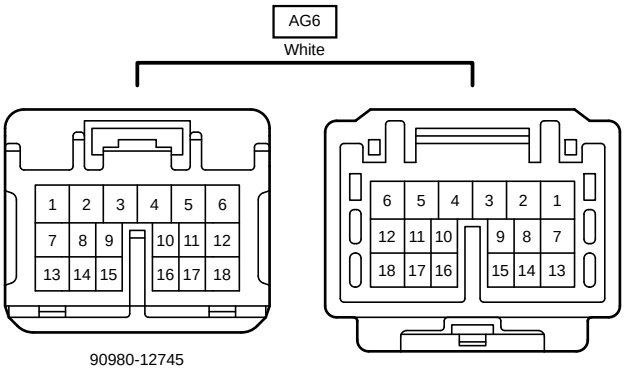

90980-12745

90980-12744

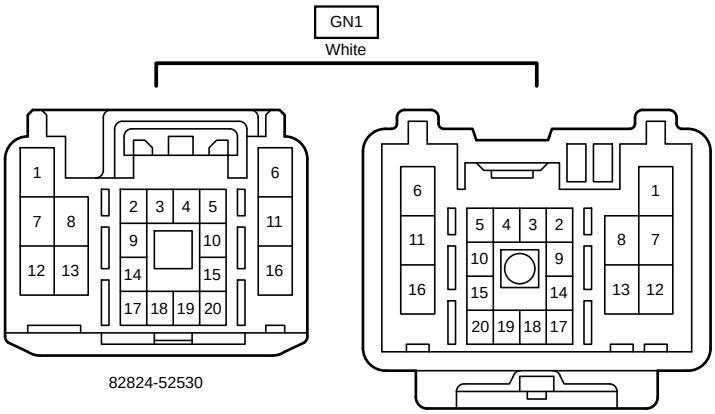

82824-52530

82824-52520

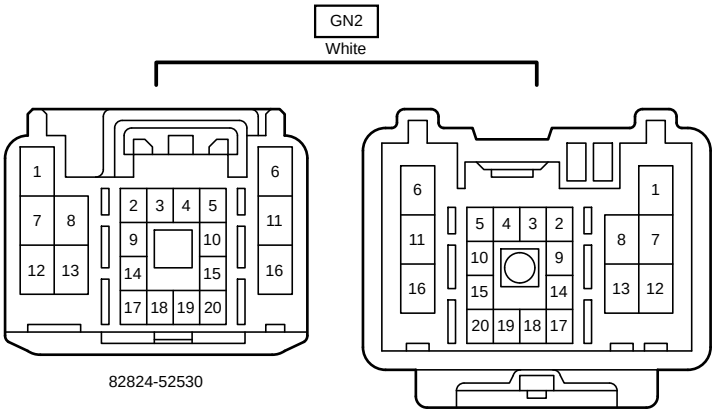

82824-52530

82824-52520

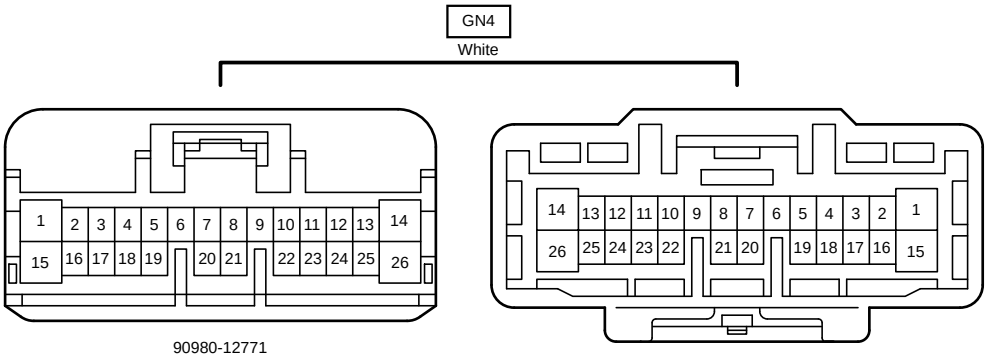

90980-12771

90980-12770

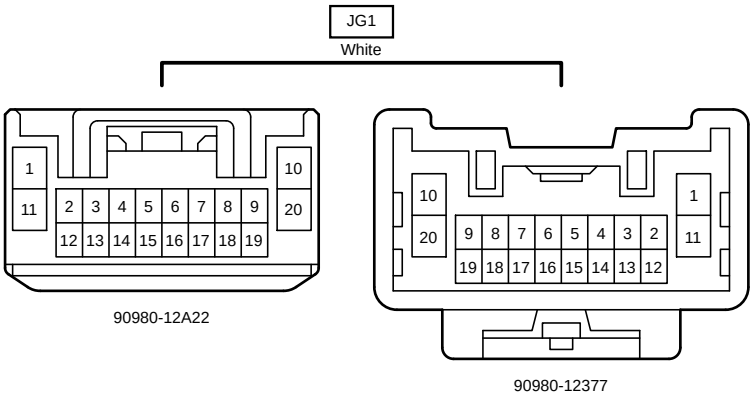
JG1
White
90980-12A22
90980-12377

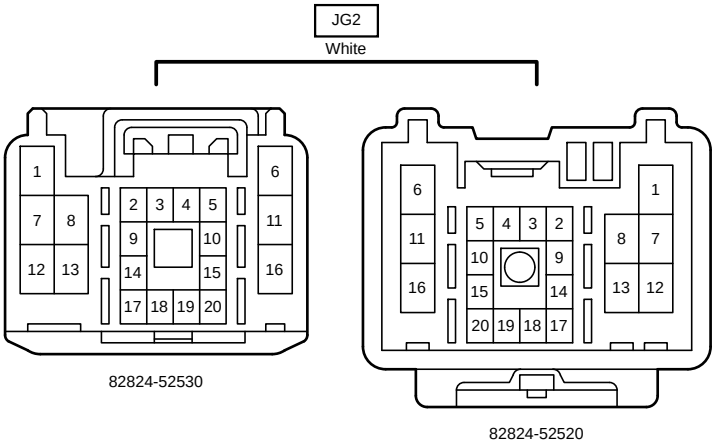
JG2
White
82824-52530
82824-52520

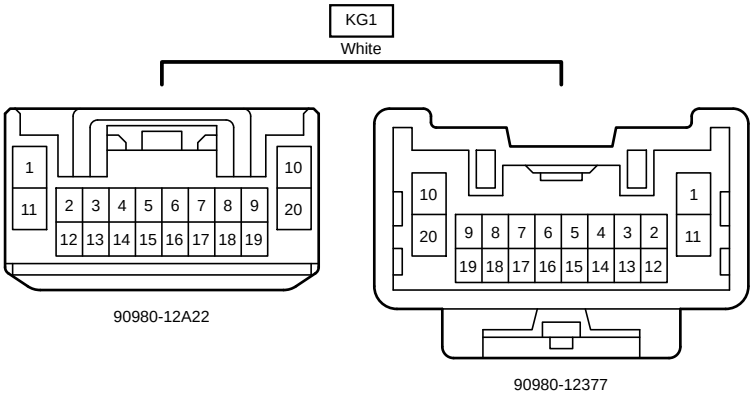
KG1
White
90980-12A22
90980-12377

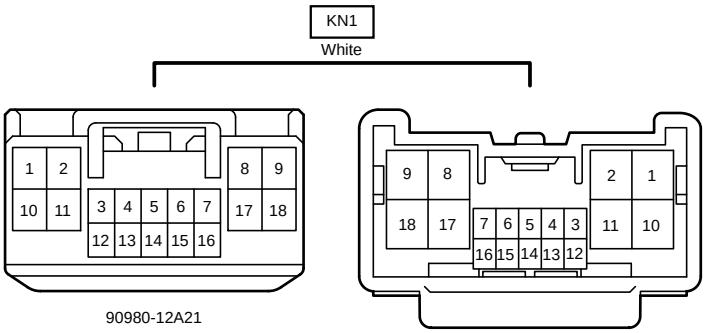
KN1
White
90980-12A21
90980-12B07

LN1
White

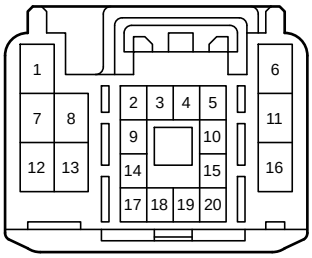

82824-52530

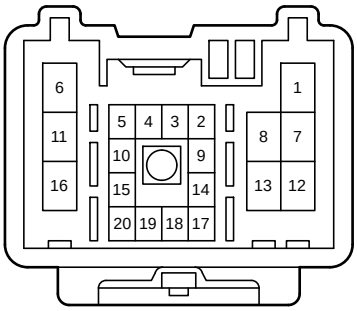

82824-52520

LN2
White

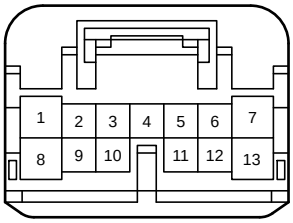

90980-12767

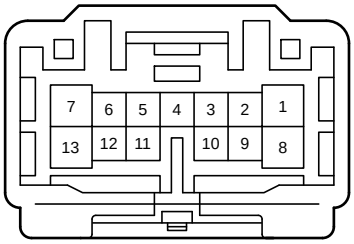

90980-12766

MN1
White

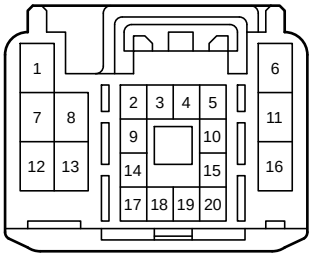

82824-52530

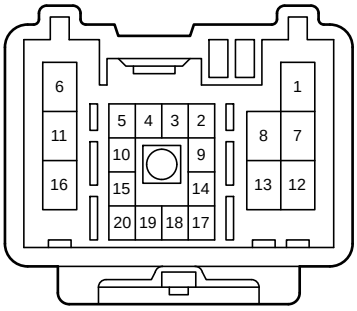

82824-52520

MN2
White

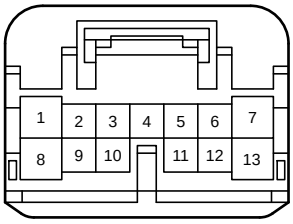

90980-12767

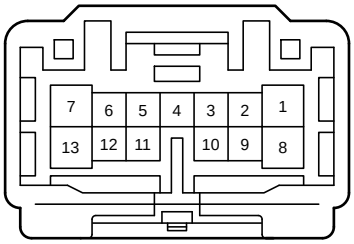

90980-12766

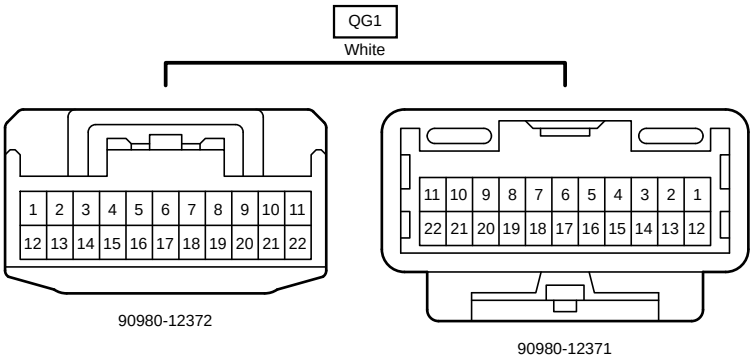

90980-12372

90980-12371