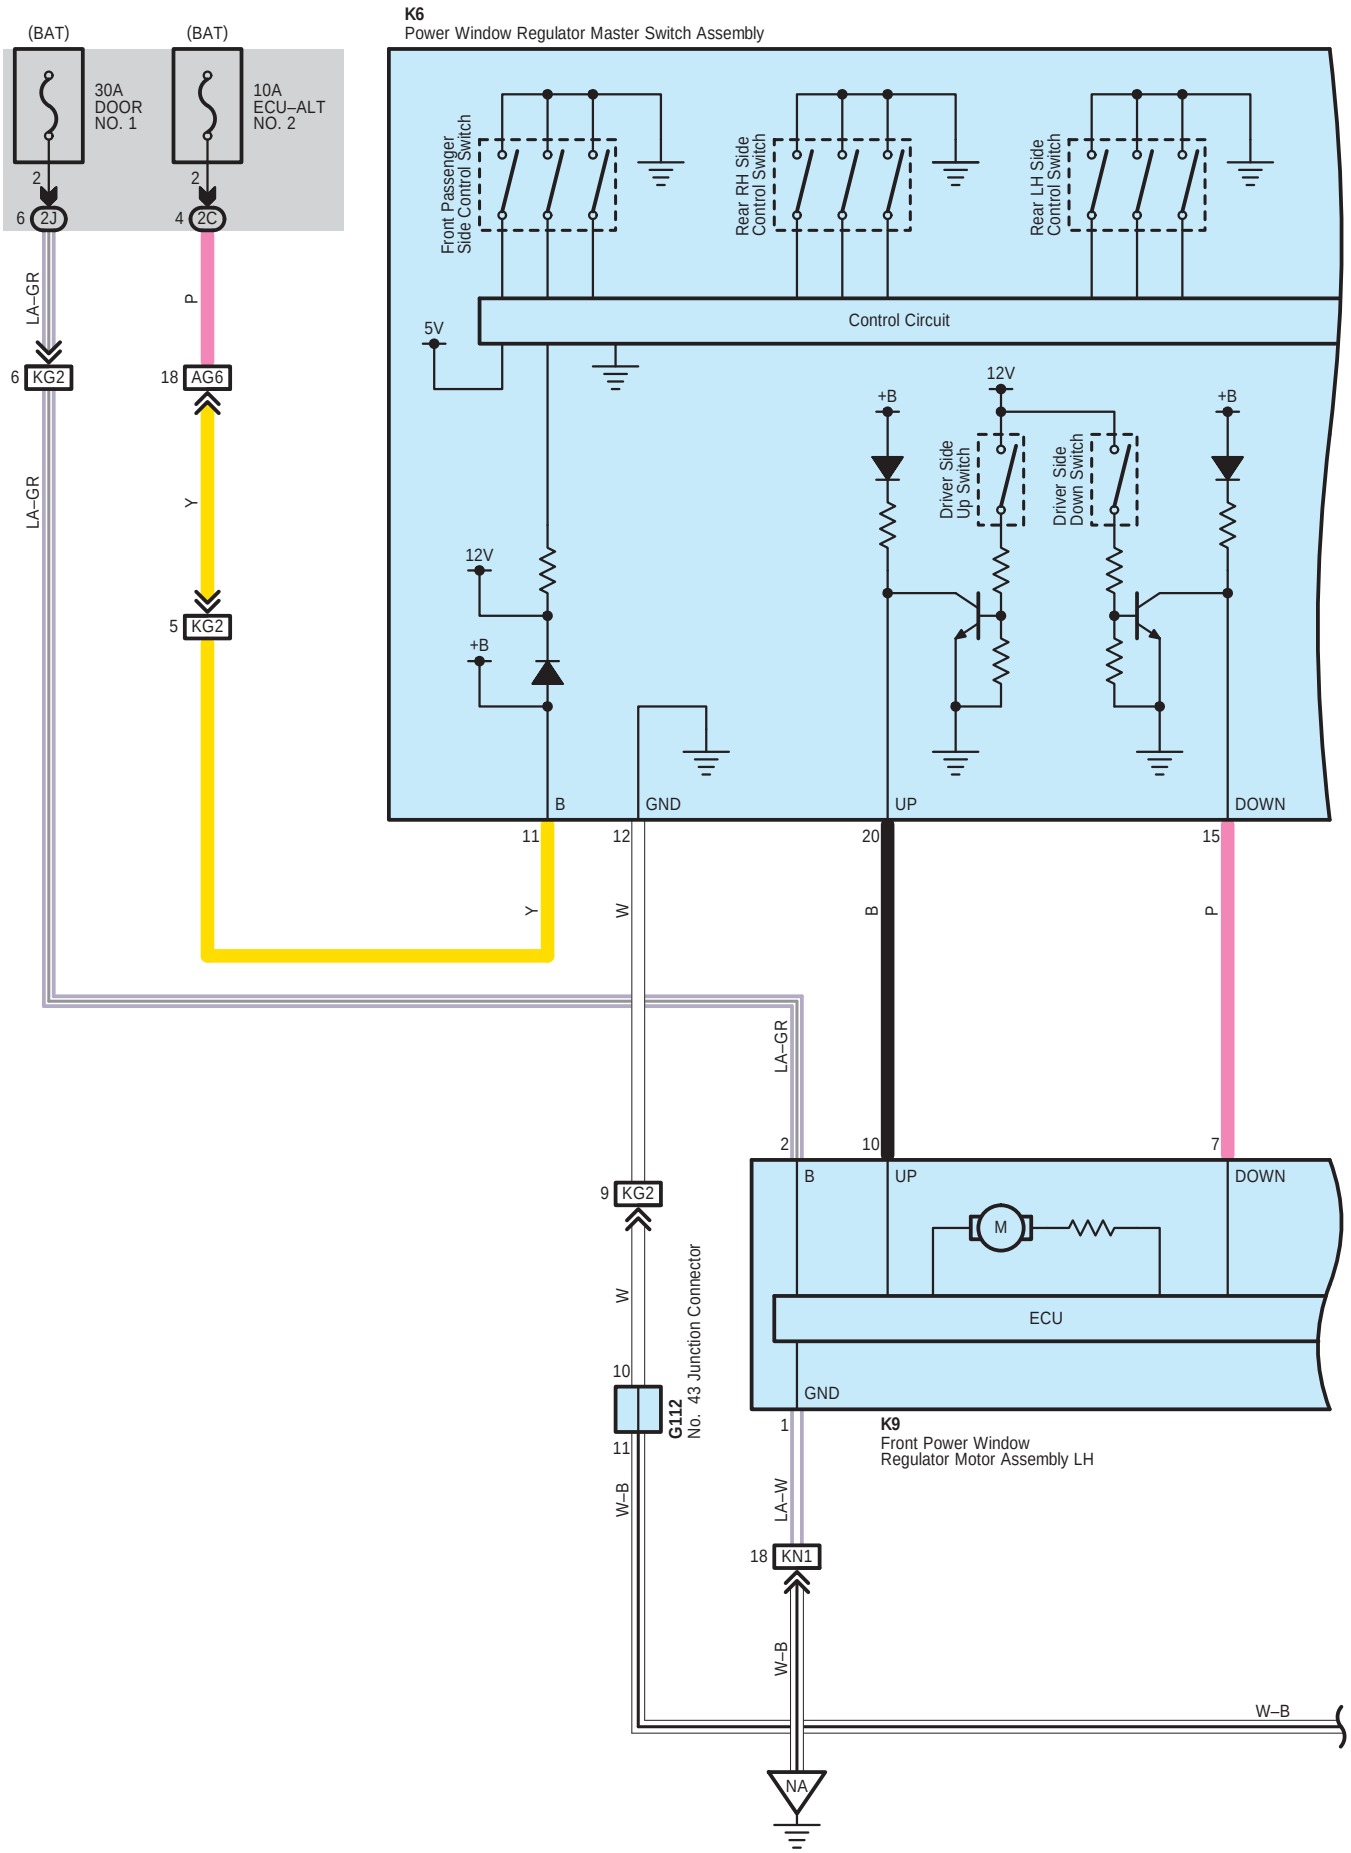
(BAT)
(BAT)
30A
DOOR
NO. 1
10A
ECU–ALT
NO. 2
2
2
6 2J
4 2C
LA–GR
P
6 KG2
18 AG6
LA–GR
Y
5 KG2
K6
Power Window Regulator Master Switch Assembly
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Rear LH Side
Control Switch
Control Circuit
5V
12V
+B
12V
+B
+B
Driver Side
Up Switch
Driver Side
Down Switch
B
GND
UP
DOWN
11
12
20
15
Y
W
B
P
LA–GR
2
10
7
B
UP
DOWN
M
ECU
GND
9 KG2
W
10
11
G112
No. 43 Junction Connector
W–B
1
K9
Front Power Window
Regulator Motor Assembly LH
LA–W
18 KN1
W–B
W–B
NA

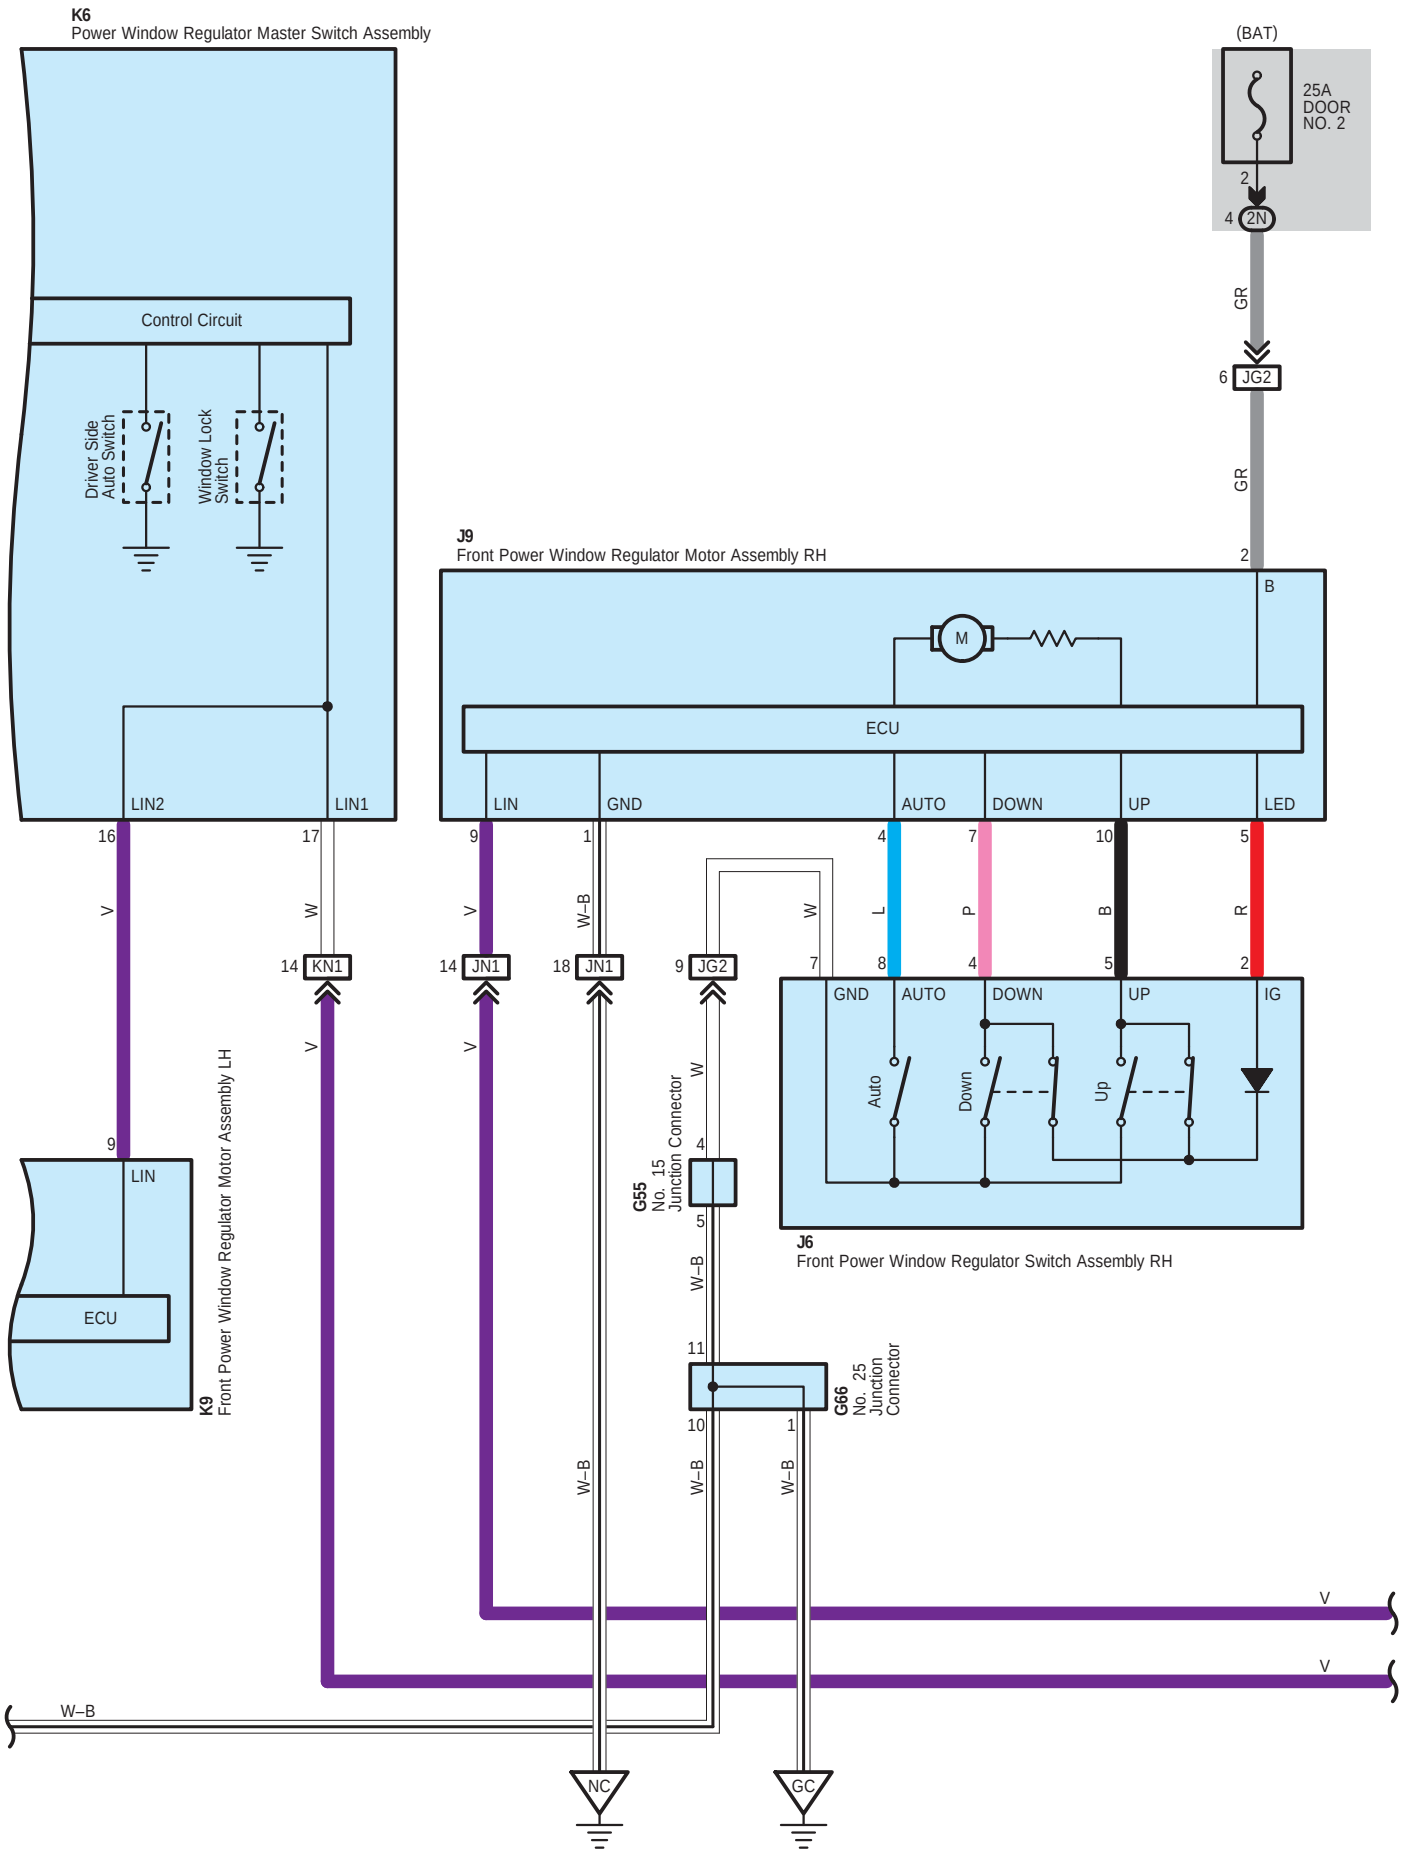
K6
Power Window Regulator Master Switch Assembly
Control Circuit
Driver Side Auto Switch
Window Lock Switch
LIN2
LIN1
(BAT)
25A DOOR NO. 2
2N
GR
JG2
GR
J9
Front Power Window Regulator Motor Assembly RH
B
M
ECU
LIN
GND
AUTO
DOWN
UP
LED
V
W
W–B
L
P
B
R
KN1
JN1
JN1
JG2
GND
AUTO
DOWN
UP
IG
Auto
Down
Up
J6
Front Power Window Regulator Switch Assembly RH
G55
No. 15 Junction Connector
G66
No. 25 Junction Connector
LIN
ECU
K9
Front Power Window Regulator Motor Assembly LH
W–B
NC
GC

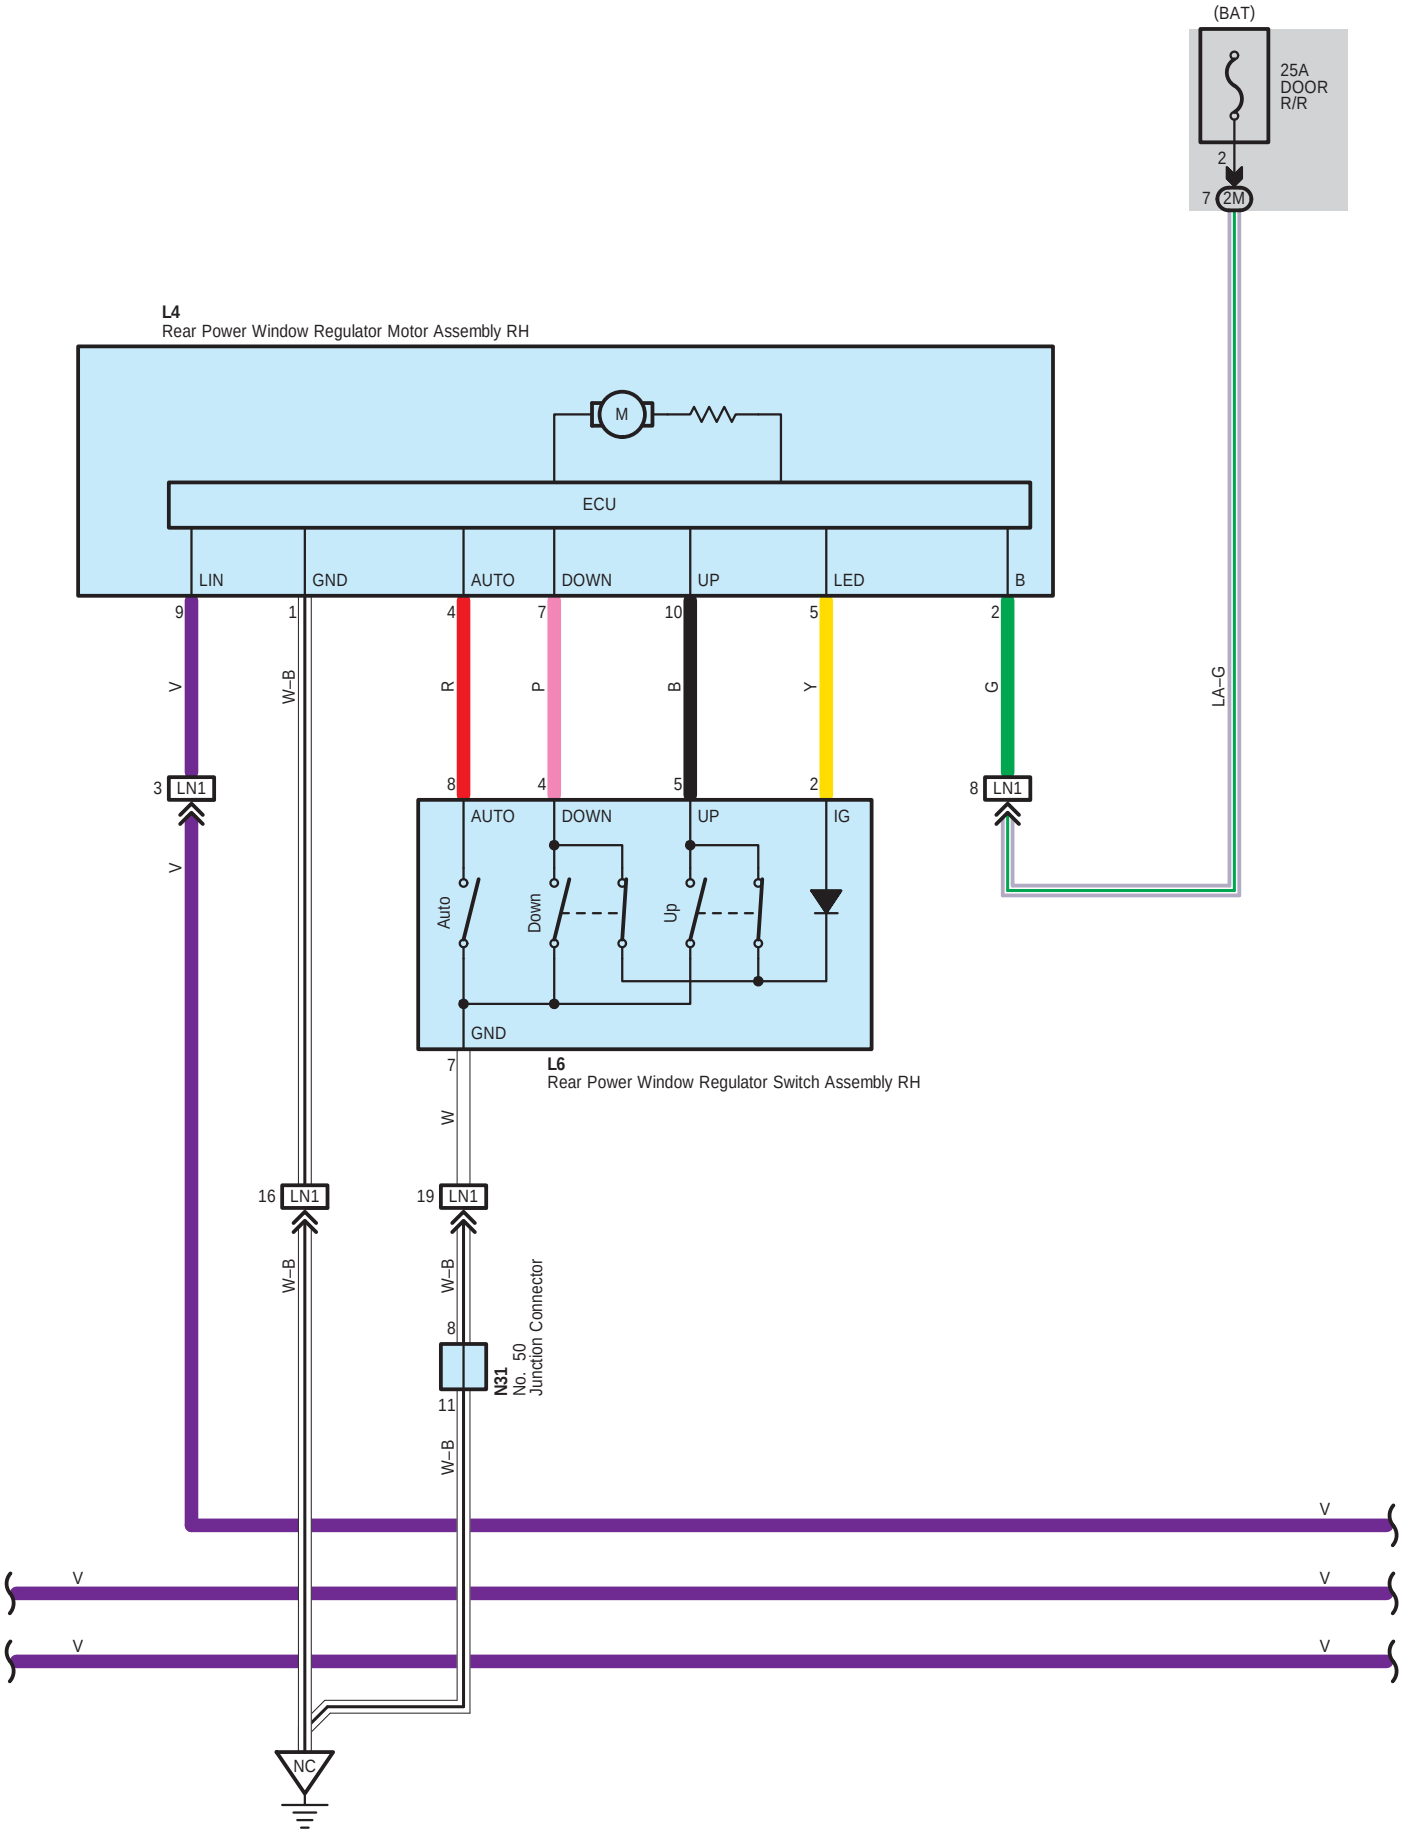
(BAT)
25A
DOOR
R/R
2
7
2M
L4
Rear Power Window Regulator Motor Assembly RH
M
ECU
LIN
GND
AUTO
DOWN
UP
LED
B
9
1
4
7
10
5
2
V
W–B
R
P
B
Y
G
LA–G
3
LN1
8
LN1
AUTO
DOWN
UP
IG
Auto
Down
Up
GND
L6
Rear Power Window Regulator Switch Assembly RH
7
W
16
LN1
19
LN1
W–B
W–B
8
N31
No. 50
Junction Connector
11
W–B
V
V
V
V
V
NC

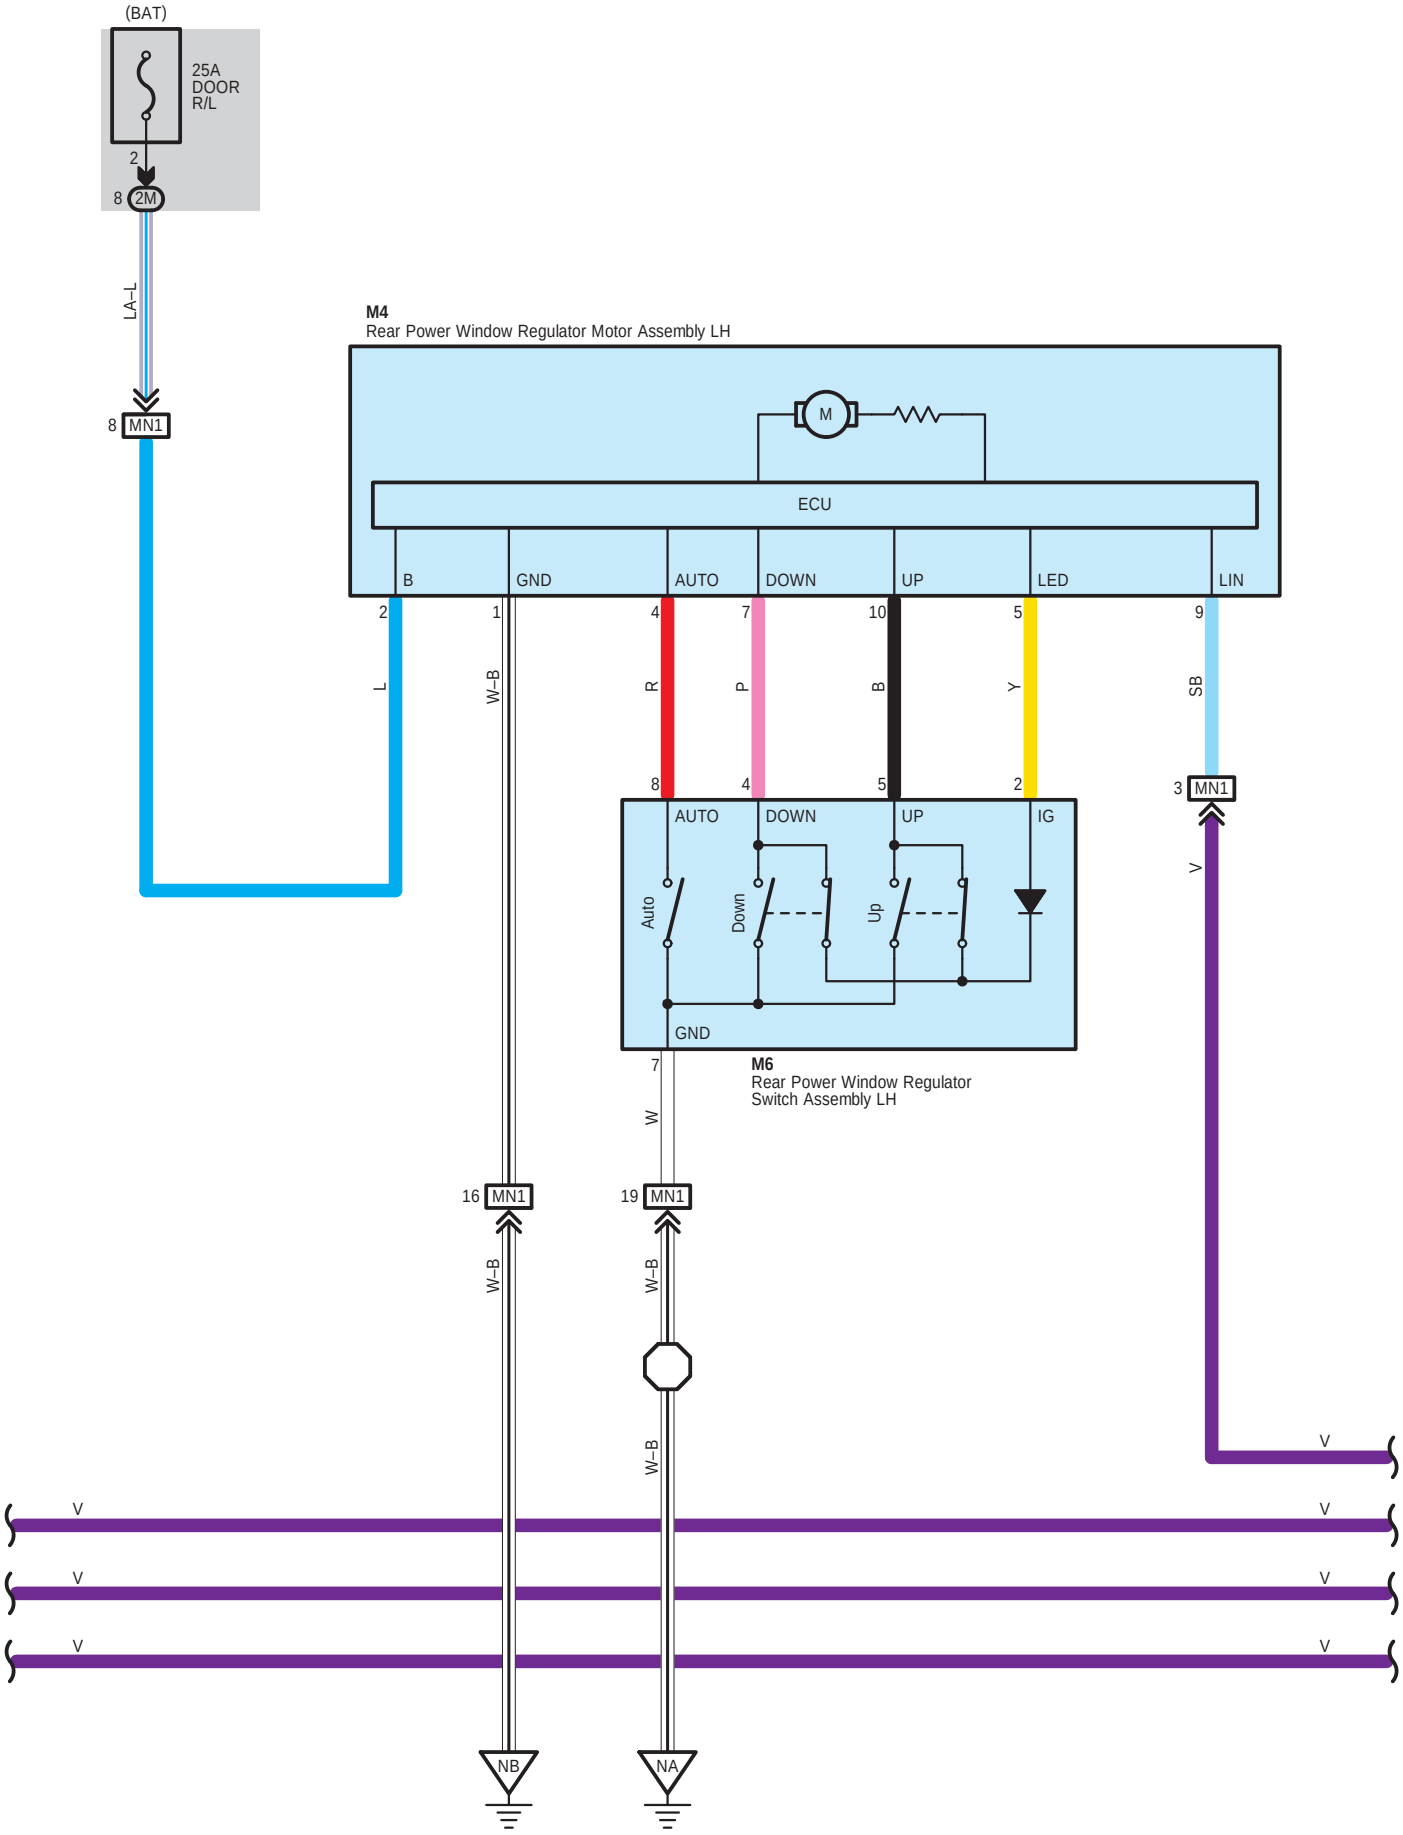
(BAT)
25A
DOOR
R/L
2
8 2M
LA–L
8 MN1
M4
Rear Power Window Regulator Motor Assembly LH
M
ECU
B
GND
AUTO
DOWN
UP
LED
LIN
2
1
4
7
10
5
9
L
W–B
R
P
B
Y
SB
8
4
5
2
3 MN1
AUTO
DOWN
UP
IG
Auto
Down
Up
GND
V
7
M6
Rear Power Window Regulator
Switch Assembly LH
W
16 MN1
19 MN1
W–B
W–B
W–B
V
V
V
V
V
V
V
NB
NA

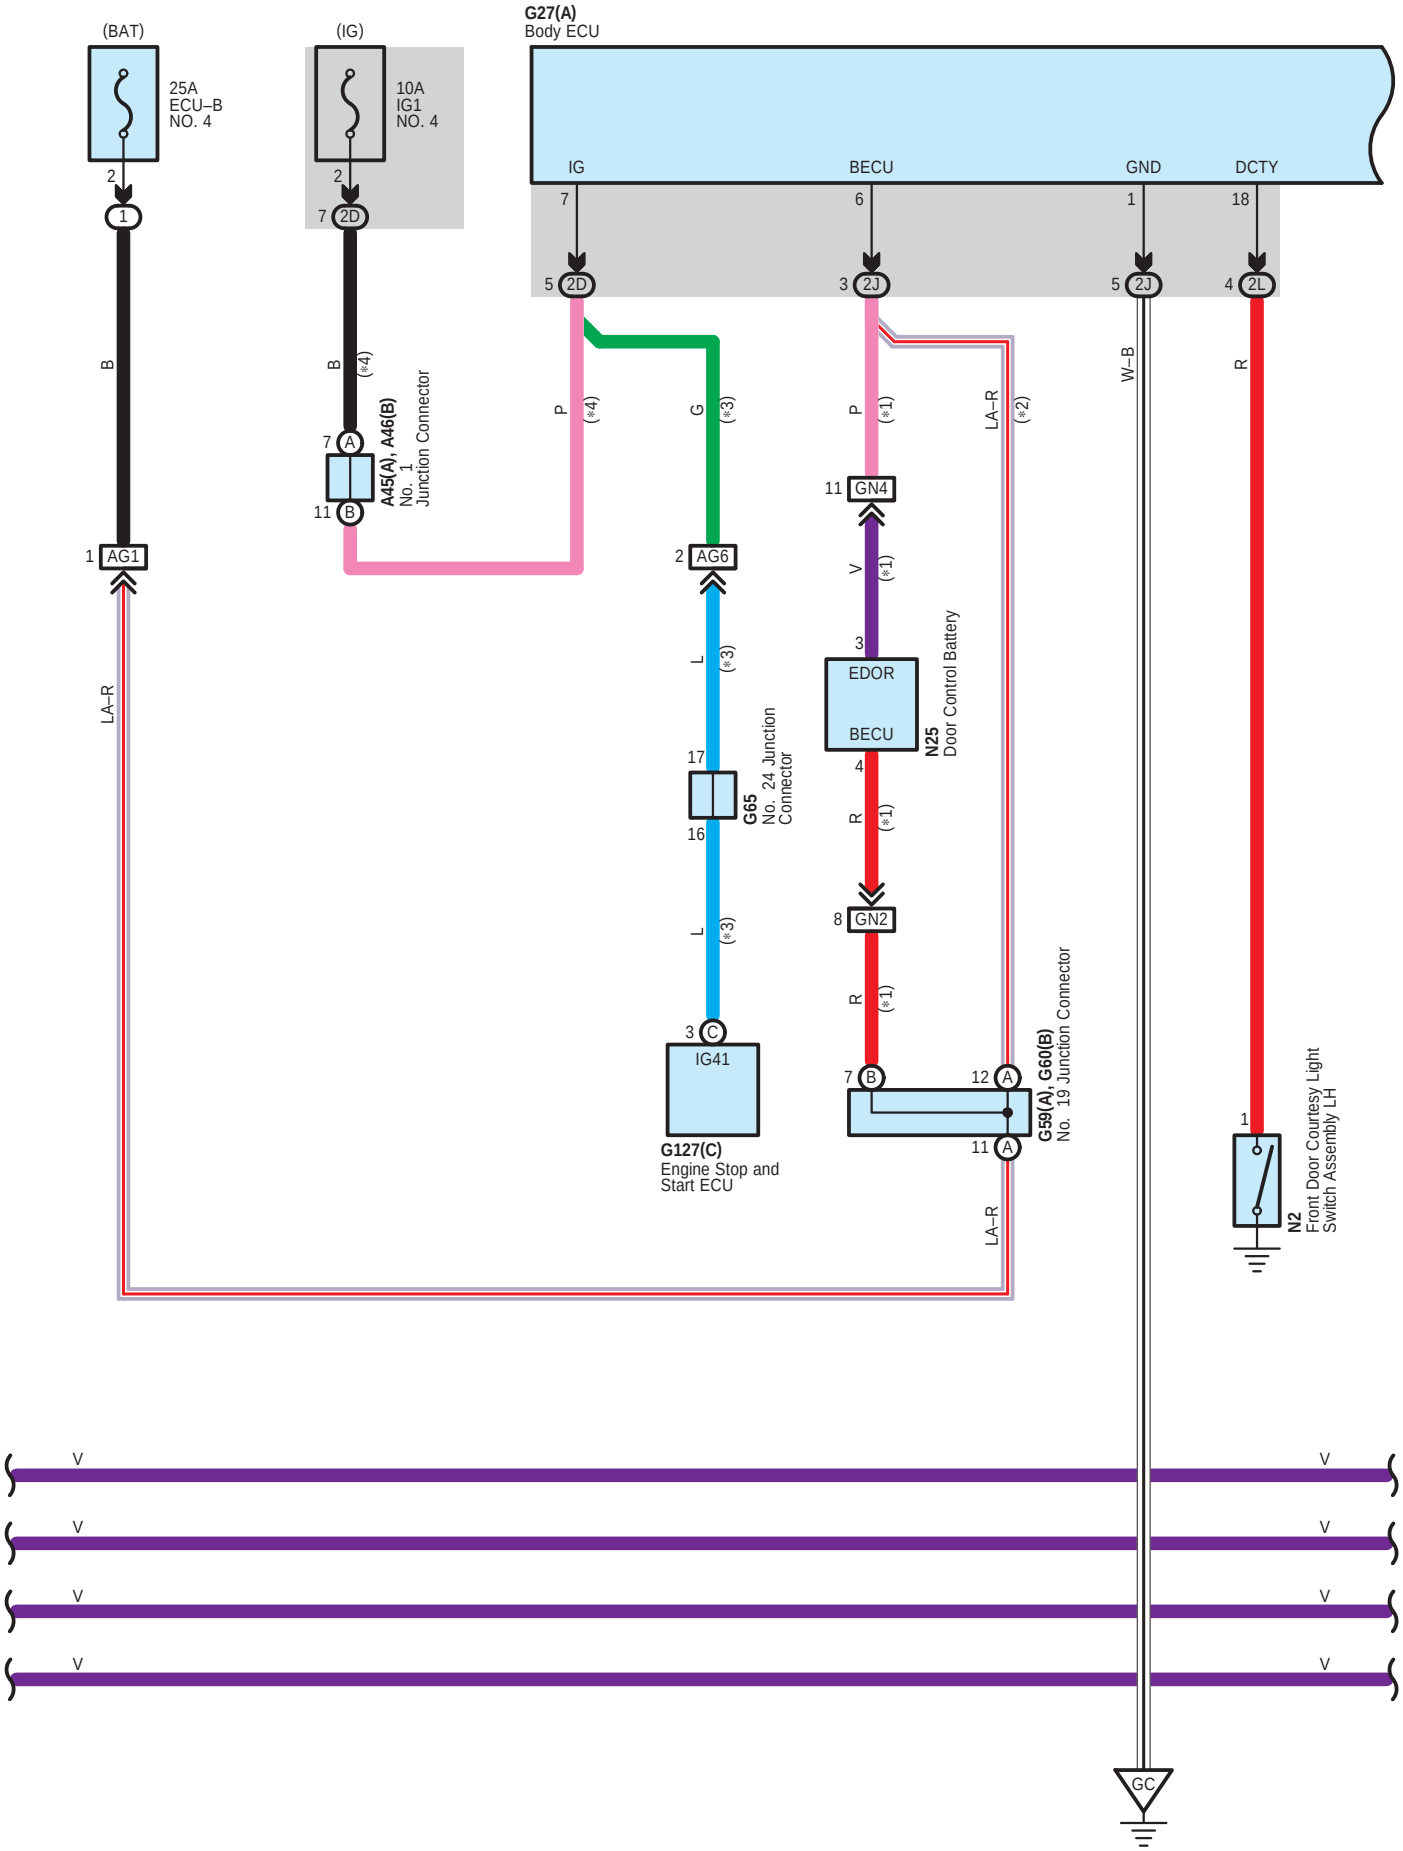
(BAT)
25A
ECU–B
NO. 4
(IG)
10A
IG1
NO. 4
G27(A)
Body ECU
IG
BECU
GND
DCTY
A45(A), A46(B)
No. 1
Junction Connector
G65
No. 24 Junction
Connector
G127(C)
Engine Stop and
Start ECU
IG41
AG1
AG6
GN4
GN2
EDOR
BECU
N25
Door Control Battery
G59(A), G60(B)
No. 19 Junction Connector
N2
Front Door Courtesy Light
Switch Assembly LH
GC

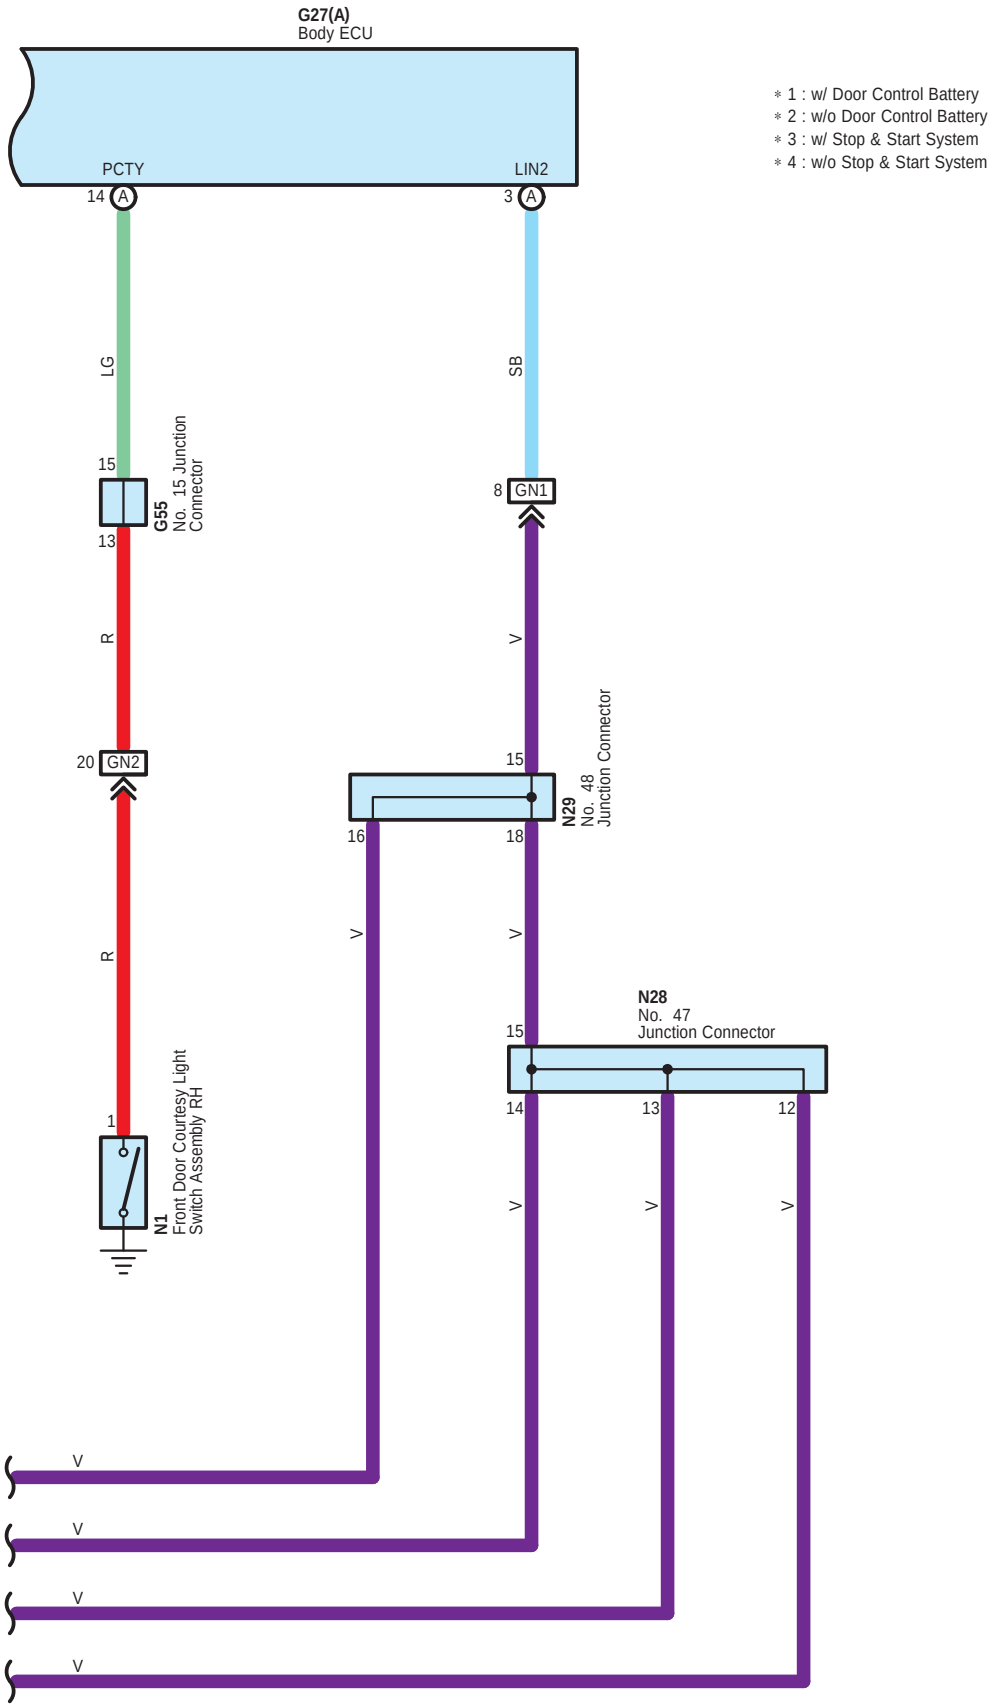

* 1 : w/ Door Control Battery
* 2 : w/o Door Control Battery
* 3 : w/ Stop & Start System
* 4 : w/o Stop & Start System

A45
White

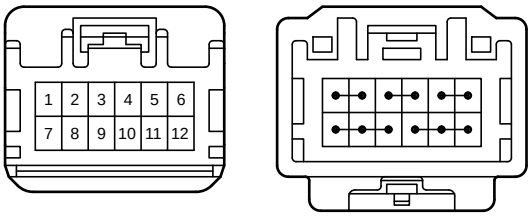

90980-12737

A46
White

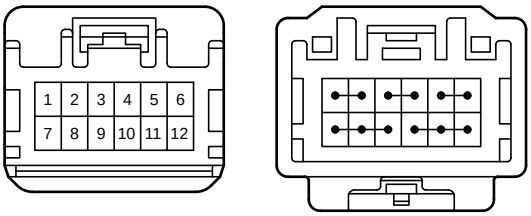

90980-12737

G27
White

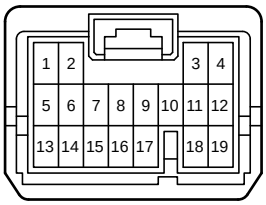

90980-12A45

G55
Black

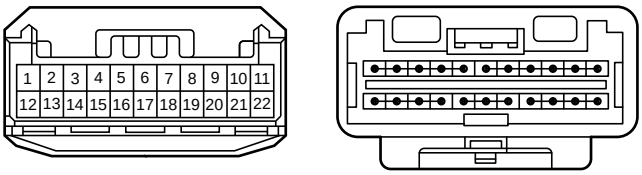

90980-12B54

G59
White

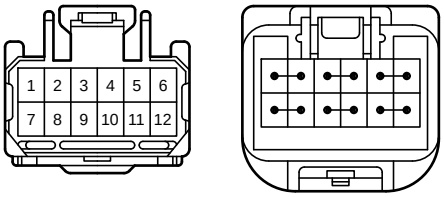

90980-11661

G60
White

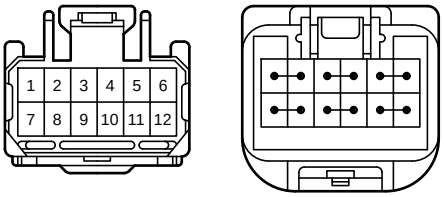

90980-11661

G65
Black

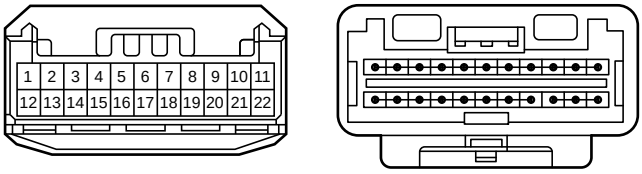

90980-12B54

G66
Black

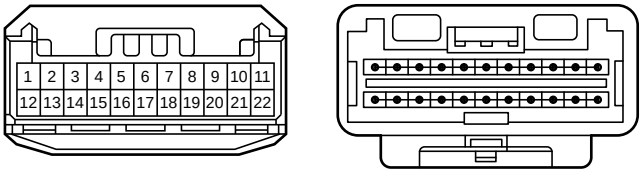

90980-12B54

G112
Black

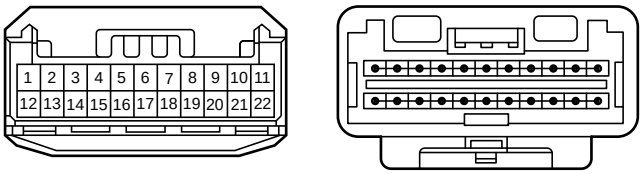

90980-12B54

G127
Black

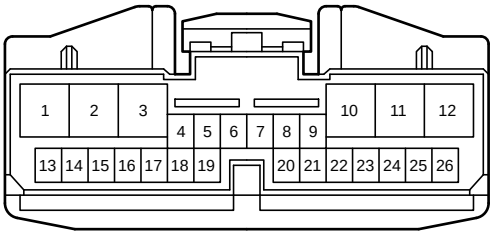

82824-12510

J6
Black

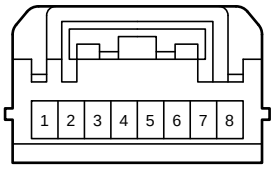

90980-12550

J9
White

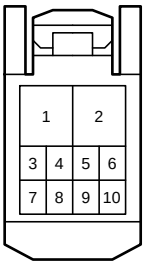

90980-12328

K6
White

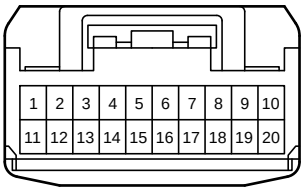

90980-12460

K9
White

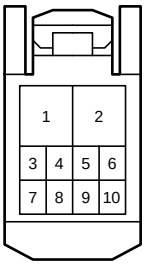

90980-12328

L4
White

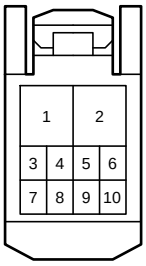

90980-12328

L6
Black

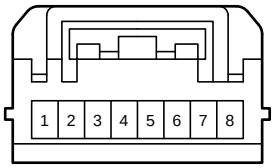

90980-12550

M4
White

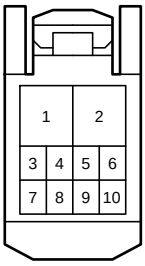

90980-12328

M6
Black

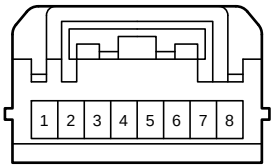

90980-12550

N1
Black

90980-10871

N2
Black

90980-10871

N25
White

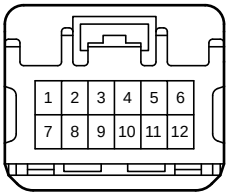

90980-12737

N28
Black

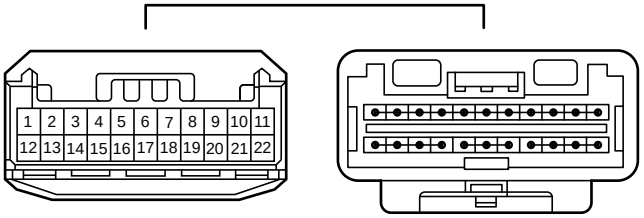

90980-12B54

N29
Black

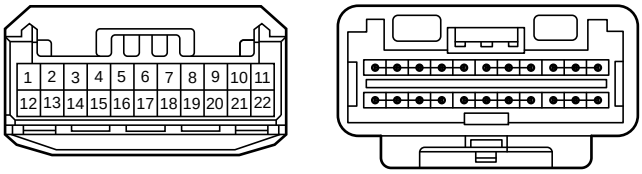

90980-12B54

N31
Black

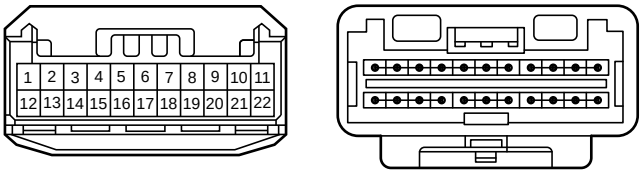

90980-12B54

2C
White

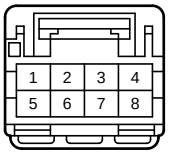

90980-12A54

2D
White

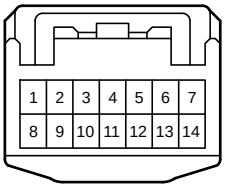

90980-12370

2J
White

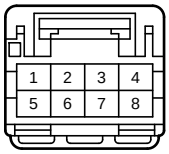

90980-12A54

2L
White

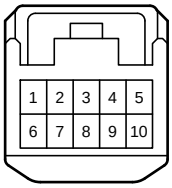

90980-12368

2M
White

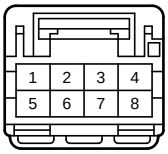

90980-12A55

2N
White

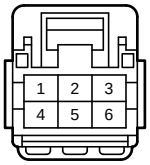

90980-12A61

AG1
White

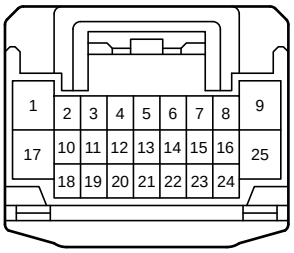

90980-12414

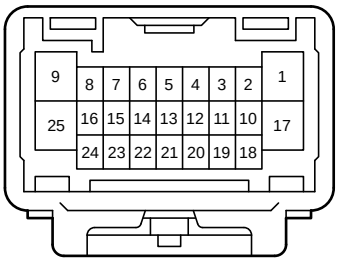

90980-12413

AG6
White

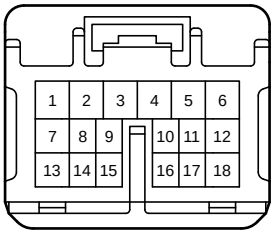

90980-12745

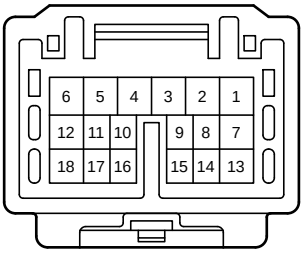

90980-12744

GN1
White

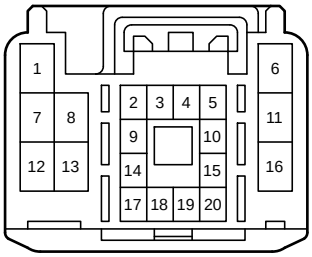

82824-52530

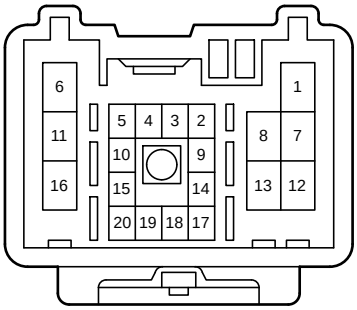

82824-52520

GN2
White

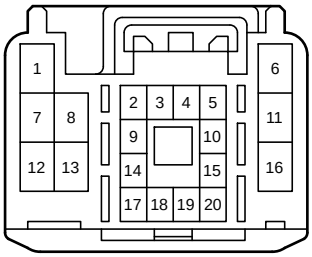

82824-52530

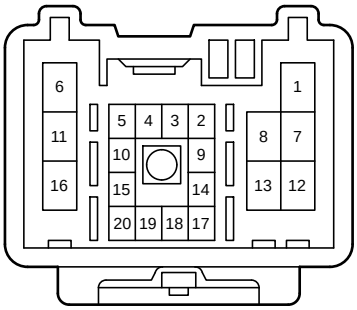

82824-52520

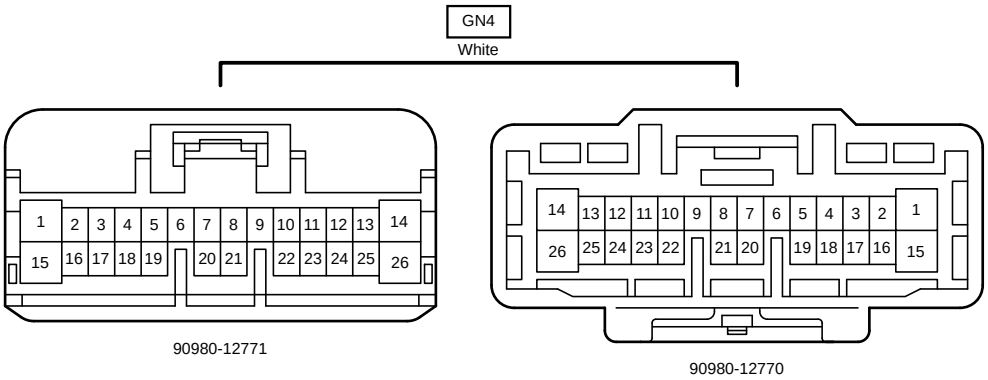
GN4
White
90980-12771
90980-12770

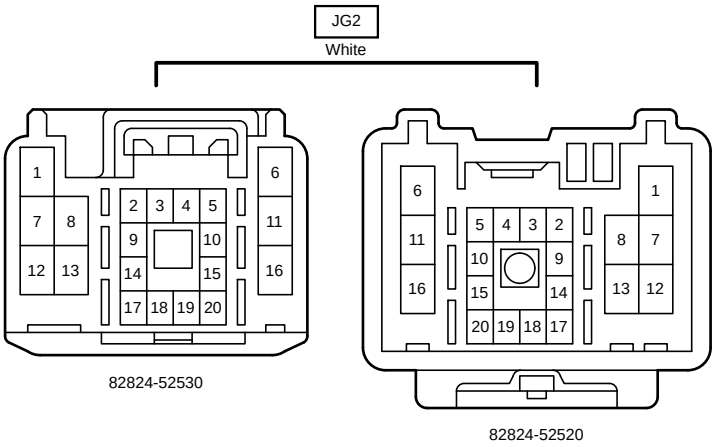
JG2
White
82824-52530
82824-52520

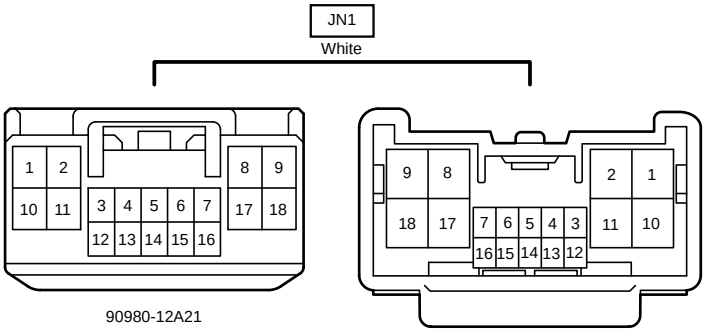
JN1
White
90980-12A21
90980-12B07

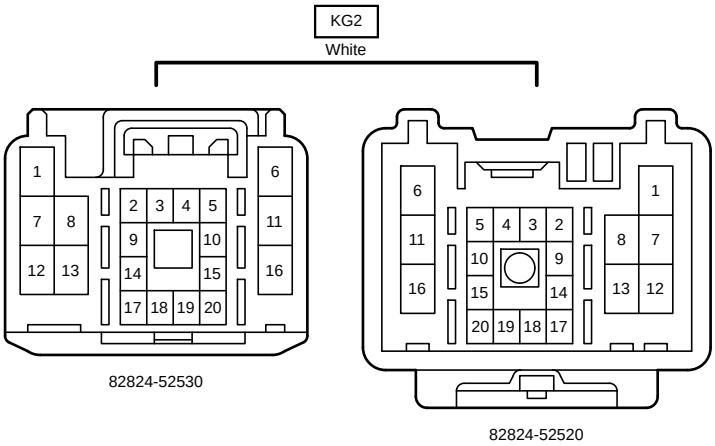
KG2
White
82824-52530
82824-52520

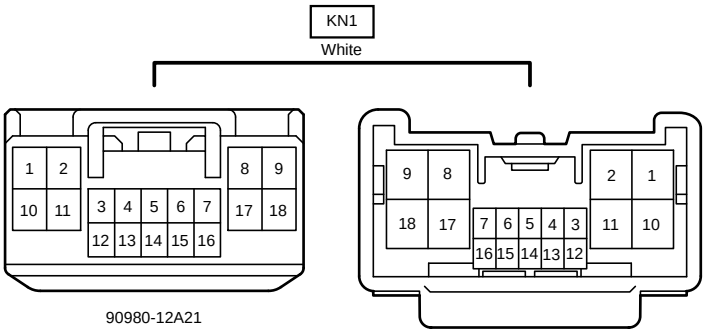

90980-12A21

90980-12B07

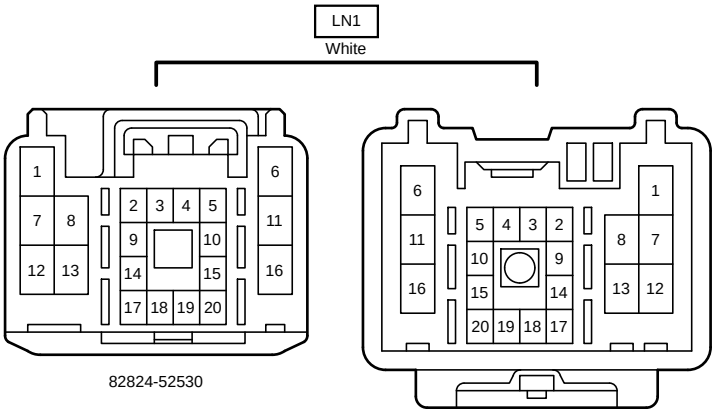

82824-52530

82824-52520

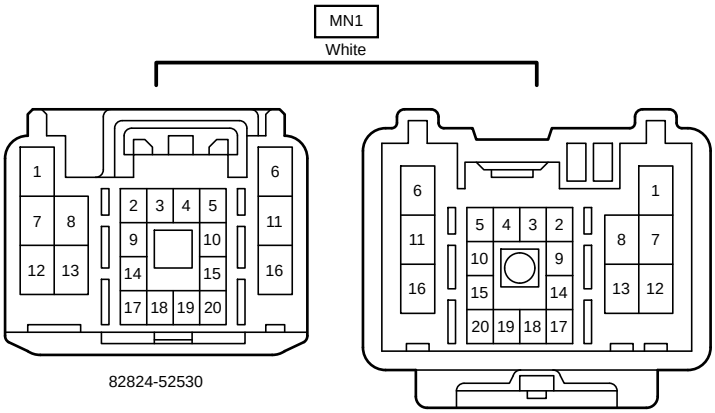

82824-52530

82824-52520