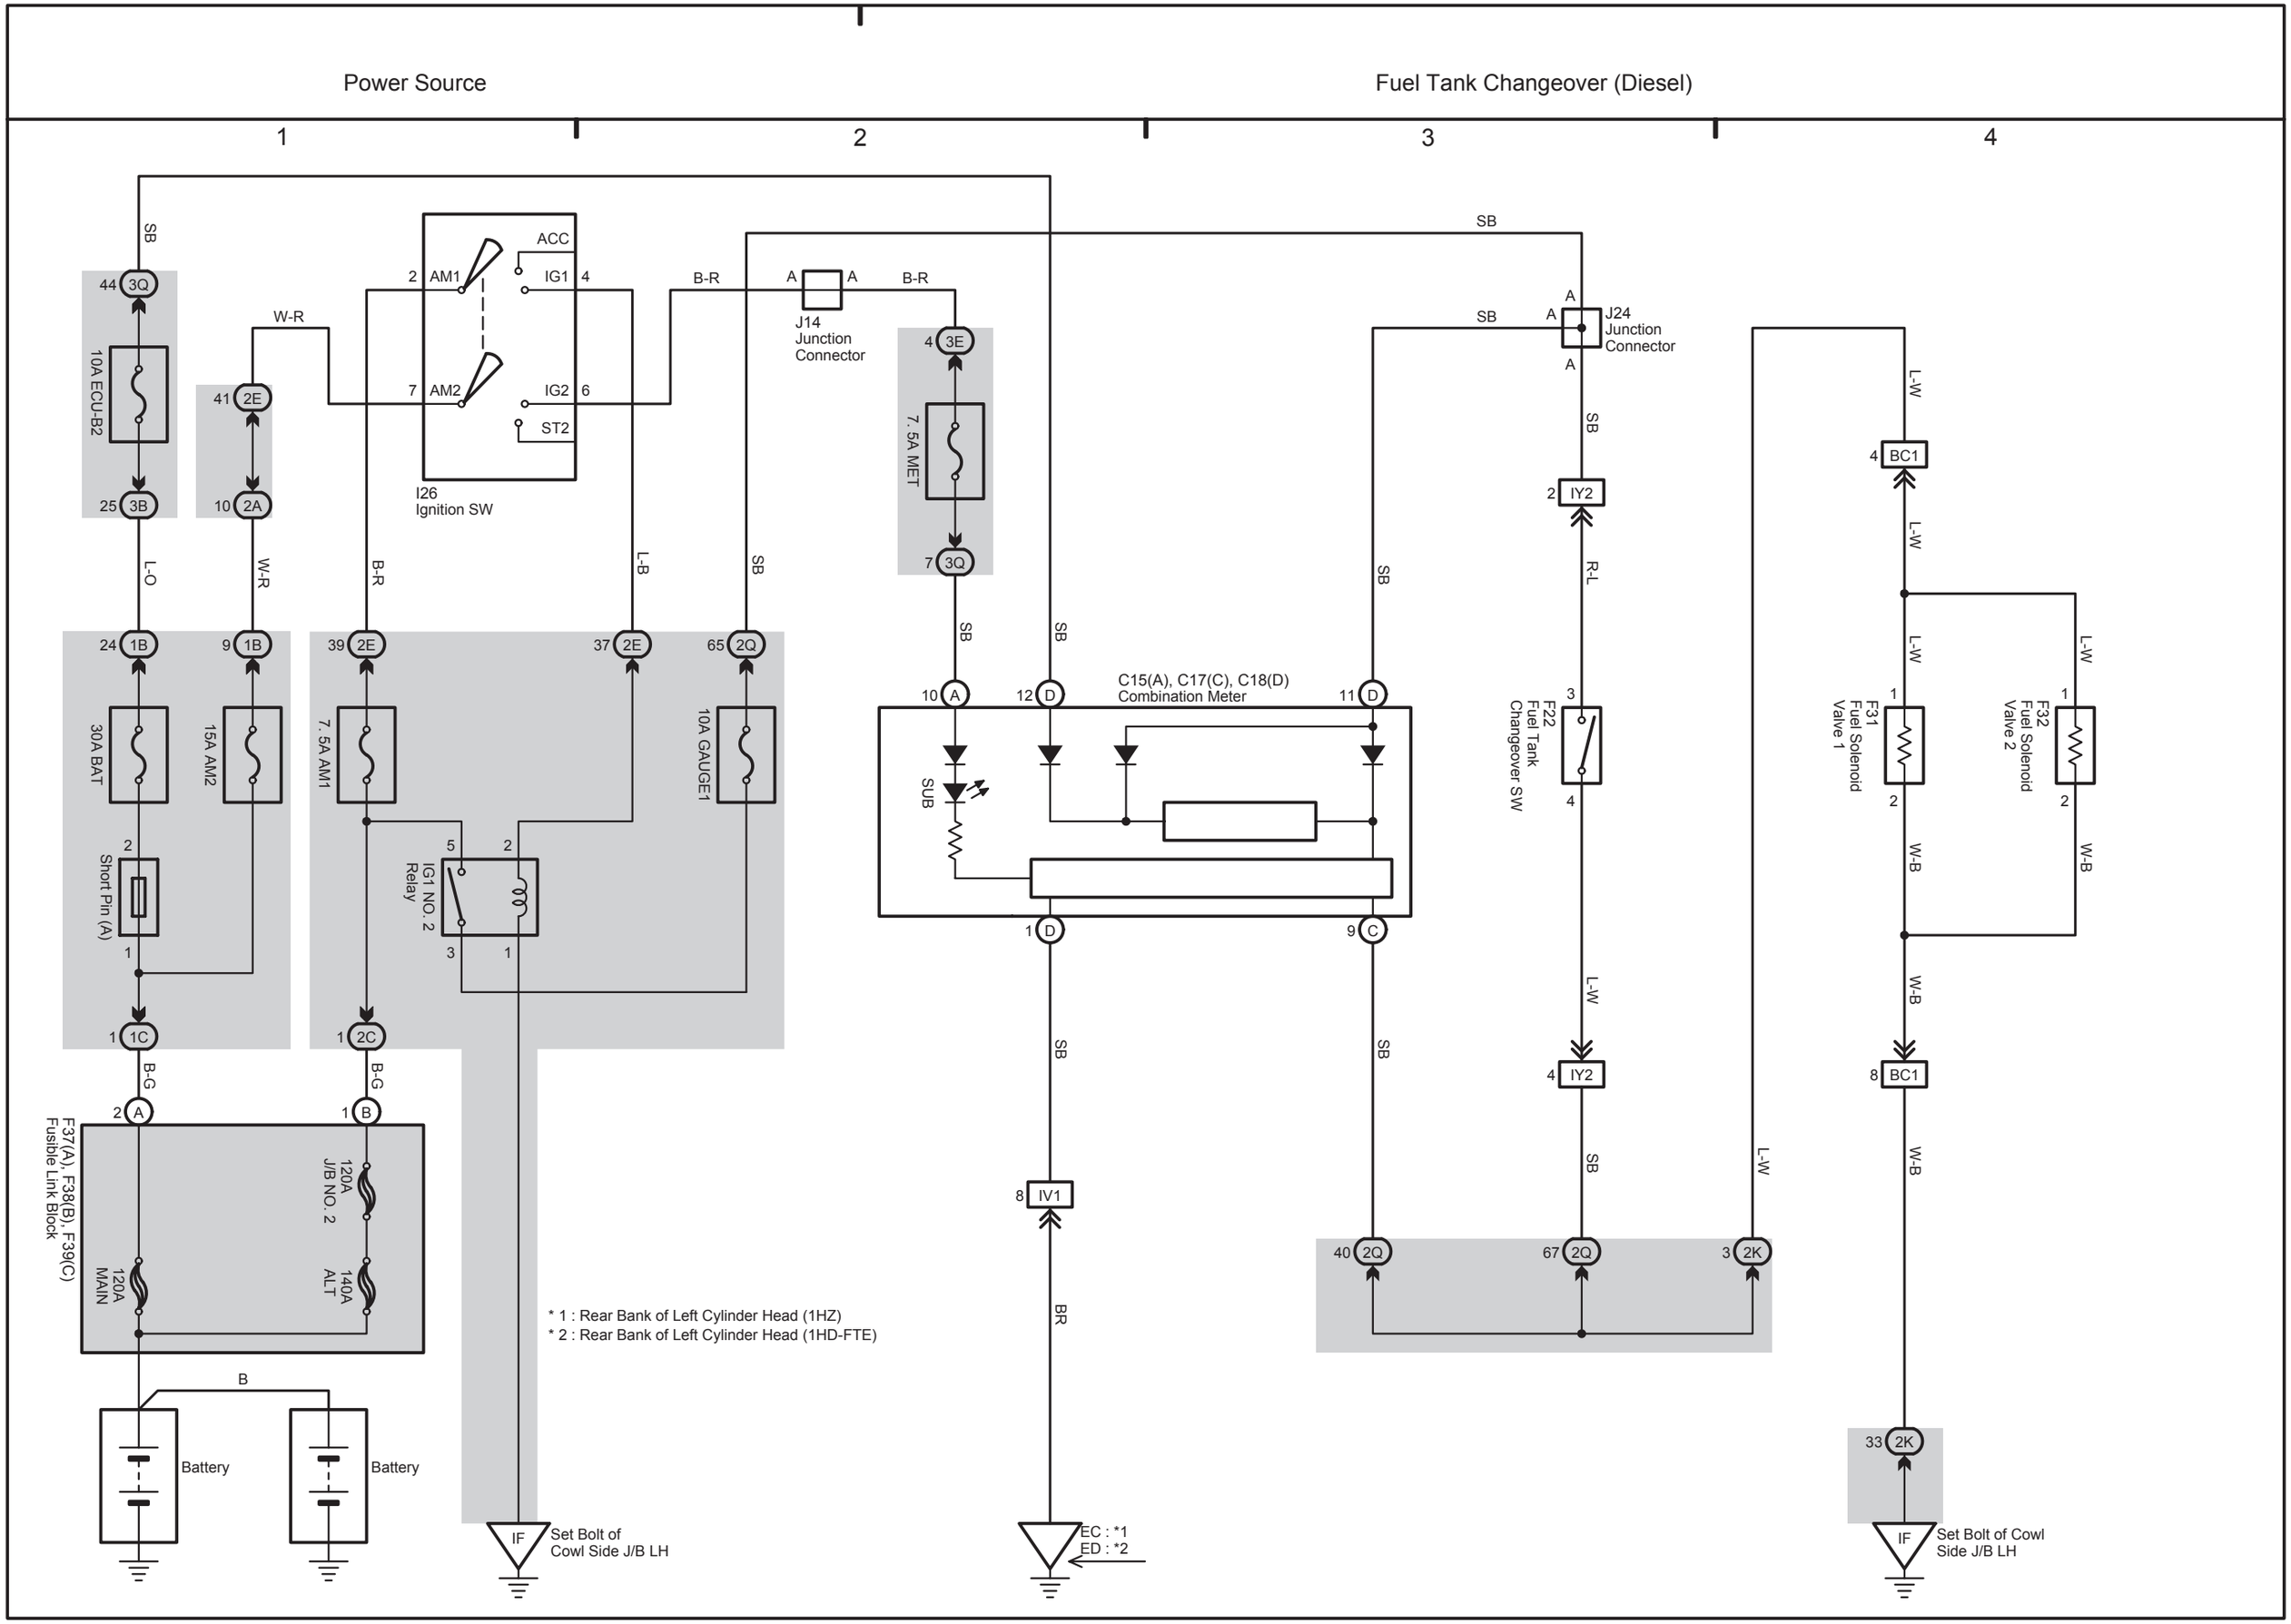
Power Source
Fuel Tank Changeover (Diesel)
1
2
3
4
10A ECU-B2
30A BAT
15A AM2
Short Pin (A)
7. 5A AM1
IG1 NO. 2 Relay
10A GAUGE1
I26 Ignition SW
ACC
AM1
IG1
AM2
IG2
ST2
J14 Junction Connector
7. 5A MET
C15(A), C17(C), C18(D) Combination Meter
SUB
J24 Junction Connector
IY2
F22 Fuel Tank Changeover SW
BC1
F31 Fuel Solenoid Valve 1
F32 Fuel Solenoid Valve 2
F37(A), F38(B), F39(C) Fusible Link Block
120A J/B NO. 2
120A MAIN
140A ALT
Battery
Battery
IV1
EC : *1
ED : *2
IF
Set Bolt of Cowl Side J/B LH
IF
Set Bolt of Cowl Side J/B LH
* 1 : Rear Bank of Left Cylinder Head (1HZ)
* 2 : Rear Bank of Left Cylinder Head (1HD-FTE)