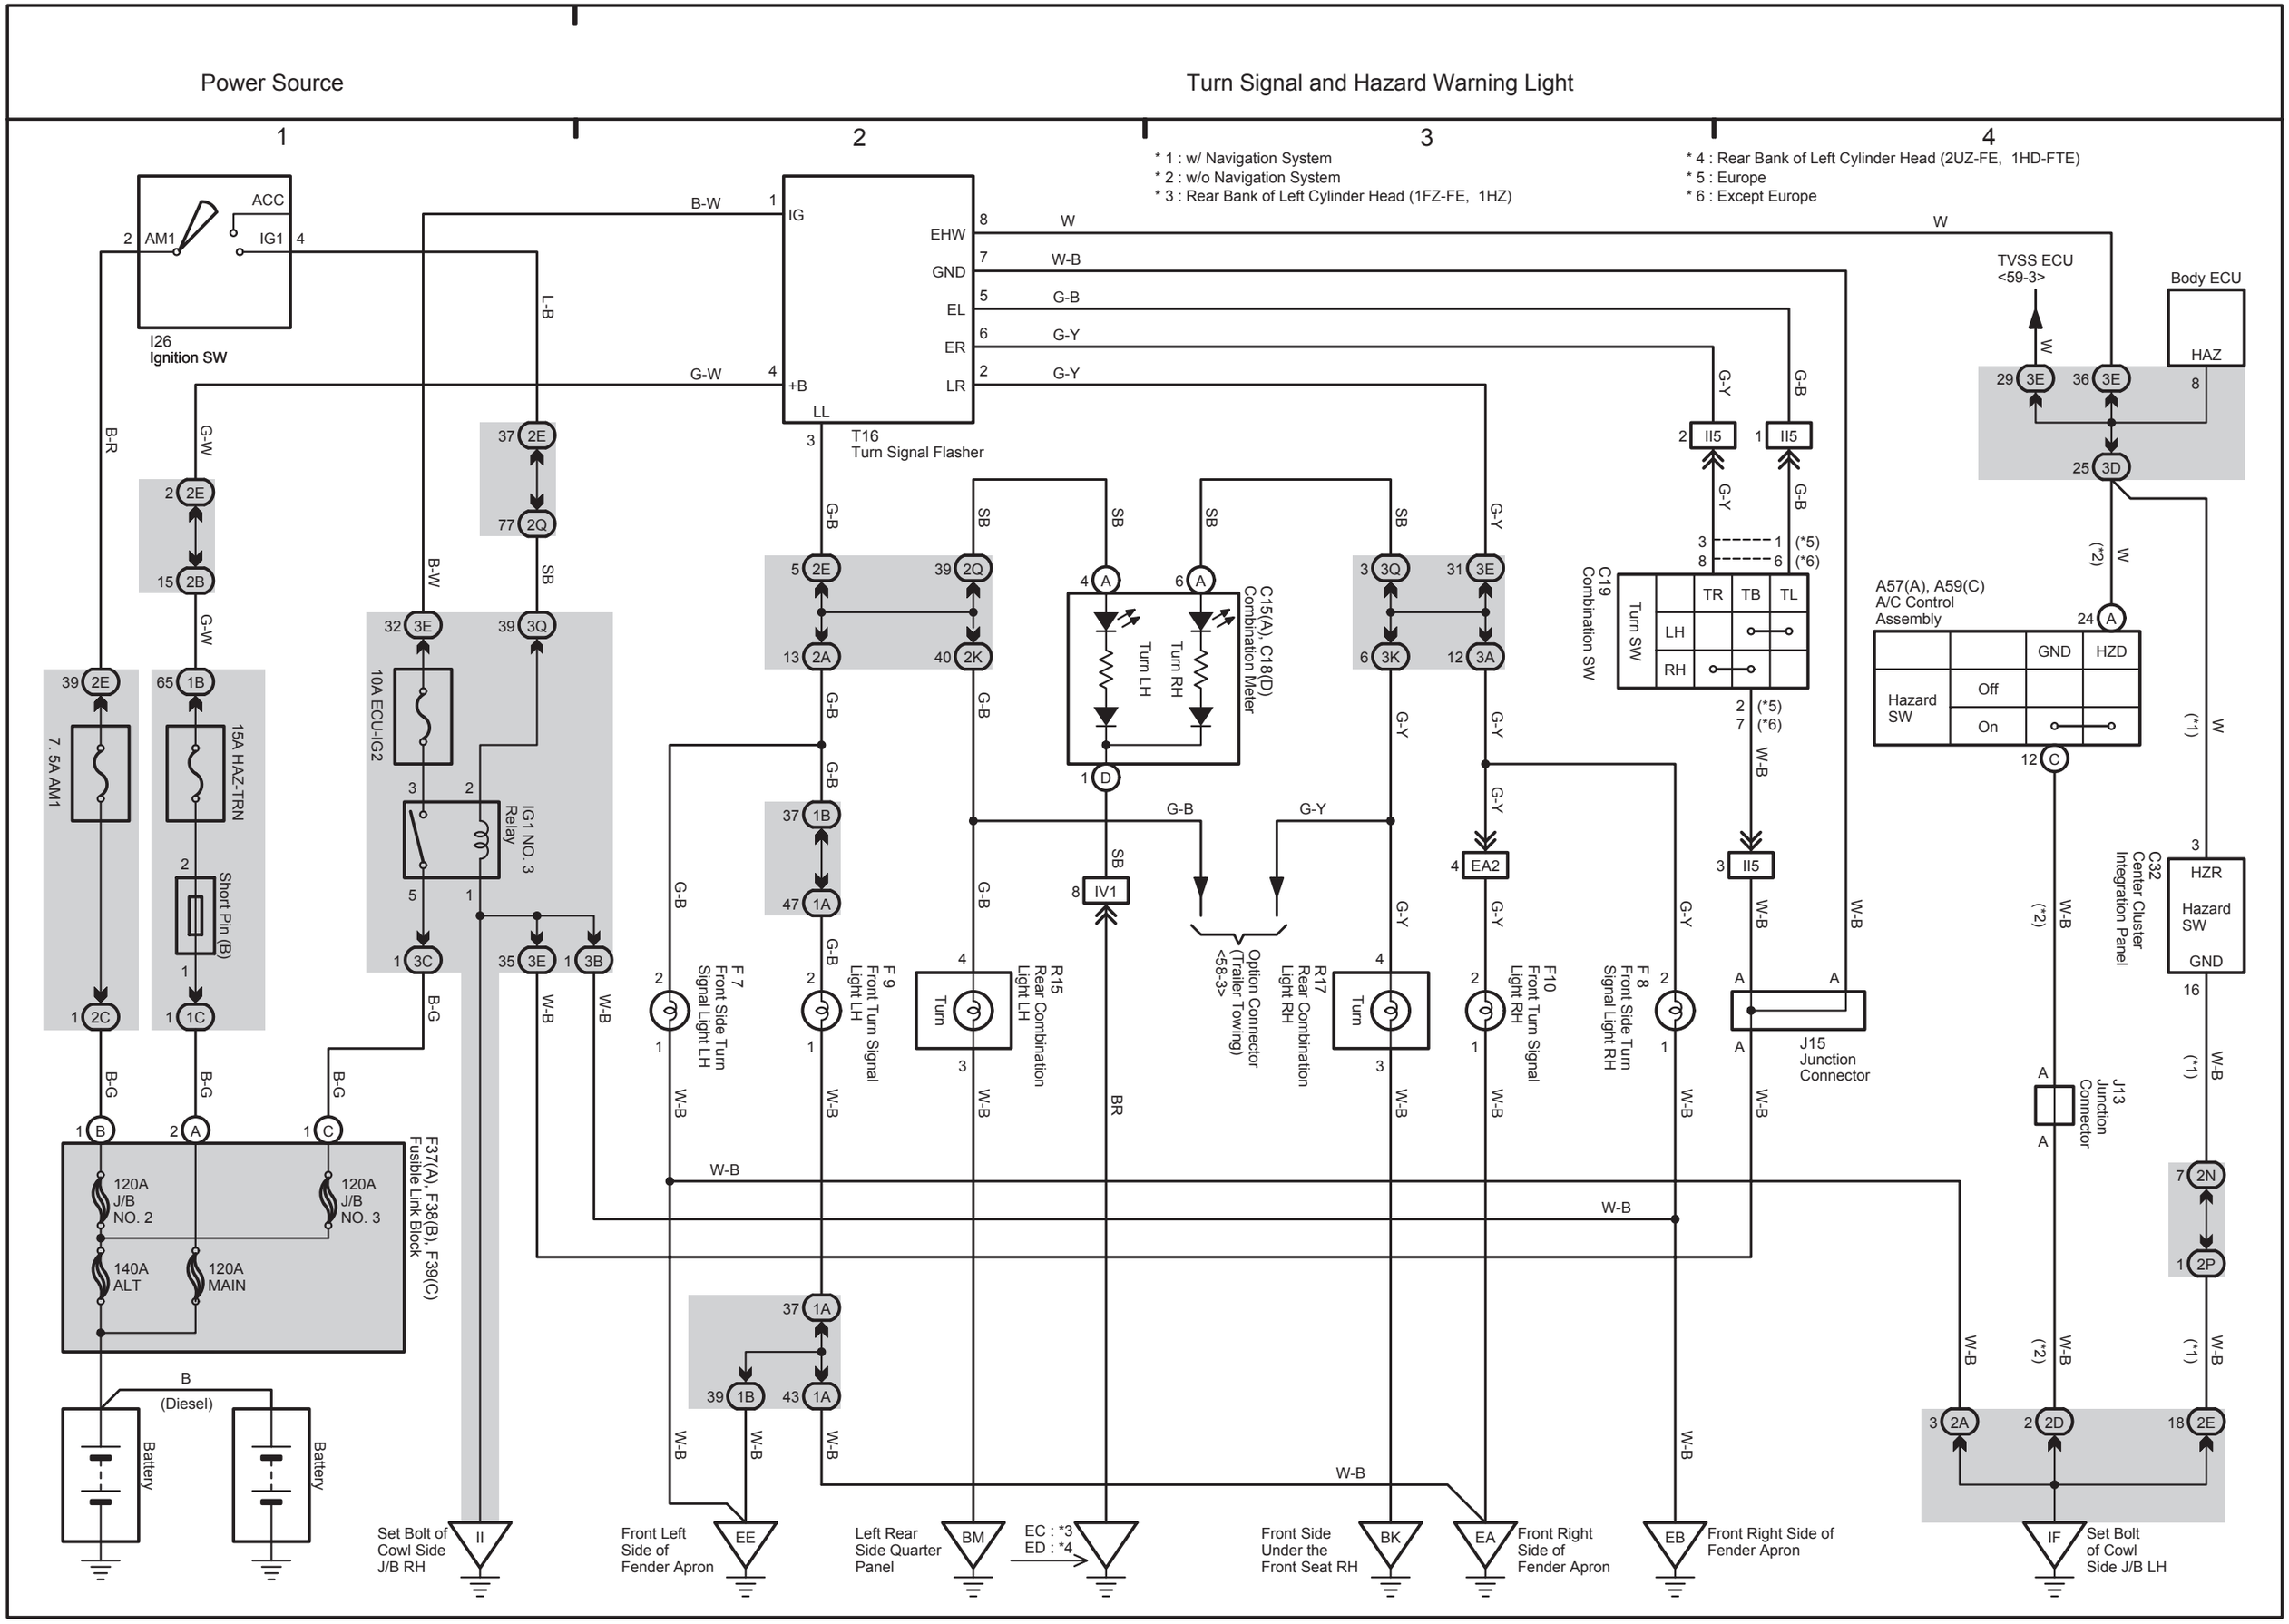
Power Source
Turn Signal and Hazard Warning Light
1
2
3
4
* 1 : w/ Navigation System
* 2 : w/o Navigation System
* 3 : Rear Bank of Left Cylinder Head (1FZ-FE, 1HZ)
* 4 : Rear Bank of Left Cylinder Head (2UZ-FE, 1HD-FTE)
* 5 : Europe
* 6 : Except Europe
I26
Ignition SW
ACC
AM1
IG1
T16
Turn Signal Flasher
IG
EHW
GND
EL
ER
LR
+B
LL
TVSS ECU
<59-3>
Body ECU
HAZ
C15(A), C18(D)
Combination Meter
Turn LH
Turn RH
C19
Combination SW
Turn SW
TR
TB
TL
LH
RH
A57(A), A59(C)
A/C Control
Assembly
GND
HZD
Hazard
SW
Off
On
7. 5A AM1
15A HAZ-TRN
10A ECU-IG2
IG1 NO. 3
Relay
Short Pin (B)
F37(A), F38(B), F39(C)
Fusible Link Block
120A
J/B
NO. 2
120A
J/B
NO. 3
140A
ALT
120A
MAIN
B
(Diesel)
Battery
Battery
F 7
Front Side Turn
Signal Light LH
F 9
Front Turn Signal
Light LH
R15
Rear Combination
Light LH
Turn
Option Connector
(Trailer Towing)
<58-3>
R17
Rear Combination
Light RH
F10
Front Turn Signal
Light RH
F 8
Front Side Turn
Signal Light RH
J15
Junction
Connector
C32
Center Cluster
Integration Panel
HZR
Hazard
SW
GND
J13
Junction
Connector
Set Bolt of
Cowl Side
J/B RH
Front Left
Side of
Fender Apron
Left Rear
Side Quarter
Panel
EC : *3
ED : *4
Front Side
Under the
Front Seat RH
Front Right
Side of
Fender Apron
Front Right Side of
Fender Apron
Set Bolt
of Cowl
Side J/B LH