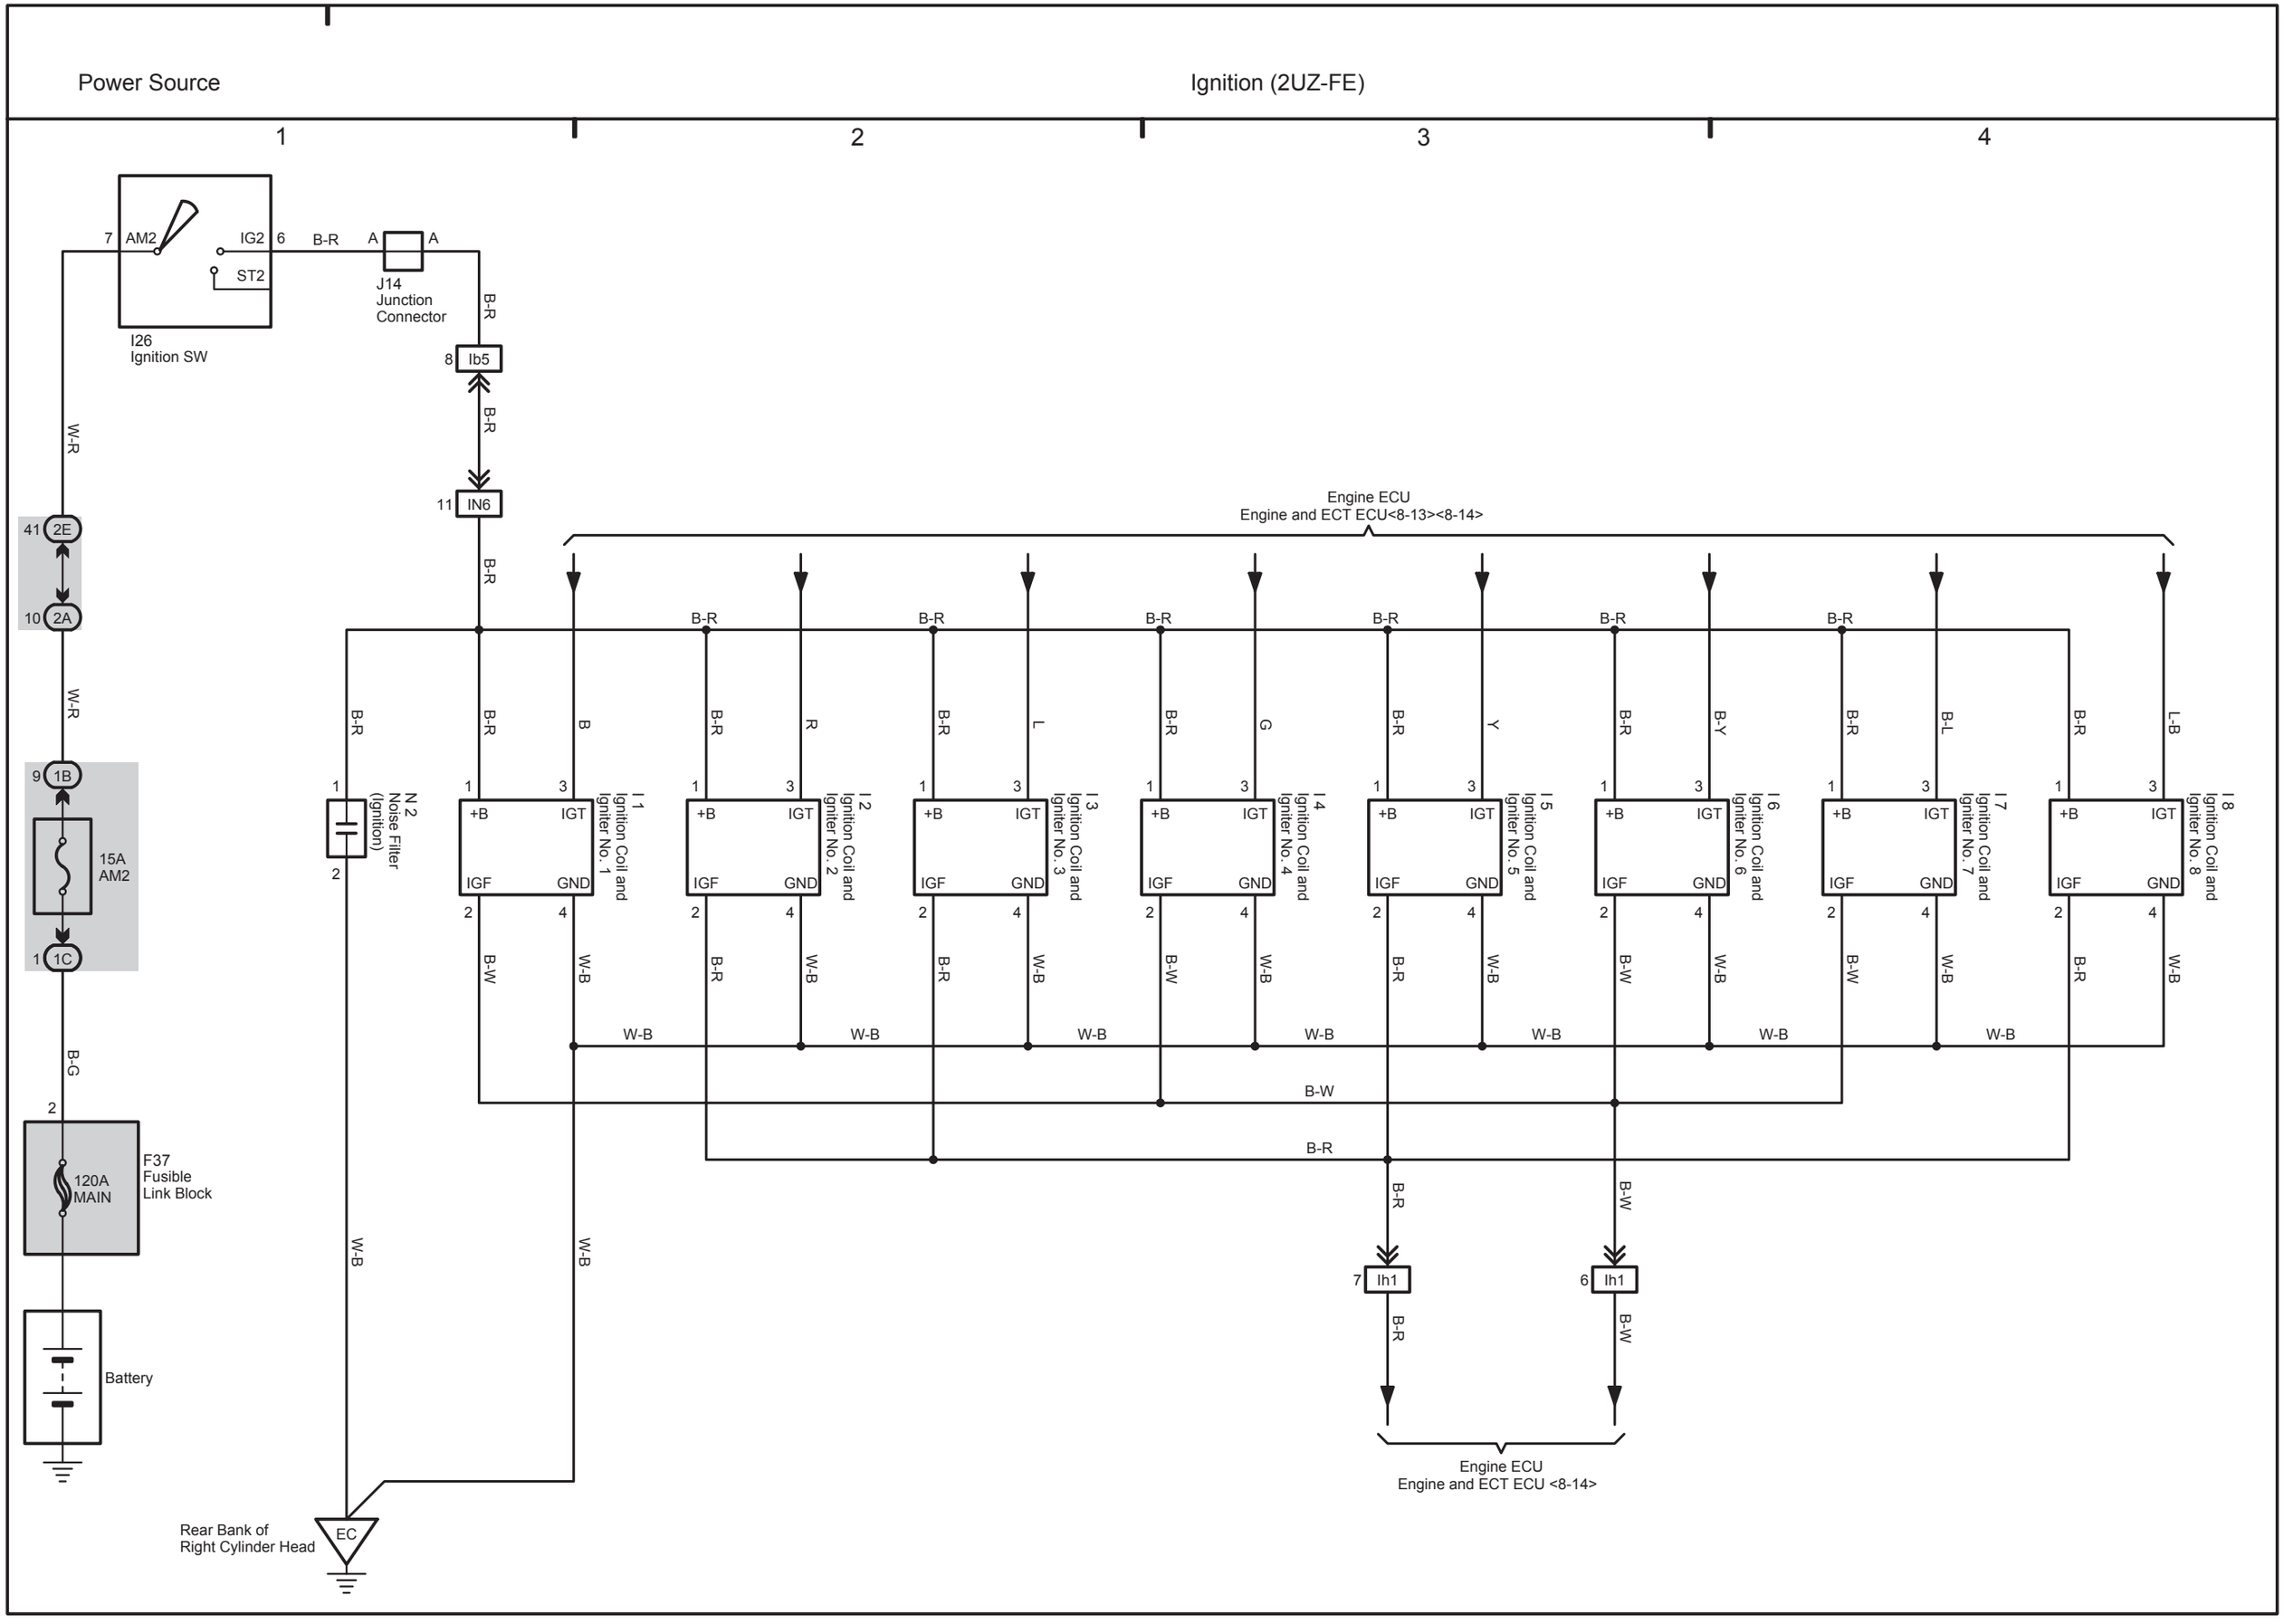
Power Source
Ignition (2UZ-FE)
1
2
3
4
7 AM2
IG2 6
ST2
I26
Ignition SW
B-R
A A
J14
Junction
Connector
B-R
8 Ib5
B-R
11 IN6
B-R
W-R
41 2E
10 2A
W-R
9 1B
15A
AM2
1 1C
B-G
2
F37
Fusible
Link Block
120A
MAIN
Battery
Engine ECU
Engine and ECT ECU<8-13><8-14>
B-R
B-R
B
B-R
R
B-R
L
B-R
G
B-R
Y
B-R
B-Y
B-R
B-L
B-R
L-B
N 2
Noise Filter
(Ignition)
I 1
Ignition Coil and
Igniter No. 1
I 2
Ignition Coil and
Igniter No. 2
I 3
Ignition Coil and
Igniter No. 3
I 4
Ignition Coil and
Igniter No. 4
I 5
Ignition Coil and
Igniter No. 5
I 6
Ignition Coil and
Igniter No. 6
I 7
Ignition Coil and
Igniter No. 7
I 8
Ignition Coil and
Igniter No. 8
+B IGT
IGF GND
B-W
W-B
B-R
W-B
B-W
B-R
7 Ih1
6 Ih1
Engine ECU
Engine and ECT ECU <8-14>
Rear Bank of
Right Cylinder Head
EC