(Cont. next page)

(Cont. next page)

9 LAND CRUISER (LHD) (Cont'd)

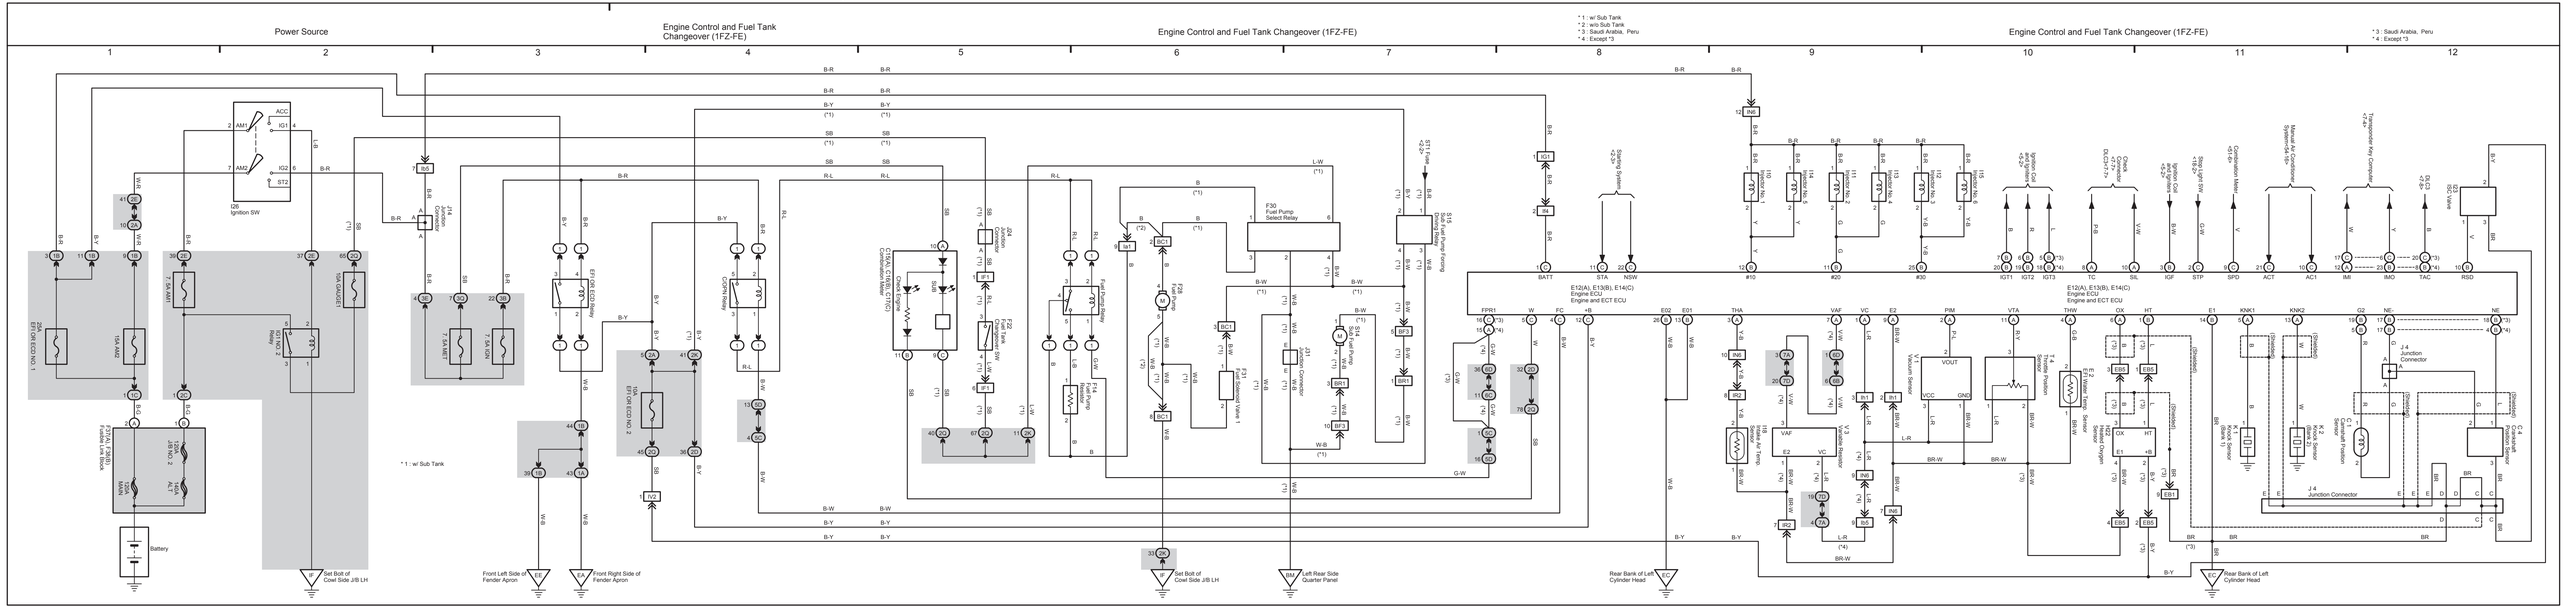
Power Source
Engine Control and Fuel Tank Changeover (1FZ-FE)
Engine Control and Fuel Tank Changeover (1FZ-FE)
Engine Control and Fuel Tank Changeover (1FZ-FE)
* 1 : w/ Sub Tank
* 2 : w/o Sub Tank
* 3 : Saudi Arabia, Peru
* 4 : Except *3
* 1 : w/ Sub Tank
* 3 : Saudi Arabia, Peru
* 4 : Except *3
1
2
3
4
5
6
7
8
9
10
11
12
t26 Ignition SW
ACC
IG1
AM1
AM2
IG2
ST2
25A EFI EDI NO. 1
15A AM2
7.5A MAIN
7.5A AM1
7.5A IGN
10A GAUGE1
EFI NO. 2 Relay
EFI EDI Relay
EFI NO. 2 Relay
EFI EDI Relay
Fuel Pump Relay
Fuel Pump Relay
F30 Fuel Pump Select Relay
S15 Sub-fuel Pump Priming Switch Relay
S14 Sub-fuel Pump Relay
F31 Fuel Selector Valve 1
J24 Junction Connector
J25 Junction Connector
Check Engine
Fuel Tank Changeover SW
Fuel Pump
Fuel Selector Valve 1
Sub-fuel Pump
Starting System
Injector No. 1
Injector No. 2
Injector No. 3
Injector No. 4
Injector No. 5
Injector No. 6
Ignition Coil with Igniter No. 1
Ignition Coil with Igniter No. 2
Ignition Coil with Igniter No. 3
Crank Position Sensor (DLC3*7*)
Stop Light SW
Compressor Motor
Manual Air Conditioner System
Transponder Key Computer
ISC Valve
J14 Junction Connector
J4 Junction Connector
J4 Junction Connector
J4 Junction Connector
J1 Junction Connector
J2 Junction Connector
J3 Junction Connector
J4 Junction Connector
J4 Junction Connector
J4