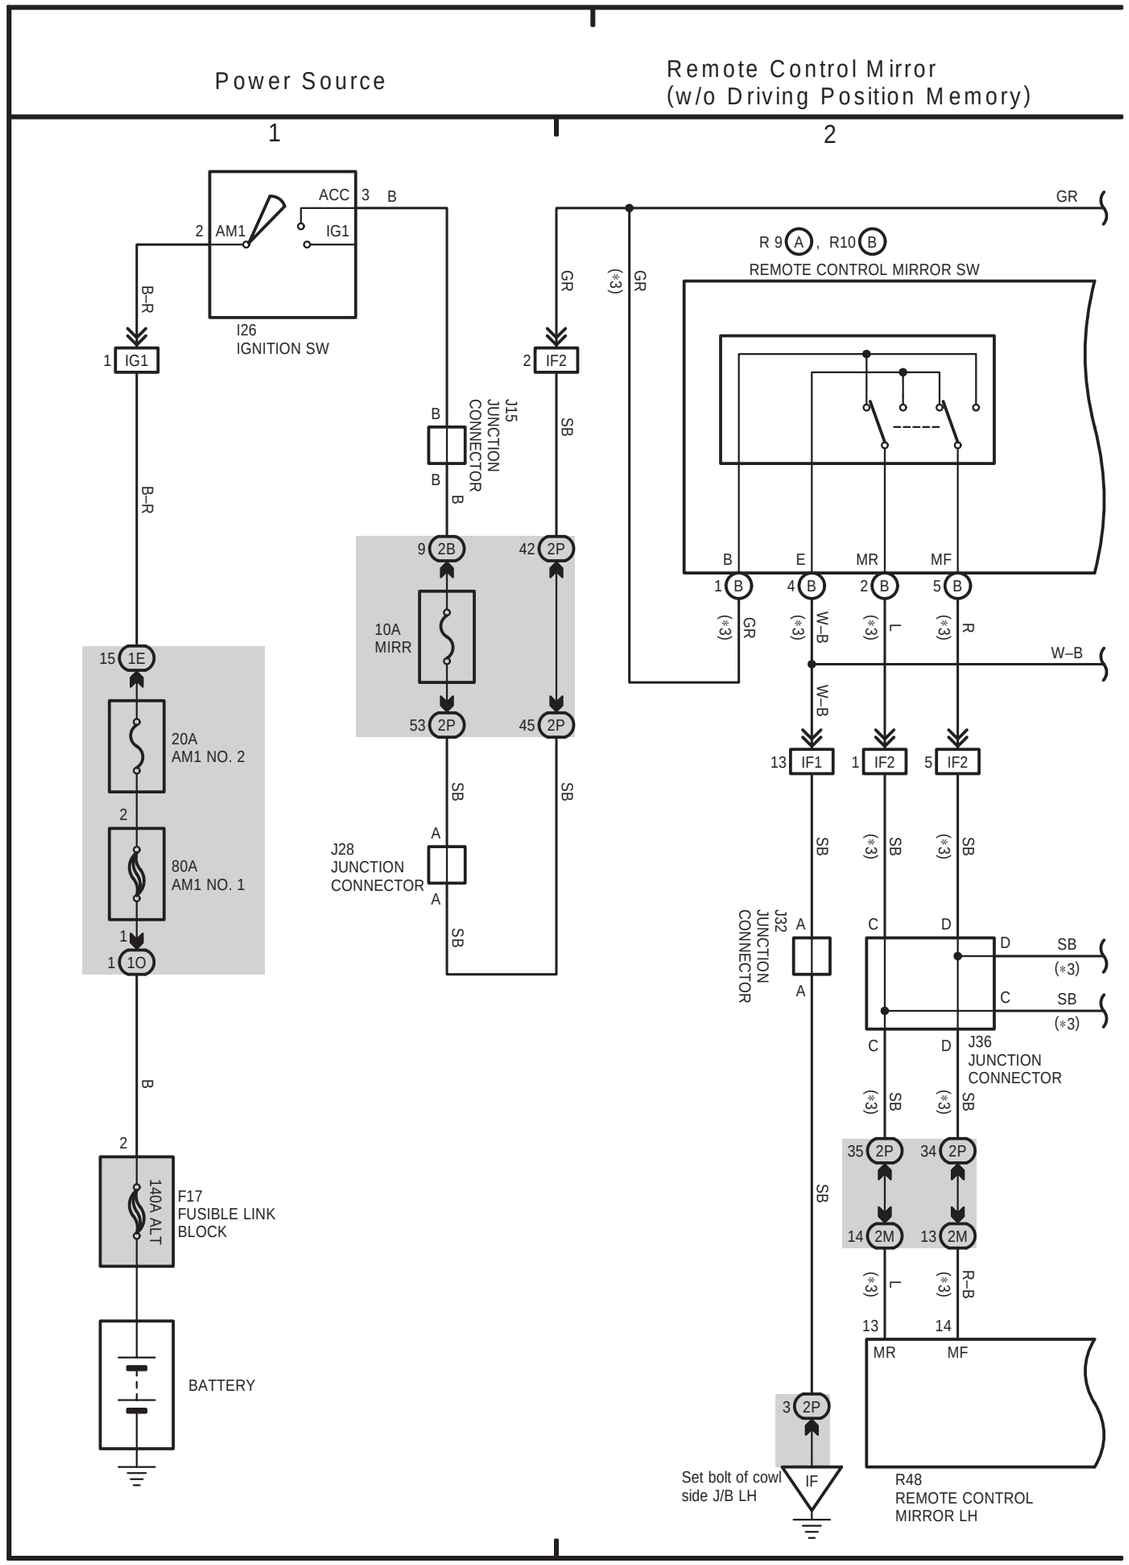
Power Source
Remote Control Mirror
(w/o Driving Position Memory)
1
2
ACC
AM1
IG1
I26
IGNITION SW
IG1
IF2
J15
JUNCTION
CONNECTOR
10A
MIRR
20A
AM1 NO. 2
80A
AM1 NO. 1
J28
JUNCTION
CONNECTOR
F17
FUSIBLE LINK
BLOCK
140A ALT
BATTERY
R 9 A, R10 B
REMOTE CONTROL MIRROR SW
J32
JUNCTION
CONNECTOR
J36
JUNCTION
CONNECTOR
IF1
IF2
Set bolt of cowl
side J/B LH
IF
R48
REMOTE CONTROL
MIRROR LH

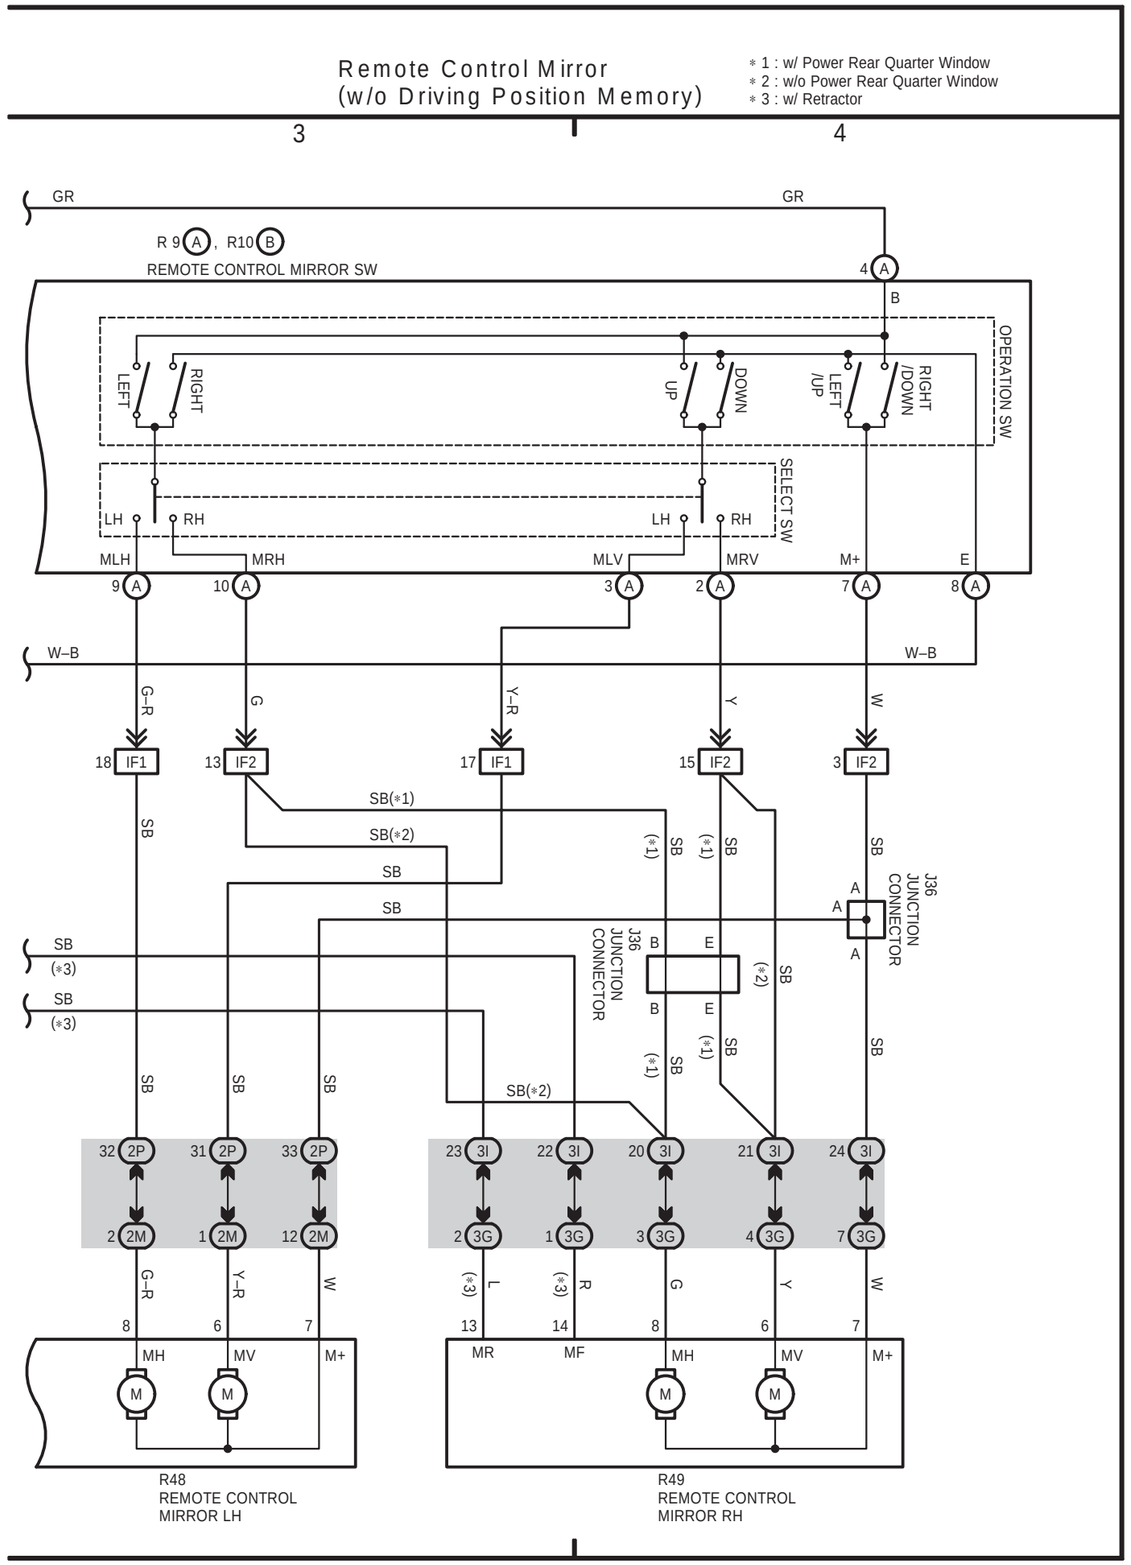
Remote Control Mirror
(w/o Driving Position Memory)
* 1 : w/ Power Rear Quarter Window
* 2 : w/o Power Rear Quarter Window
* 3 : w/ Retractor
3
4
R 9 A, R10 B
REMOTE CONTROL MIRROR SW
OPERATION SW
LEFT
RIGHT
UP
DOWN
LEFT /UP
RIGHT /DOWN
SELECT SW
LH
RH
MLH
MRH
MLV
MRV
M+
E
IF1
IF2
J36
JUNCTION
CONNECTOR
R48
REMOTE CONTROL
MIRROR LH
R49
REMOTE CONTROL
MIRROR RH

LHD