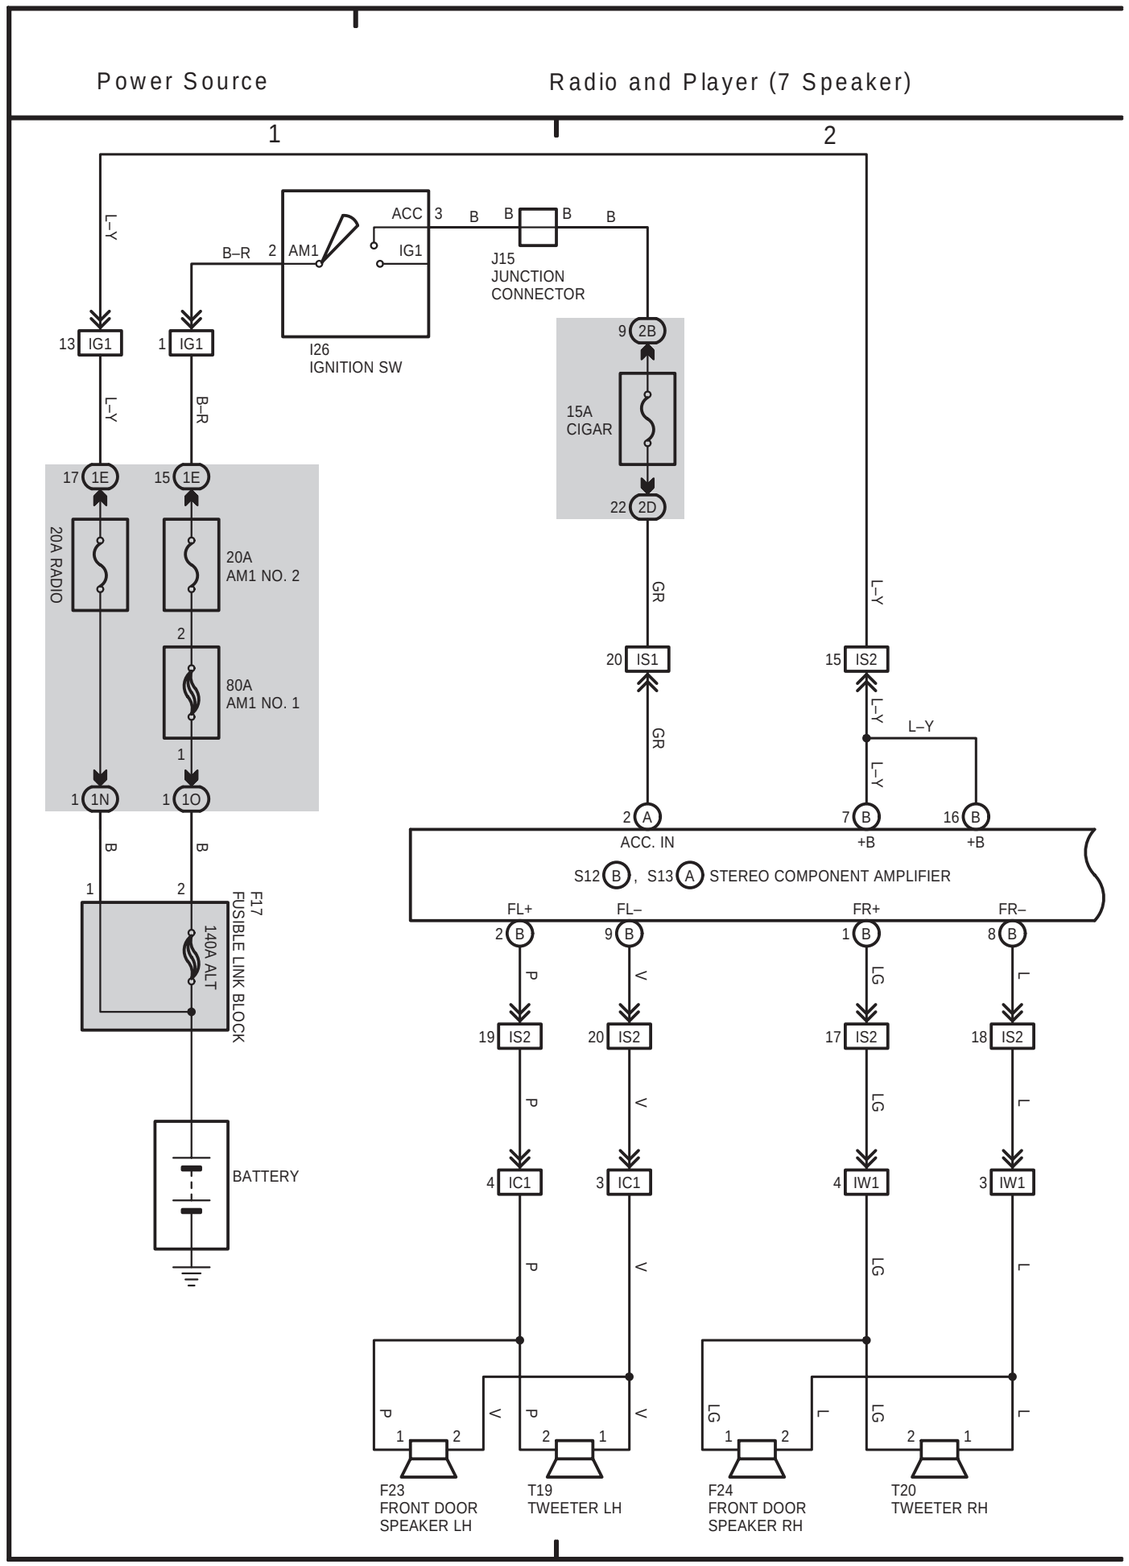
Power Source
Radio and Player (7 Speaker)
1
2
ACC
IG1
AM1
I26
IGNITION SW
J15
JUNCTION
CONNECTOR
15A
CIGAR
20A RADIO
20A
AM1 NO. 2
80A
AM1 NO. 1
F17
FUSIBLE LINK BLOCK
140A ALT
BATTERY
ACC. IN
+B
S12 (B), S13 (A) STEREO COMPONENT AMPLIFIER
FL+
FL–
FR+
FR–
F23
FRONT DOOR
SPEAKER LH
T19
TWEETER LH
F24
FRONT DOOR
SPEAKER RH
T20
TWEETER RH

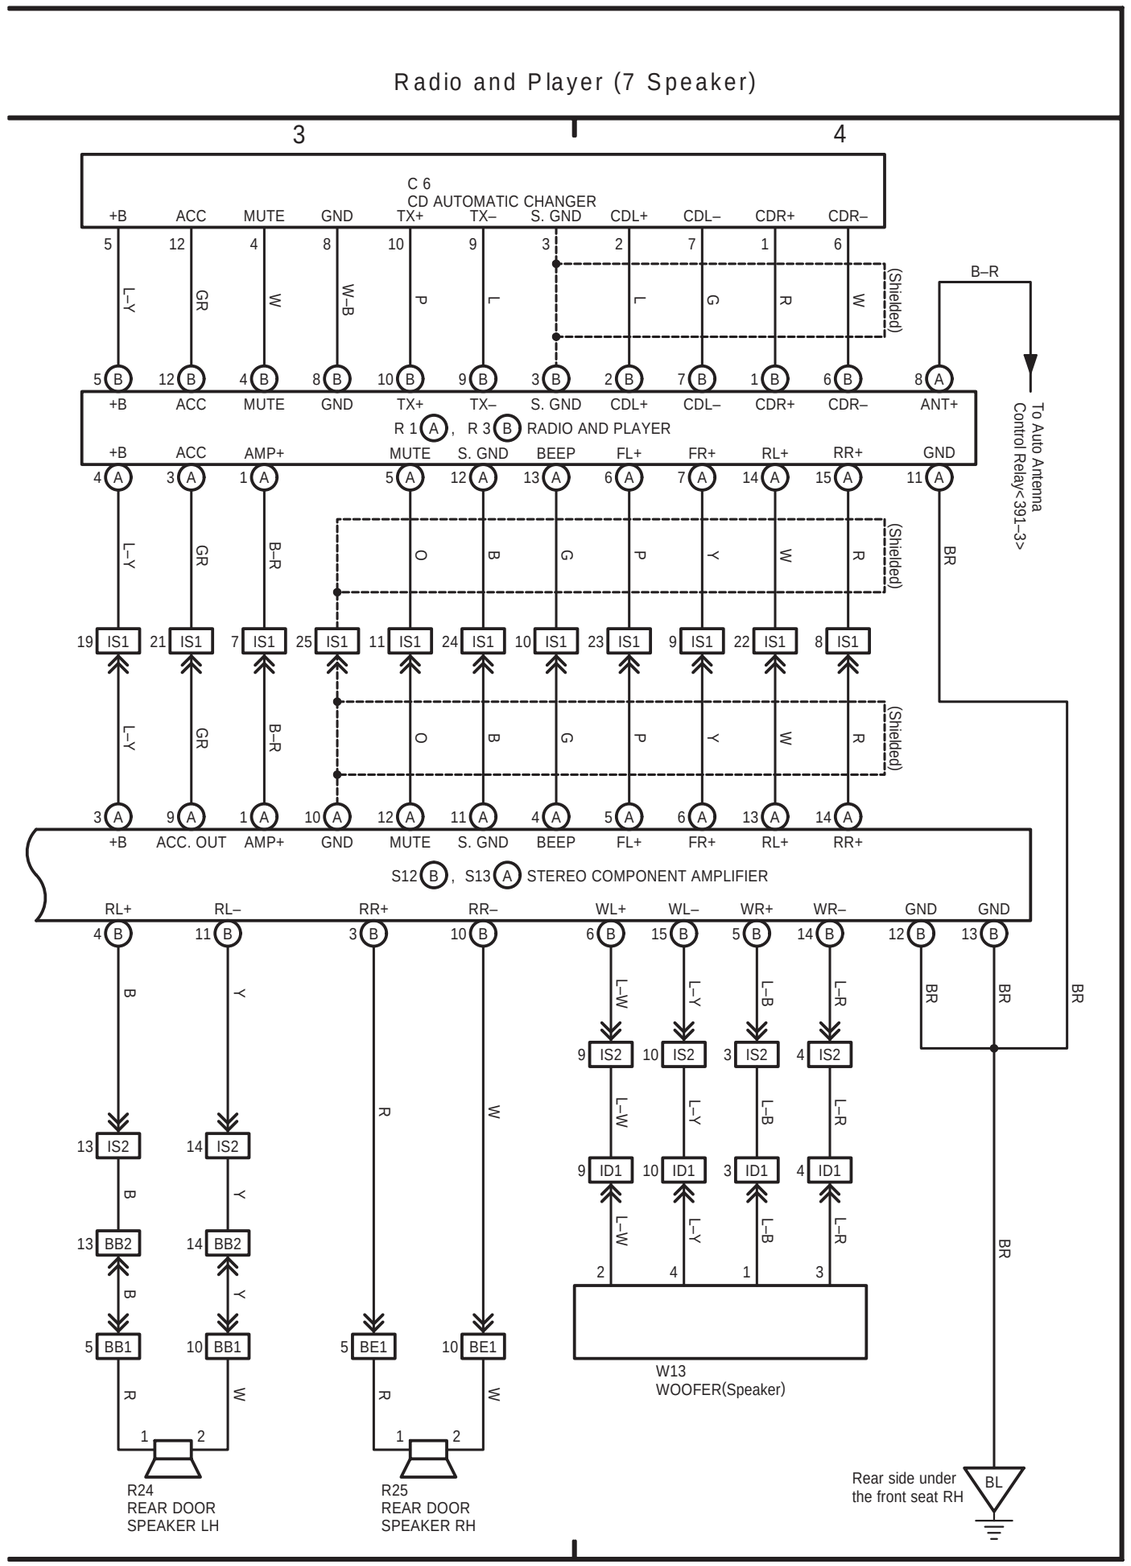
Radio and Player (7 Speaker)
3
4
C 6
CD AUTOMATIC CHANGER
+B
ACC
MUTE
GND
TX+
TX–
S. GND
CDL+
CDL–
CDR+
CDR–
(Shielded)
ANT+
R 1 (A), R 3 (B) RADIO AND PLAYER
AMP+
BEEP
FL+
FR+
RL+
RR+
To Auto Antenna
Control Relay<391–3>
ACC. OUT
S12 (B), S13 (A) STEREO COMPONENT AMPLIFIER
RL+
RL–
RR+
RR–
WL+
WL–
WR+
WR–
W13
WOOFER(Speaker)
R24
REAR DOOR
SPEAKER LH
R25
REAR DOOR
SPEAKER RH
Rear side under
the front seat RH
BL