(Cont. next page)

Power Source

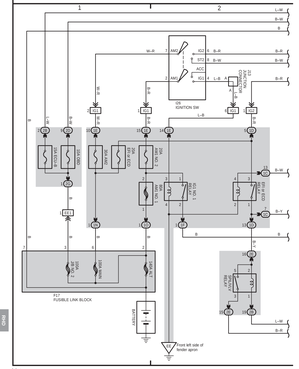








(Cont. next page)

Engine Control (1HD-FTE)

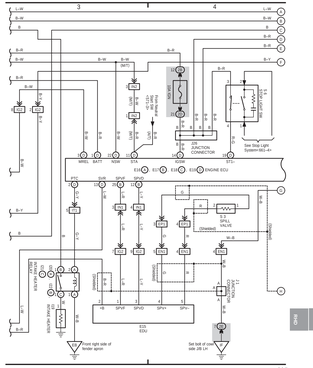








(Cont. next page)

Engine Control (1HD-FTE)

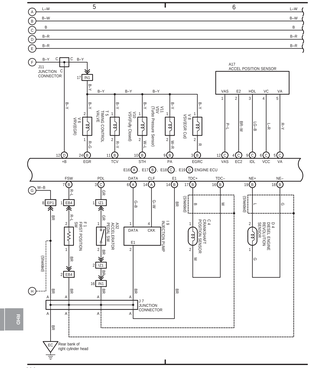








(Cont. next page)

Engine Control (1HD-FTE)

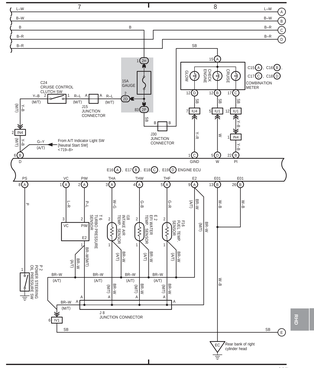








(Cont. next page)

Engine Control (1HD-FTE)

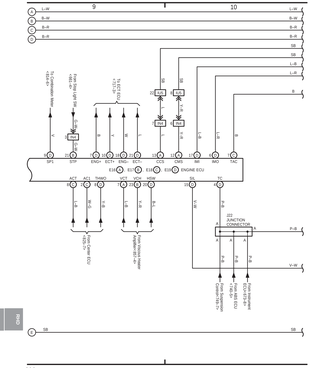
9
10
To ECT ECU *T17-3*
From ECT ECU *T17-3/T17-4*
From Center Junction Box Assembly *6B7-4F*
J/C
JUNCTION CONNECTOR
To Combination Meter *T63-4F*
C 3
CHECK CONNECTOR
D 4
DLC3
ENGINE ECU
J/C
JUNCTION CONNECTOR
J/B
JUNCTION CONNECTOR
From Center Junction Box Assembly *6B7-4F*
From Center Junction Box Assembly *6B7-4F*
From Center Junction Box Assembly *6B7-4F*