POWER STEERING GEAR (Independent Front Suspension)

SR0QJ–01

COMPONENTS

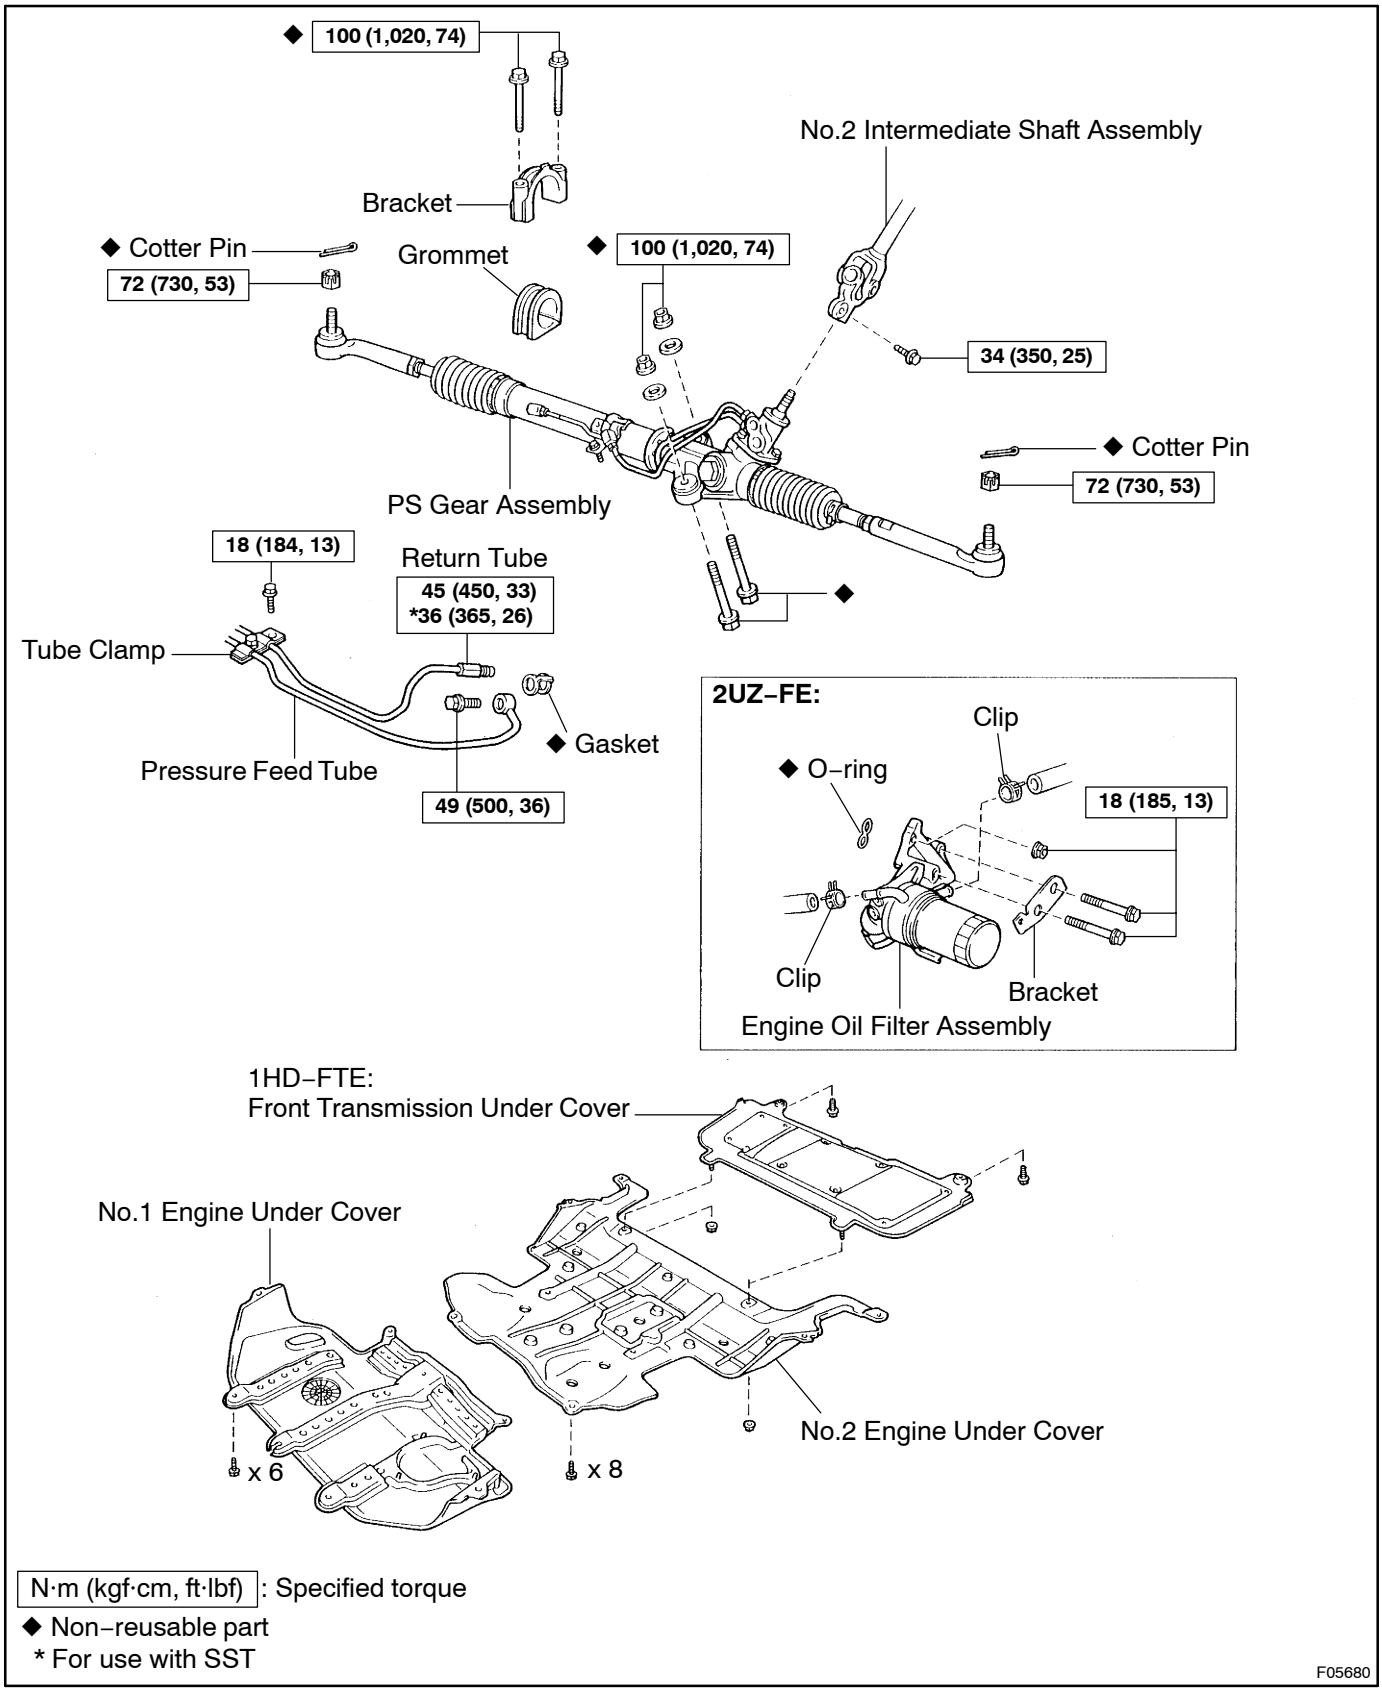

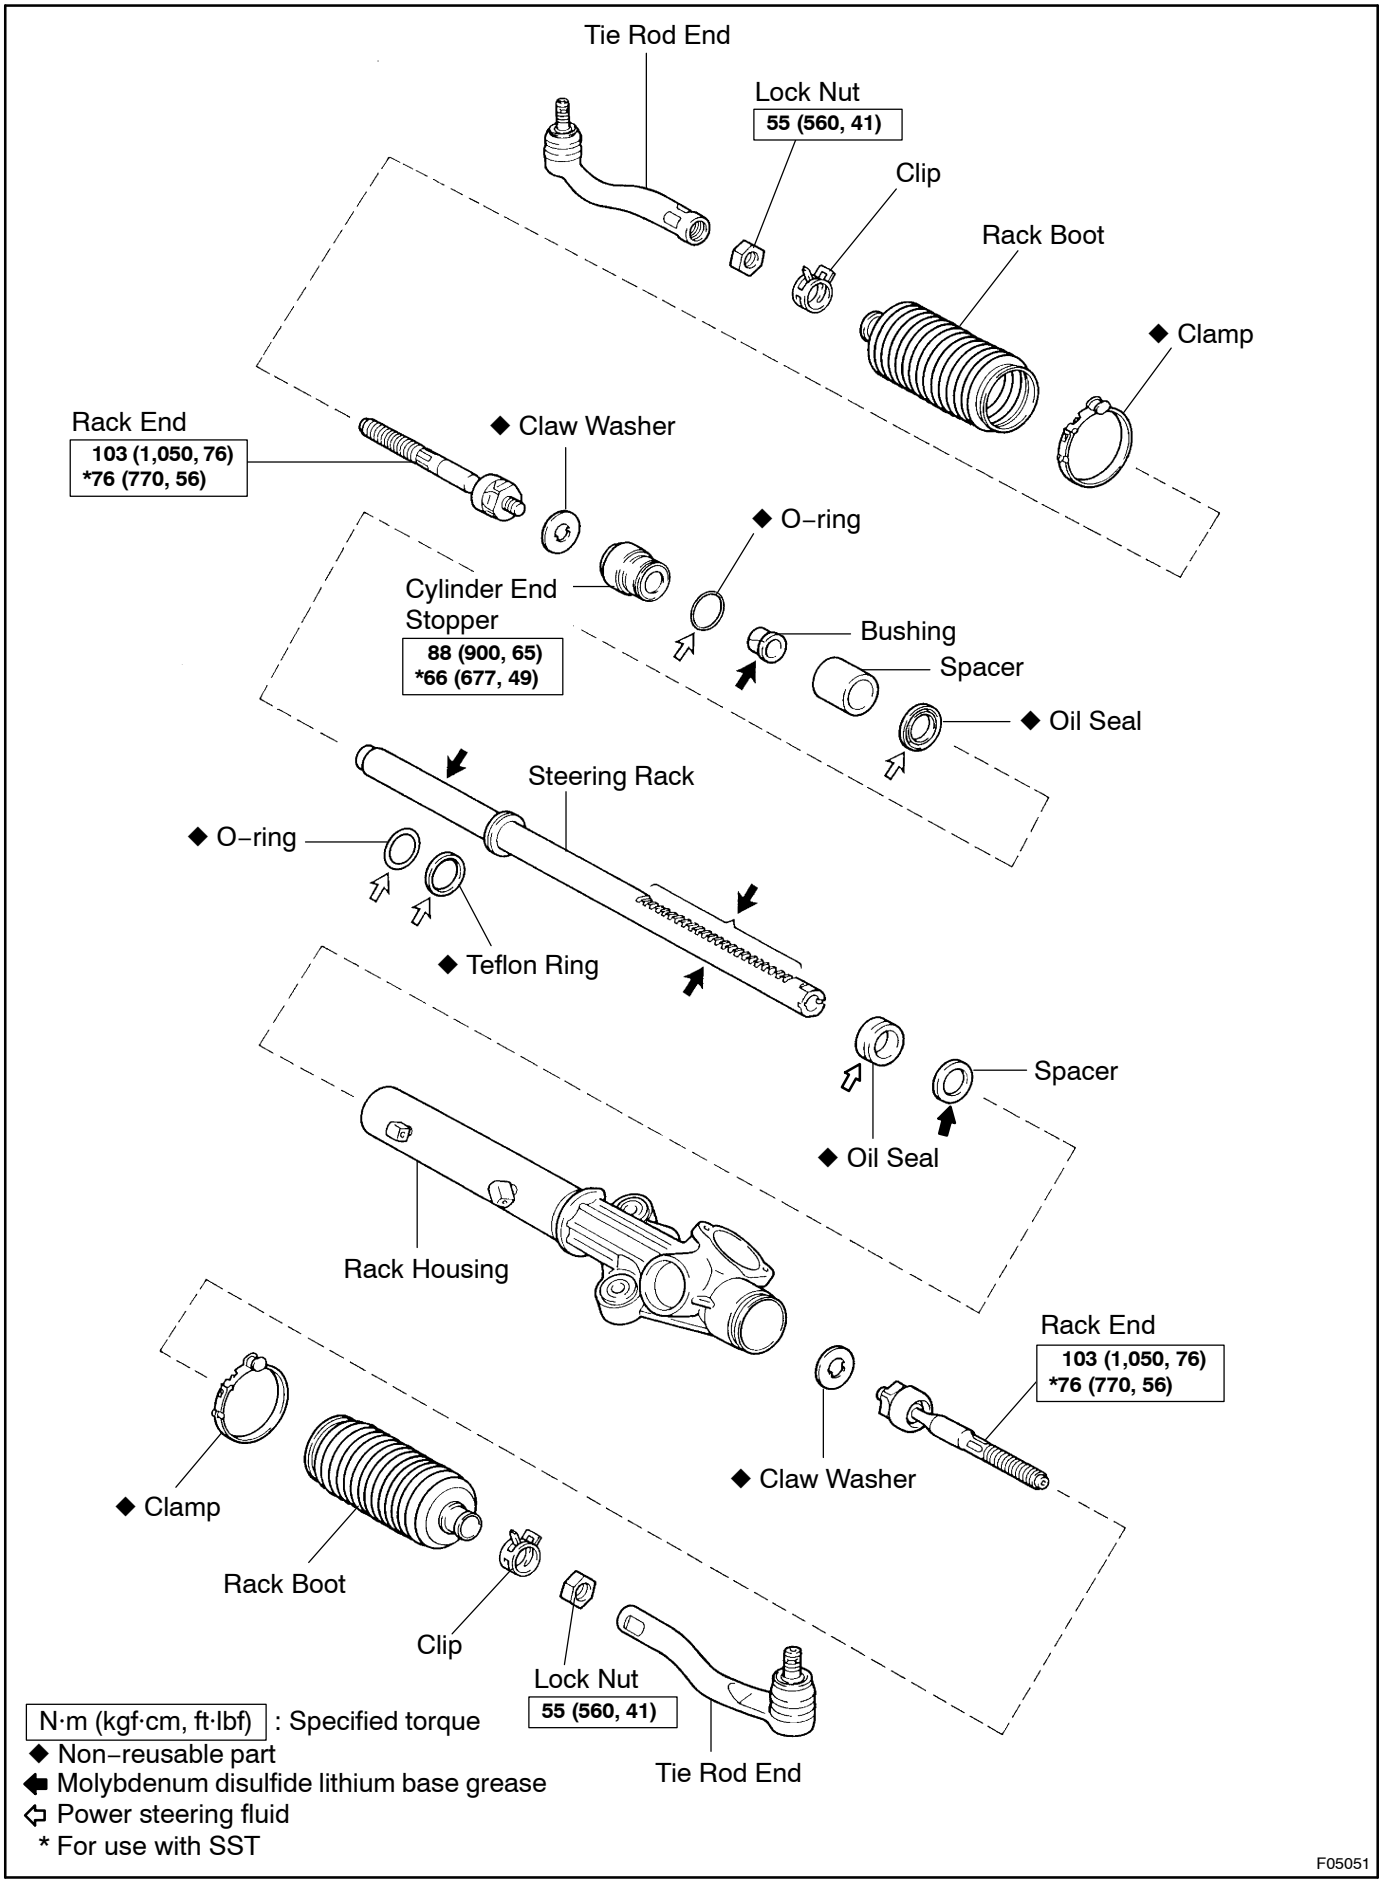
Tie Rod End
Lock Nut
55 (560, 41)
Clip
Rack Boot
◆ Clamp
Rack End
103 (1,050, 76)
*76 (770, 56)
◆ Claw Washer
◆ O–ring
Cylinder End Stopper
88 (900, 65)
*66 (677, 49)
Bushing
Spacer
◆ Oil Seal
Steering Rack
◆ O–ring
◆ Teflon Ring
Spacer
◆ Oil Seal
Rack Housing
Rack End
103 (1,050, 76)
*76 (770, 56)
◆ Claw Washer
◆ Clamp
Rack Boot
Clip
Lock Nut
55 (560, 41)
Tie Rod End
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
F05051

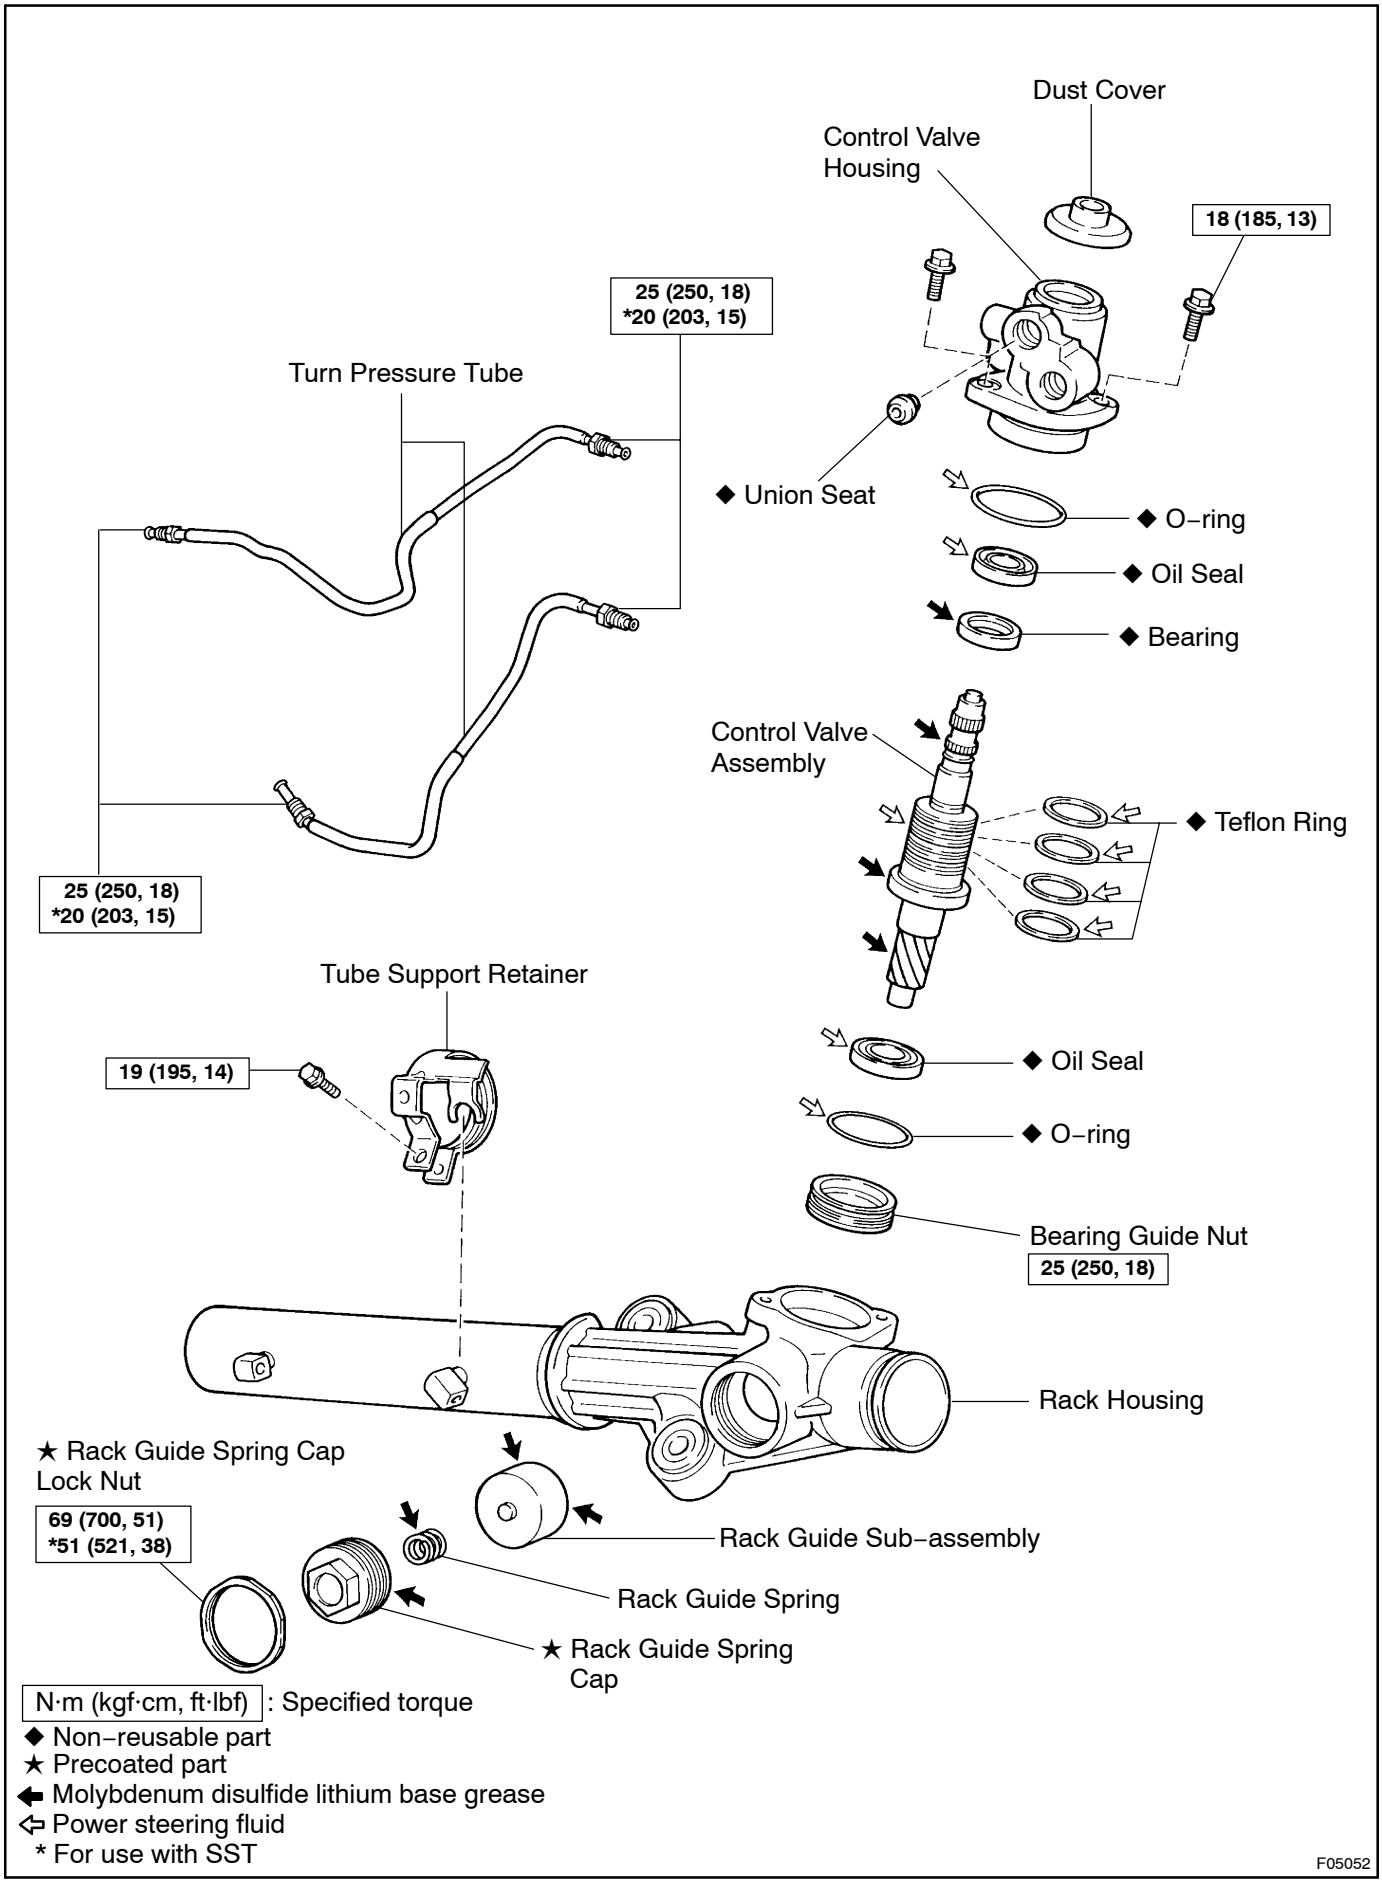
Dust Cover
Control Valve Housing
18 (185, 13)
25 (250, 18)
*20 (203, 15)
Turn Pressure Tube
◆ Union Seat
◆ O–ring
◆ Oil Seal
◆ Bearing
Control Valve Assembly
◆ Teflon Ring
25 (250, 18)
*20 (203, 15)
Tube Support Retainer
19 (195, 14)
◆ Oil Seal
◆ O–ring
Bearing Guide Nut
25 (250, 18)
Rack Housing
★ Rack Guide Spring Cap Lock Nut
69 (700, 51)
*51 (521, 38)
Rack Guide Sub–assembly
Rack Guide Spring
★ Rack Guide Spring Cap
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
F05052