52 LAND CRUISER (RHD)

(Cont. next page)

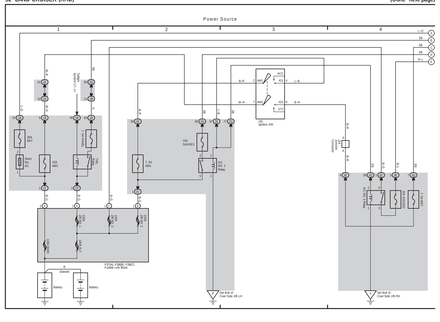
Power Source
Battery
Battery
Ignition Switch
Fuse Block
Fuse Block
Fuse Block