AC1HO–05

LOCATION

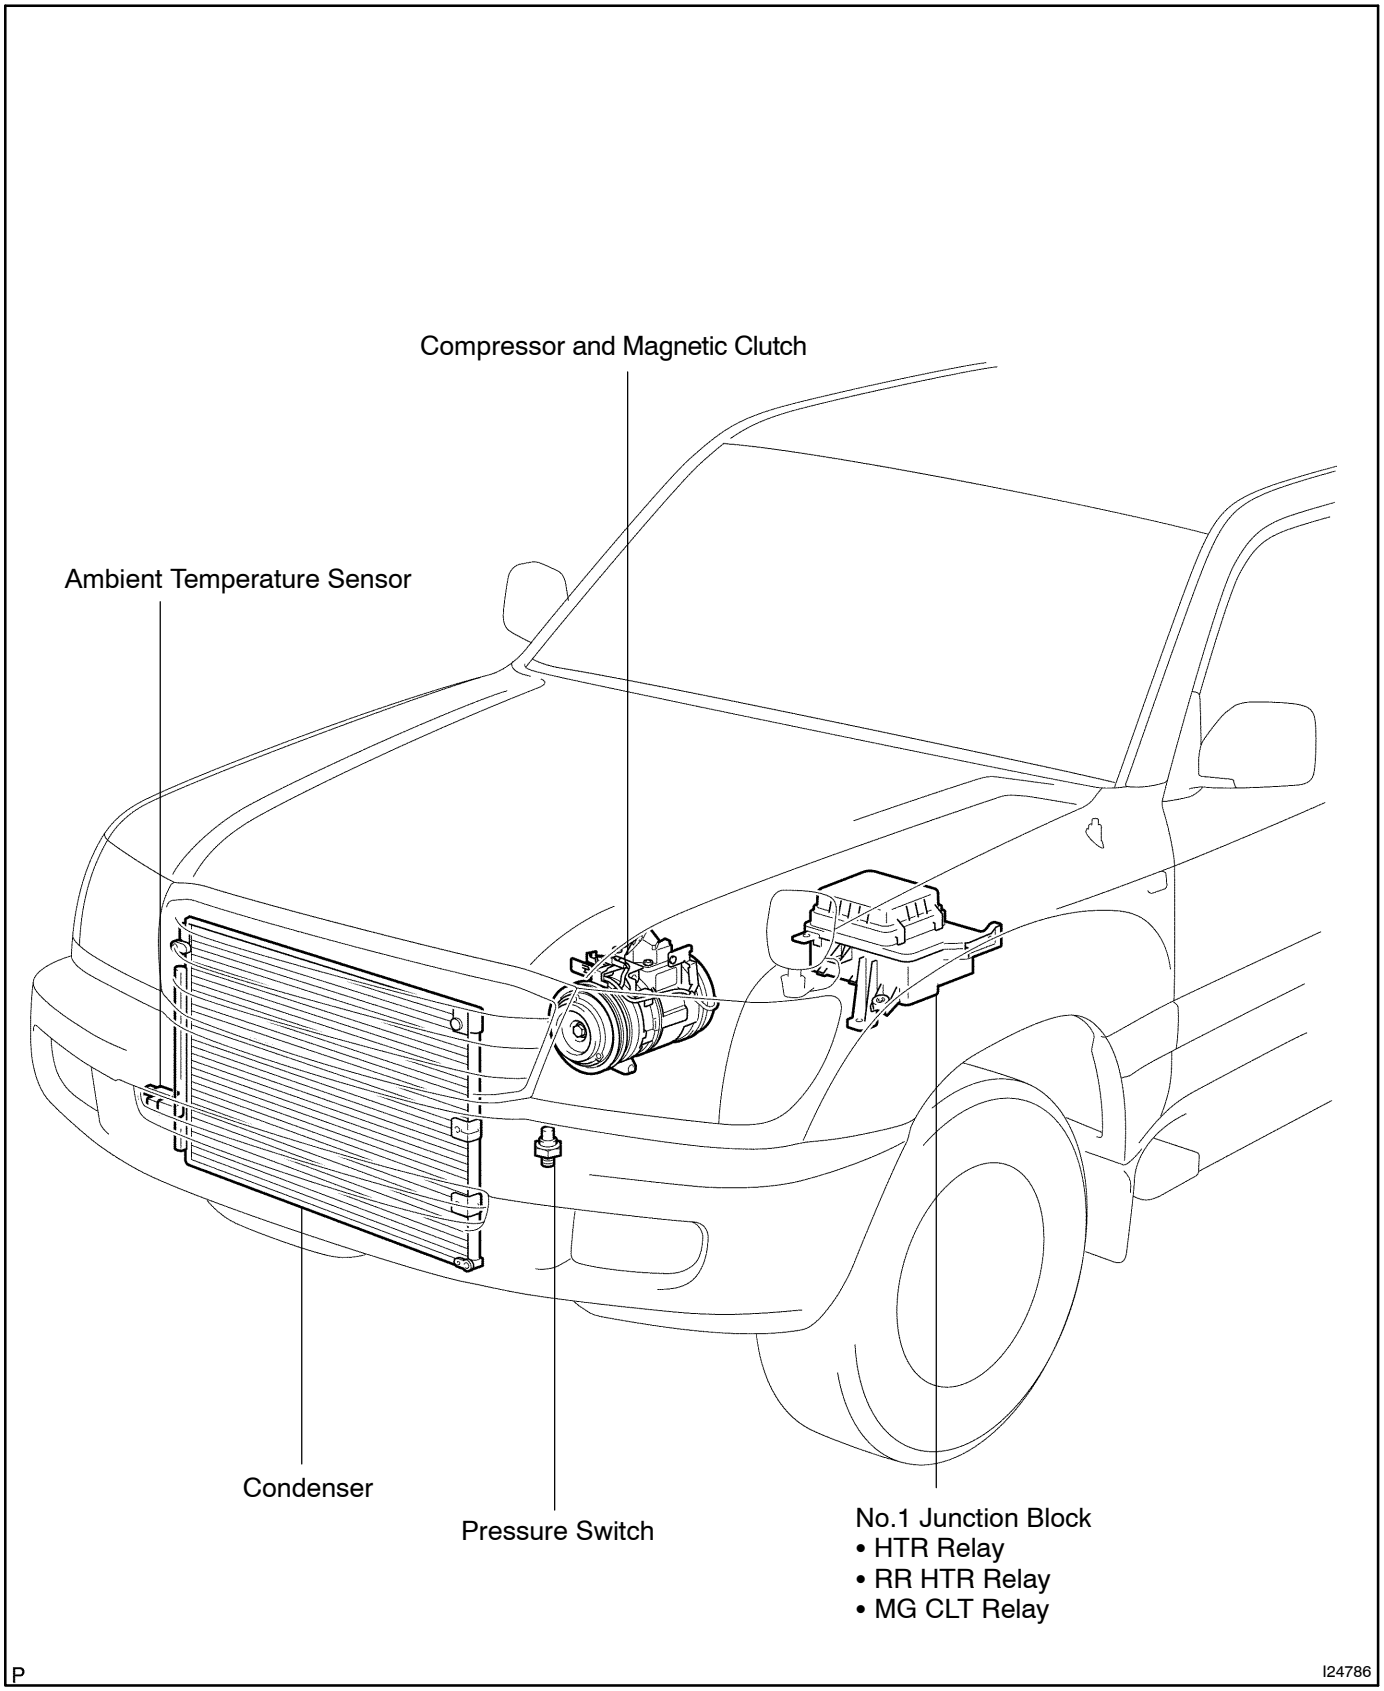

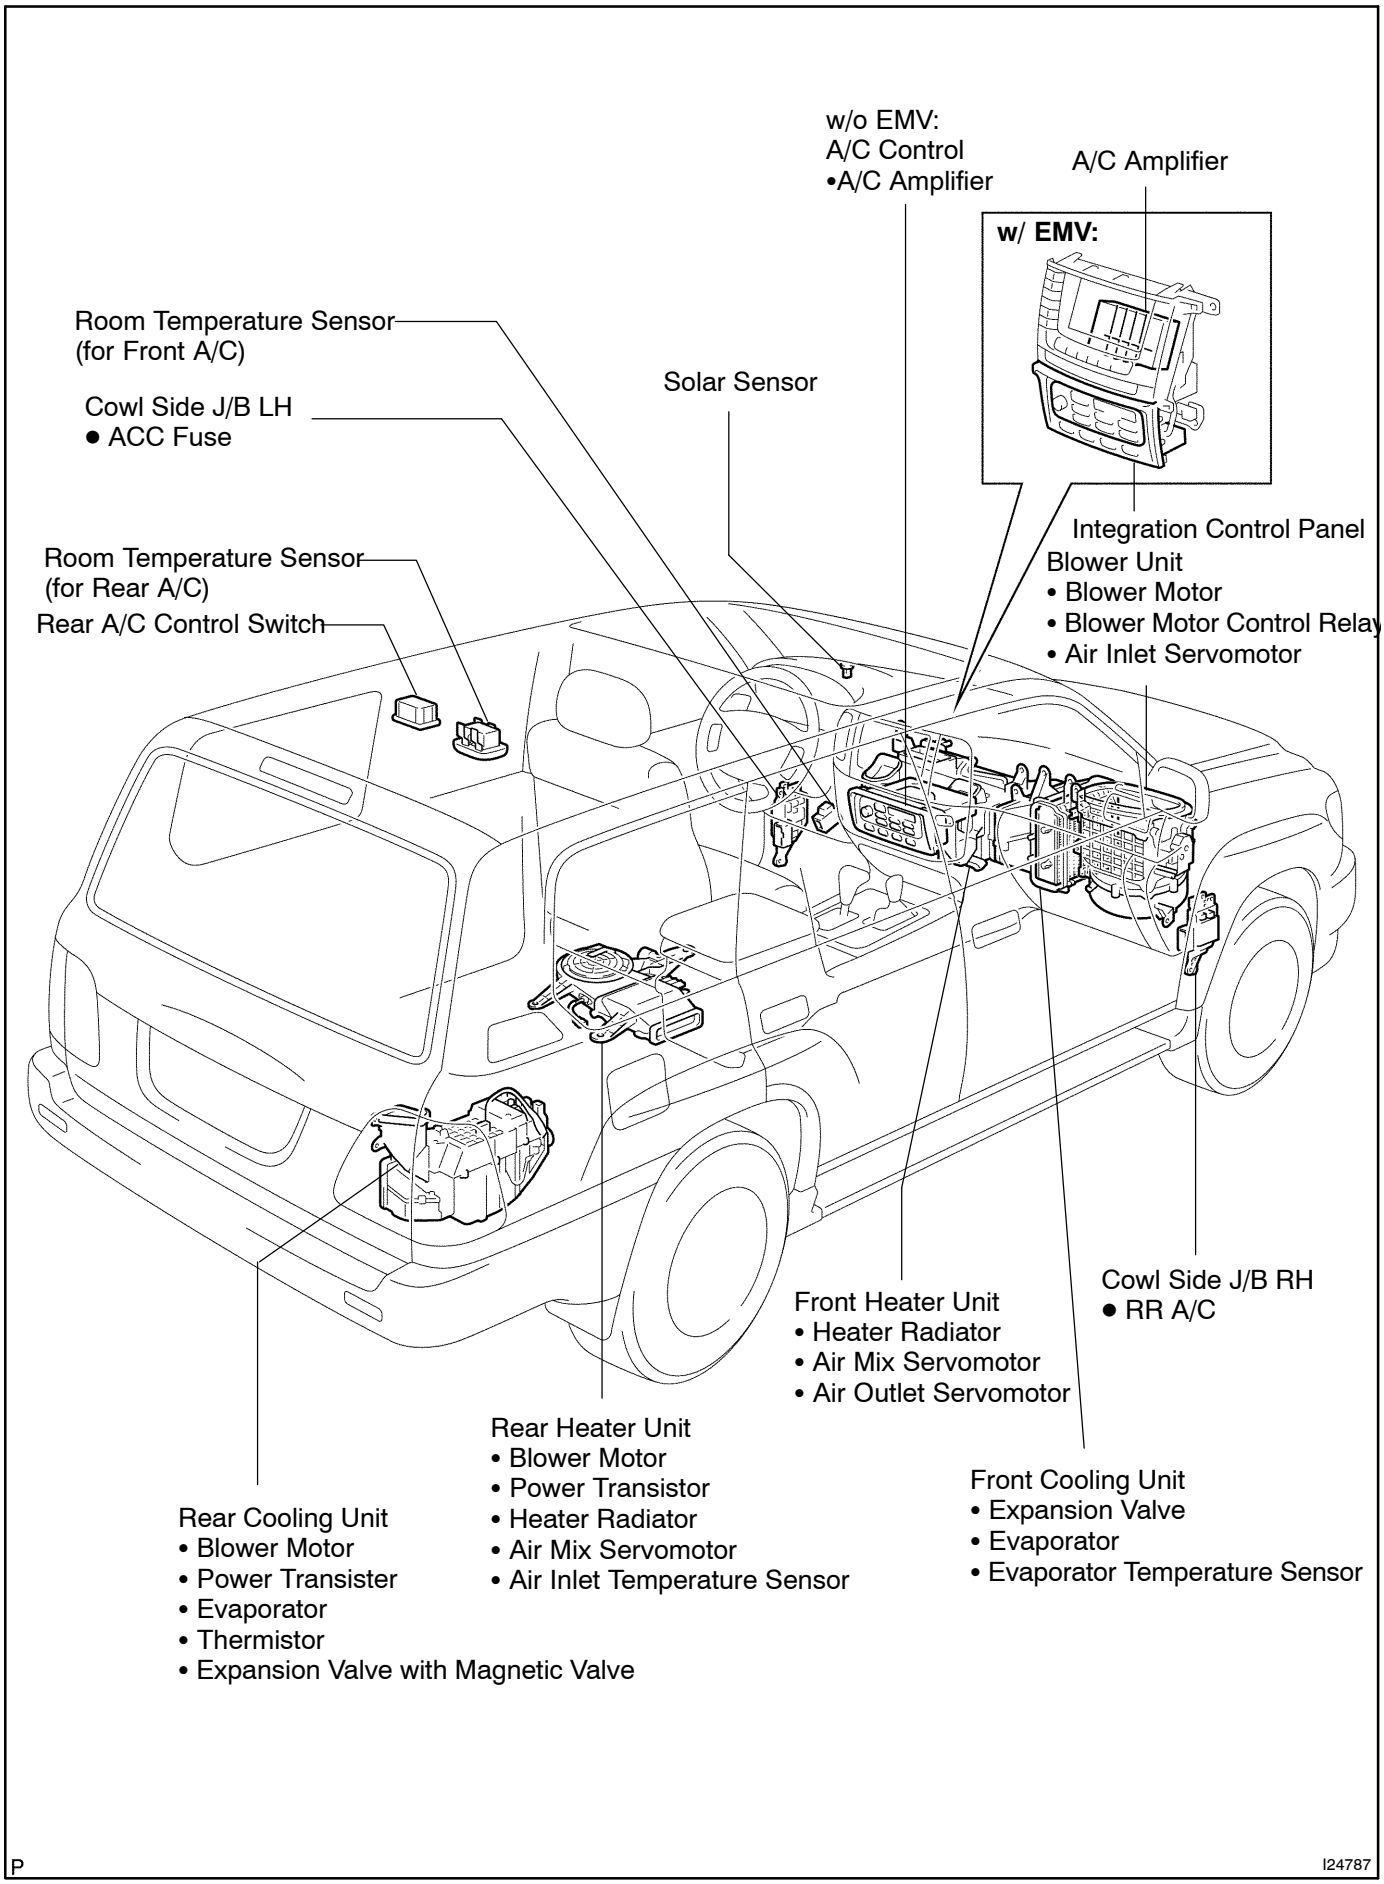
w/o EMV:
A/C Control
•A/C Amplifier
A/C Amplifier
w/ EMV:
Room Temperature Sensor
(for Front A/C)
Solar Sensor
Cowl Side J/B LH
● ACC Fuse
Integration Control Panel
Blower Unit
• Blower Motor
• Blower Motor Control Relay
• Air Inlet Servomotor
Room Temperature Sensor
(for Rear A/C)
Rear A/C Control Switch
Cowl Side J/B RH
● RR A/C
Front Heater Unit
• Heater Radiator
• Air Mix Servomotor
• Air Outlet Servomotor
Rear Heater Unit
• Blower Motor
• Power Transistor
• Heater Radiator
• Air Mix Servomotor
• Air Inlet Temperature Sensor
Front Cooling Unit
• Expansion Valve
• Evaporator
• Evaporator Temperature Sensor
Rear Cooling Unit
• Blower Motor
• Power Transister
• Evaporator
• Thermistor
• Expansion Valve with Magnetic Valve
P
I24787