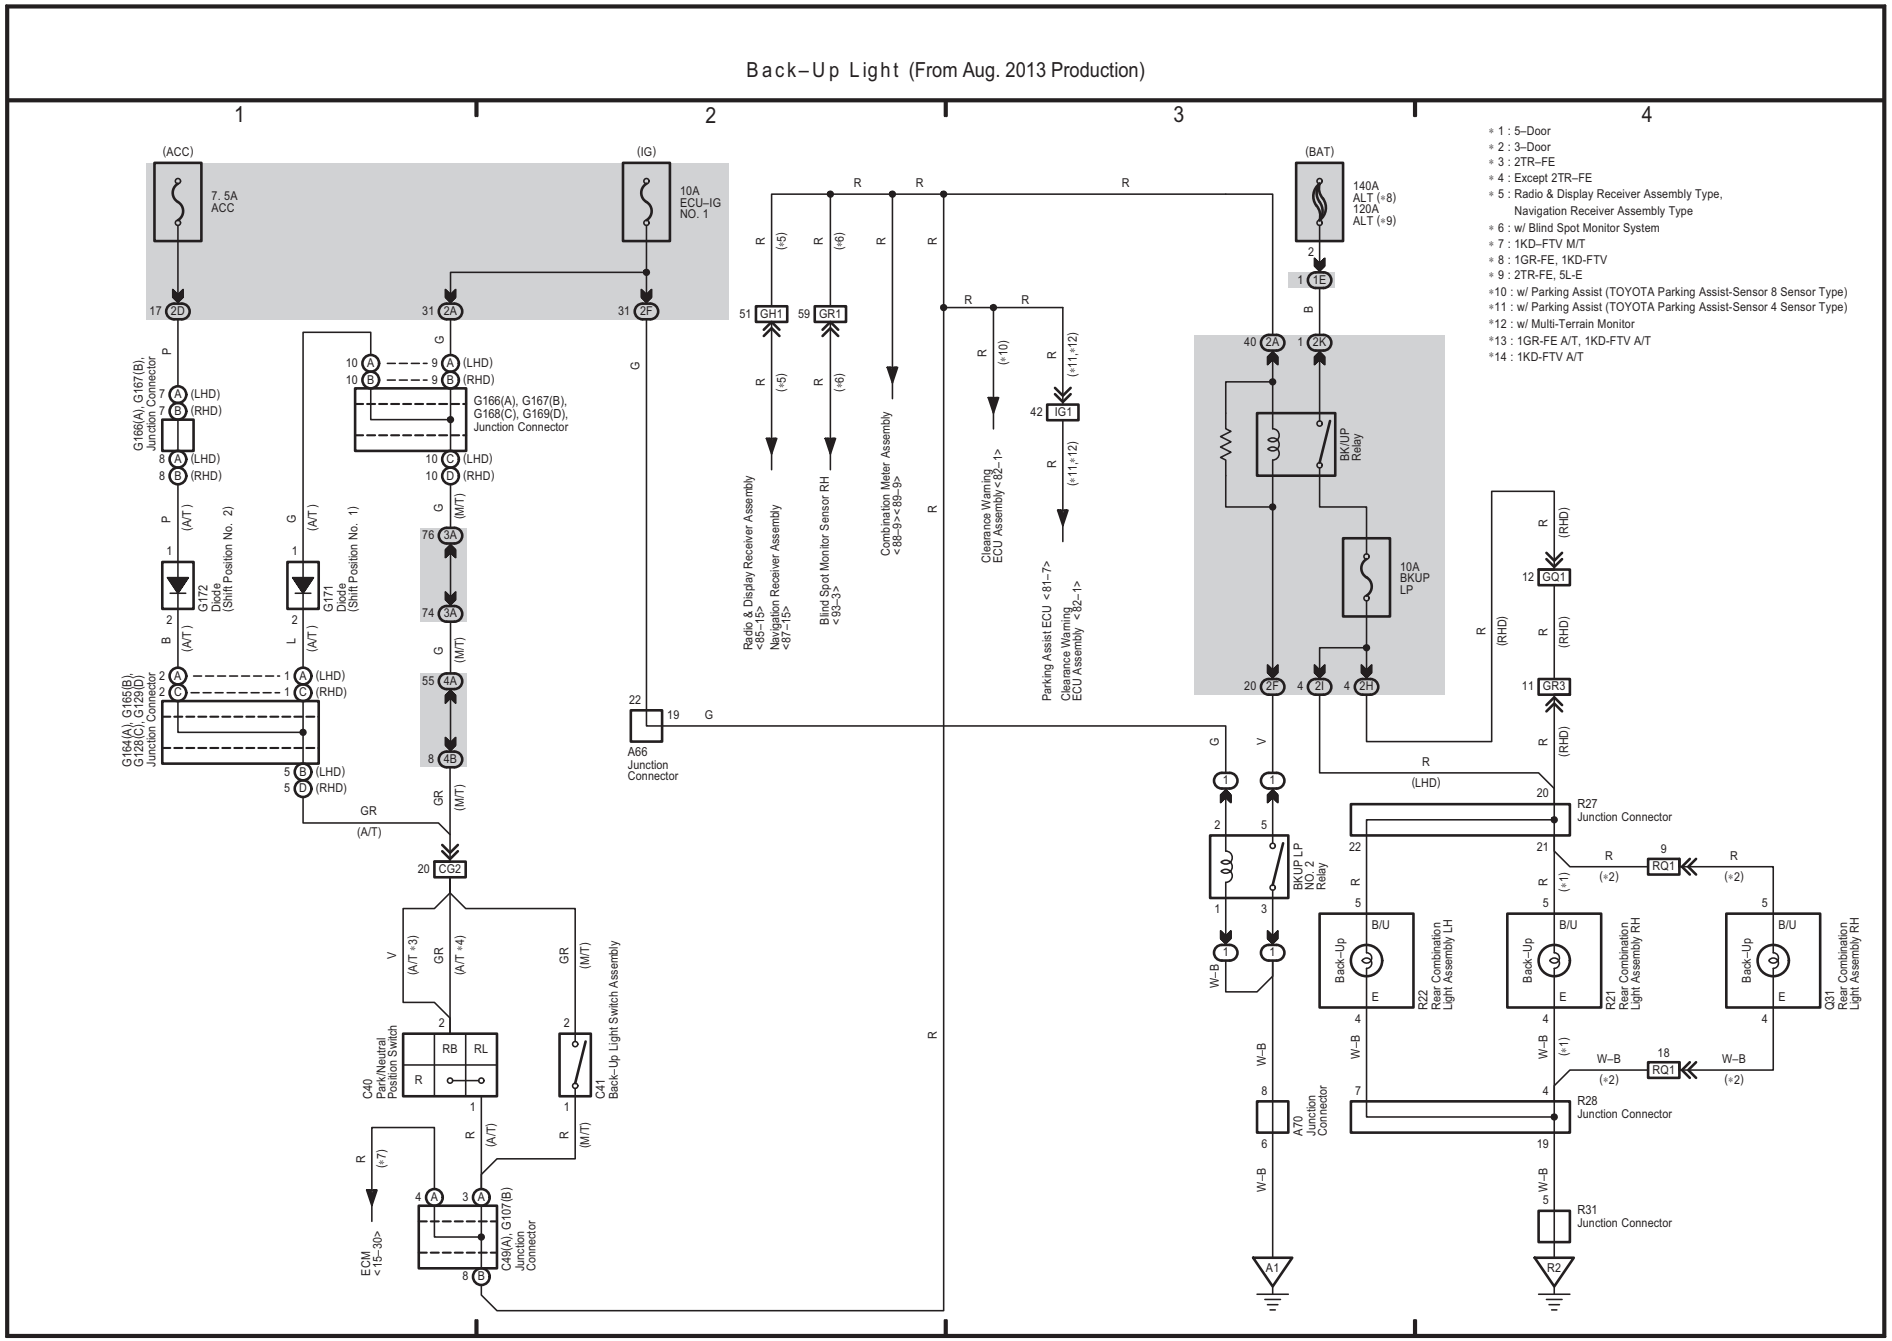
Back–Up Light (From Aug. 2013 Production)
1
2
3
4
(ACC)
7. 5A
ACC
(IG)
10A
ECU–IG
NO. 1
(BAT)
140A
ALT (*8)
120A
ALT (*9)
* 1 : 5–Door
* 2 : 3–Door
* 3 : 2TR–FE
* 4 : Except 2TR–FE
* 5 : Radio & Display Receiver Assembly Type,
Navigation Receiver Assembly Type
* 6 : w/ Blind Spot Monitor System
* 7 : 1KD–FTV M/T
* 8 : 1GR–FE, 1KD–FTV
* 9 : 2TR–FE, 5L–E
*10 : w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
*11 : w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
*12 : w/ Multi-Terrain Monitor
*13 : 1GR-FE A/T, 1KD-FTV A/T
*14 : 1KD-FTV A/T
G166(A), G167(B),
Junction Connector
G166(A), G167(B),
G168(C), G169(D),
Junction Connector
G172
Diode
(Shift Position No. 2)
G171
Diode
(Shift Position No. 1)
G164(A), G165(B),
G128(C), G129(D)
Junction Connector
A66
Junction
Connector
Radio & Display Receiver Assembly
<85–15>
Navigation Receiver Assembly
<87–15>
Blind Spot Monitor Sensor RH
<93–3>
Combination Meter Assembly
<88–9><89–9>
Clearance Warning
ECU Assembly<82–1>
Parking Assist ECU <81–7>
Clearance Warning
ECU Assembly <82–1>
BK/UP
Relay
10A
BKUP
LP
BKUP LP
NO. 2
Relay
R27
Junction Connector
R28
Junction Connector
R31
Junction Connector
A70
Junction
Connector
C40
Park/Neutral
Position Switch
C41
Back–Up Light Switch Assembly
C49(A), G107(B)
Junction
Connector
ECM
<15–30>
R22
Rear Combination
Light Assembly LH
R21
Rear Combination
Light Assembly RH
Q31
Rear Combination
Light Assembly RH
A1
R2