Position of Parts in Engine Compartment <LHD 1KD-FTV>

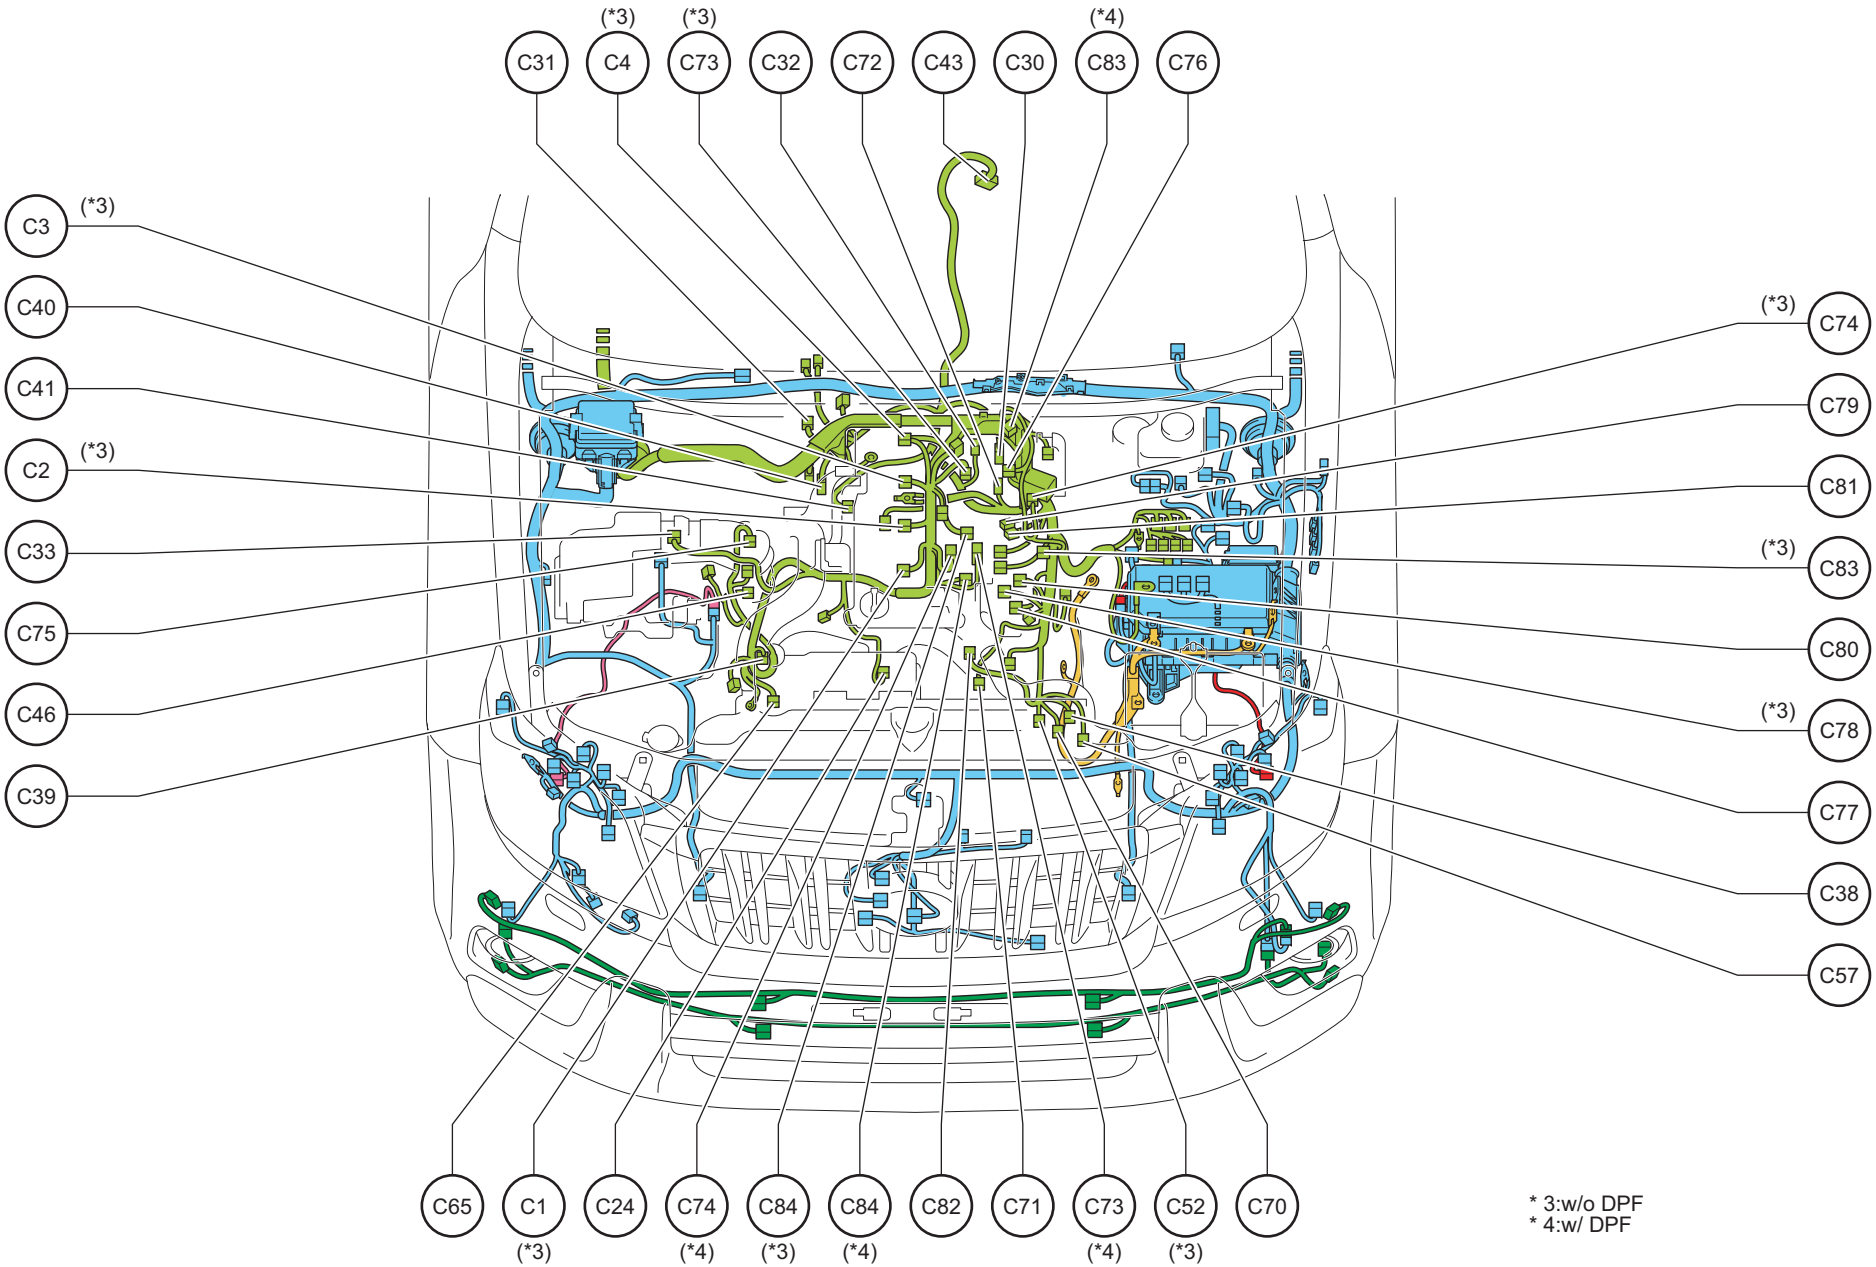

* 3:w/o DPF
* 4:w/ DPF

C 1 Fuel Injector Assembly No. 1
C 2 Fuel Injector Assembly No. 2
C 3 Fuel Injector Assembly No. 3
C 4 Fuel Injector Assembly No. 4
C 24 E.F.I. Engine Coolant Temperature Sensor
C 30 Electronically Controlled Transmission Solenoid
C 31 Transmission Revolution Sensor (Counter Gear)
C 32 Transmission Revolution Sensor (Turbine)
C 33 Intake Mass Air Flow Meter Sub-Assembly
C 38 Vane Pump Assembly
C 39 Cooler Compressor Assembly
C 40 Park/Neutral Position Switch
C 41 Back-Up Light Switch Assembly
C 43 Transfer Shift Actuator Assembly
C 46 Engine Oil Level Sensor
C 52 Cam Position Sensor
C 57 Power Steering Oil Pressure Switch
C 65 Generator Assembly
C 70 Crank Position Sensor
C 71 Suction Control Valve
C 72 Pressure Discharge Valve
C 73 Diesel Throttle Body Assembly
C 74 Diesel Throttle Body Assembly
C 75 DC Motor
C 76 Electric Vacuum Regulating Valve Assembly
C 77 VSV (for EGR Cut)
C 78 No. 2 EGR Valve Assembly
C 79 VSV (for No. 2 Swirl Control Valve)
C 80 VSV (for Engine Mounting)
C 81 VSV (for No. 1 Swirl Control Valve)
C 82 Fuel Pressure Sensor
C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
C 84 Intake Air Temperature Sensor

C1
Gray



C2
Gray



C3
Gray



C4
Gray



C24
Black

C30
Gray

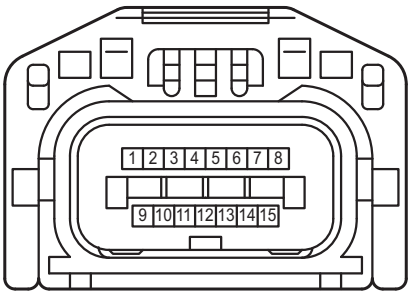

C31
Black

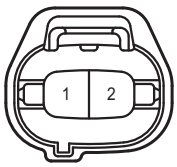

C32
Black

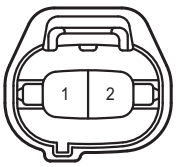

C33
Black

C38
Black

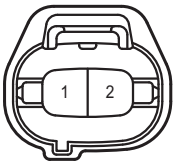

C39
Gray

C40
Gray

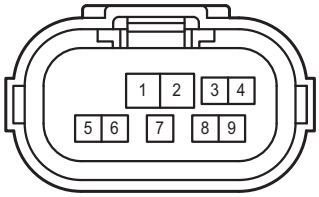

C41
Gray

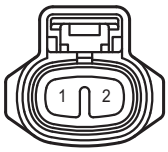

C43
Black

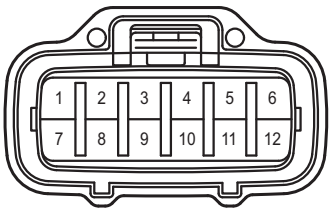

C46
Gray

C52
Black

C57
Black

C65
Black

C70
Gray

C71
Gray

C72
Black

C73
Black

C74
Black

C75
Black

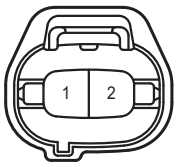

C76
Brown

C77
Brown

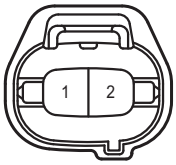

C78
Gray

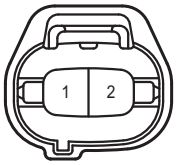

C79
Brown

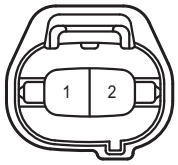

C80
Brown

C81
Blue

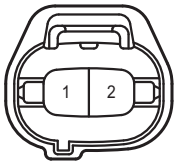

C82
Black

C83
Black

C84
Gray