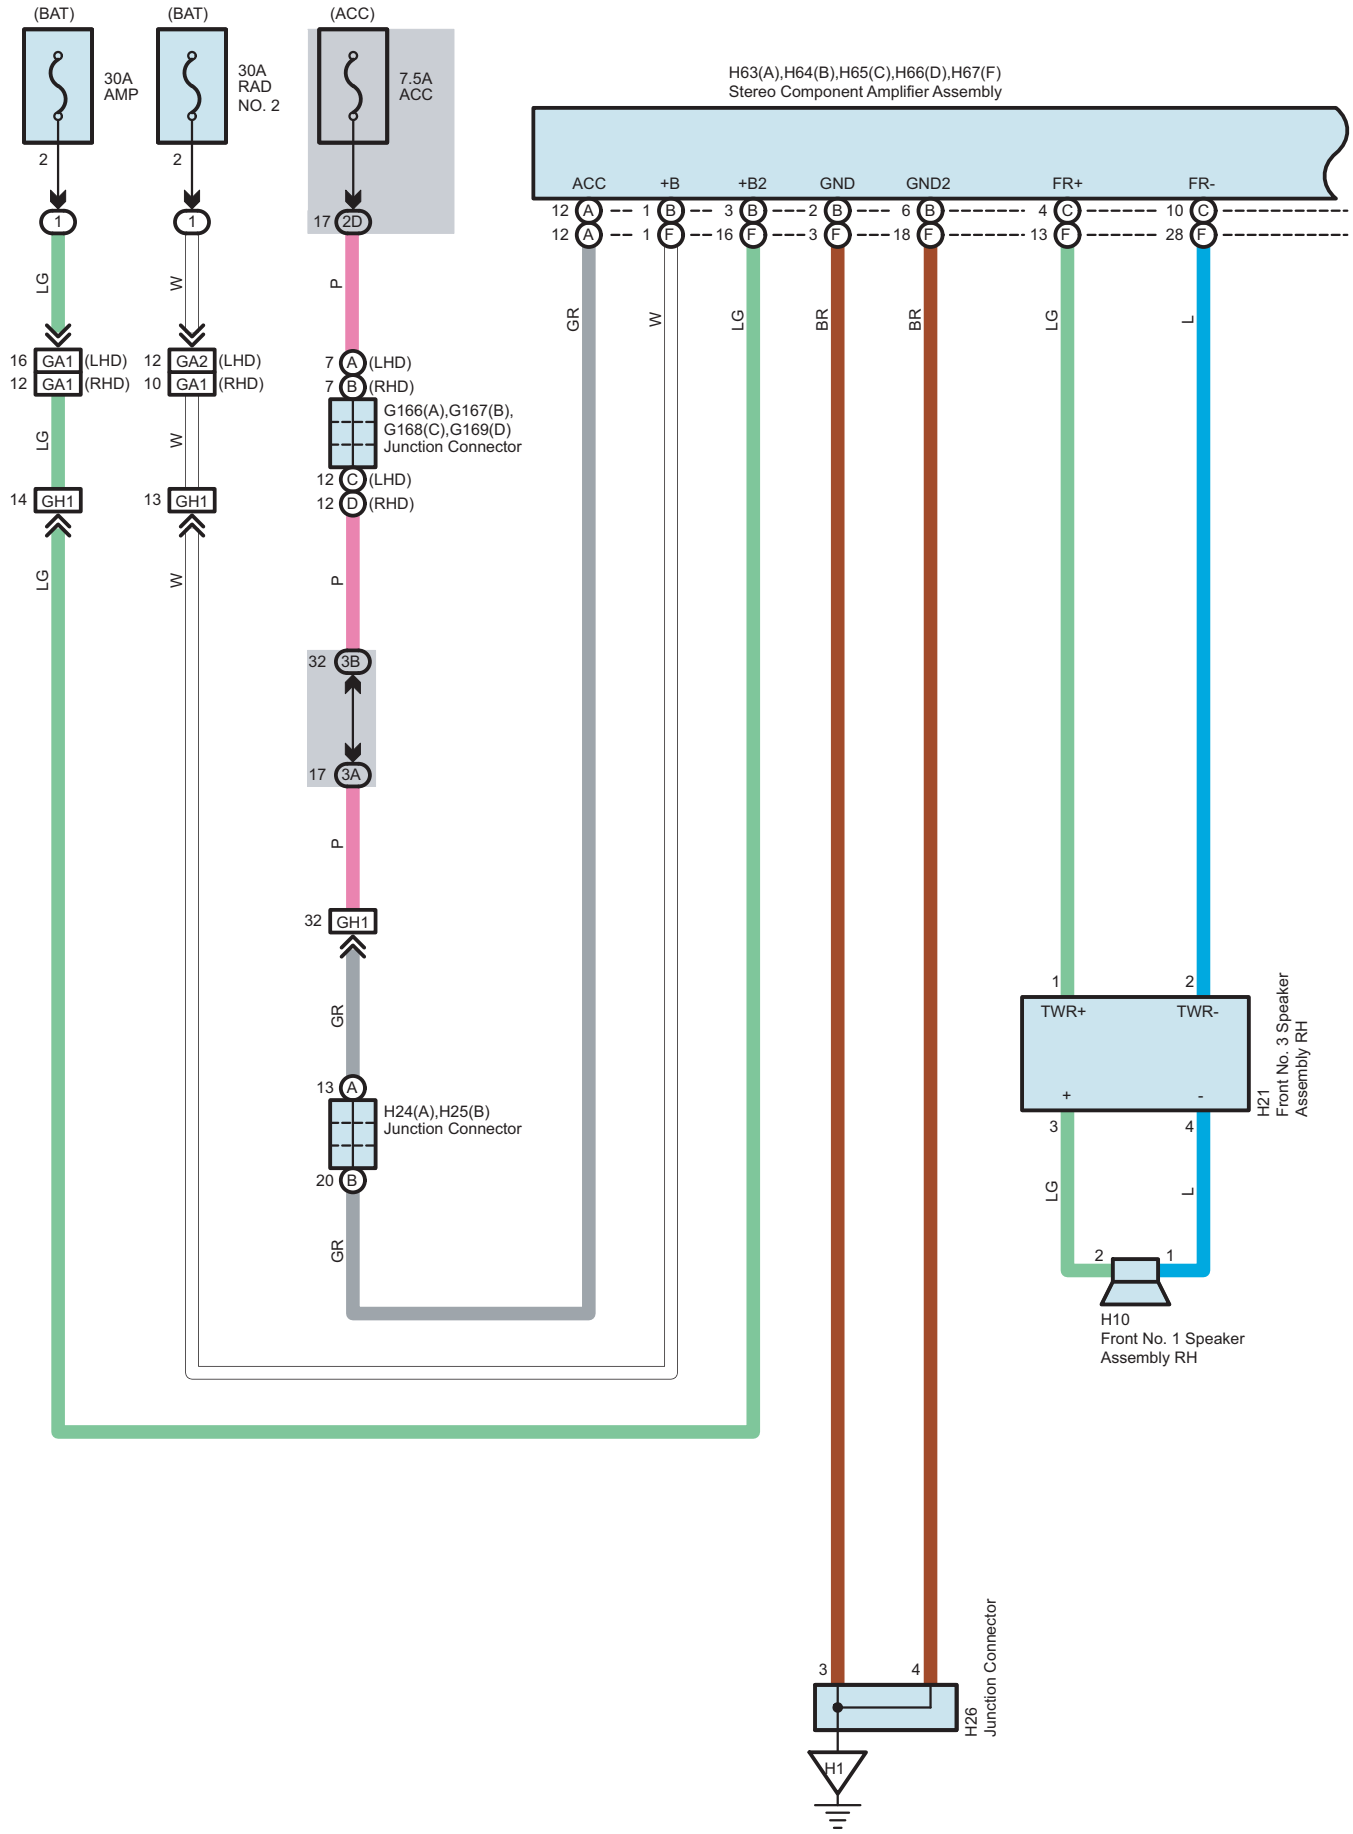
(BAT)
30A AMP
(BAT)
30A RAD NO. 2
(ACC)
7.5A ACC
H63(A),H64(B),H65(C),H66(D),H67(F)
Stereo Component Amplifier Assembly
ACC
+B
+B2
GND
GND2
FR+
FR-
GA1 (LHD)
GA1 (RHD)
GA2 (LHD)
GA1 (RHD)
GH1
G166(A),G167(B), G168(C),G169(D) Junction Connector
(LHD)
(RHD)
H24(A),H25(B) Junction Connector
TWR+
TWR-
H21 Front No. 3 Speaker Assembly RH
H10 Front No. 1 Speaker Assembly RH
H26 Junction Connector
H1

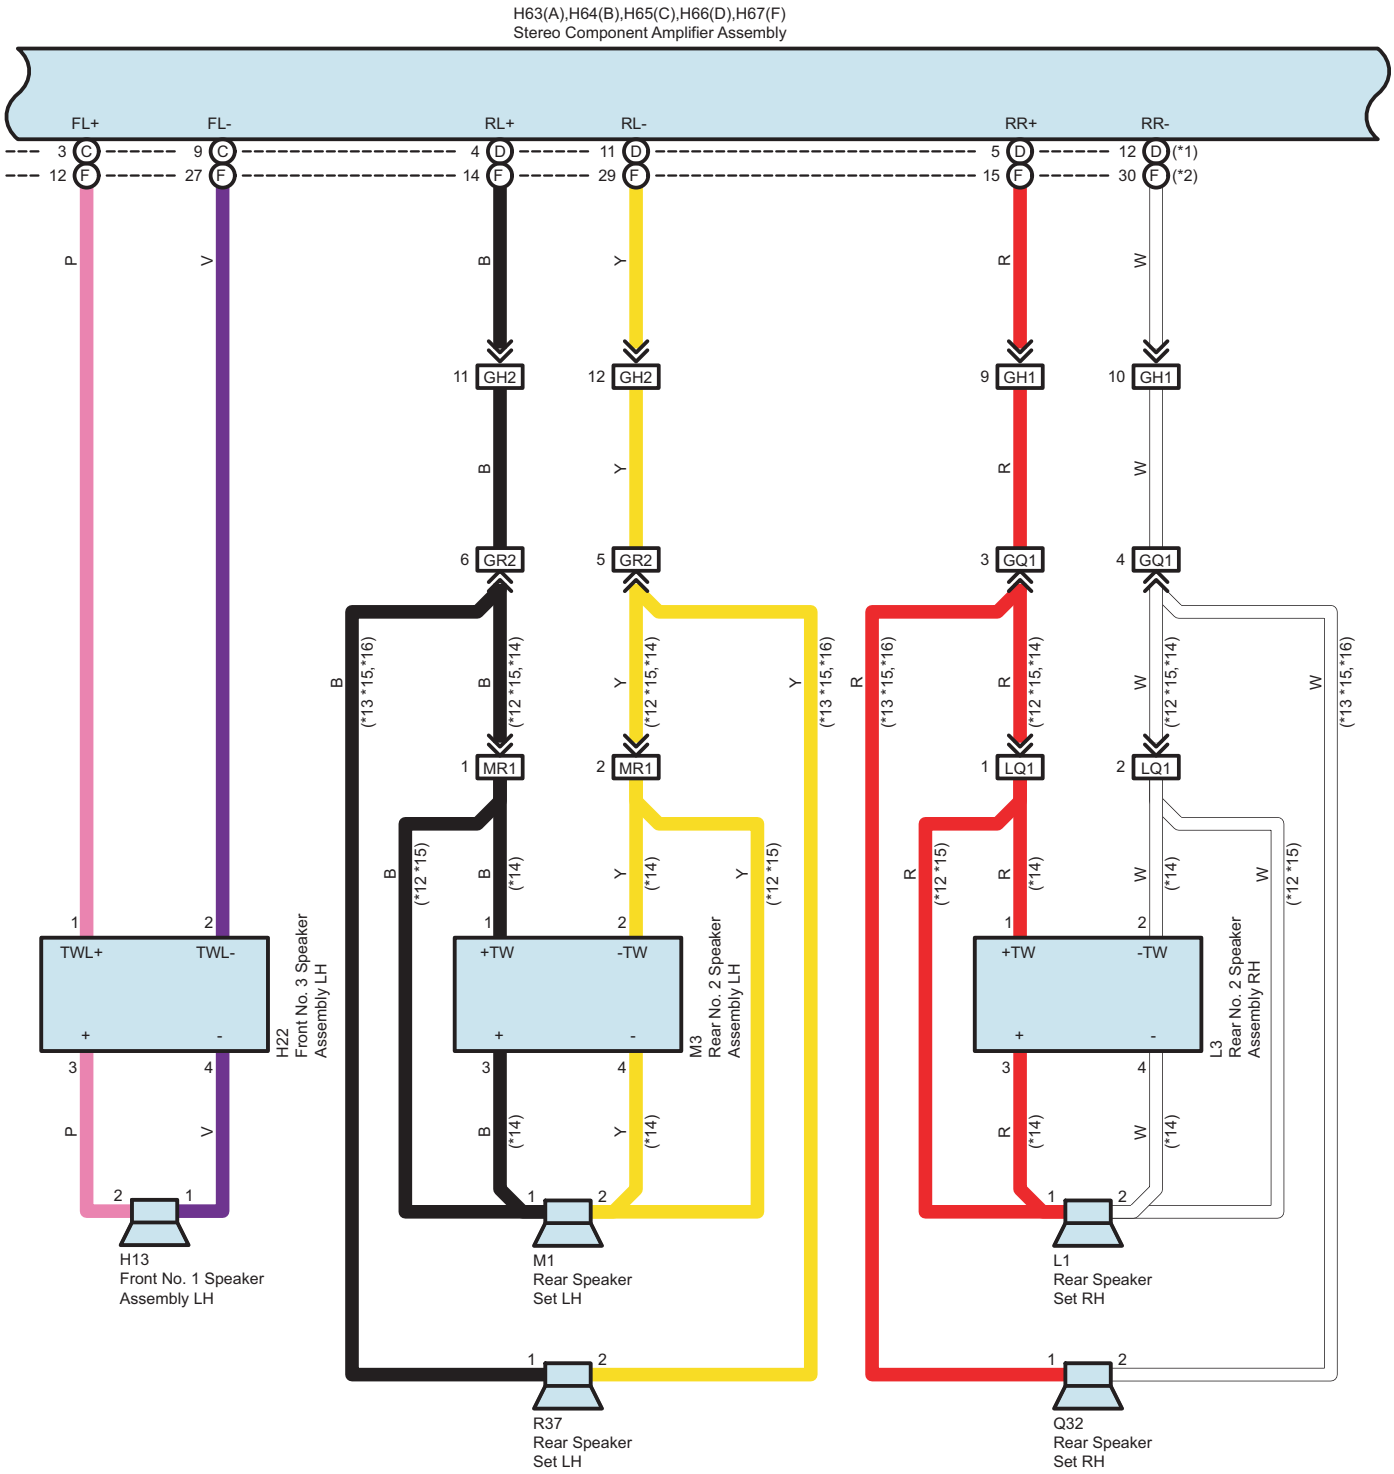

* 1 :JBL Type
* 2 :PIONEER Type
*12 :5-Door
*13 :3-Door
*14 :14 Speaker
*15 :9 Speaker
*16 :12 Speaker

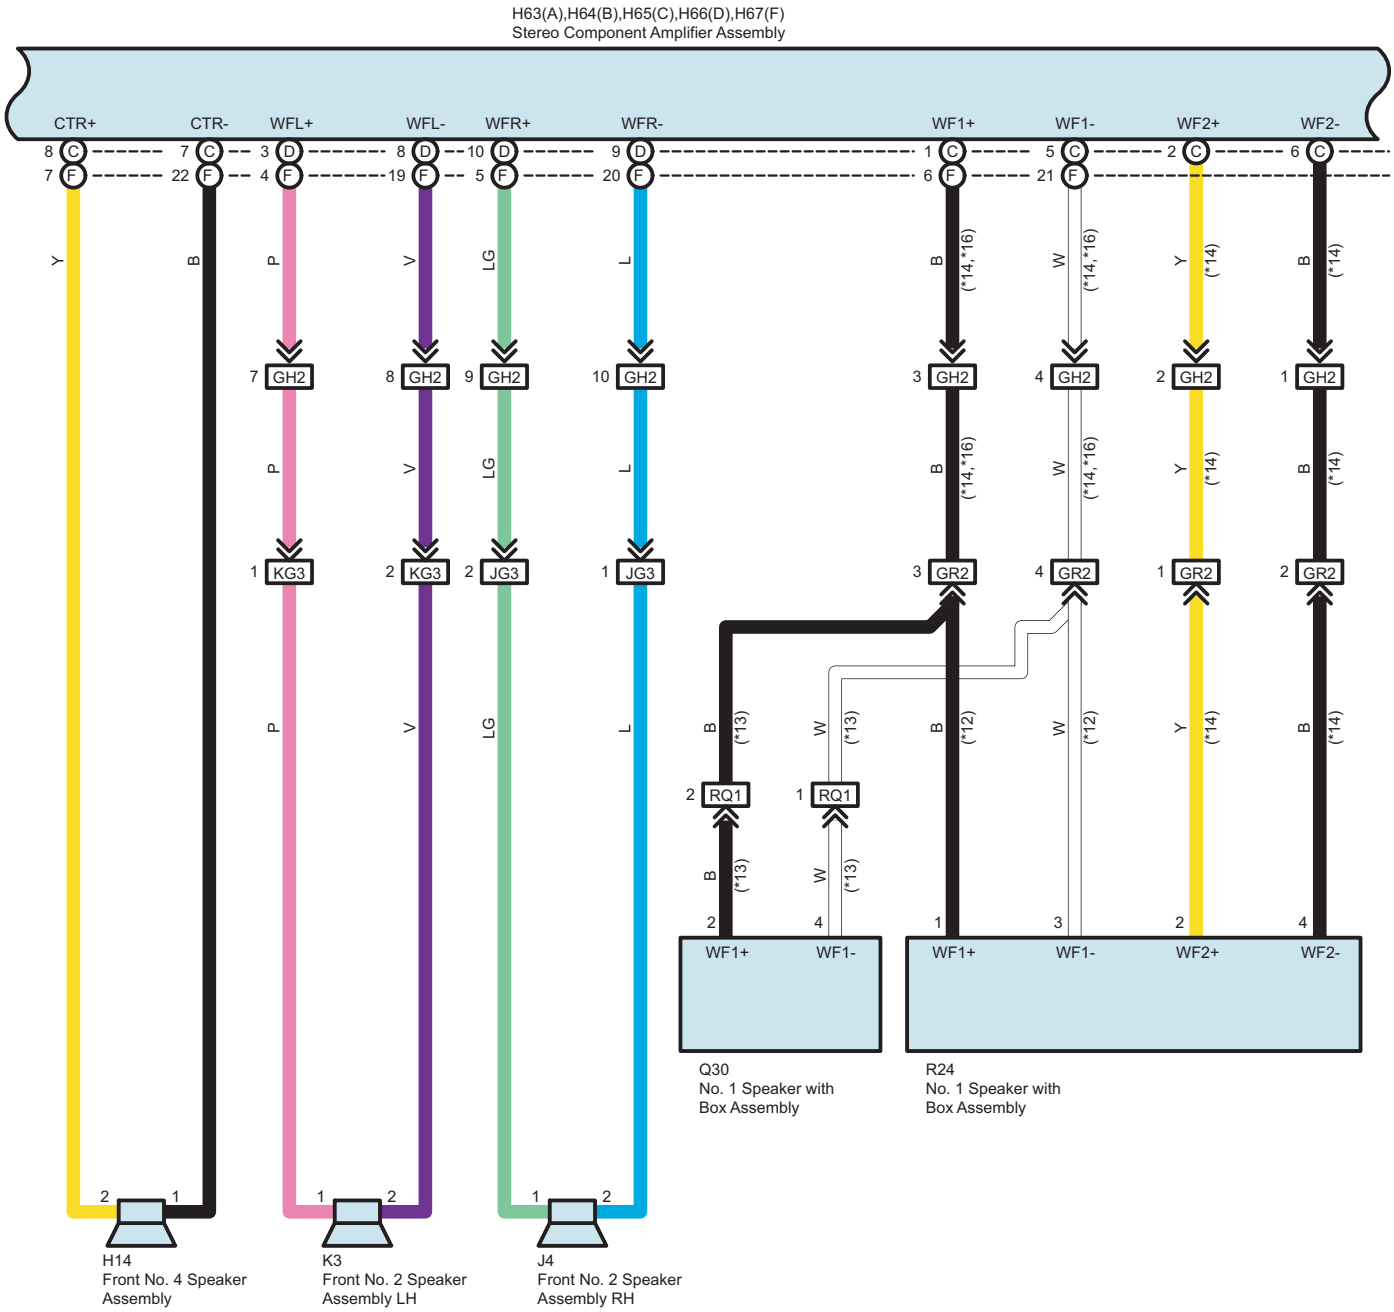

* 1 :JBL Type
* 2 :PIONEER Type
*12 :5-Door
*13 :3-Door
*14 :14 Speaker
*16 :12 Speaker

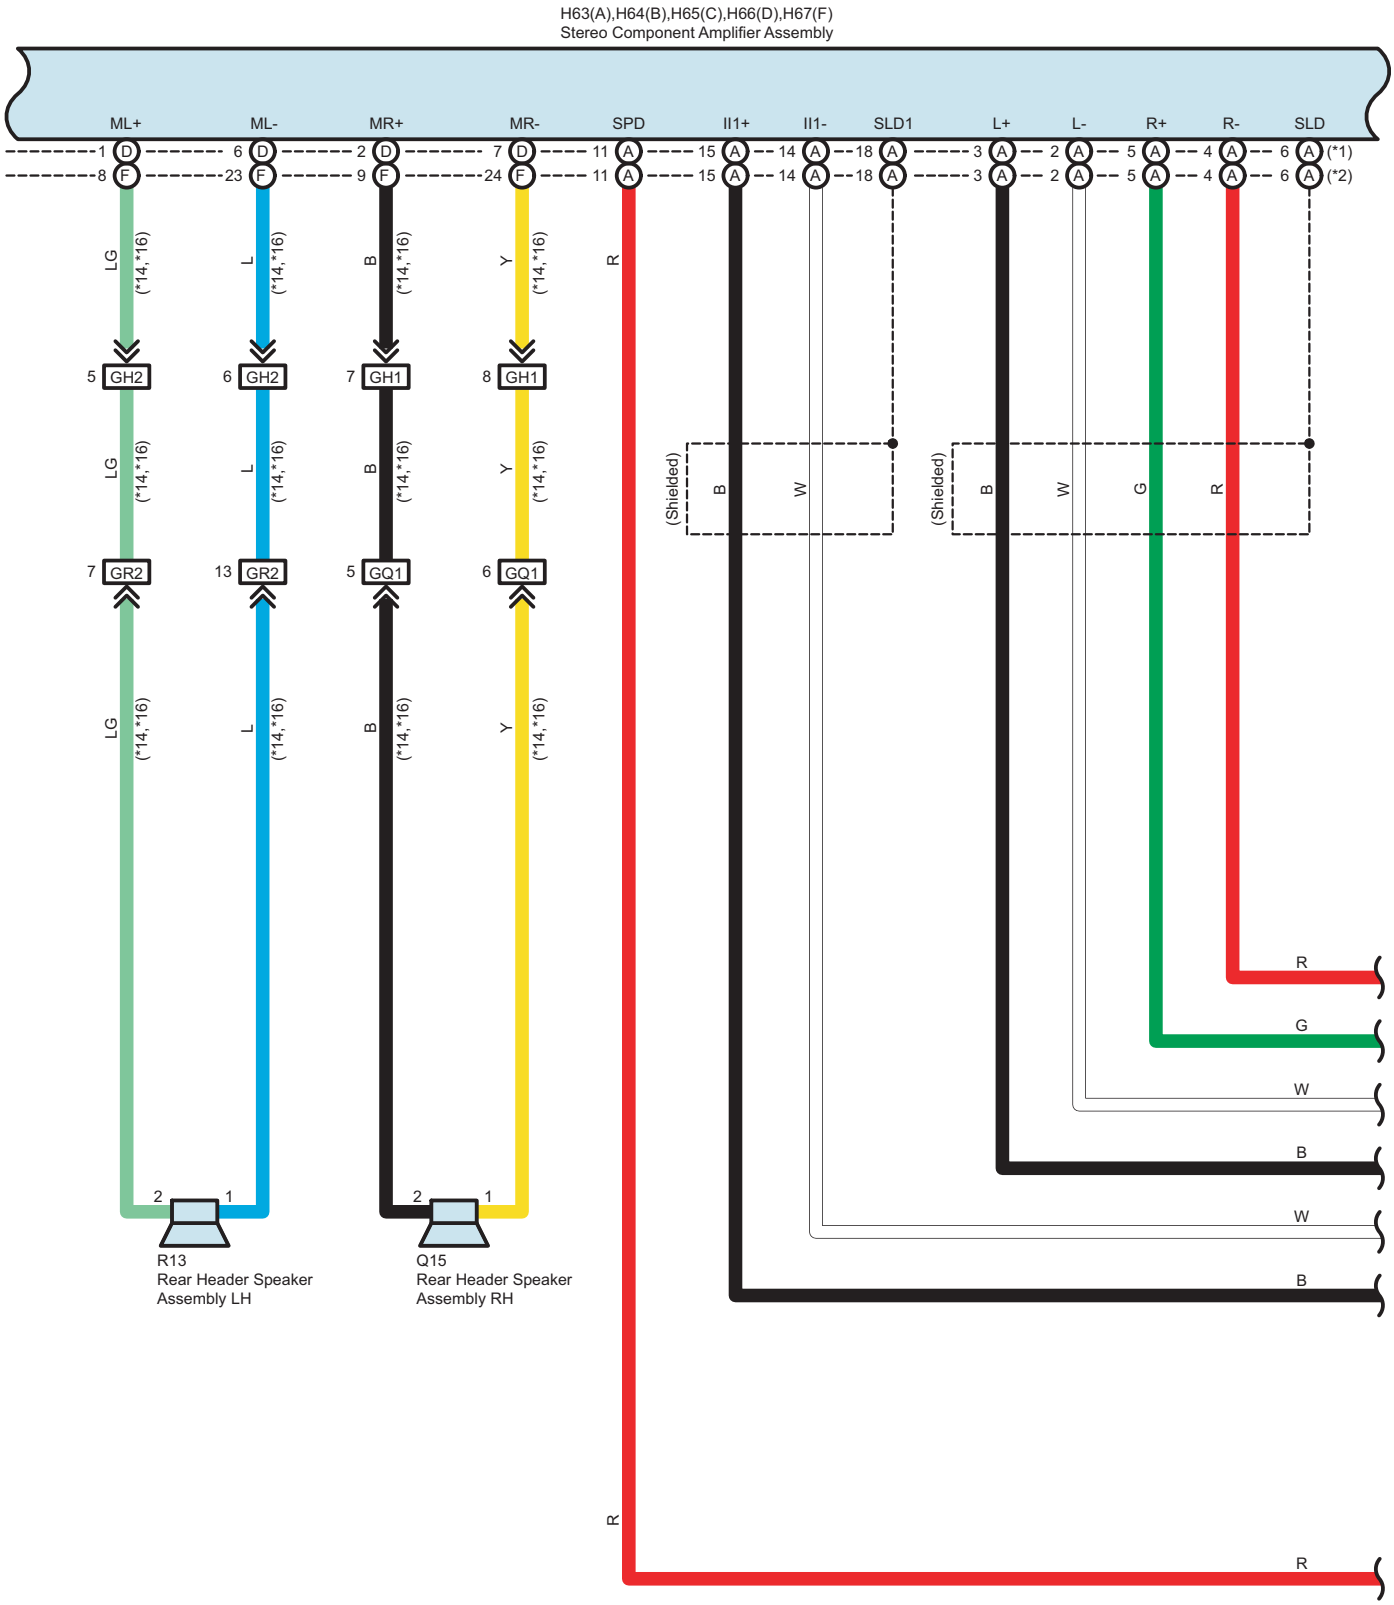
H63(A),H64(B),H65(C),H66(D),H67(F)
Stereo Component Amplifier Assembly
ML+
ML-
MR+
MR-
SPD
II1+
II1-
SLD1
L+
L-
R+
R-
SLD
GH2
GH1
GR2
GQ1
(Shielded)
R13
Rear Header Speaker
Assembly LH
Q15
Rear Header Speaker
Assembly RH

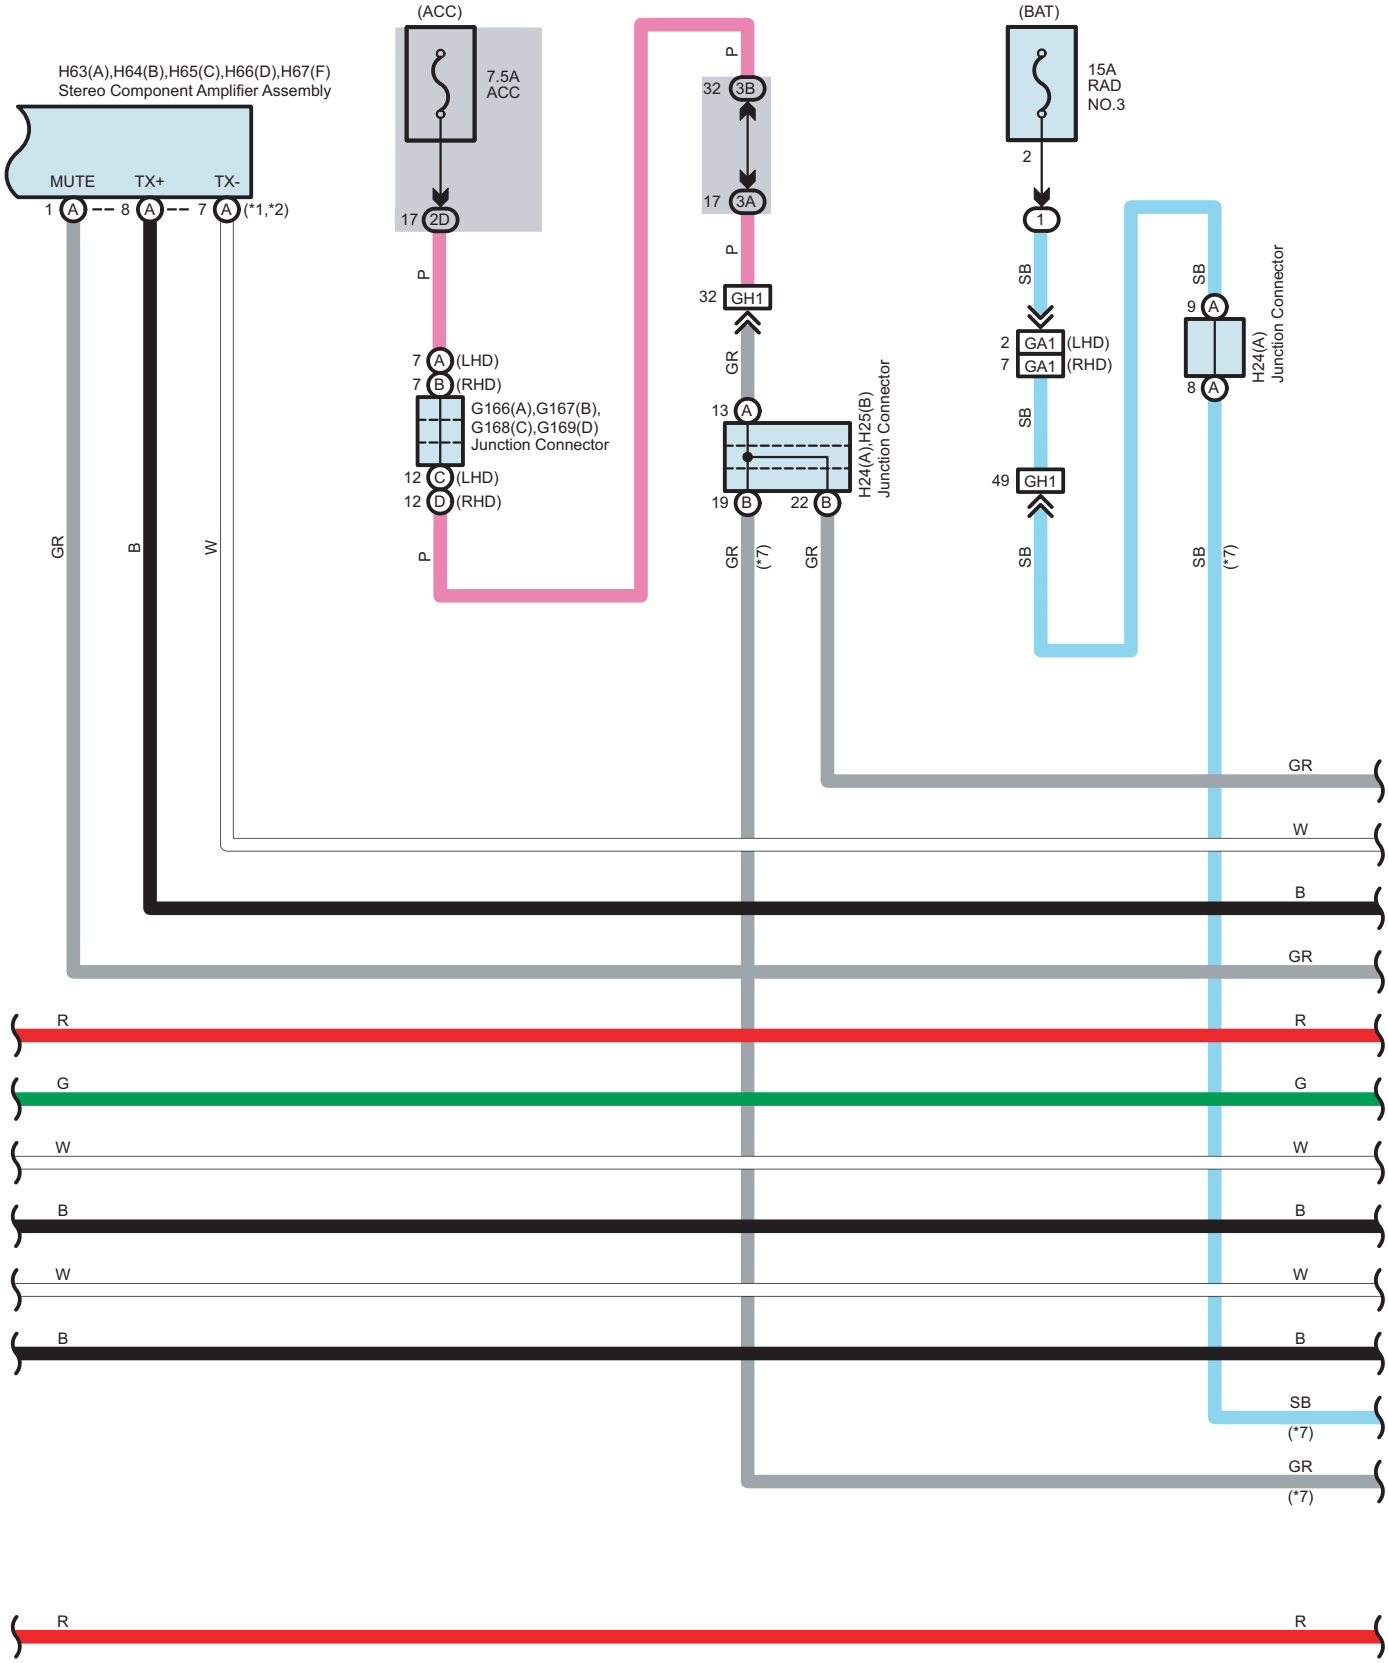

* 1 :JBL Type
* 2 :PIONEER Type
* 7 :w/ Rear Seat Entertainment

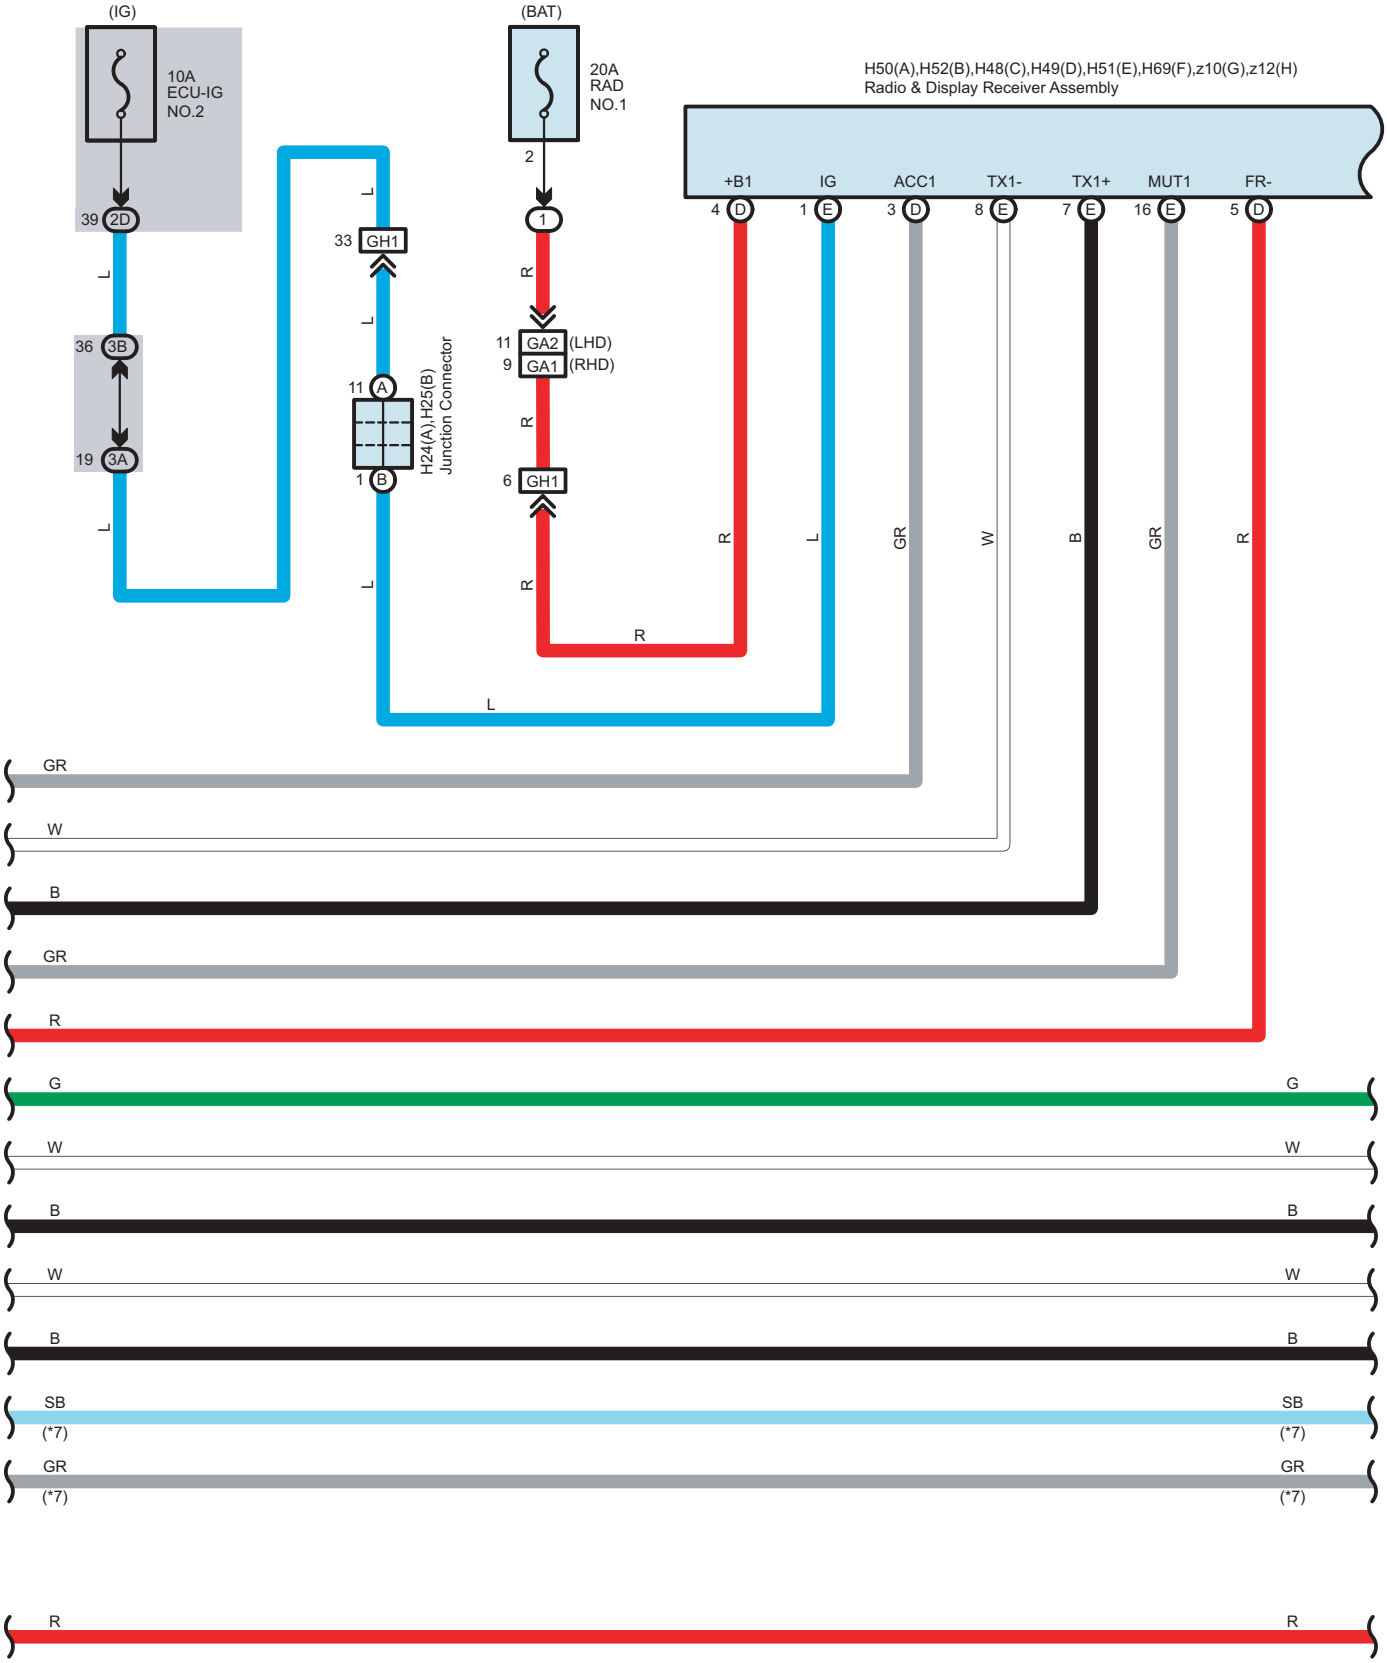
(IG)
10A
ECU-IG
NO.2
39 2D
36 3B
19 3A
33 GH1
11 A
1 B
H24(A),H25(B)
Junction Connector
(BAT)
20A
RAD
NO.1
2
1
11 GA2 (LHD)
9 GA1 (RHD)
6 GH1
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
+B1
IG
ACC1
TX1-
TX1+
MUT1
FR-
4 D
1 E
3 D
8 E
7 E
16 E
5 D
L
R
GR
W
B
G
SB
(*7)

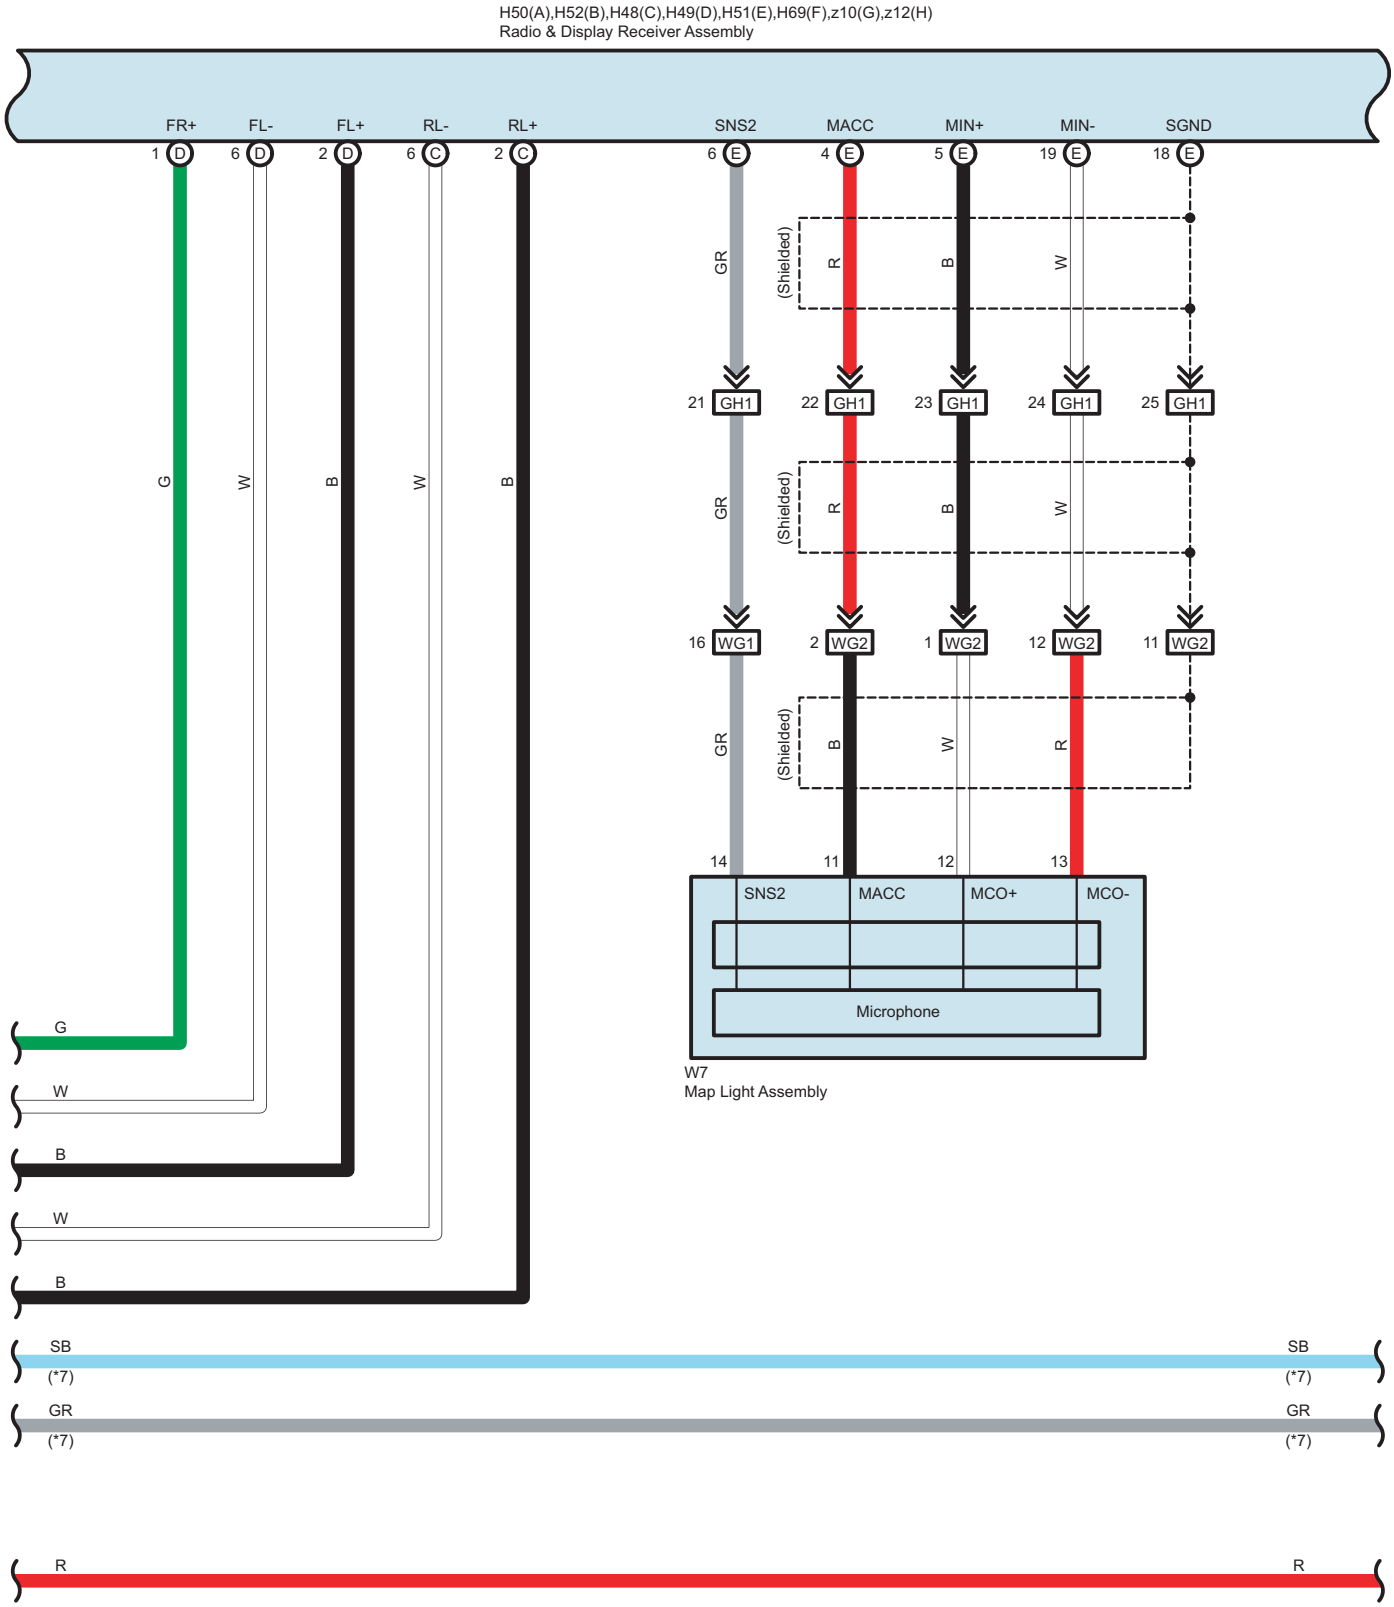
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
FR+
FL-
FL+
RL-
RL+
SNS2
MACC
MIN+
MIN-
SGND
1 D
6 D
2 D
6 C
2 C
6 E
4 E
5 E
19 E
18 E
GR
(Shielded)
R
B
W
21 GH1
22 GH1
23 GH1
24 GH1
25 GH1
G
W
B
W
B
16 WG1
2 WG2
1 WG2
12 WG2
11 WG2
14
11
12
13
SNS2
MACC
MCO+
MCO-
Microphone
W7
Map Light Assembly
G
W
B
W
B
SB
(*7)
GR
(*7)
R

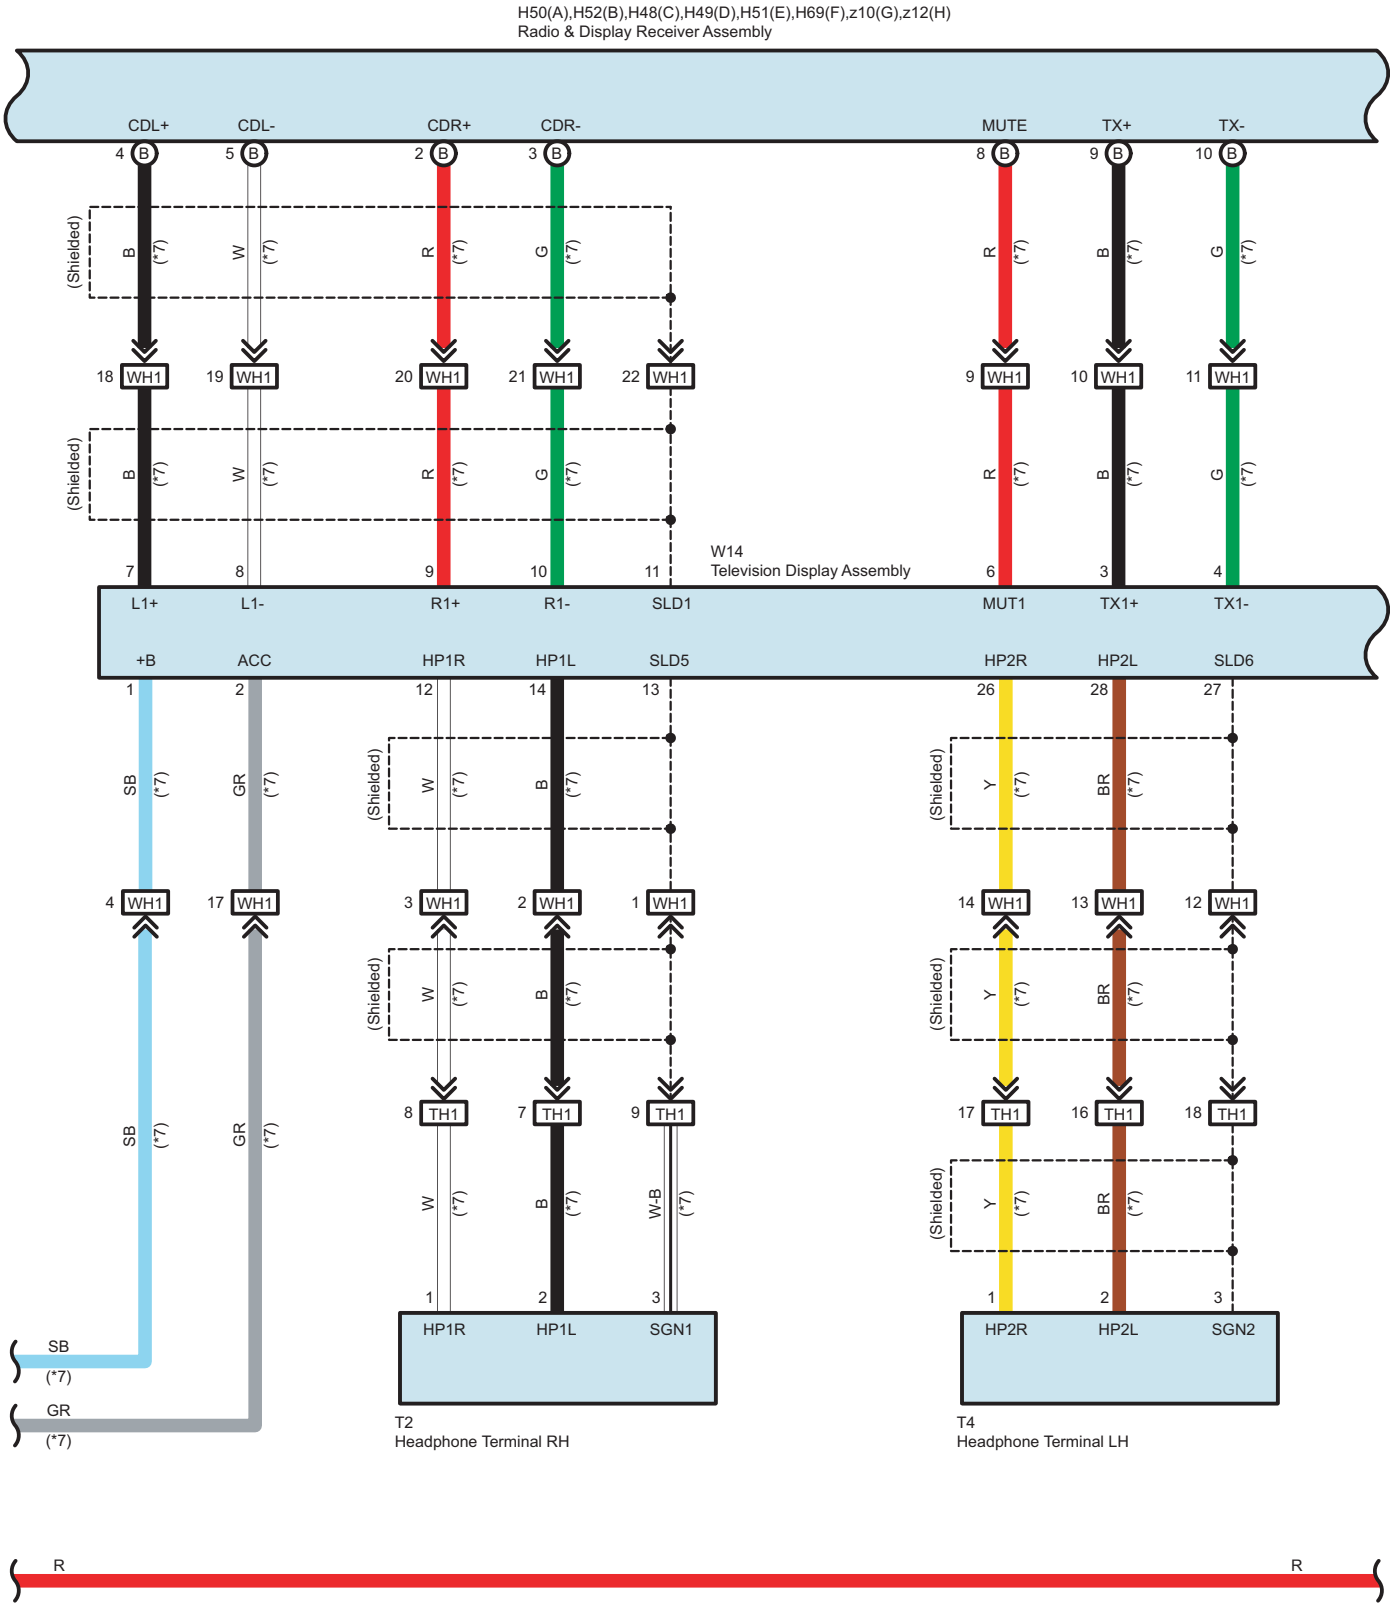

* 7 :w/ Rear Seat Entertainment

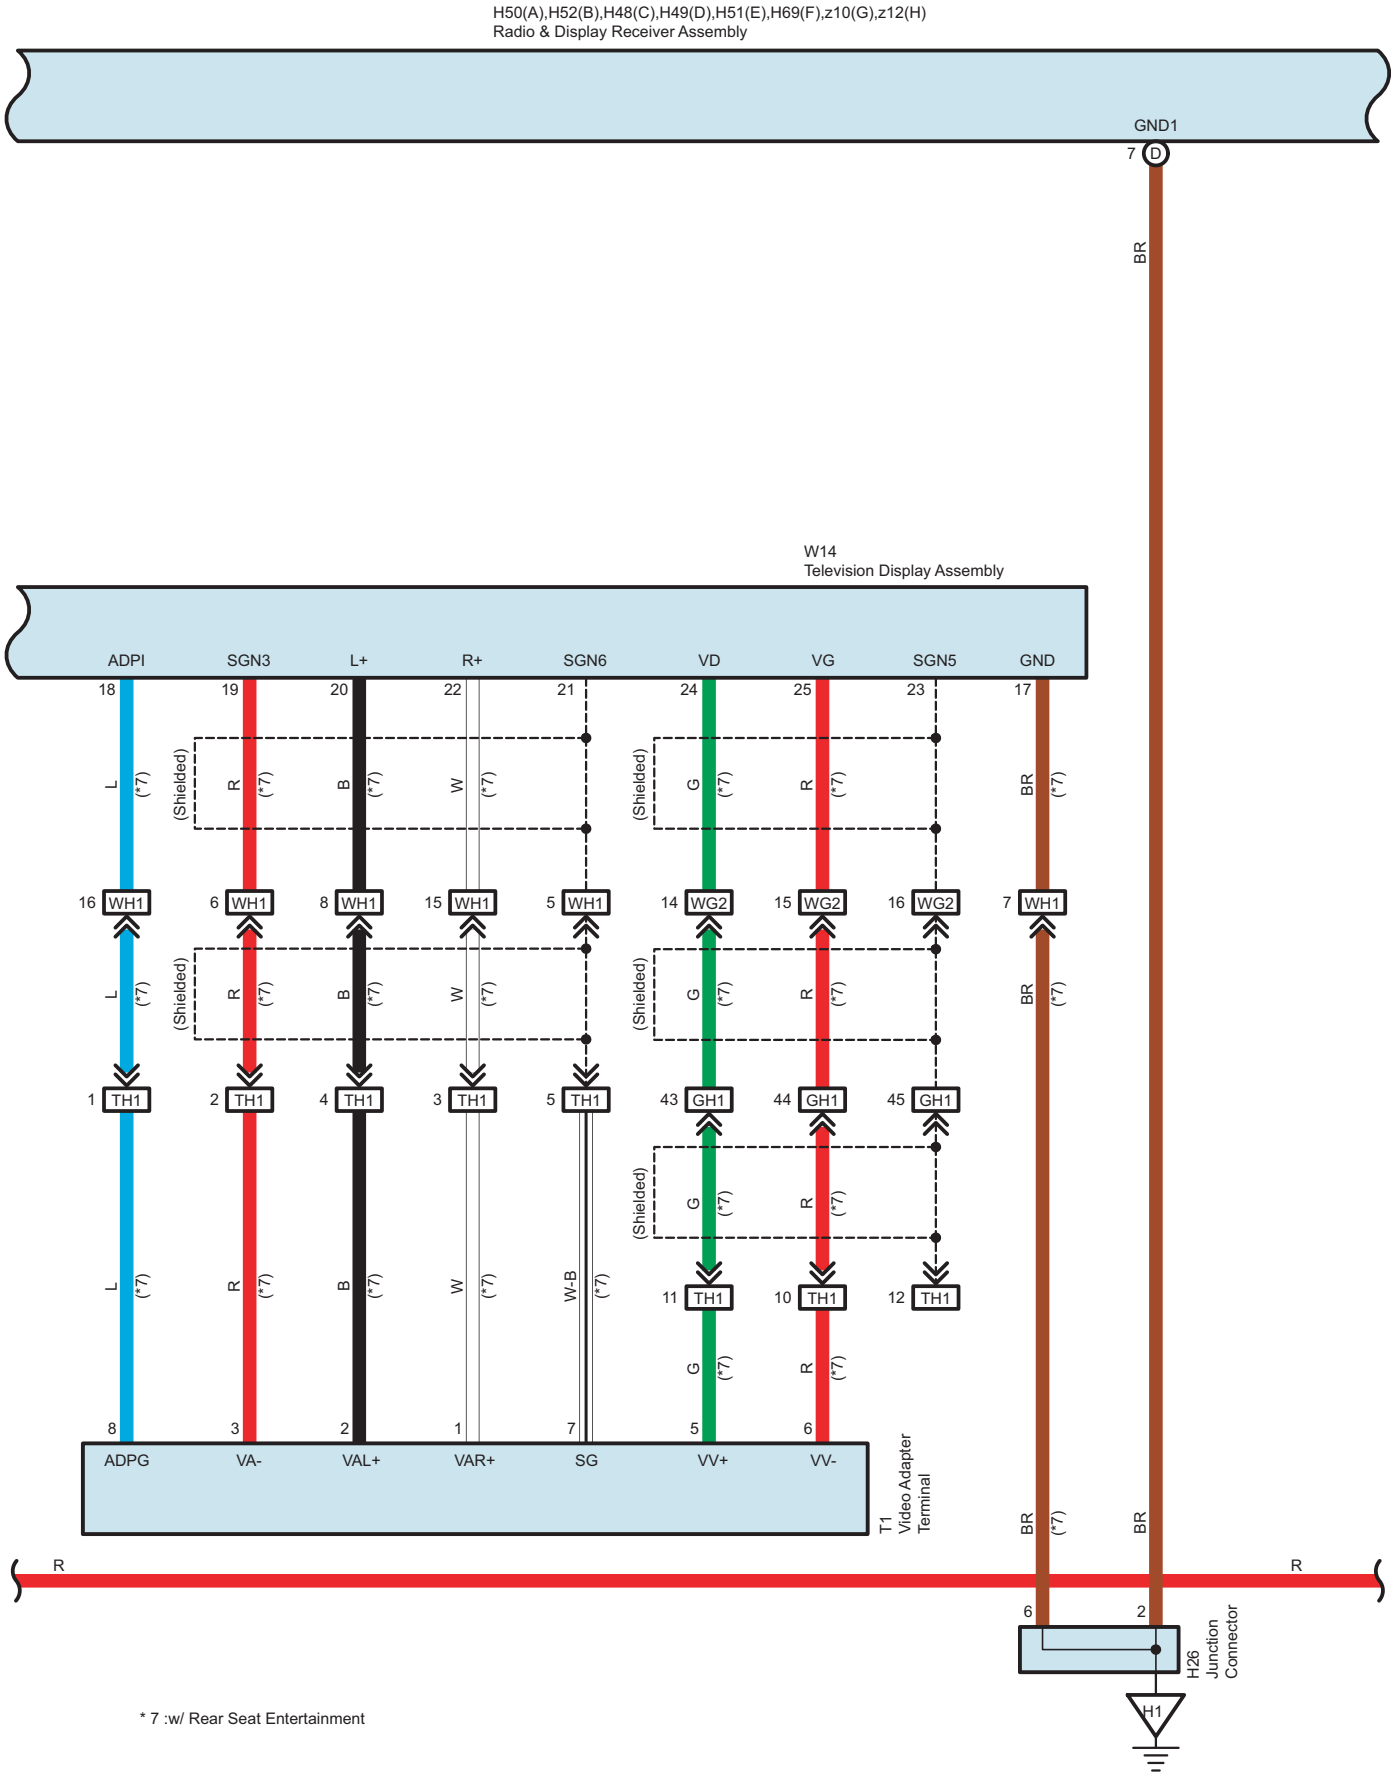

* 7 :w/ Rear Seat Entertainment

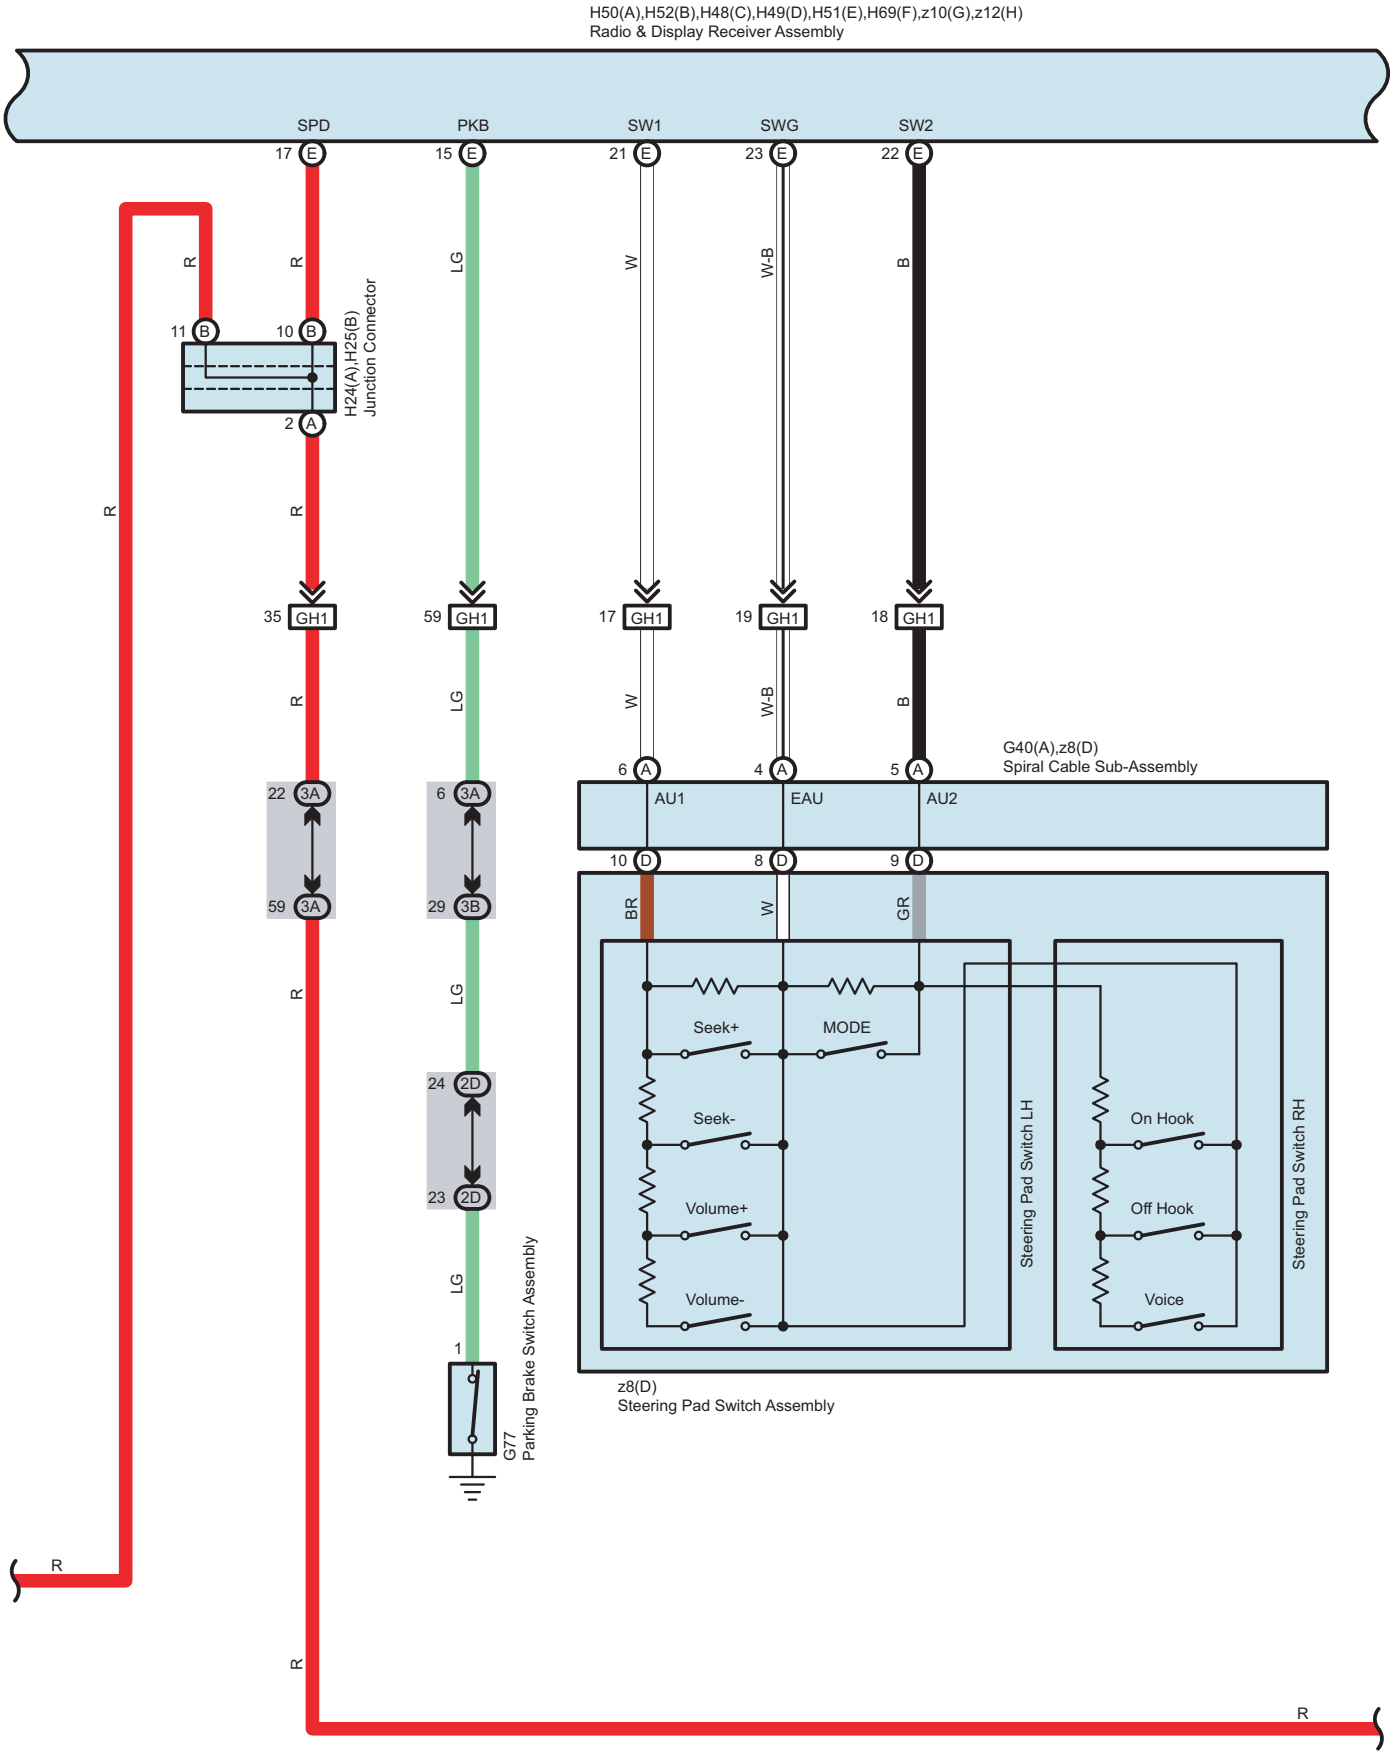
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
SPD
PKB
SW1
SWG
SW2
17 E
15 E
21 E
23 E
22 E
R
LG
W
W-B
B
11 B
10 B
2 A
H24(A),H25(B)
Junction Connector
35 GH1
59 GH1
17 GH1
19 GH1
18 GH1
6 A
4 A
5 A
G40(A),z8(D)
Spiral Cable Sub-Assembly
AU1
EAU
AU2
22 3A
59 3A
6 3A
29 3B
10 D
8 D
9 D
BR
GR
Seek+
MODE
Seek-
Volume+
Volume-
On Hook
Off Hook
Voice
Steering Pad Switch LH
Steering Pad Switch RH
24 2D
23 2D
1
G77
Parking Brake Switch Assembly
z8(D)
Steering Pad Switch Assembly

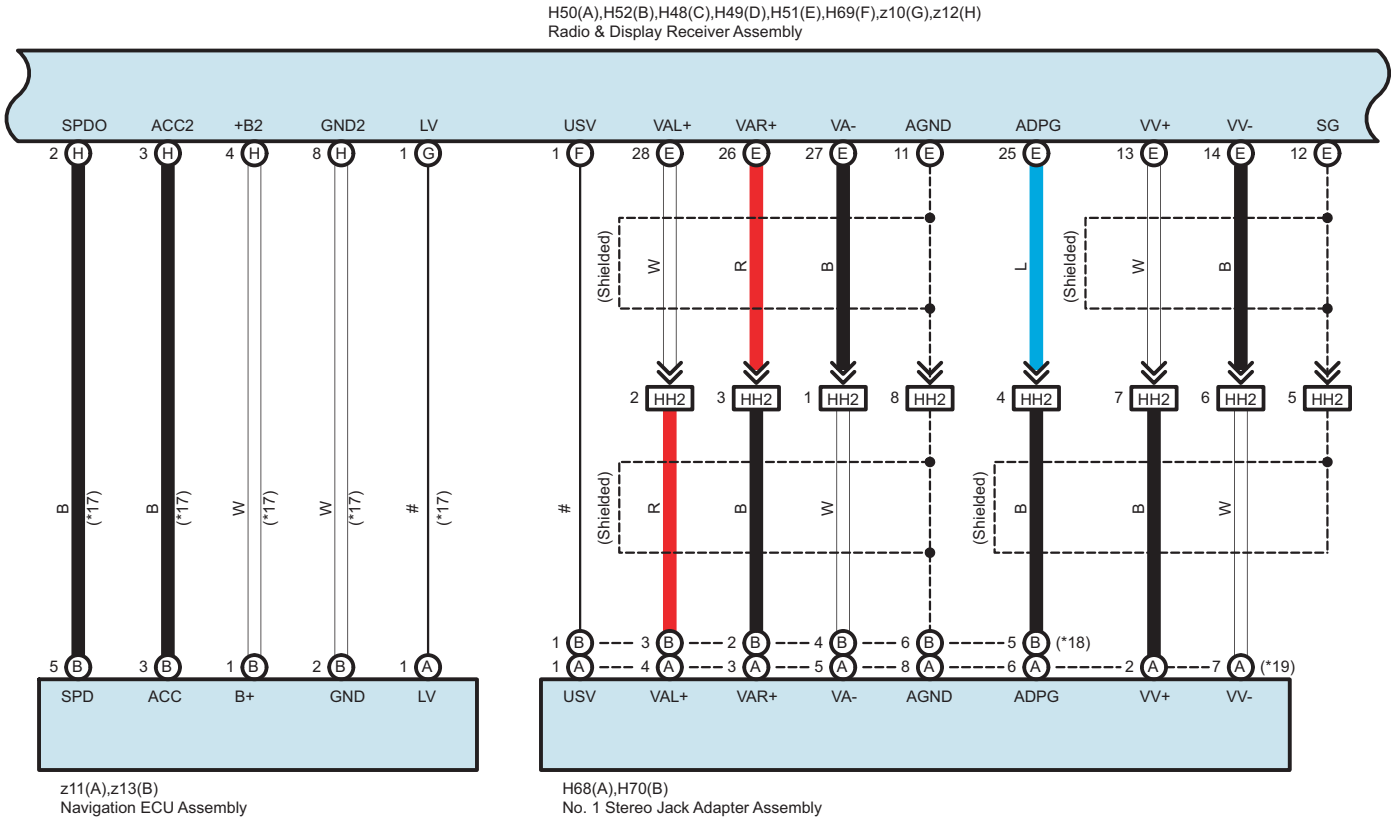
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
SPDO
ACC2
+B2
GND2
LV
USV
VAL+
VAR+
VA-
AGND
ADPG
VV+
VV-
SG
(Shielded)
HH2
(*17)
(*18)
(*19)
SPD
ACC
B+
GND
z11(A),z13(B)
Navigation ECU Assembly
H68(A),H70(B)
No. 1 Stereo Jack Adapter Assembly

R
R

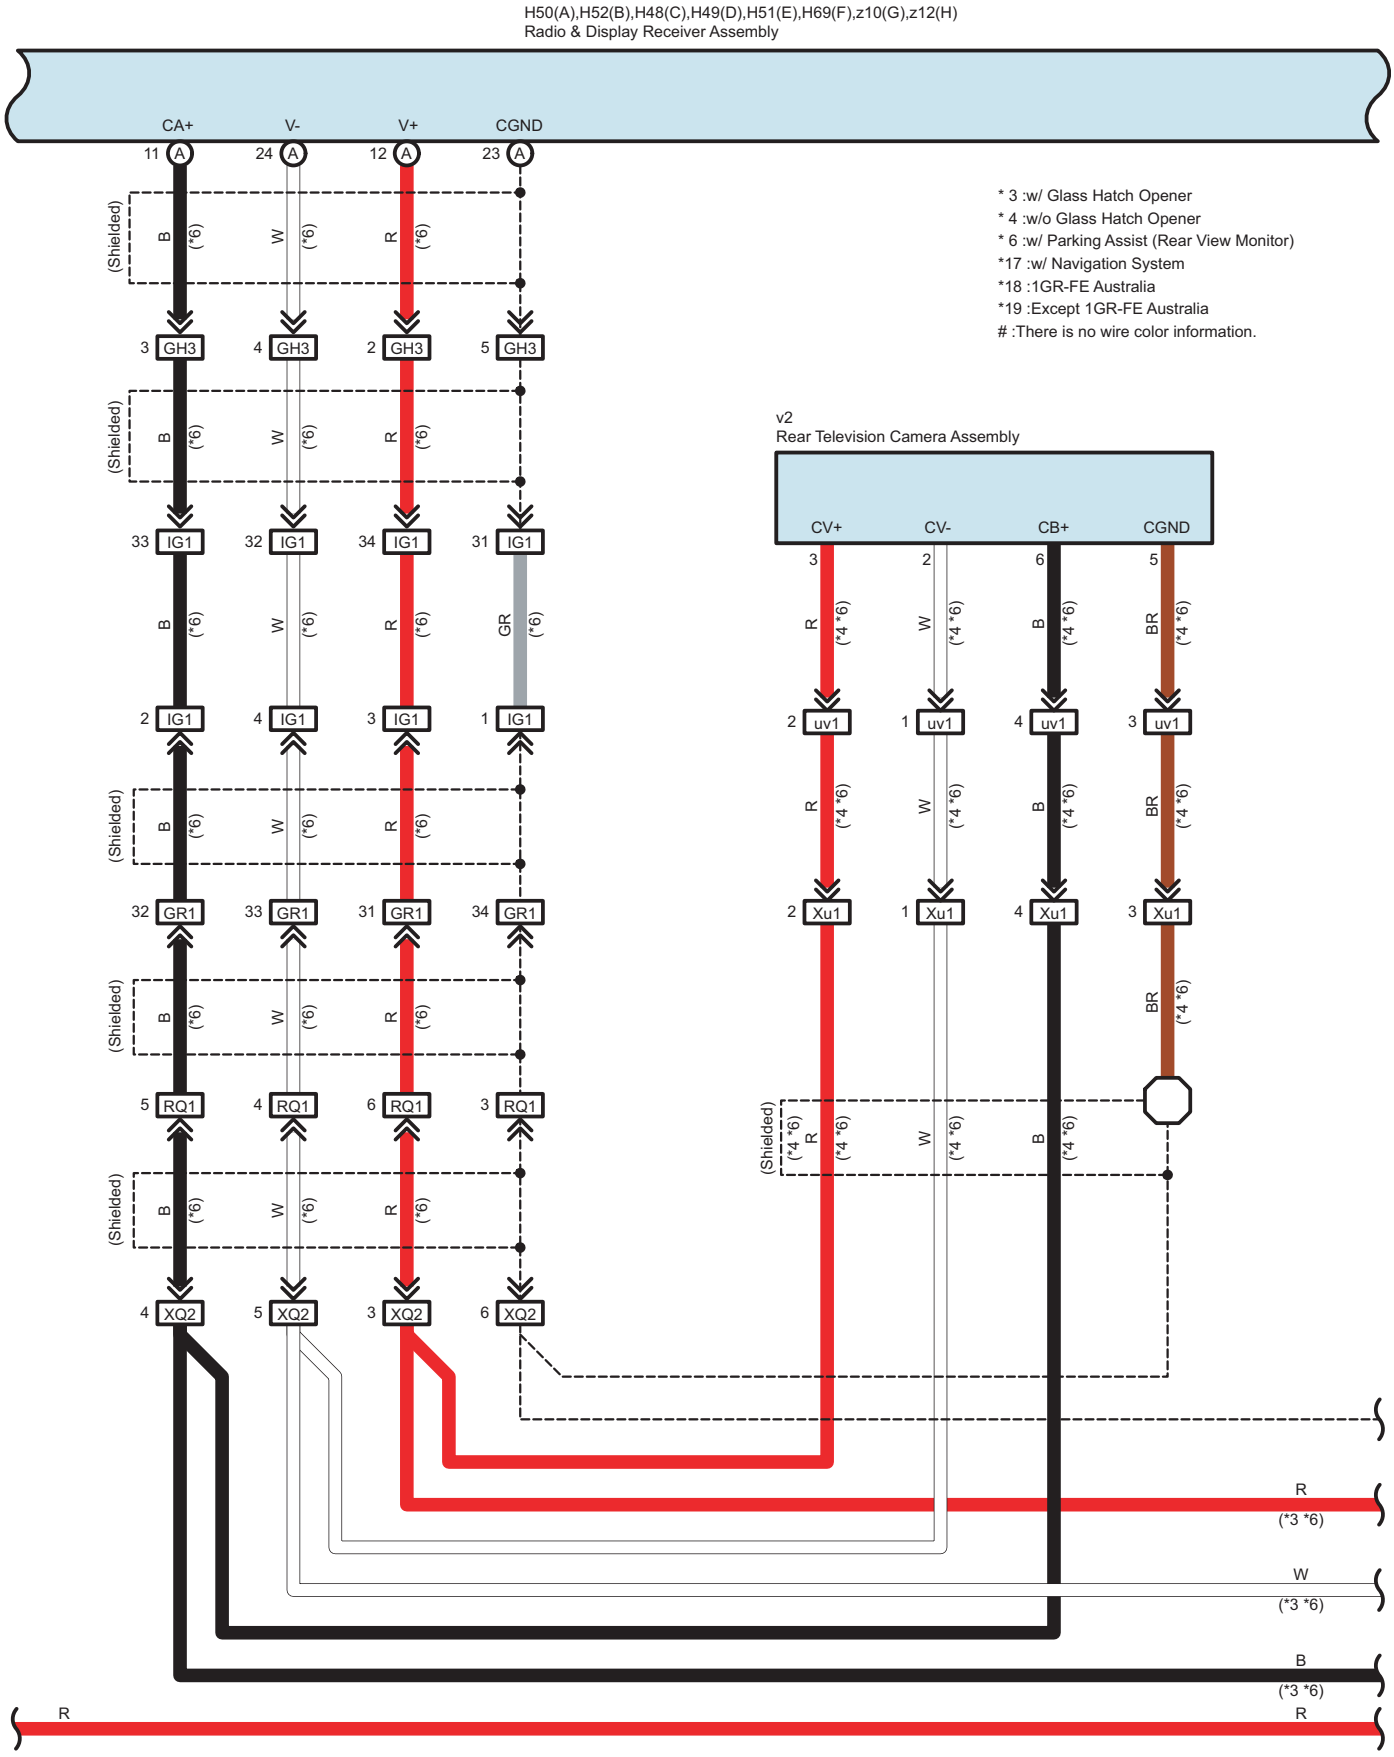
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
CA+
V-
V+
CGND
* 3 :w/ Glass Hatch Opener
* 4 :w/o Glass Hatch Opener
* 6 :w/ Parking Assist (Rear View Monitor)
*17 :w/ Navigation System
*18 :1GR-FE Australia
*19 :Except 1GR-FE Australia
:There is no wire color information.
v2
Rear Television Camera Assembly
CV+
CV-
CB+
CGND
GH3
IG1
GR1
RQ1
XQ2
uv1
Xu1
(Shielded)
(*6)
(*4 *6)
(*3 *6)

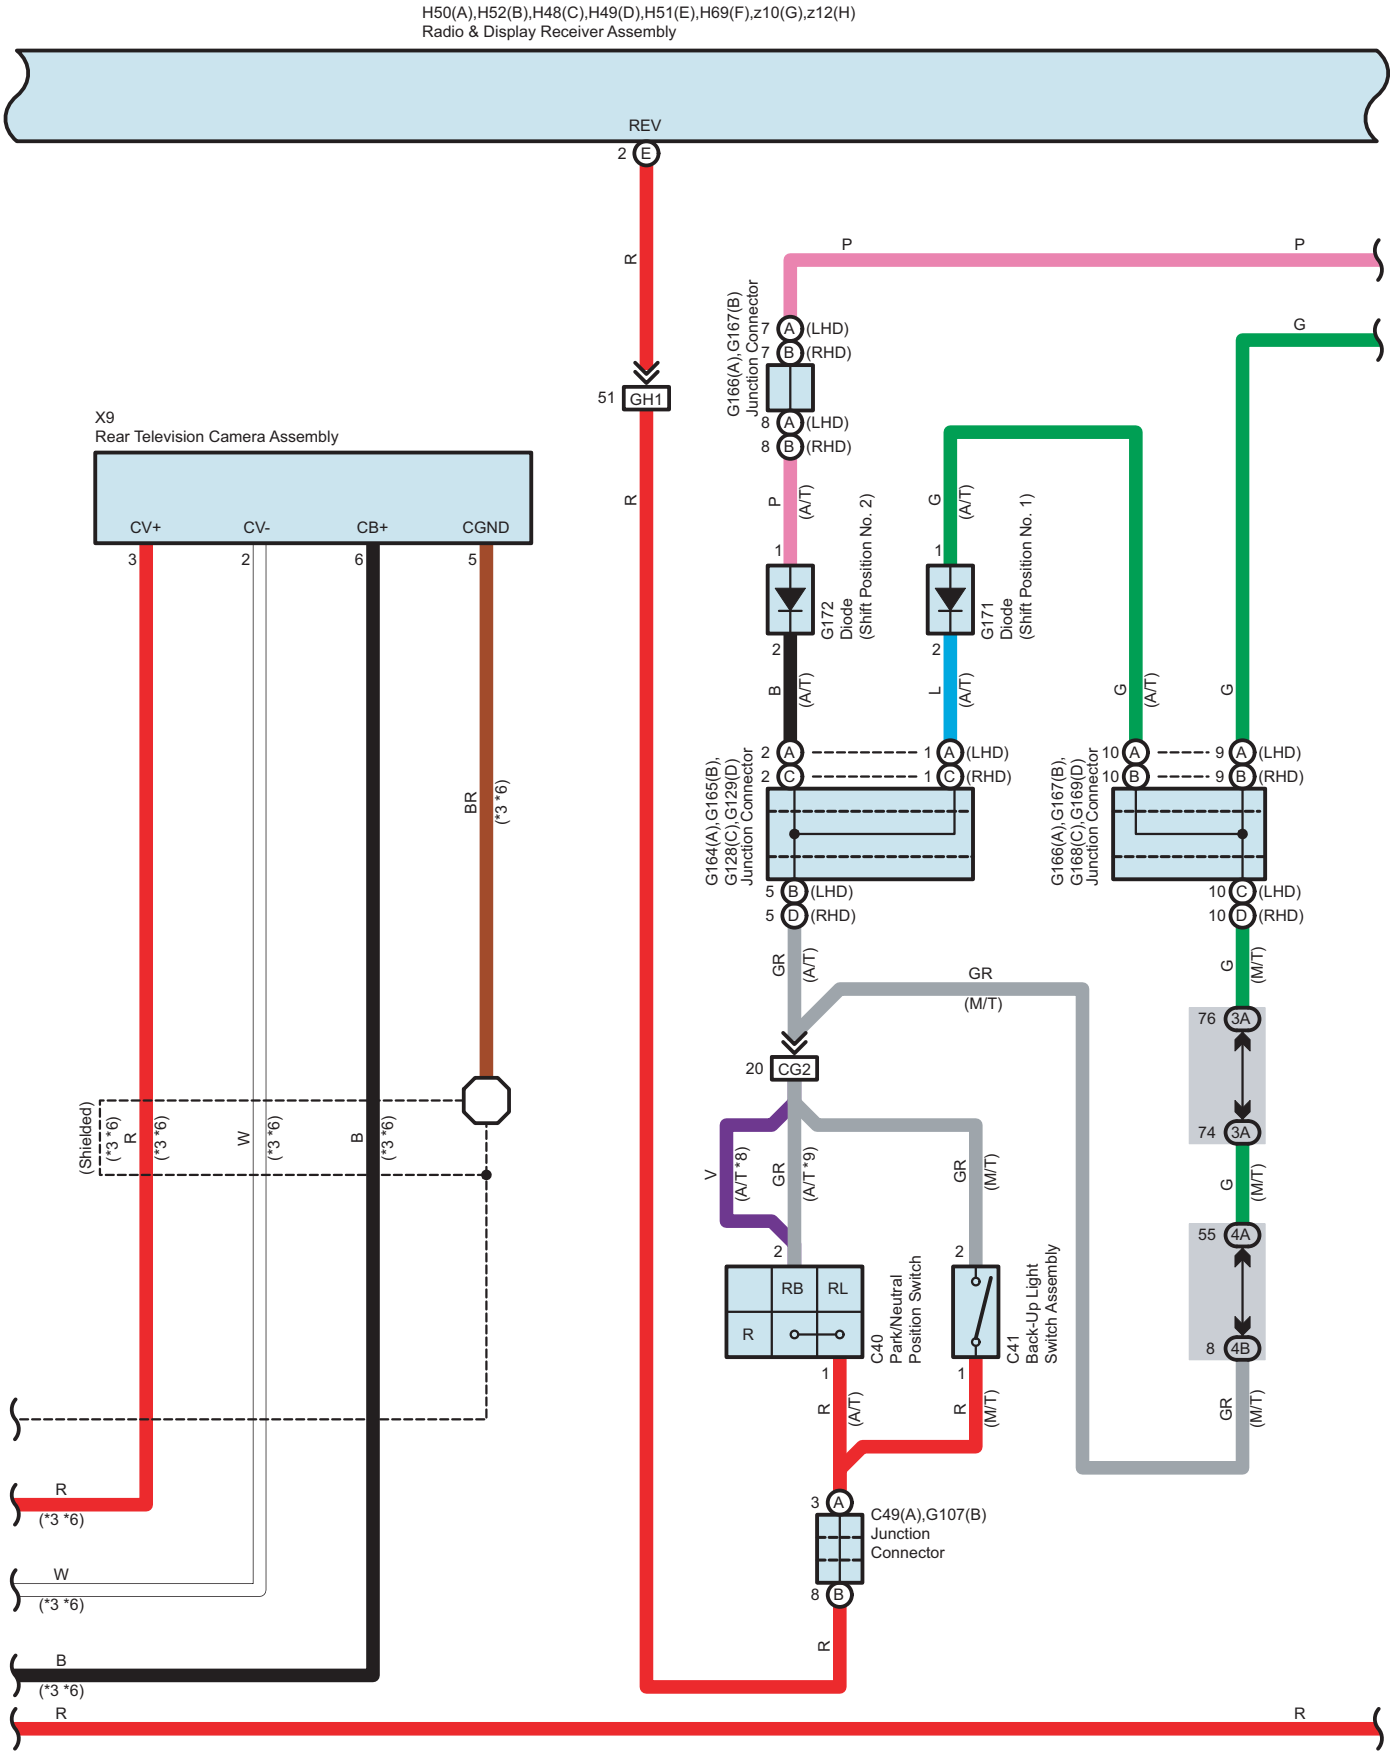
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
REV
2 E
R
51 GH1
R
X9
Rear Television Camera Assembly
CV+
CV-
CB+
CGND
3
2
6
5
BR
(*3 *6)
(Shielded)
(*3 *6)
R
(*3 *6)
W
(*3 *6)
B
(*3 *6)
R
(*3 *6)
W
(*3 *6)
B
(*3 *6)
R
P
P
G166(A),G167(B) Junction Connector
7 A (LHD)
7 B (RHD)
8 A (LHD)
8 B (RHD)
G
P (A/T)
G (A/T)
G172 Diode (Shift Position No. 2)
G171 Diode (Shift Position No. 1)
B (A/T)
L (A/T)
G (A/T)
G
G164(A),G165(B), G128(C),G129(D) Junction Connector
2 A
2 C
1 A (LHD)
1 C (RHD)
5 B (LHD)
5 D (RHD)
G166(A),G167(B), G168(C),G169(D) Junction Connector
10 A
10 B
9 A (LHD)
9 B (RHD)
10 C (LHD)
10 D (RHD)
GR (A/T)
GR (M/T)
G (M/T)
20 CG2
76 3A
74 3A
55 4A
8 4B
V (A/T *8)
GR (A/T *9)
GR (M/T)
G (M/T)
RB
RL
R
C40 Park/Neutral Position Switch
C41 Back-Up Light Switch Assembly
R (A/T)
R (M/T)
GR (M/T)
3 A
8 B
C49(A),G107(B) Junction Connector
R

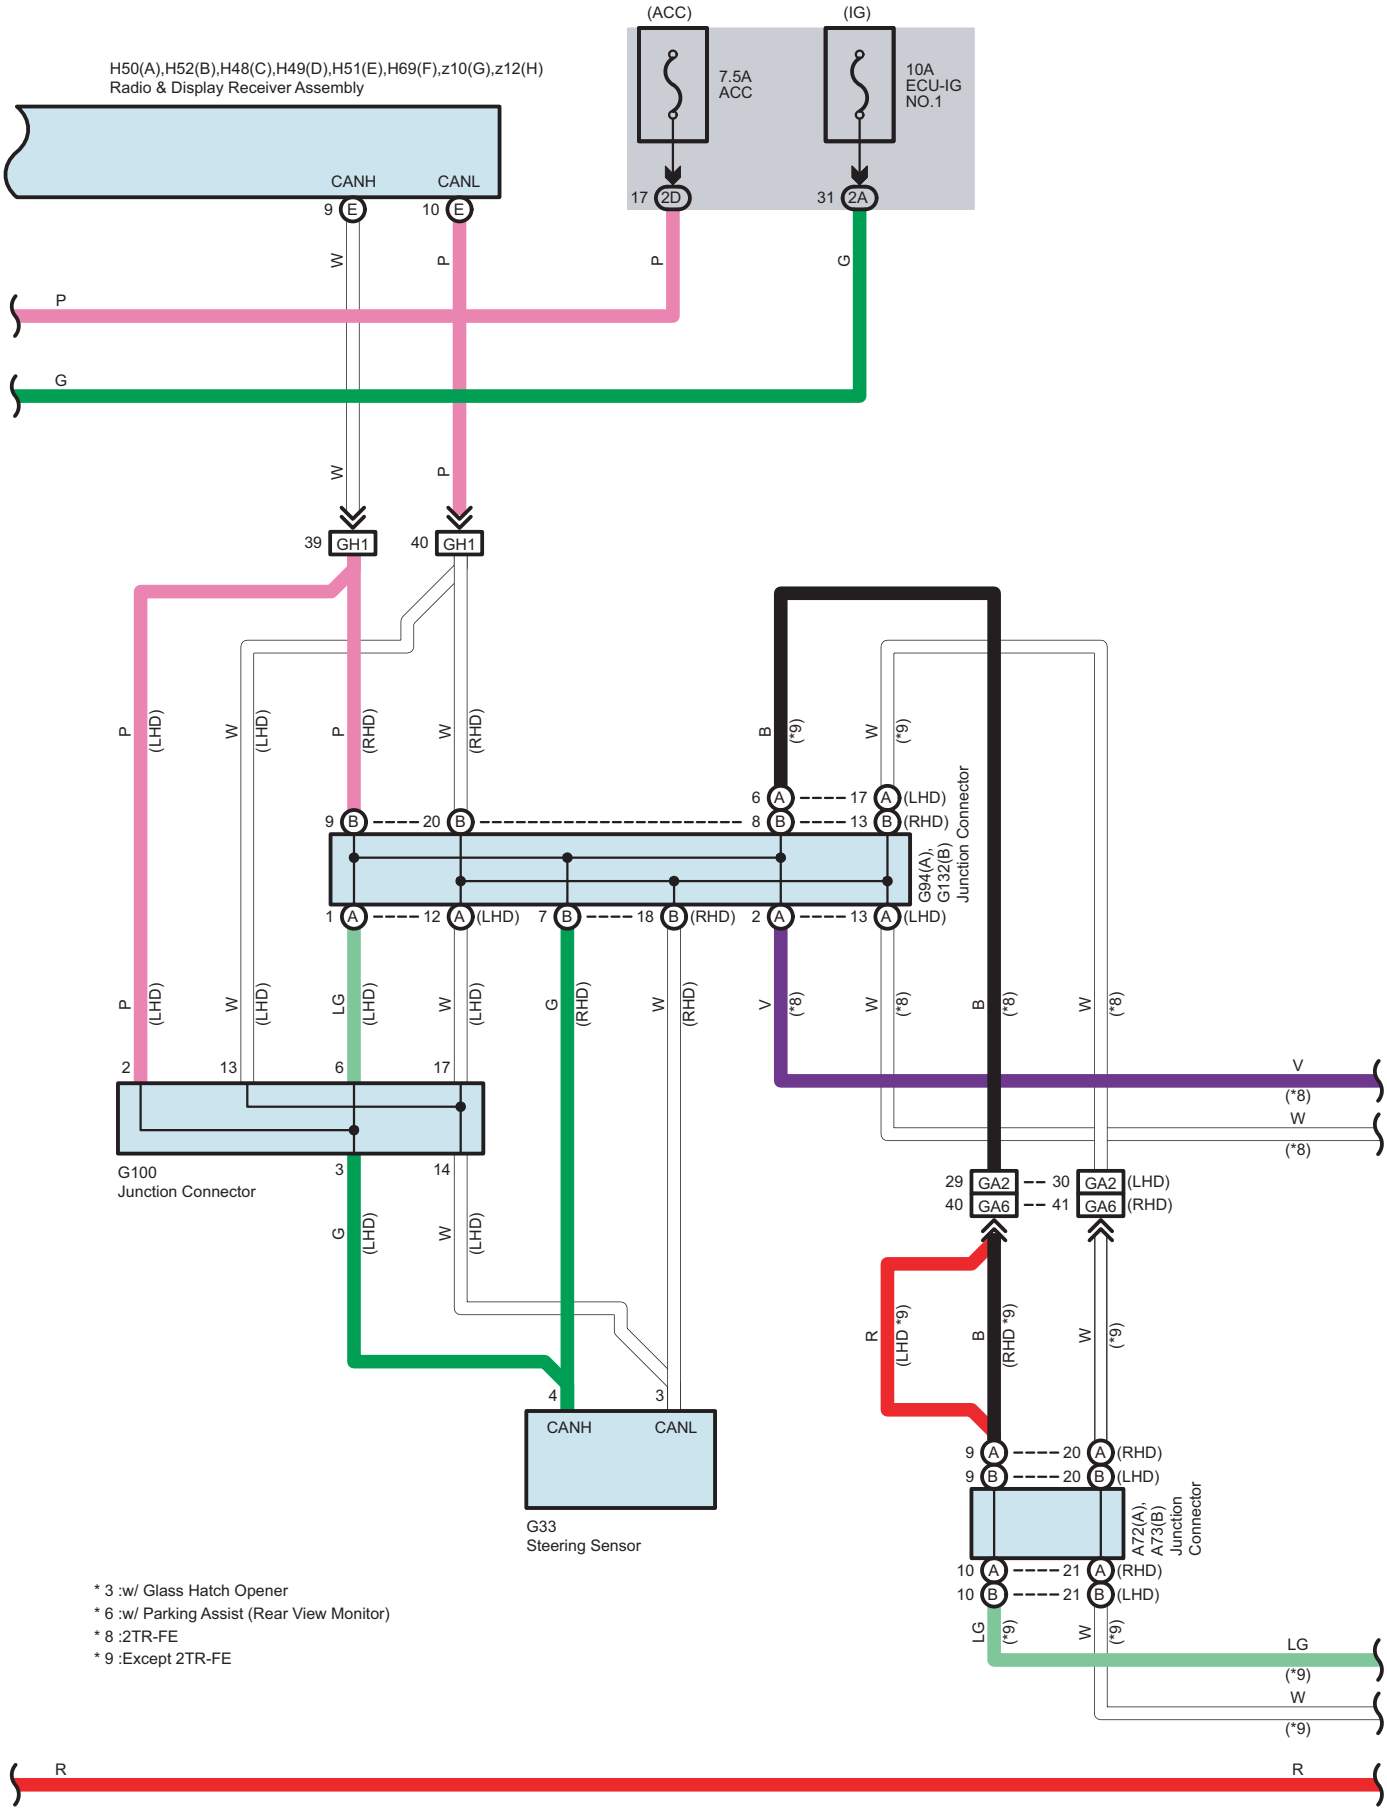
(ACC)
(IG)
7.5A
ACC
10A
ECU-IG
NO.1
17 2D
31 2A
H50(A),H52(B),H48(C),H49(D),H51(E),H69(F),z10(G),z12(H)
Radio & Display Receiver Assembly
CANH
CANL
9 E
10 E
39 GH1
40 GH1
G94(A),
G132(B)
Junction Connector
G100
Junction Connector
GA2
GA6
A72(A),
A73(B)
Junction
Connector
G33
Steering Sensor
CANH
CANL
* 3 :w/ Glass Hatch Opener
* 6 :w/ Parking Assist (Rear View Monitor)
* 8 :2TR-FE
* 9 :Except 2TR-FE

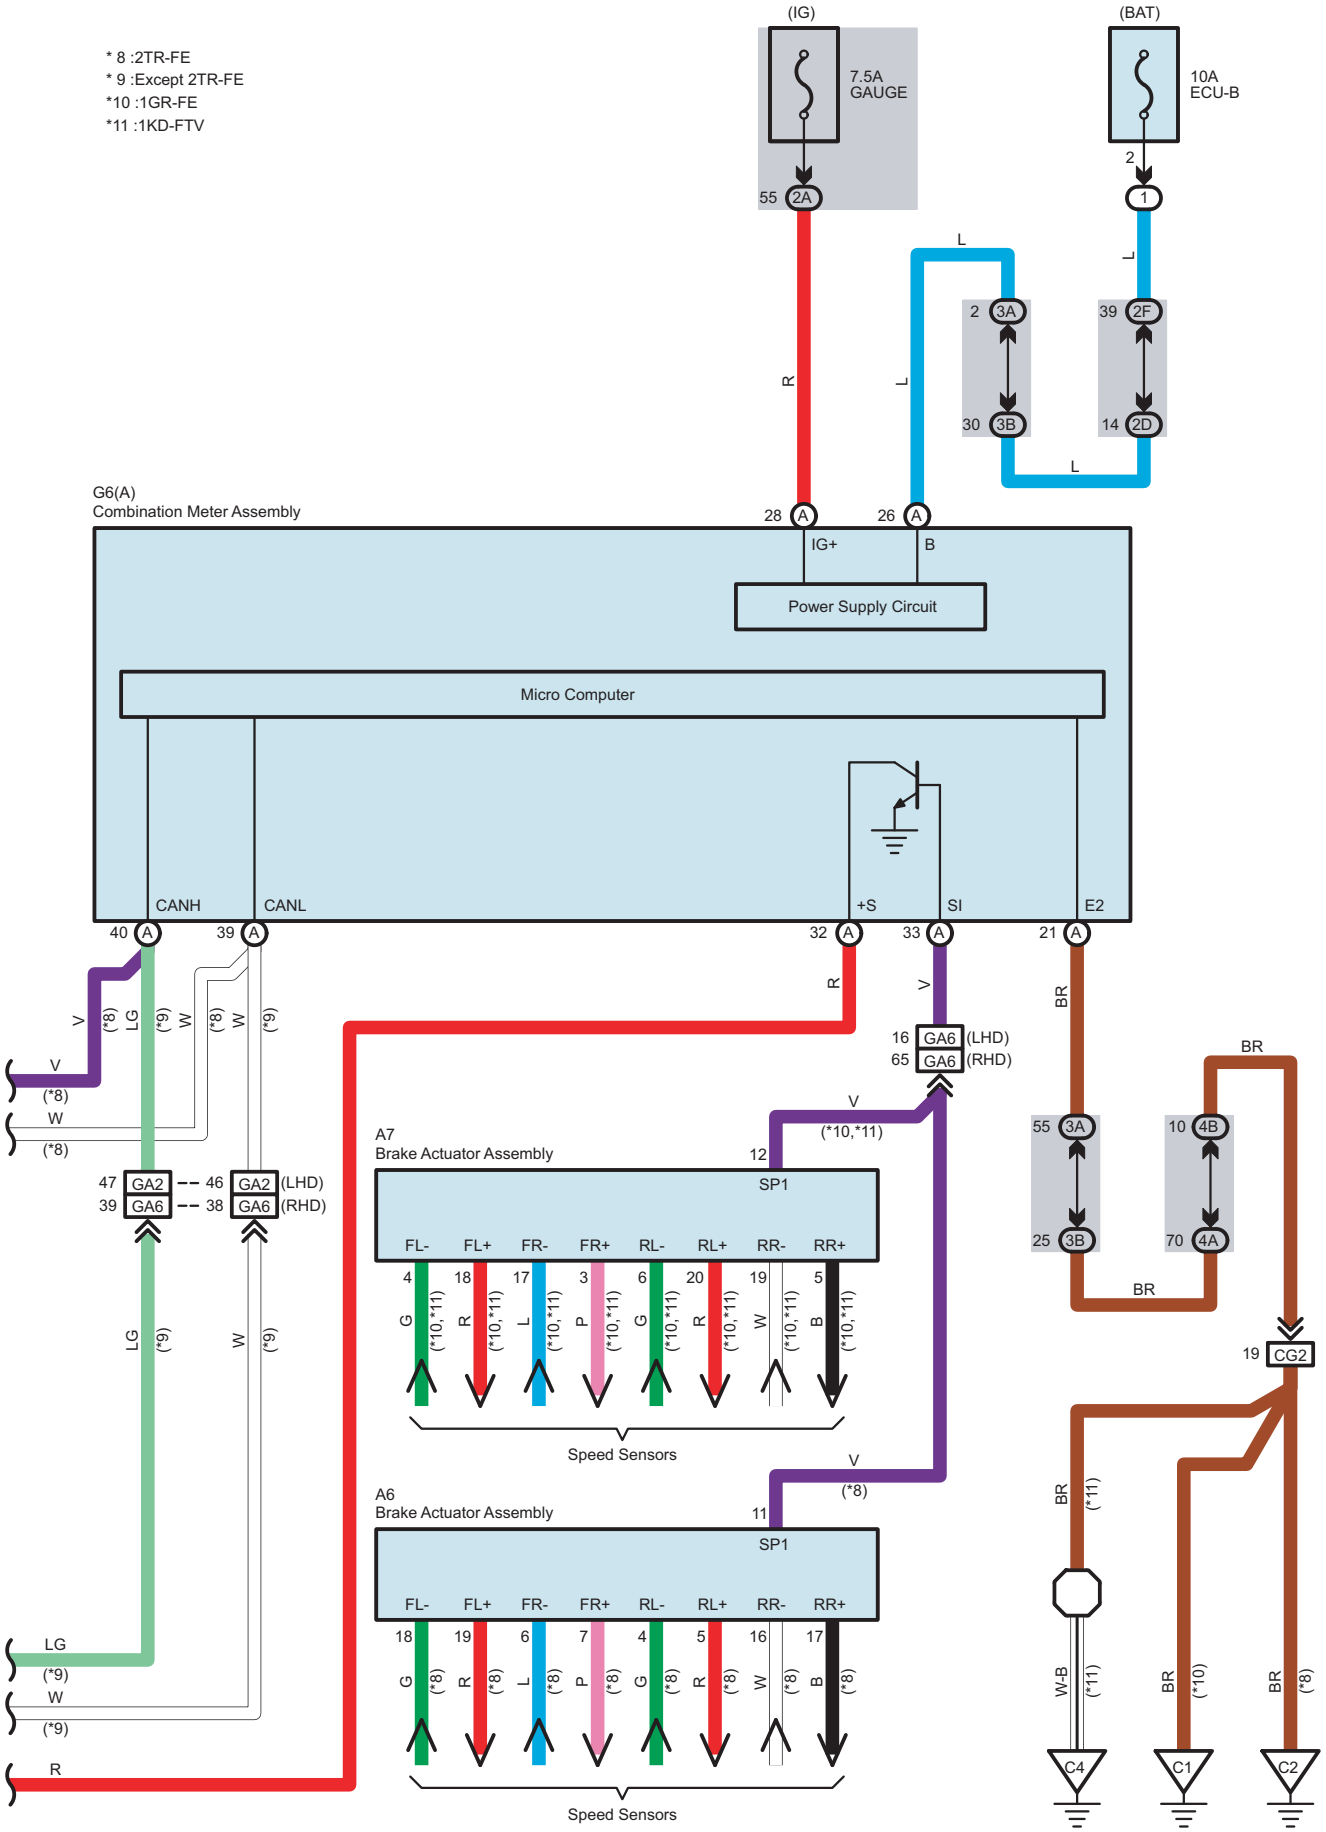
* 8 :2TR-FE
* 9 :Except 2TR-FE
*10 :1GR-FE
*11 :1KD-FTV
(IG)
7.5A
GAUGE
(BAT)
10A
ECU-B
G6(A)
Combination Meter Assembly
IG+
B
Power Supply Circuit
Micro Computer
CANH
CANL
+S
SI
E2
GA6 (LHD)
GA6 (RHD)
GA2 (LHD)
GA2 (RHD)
A7
Brake Actuator Assembly
SP1
FL- FL+ FR- FR+ RL- RL+ RR- RR+
Speed Sensors
A6
Brake Actuator Assembly
SP1
FL- FL+ FR- FR+ RL- RL+ RR- RR+
Speed Sensors
CG2
C4
C1
C2

A6
Black

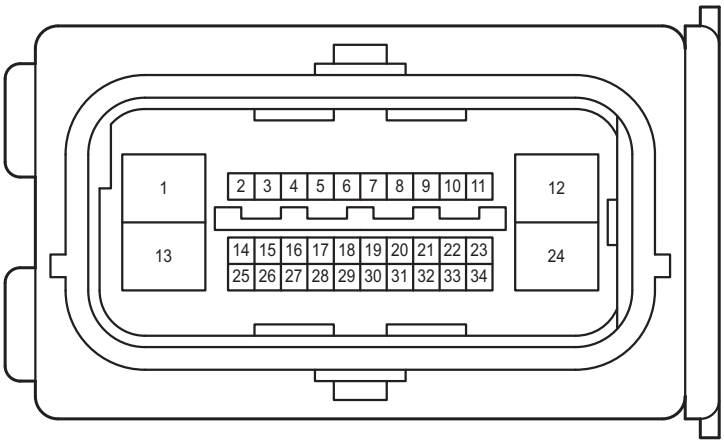

A7
Black

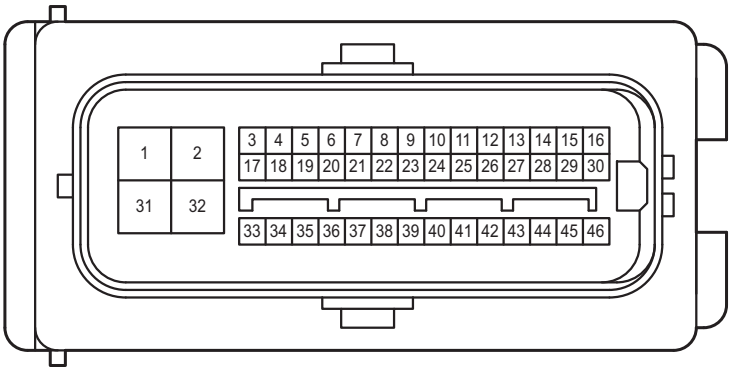

A72
White

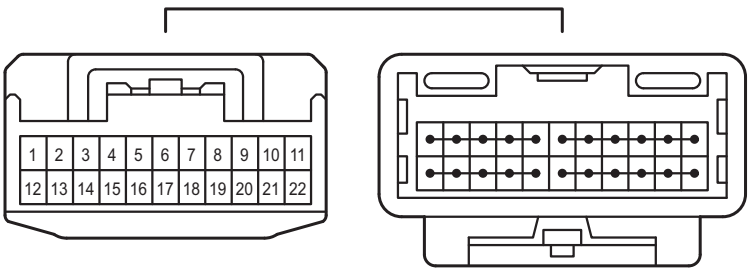

A73
White

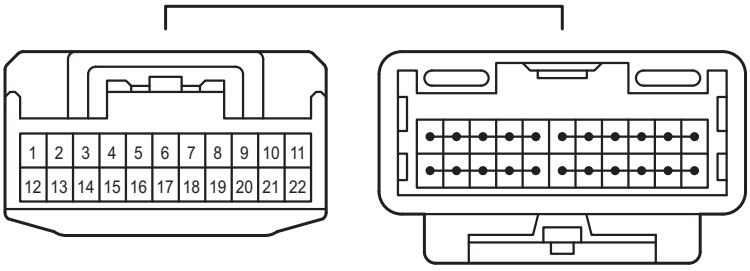

C40
Gray

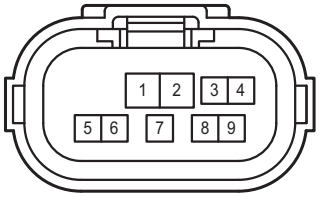

C41
Gray

C49
Blue

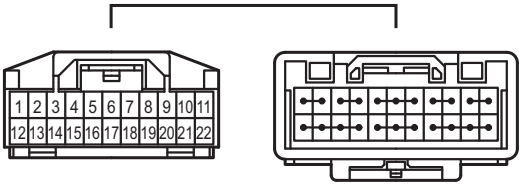

G6
Black

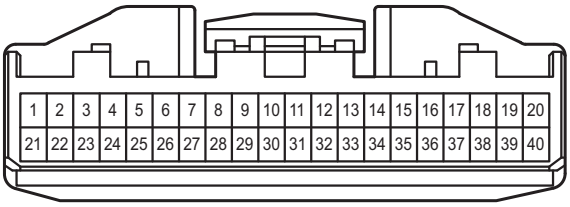

G33
White

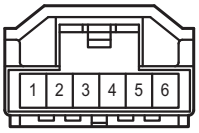

G40
Black

G77
White

G94
White

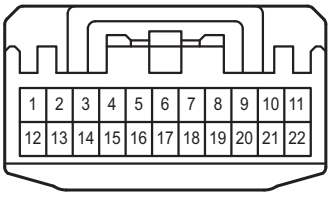

G100
Gray

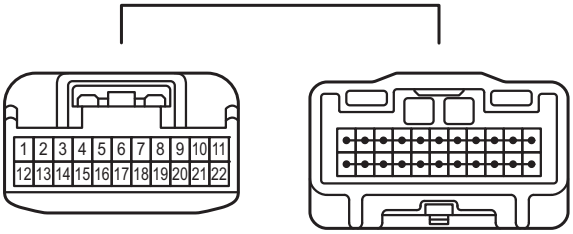

G107
Blue

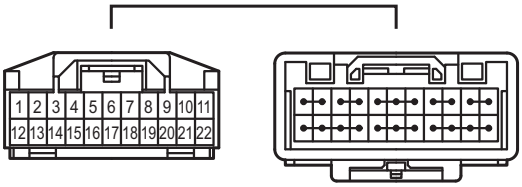

G128
Black

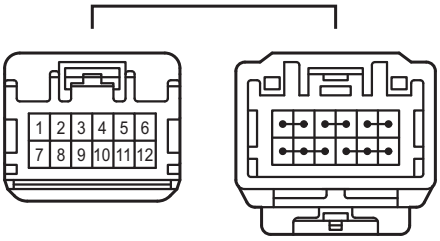

G129
Black

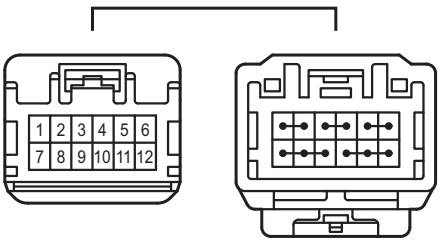

G132
Gray

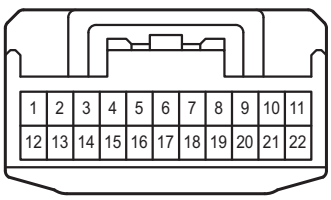

G164
Black

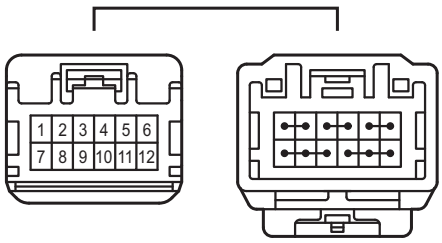

G165
Black

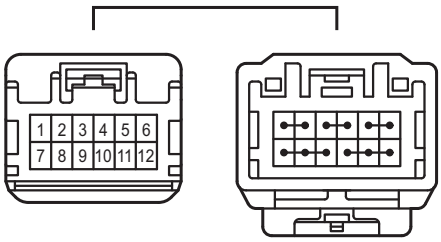

G166
Blue

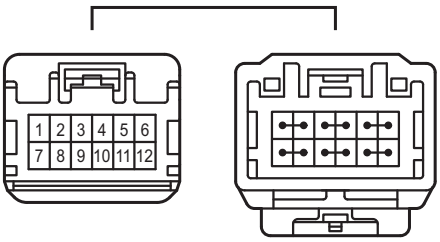

G167
Blue

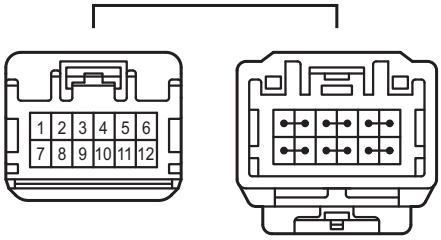

G168
Blue

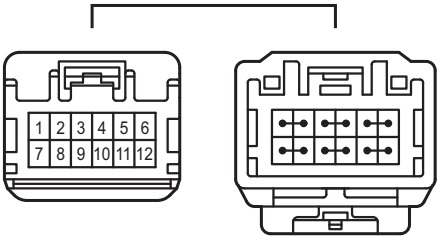

G169
Blue

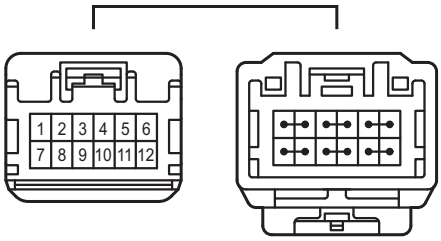

G171
Gray

G172
Gray

H10
White

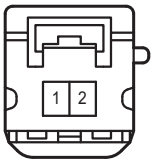

H13
White

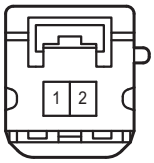

H14
White

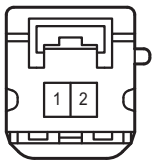

H21
White

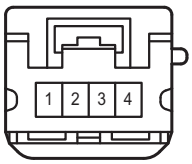

H22
White

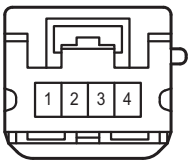

H24
White

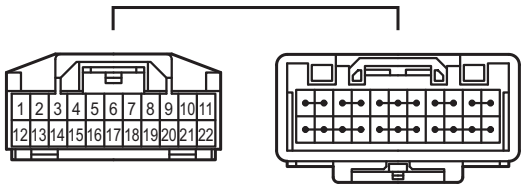

H25
White

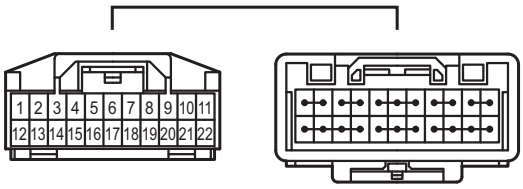

H26
White

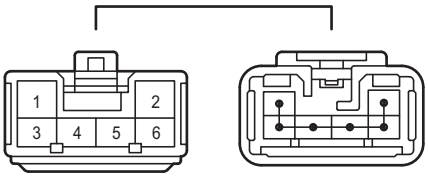

H48
White

H49
White

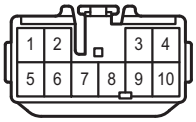

H50
White

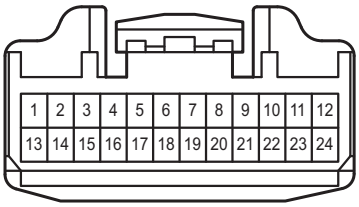

H51
White

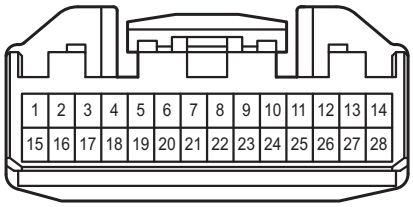

H52
White

H63
White

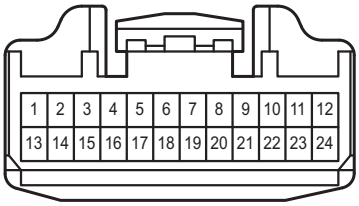

H64
White

H65
White

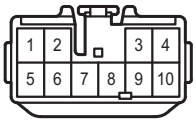

H66
White



H67
White



H68
Black

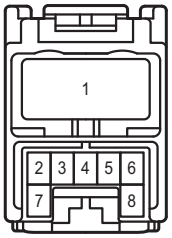

H69
Gray

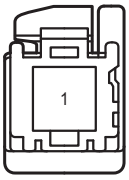

H70
Black

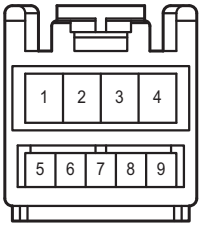

J4
White

K3
White

L1
White

L3
White

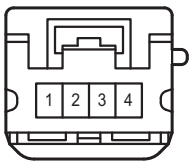

M1
White

M3
White

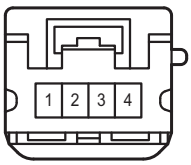

Q15
White

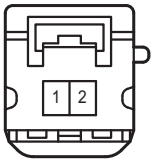

Q30
Gray



Q32
White

R13
White

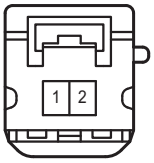

R24
White

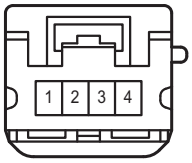

R37
White

T1
White

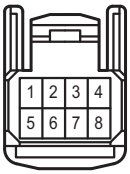

T2
White



T4
White



W7
White

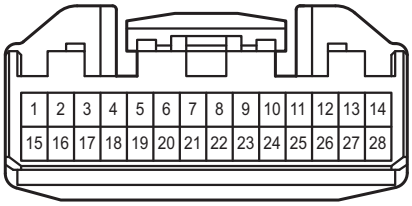

W14
White

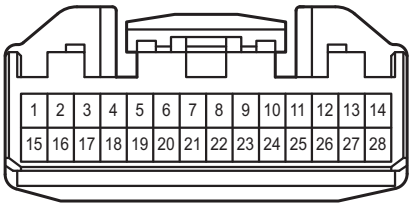

X9
Gray

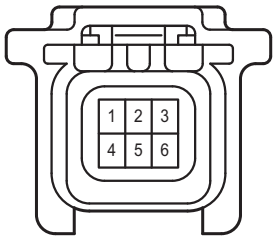

v2
Gray

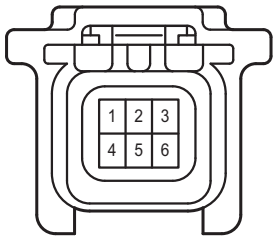

z8
White

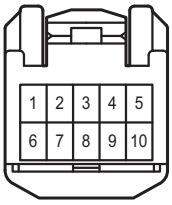

z10
White



z11
White



z12
White

z13
Black

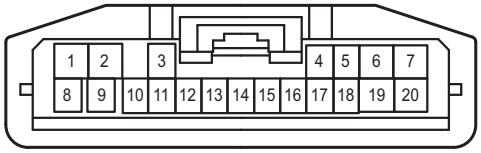

2A
White

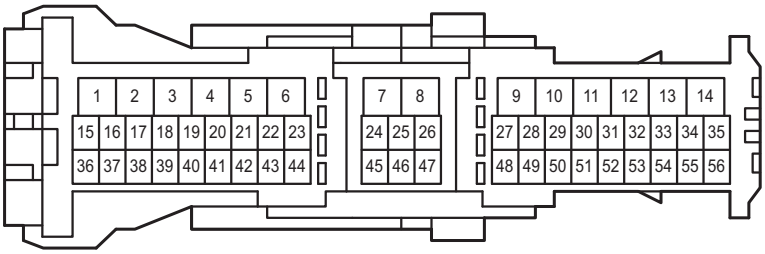

2D
White

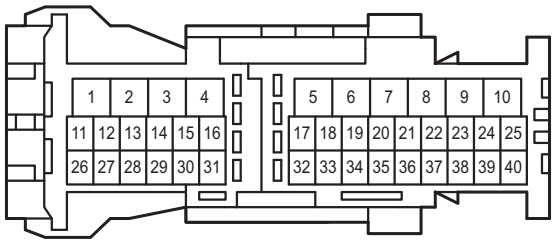

2F
White

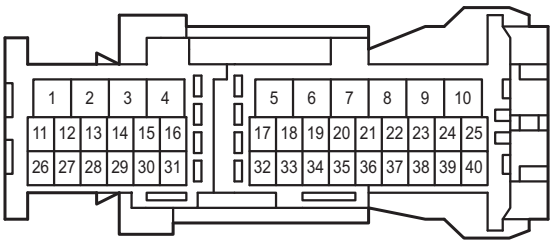

3A
White

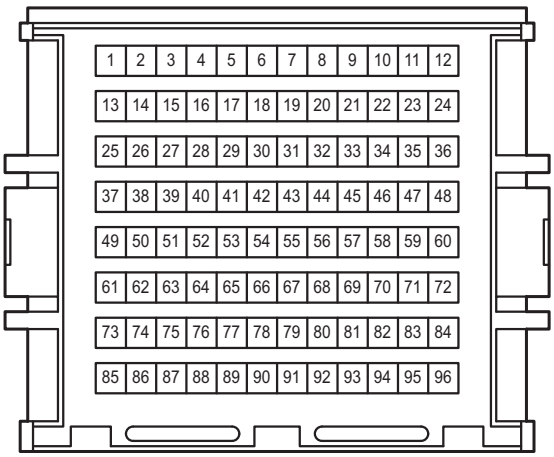

3B
White

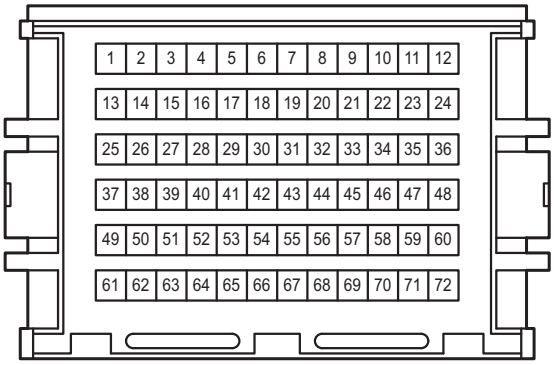

4A
White

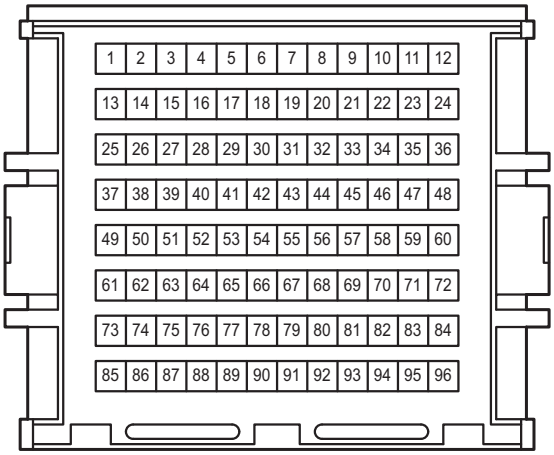

4B
White

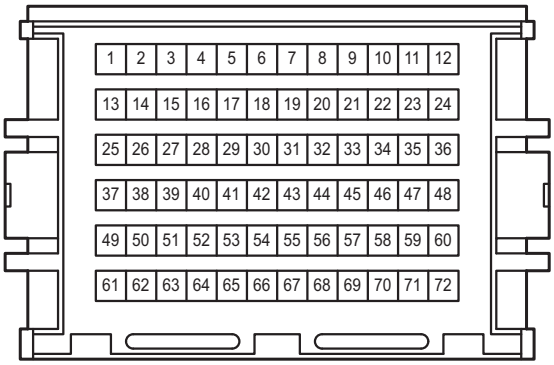

CG2
White

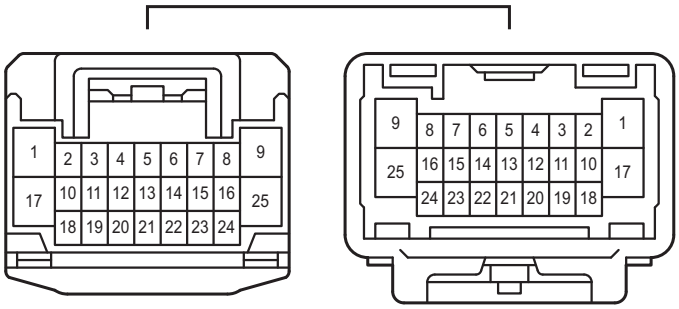

GA1
White

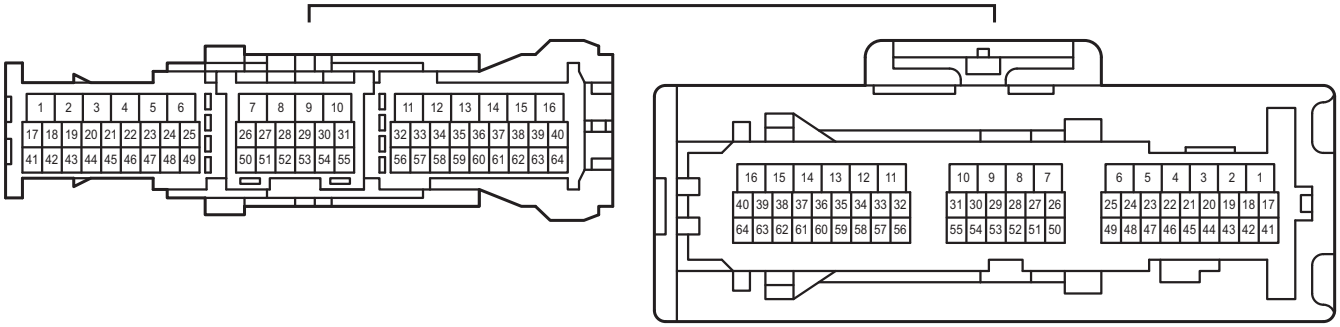

GA2
White

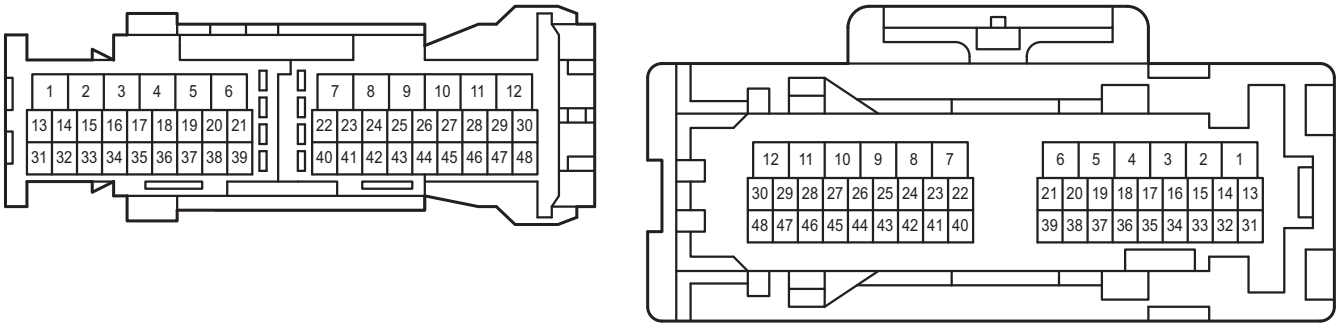

GA6
White

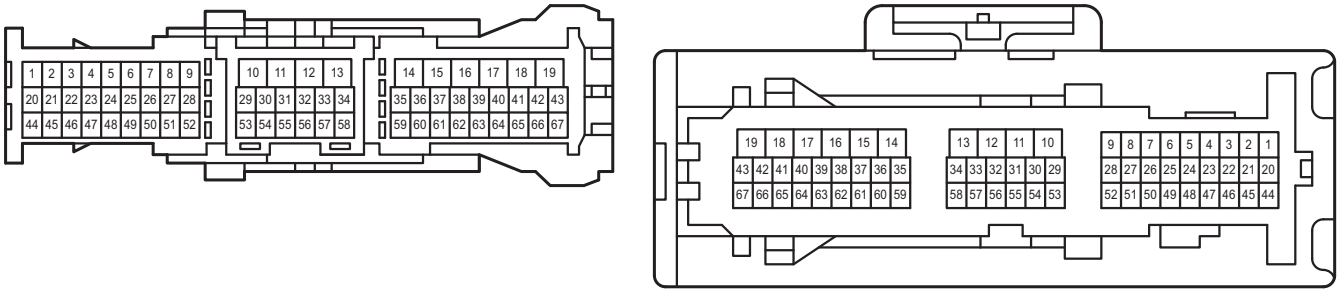

GH1
White

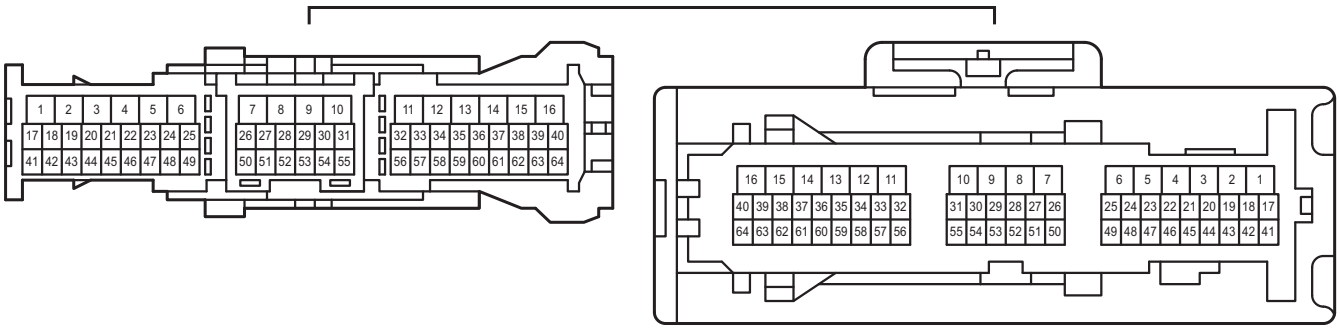

GH2
White

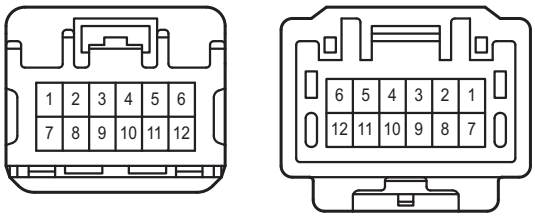

GH3
Gray

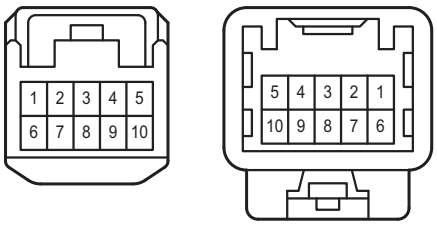

GQ1
White

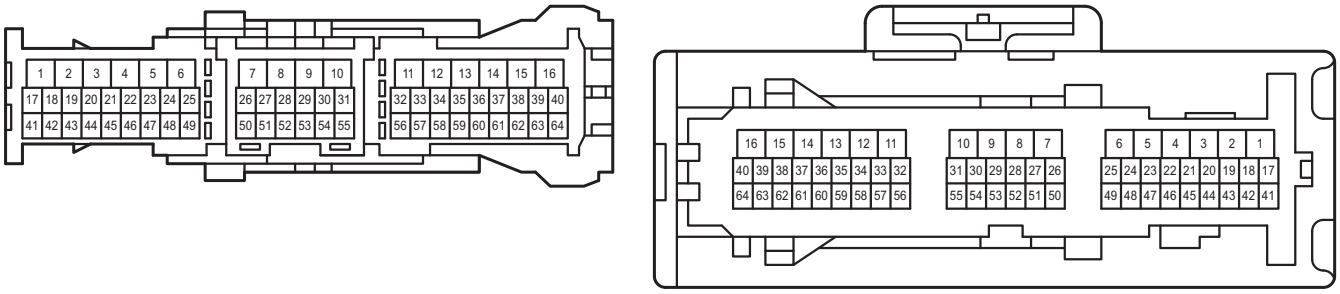

GR1
White

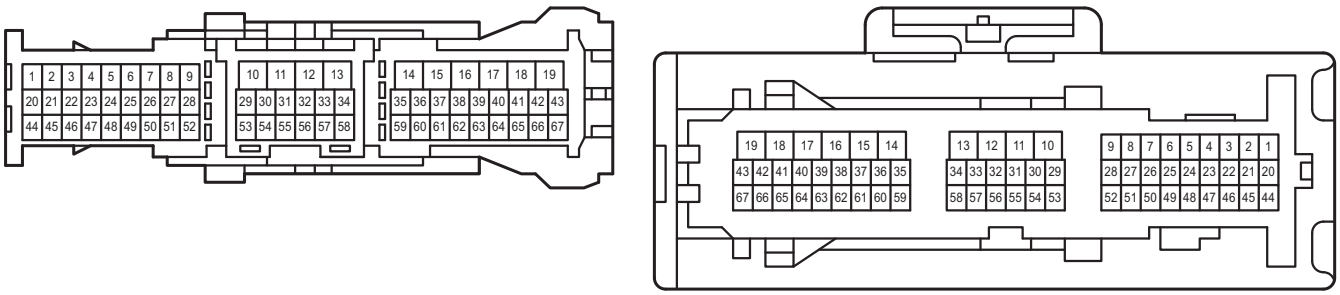

GR2
Gray

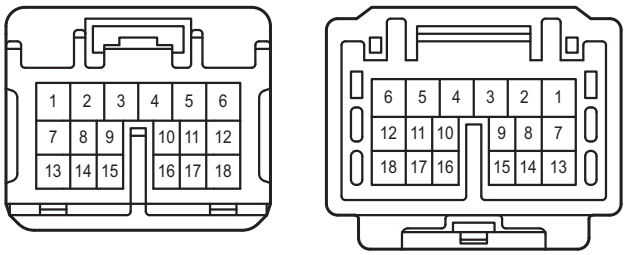

HH2
White

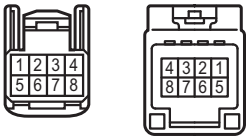

IG1
White

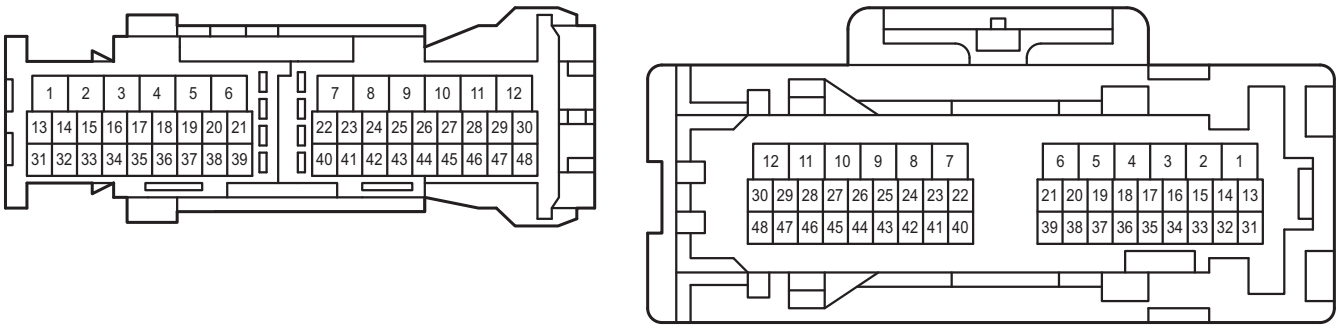

JG3
Black

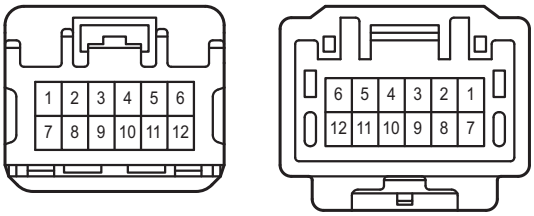

KG3
Black

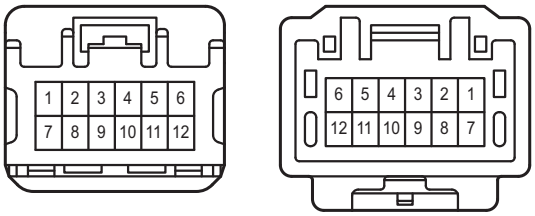

LQ1
White

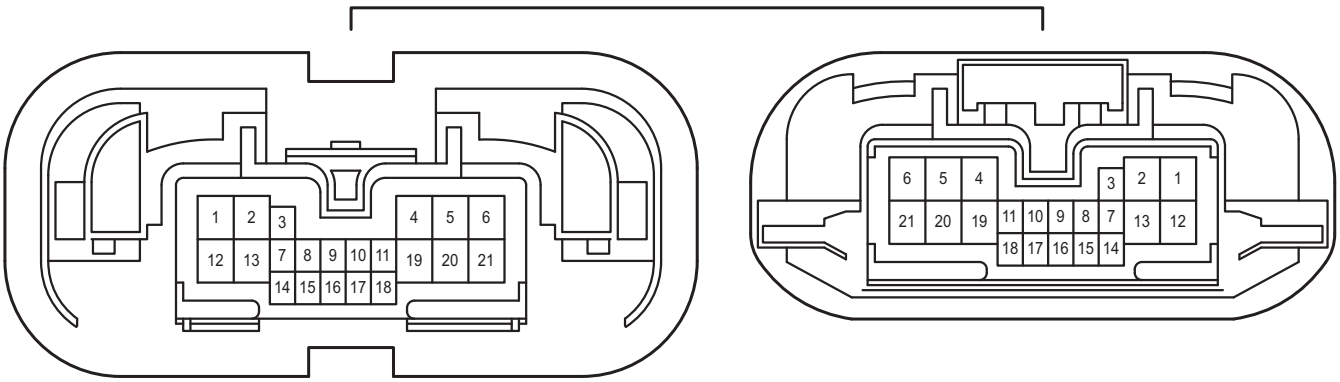

MR1
White

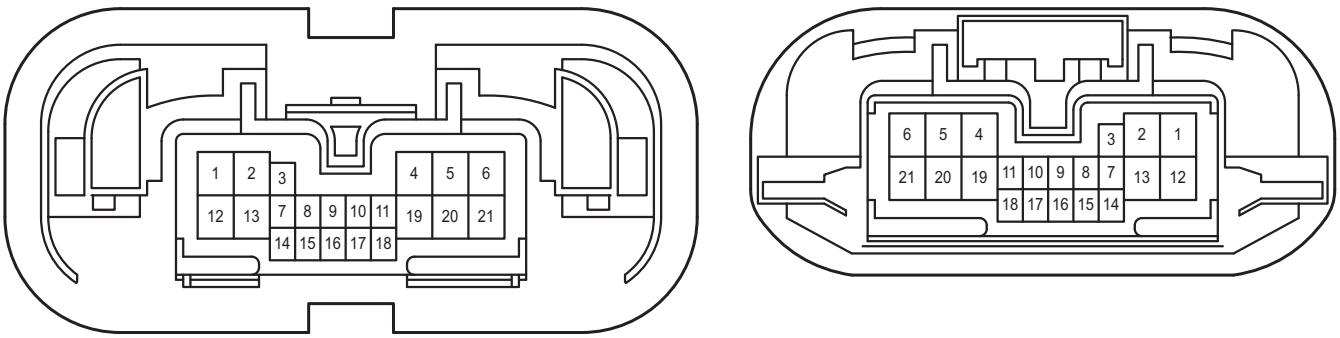

RQ1
White

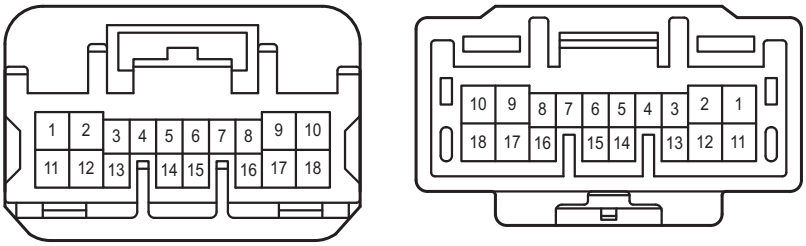

TH1
White

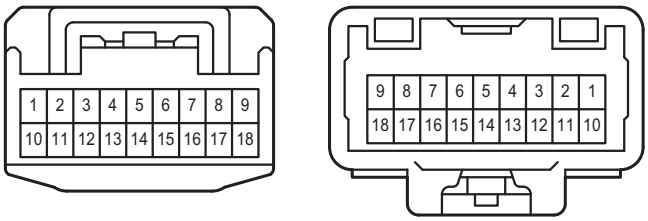

WG1
White

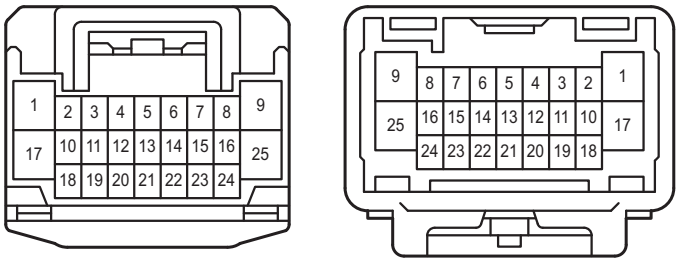

WG2
White

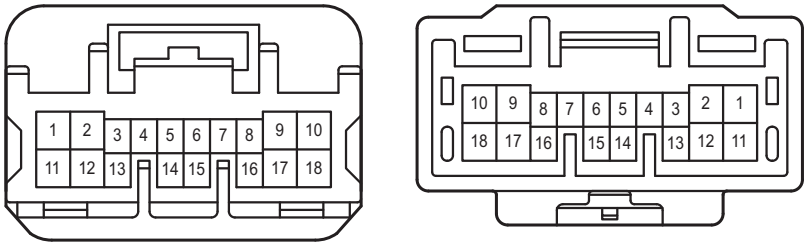

WH1
Gray

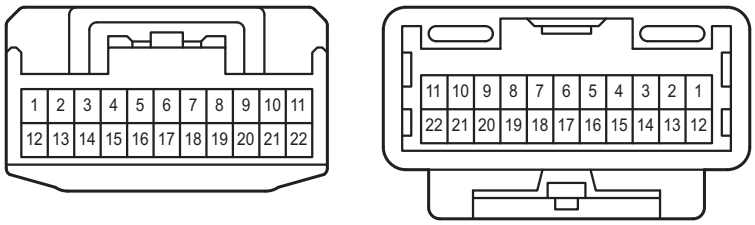

XQ2
White

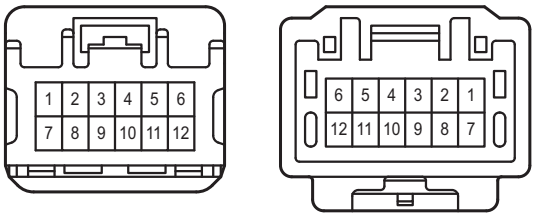

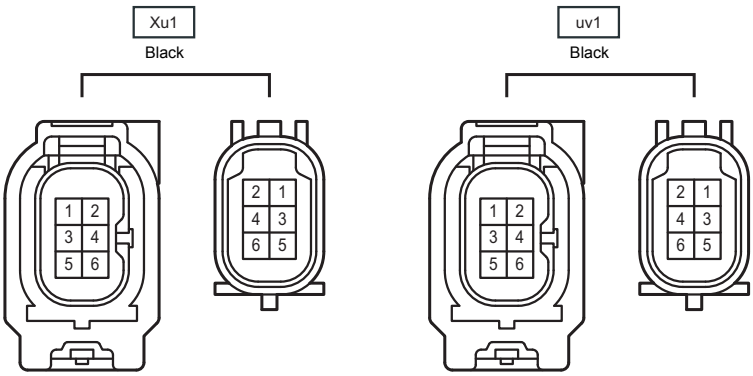
Xu1
Black
1 2
3 4
5 6
2 1
4 3
6 5
uv1
Black
1 2
3 4
5 6
2 1
4 3
6 5