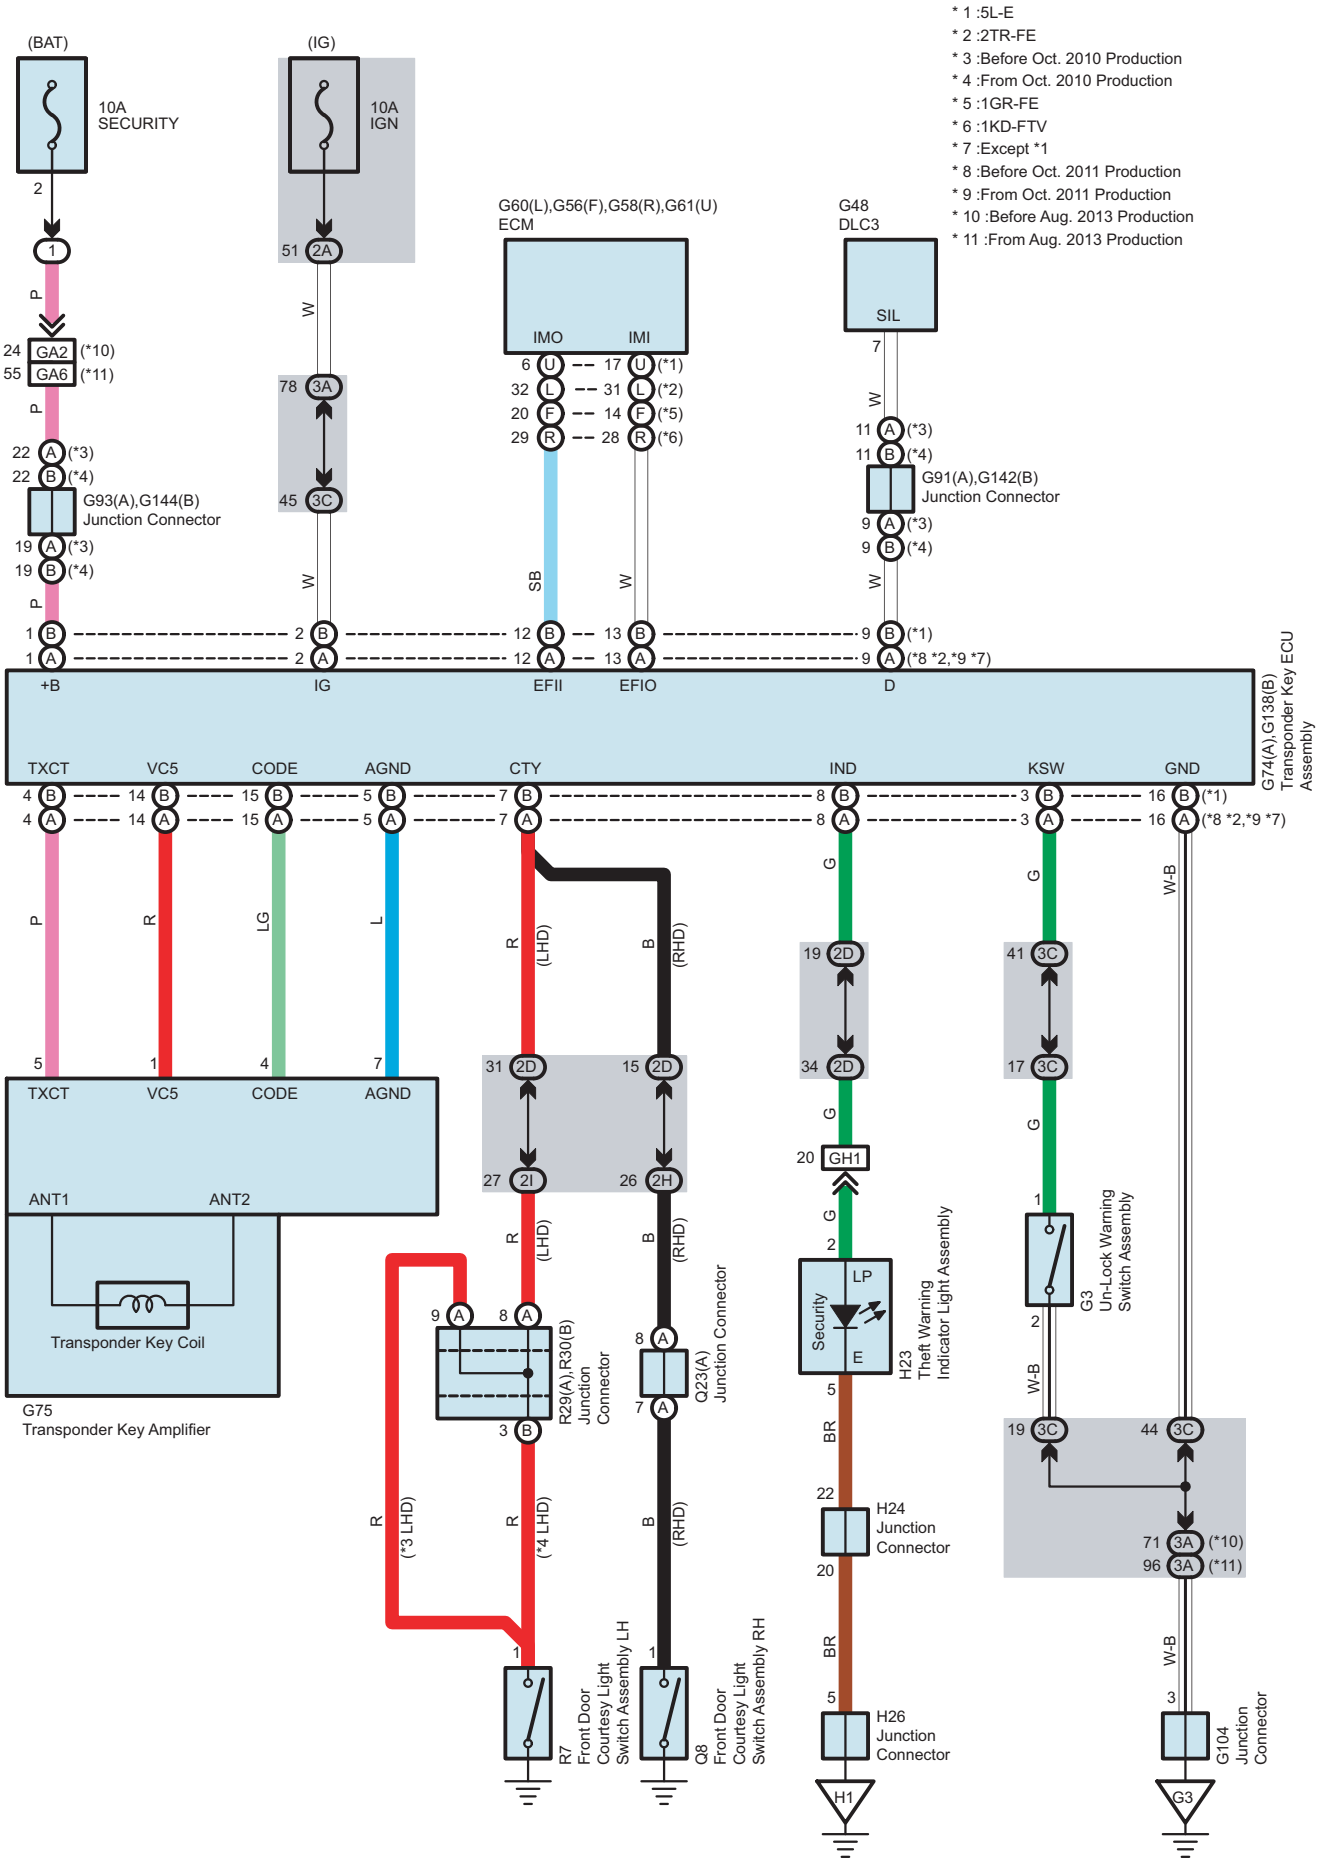
* 1 :5L-E
* 2 :2TR-FE
* 3 :Before Oct. 2010 Production
* 4 :From Oct. 2010 Production
* 5 :1GR-FE
* 6 :1KD-FTV
* 7 :Except *1
* 8 :Before Oct. 2011 Production
* 9 :From Oct. 2011 Production
* 10 :Before Aug. 2013 Production
* 11 :From Aug. 2013 Production
(BAT)
10A SECURITY
(IG)
10A IGN
G60(L),G56(F),G58(R),G61(U) ECM
IMO
IMI
G48 DLC3
SIL
GA2 (*10)
GA6 (*11)
G93(A),G144(B) Junction Connector
G91(A),G142(B) Junction Connector
+B
IG
EFII
EFIO
D
G74(A),G138(B) Transponder Key ECU Assembly
TXCT
VC5
CODE
AGND
CTY
IND
KSW
GND
(LHD)
(RHD)
ANT1
ANT2
Transponder Key Coil
G75 Transponder Key Amplifier
R29(A),R30(B) Junction Connector
Q23(A) Junction Connector
(*3 LHD)
(*4 LHD)
R7 Front Door Courtesy Light Switch Assembly LH
Q8 Front Door Courtesy Light Switch Assembly RH
GH1
Security
LP
E
H23 Theft Warning Indicator Light Assembly
H24 Junction Connector
H26 Junction Connector
H1
G3 Un-Lock Warning Switch Assembly
G104 Junction Connector
G3

G3
White

G48
White

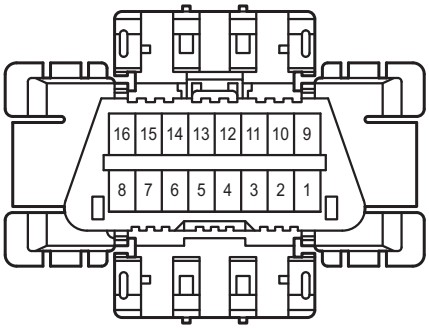

G56
White

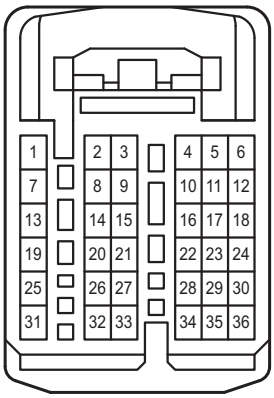

G58
White

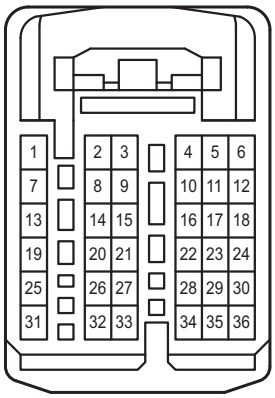

G60
White

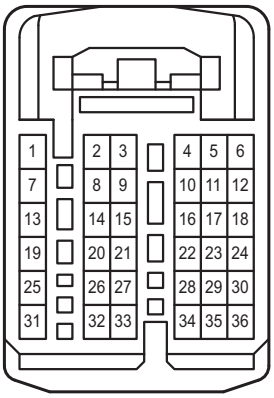

G61
White

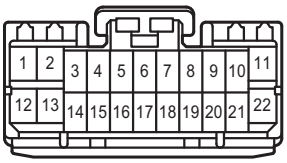

G74
Black

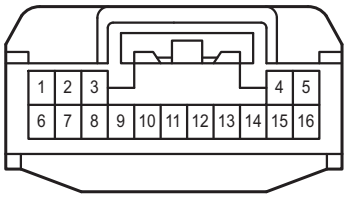

G75
Black

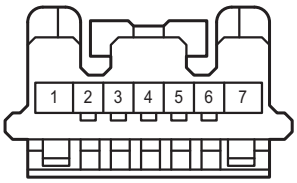

G91
Gray

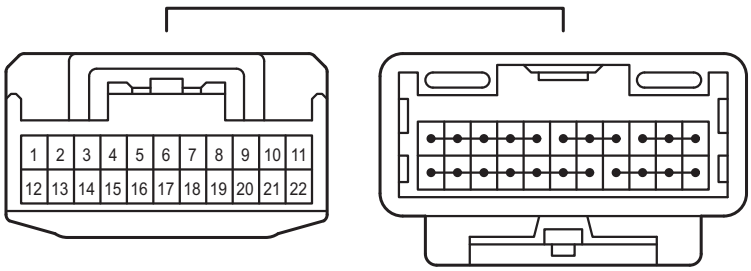

G93
Gray

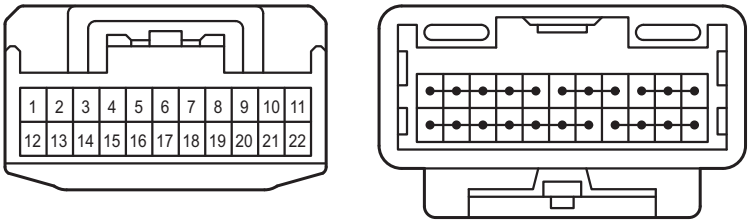

G104
White

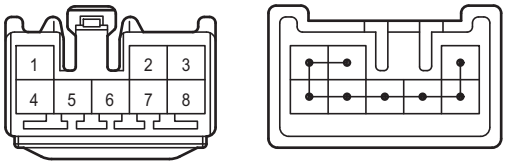

G138
White

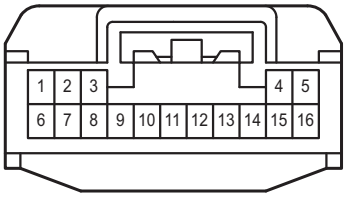

G142
White

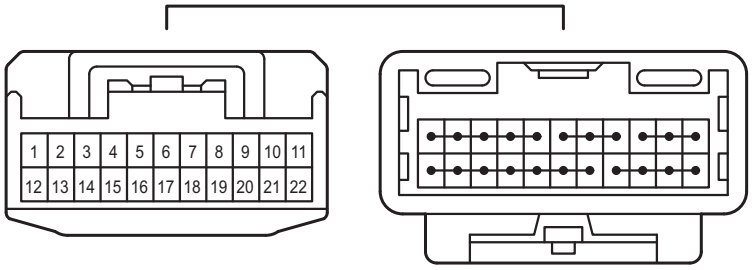

G144
White

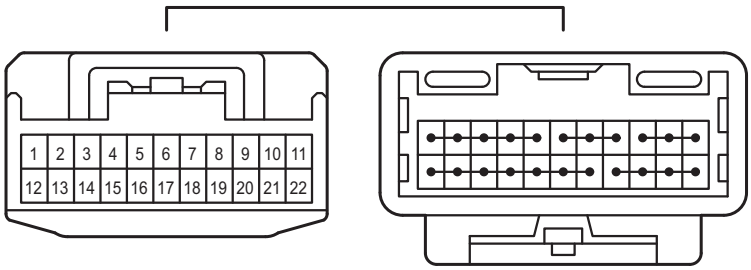

H23
White

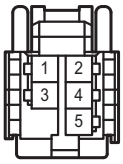

H24
White

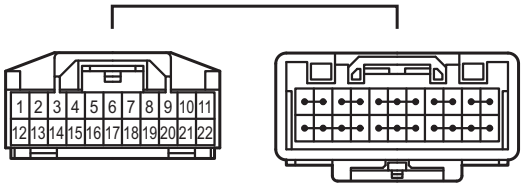

H26
White

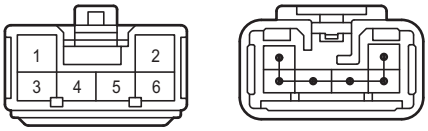

Q8
Black

Q23
White

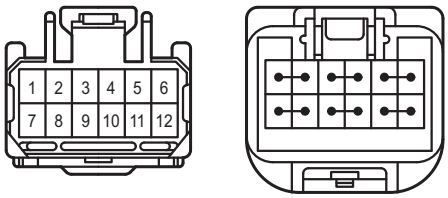

R7
Black

R29
Blue

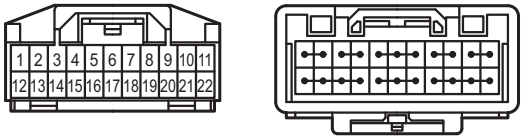

R30
Blue

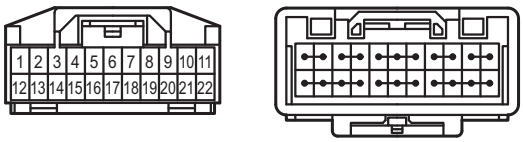

2A
White

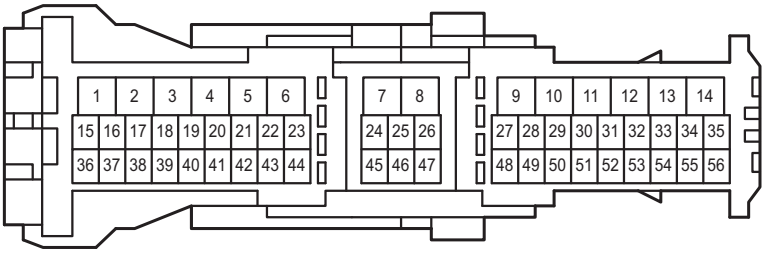

2D
White

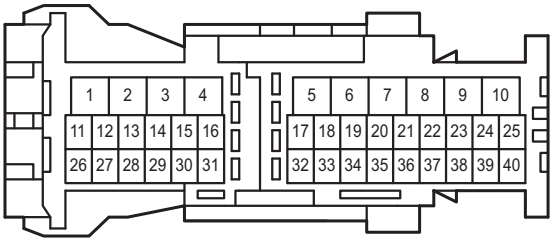

2H
White

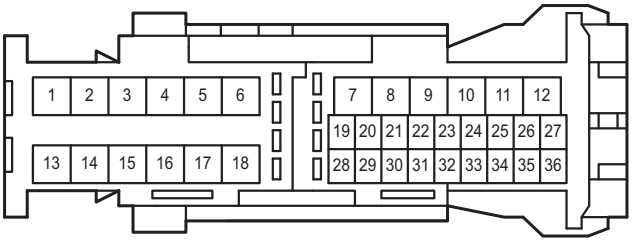

2I
White

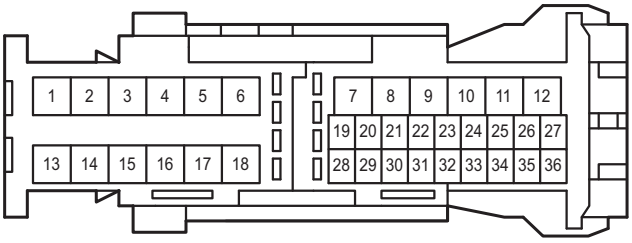

3A
White

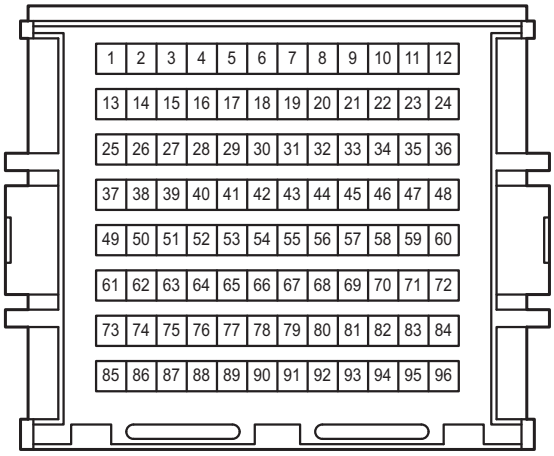

3C
White

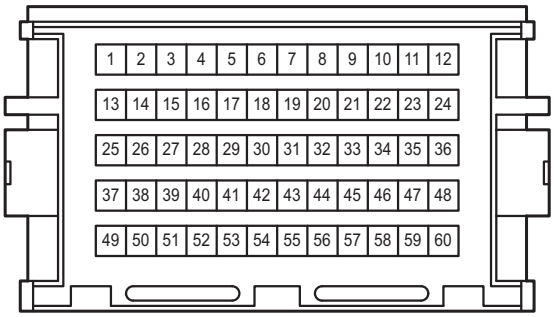

GA2
White

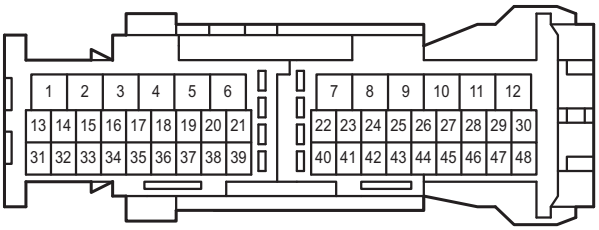

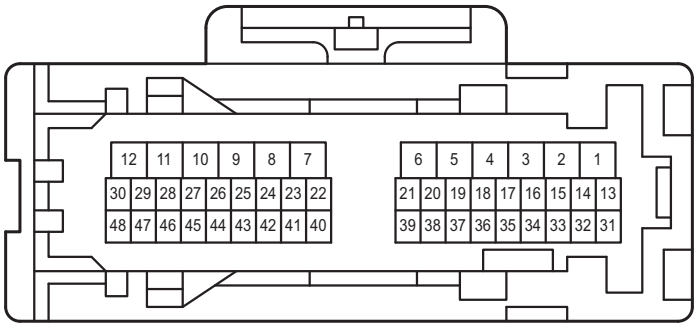

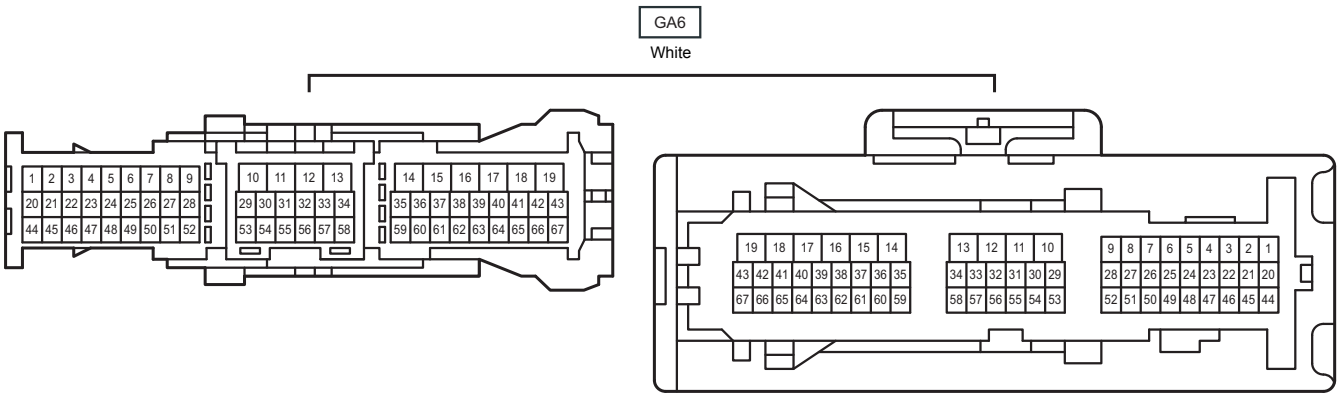
GA6
White

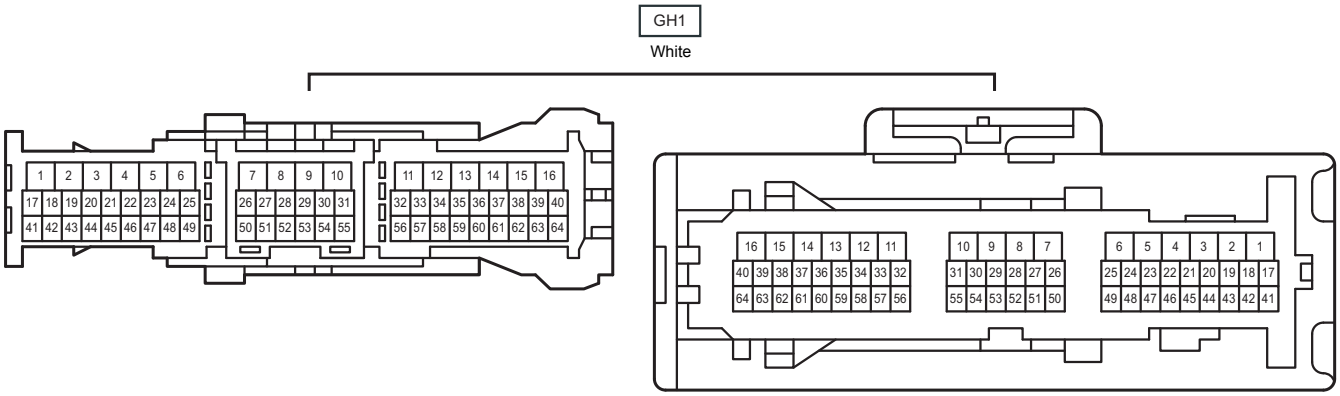
GH1
White