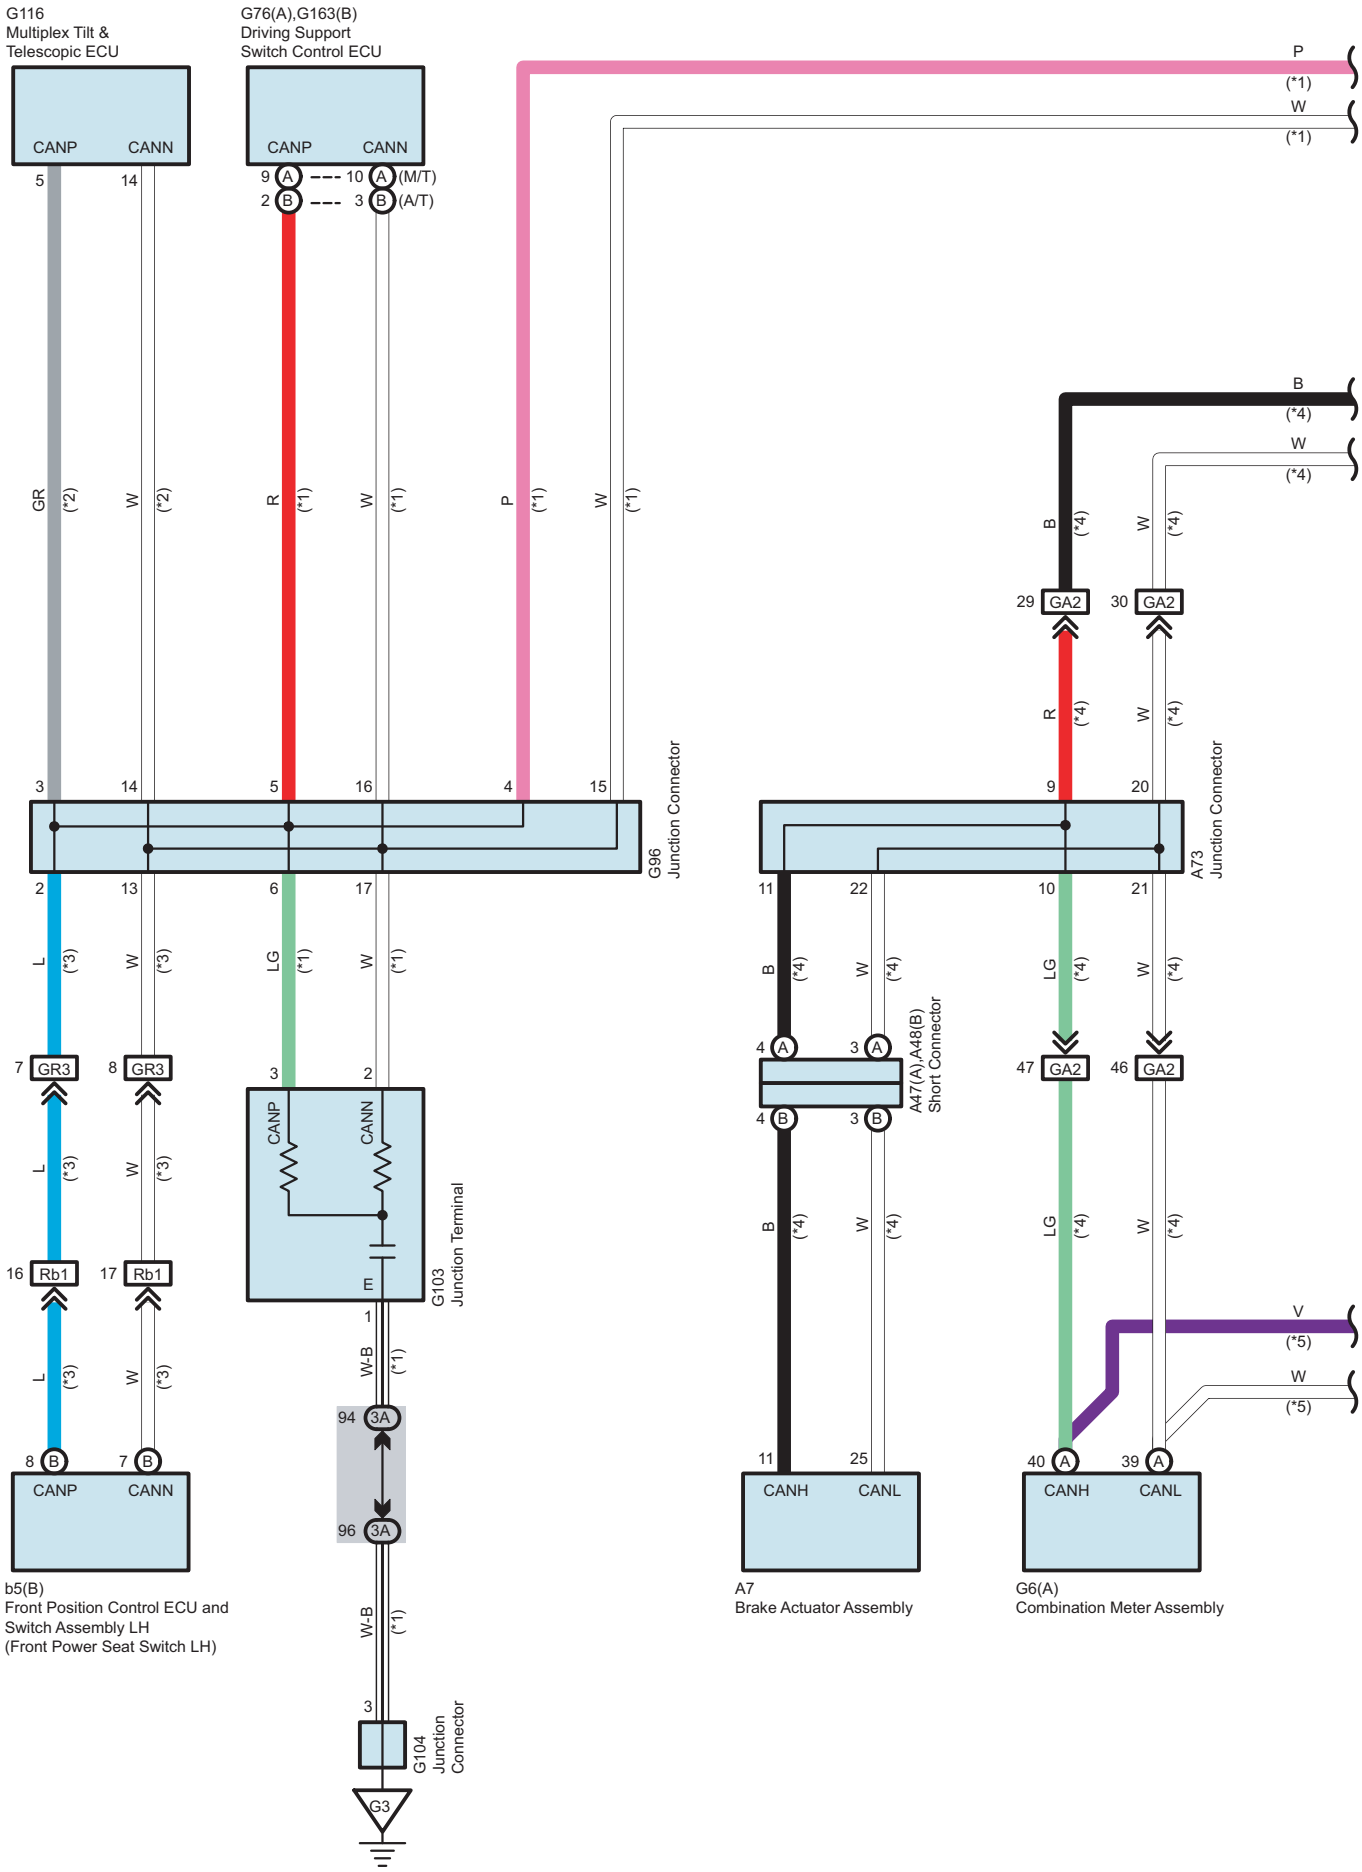
G116
Multiplex Tilt &
Telescopic ECU
CANP
CANN
G76(A),G163(B)
Driving Support
Switch Control ECU
CANP
CANN
(M/T)
(A/T)
P
(*1)
W
(*1)
B
(*4)
W
(*4)
GR
(*2)
W
(*2)
R
(*1)
W
(*1)
P
(*1)
W
(*1)
G96
Junction Connector
A73
Junction Connector
L
(*3)
W
(*3)
LG
(*1)
W
(*1)
GR3
GR3
Rb1
Rb1
CANP
CANN
G103
Junction Terminal
W-B
(*1)
3A
3A
W-B
(*1)
G104
Junction
Connector
G3
GA2
GA2
GA2
GA2
A47(A),A48(B)
Short Connector
V
(*5)
W
(*5)
CANP
CANN
b5(B)
Front Position Control ECU and
Switch Assembly LH
(Front Power Seat Switch LH)
CANH
CANL
A7
Brake Actuator Assembly
CANH
CANL
G6(A)
Combination Meter Assembly

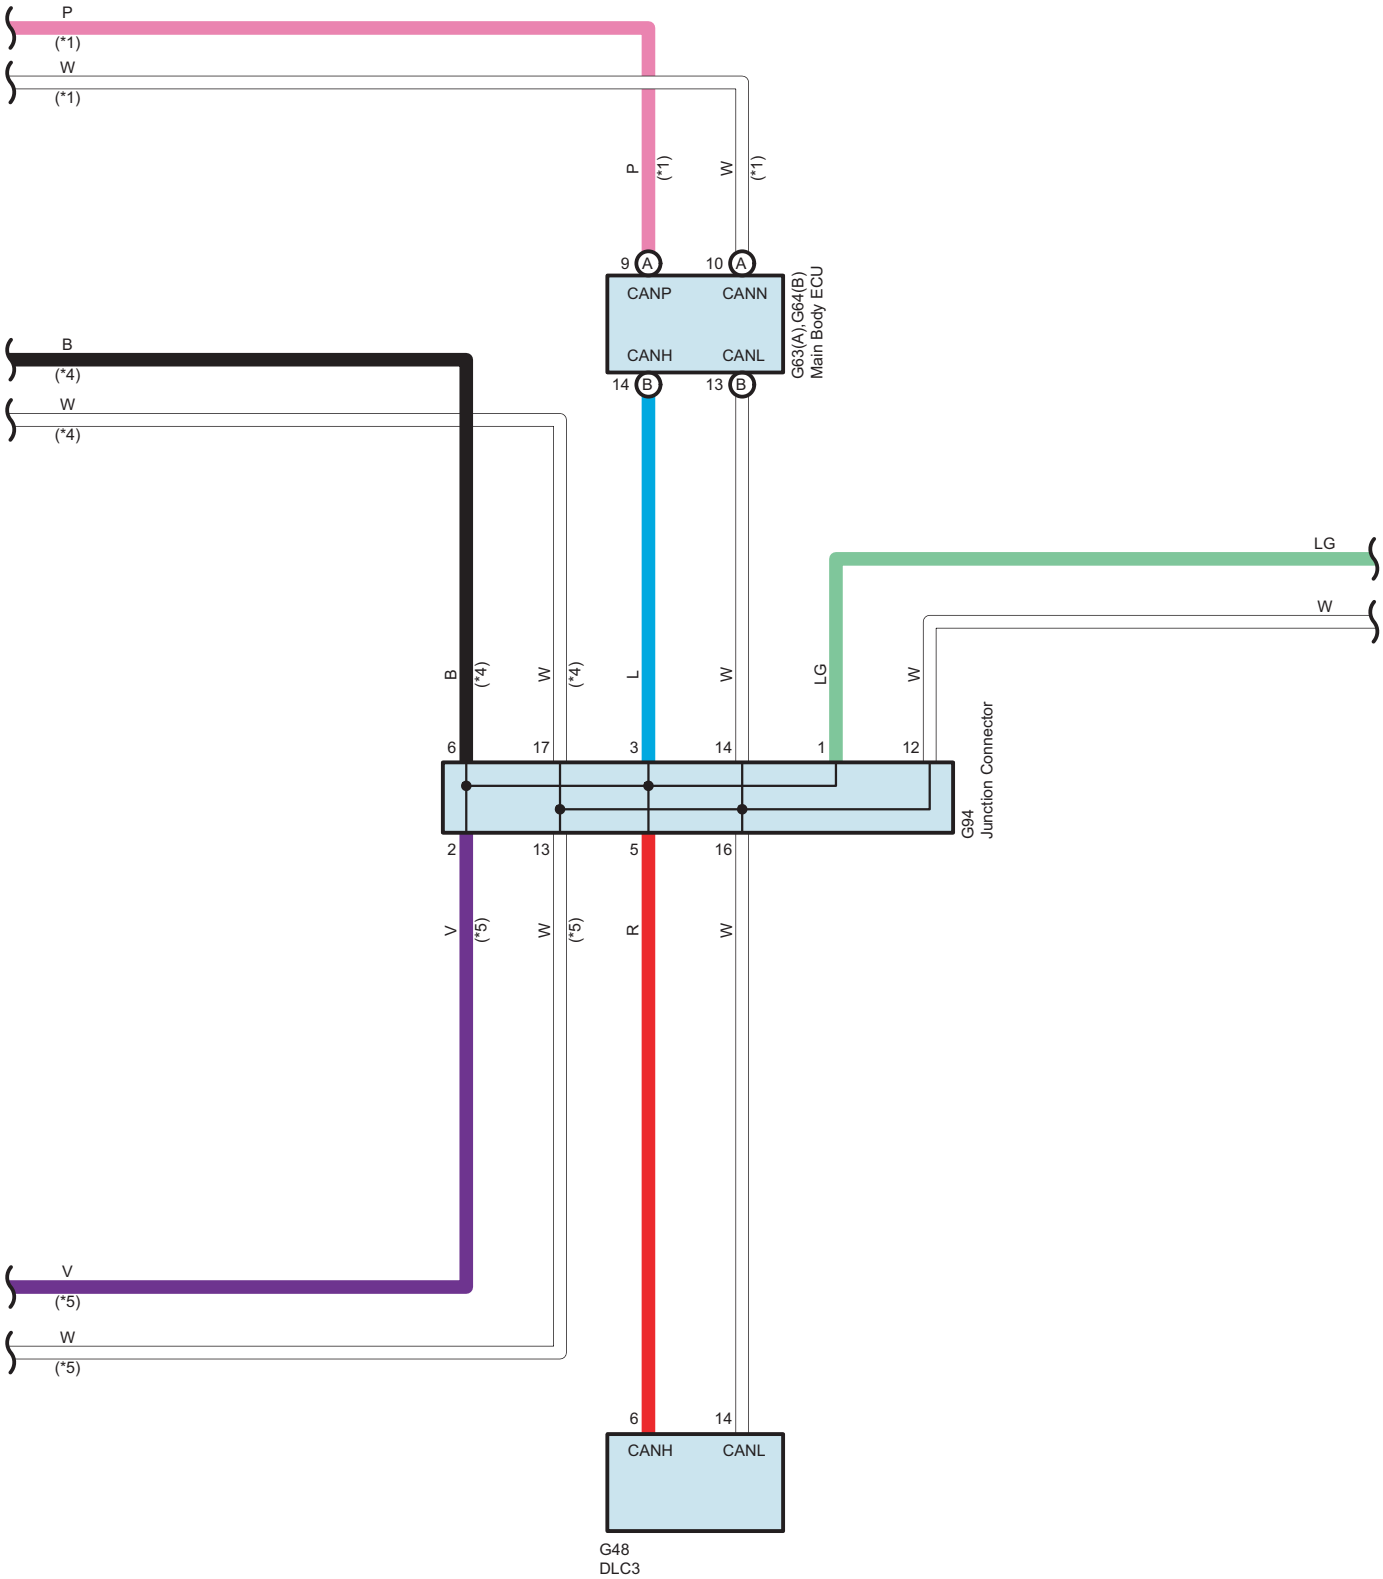

* 1 :Except 5L-E
* 2 :w/ Power Tilt and Power Telescopic
* 3 :w/ Power Seat (LHD Driver's Seat w/ Seat Position Memory)
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E

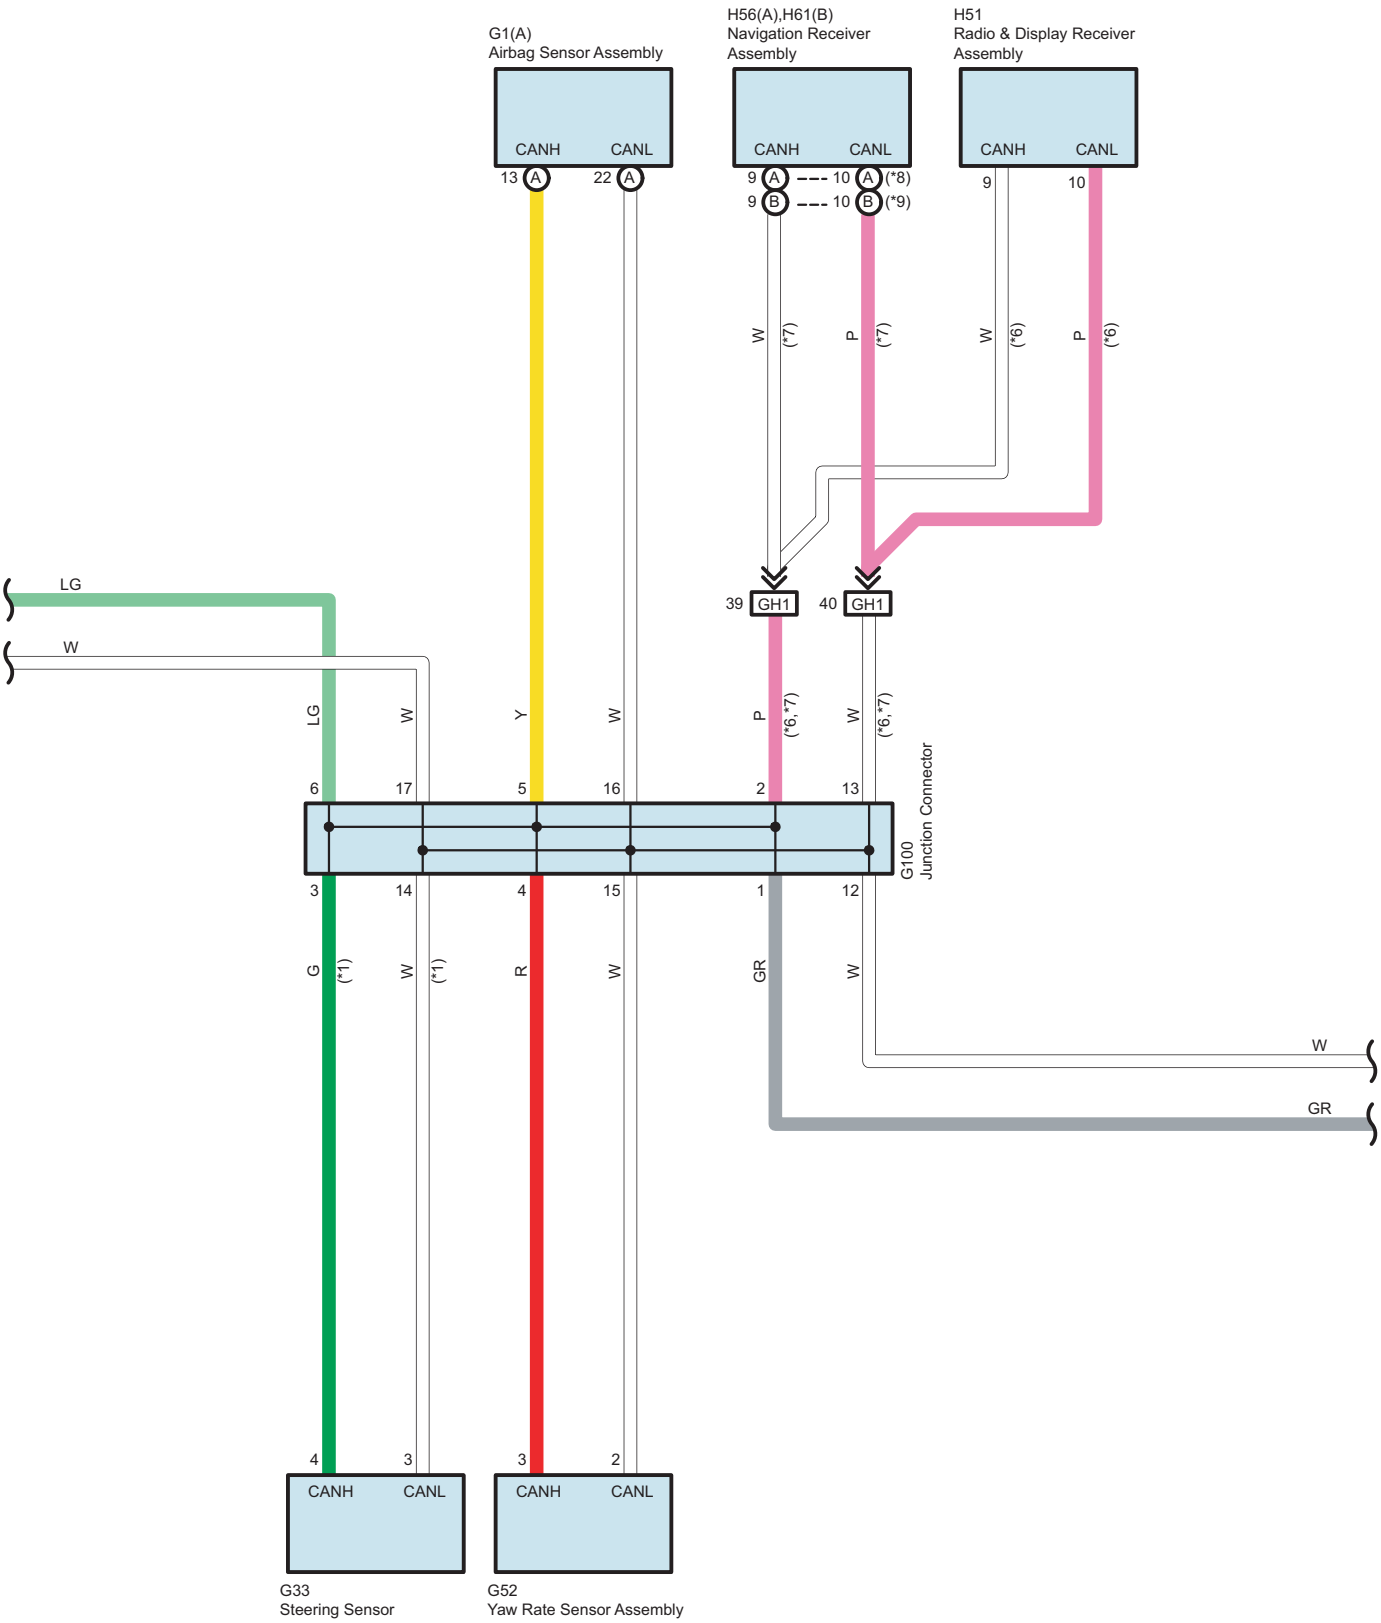
G1(A)
Airbag Sensor Assembly
CANH
CANL
13 A
22 A
H56(A),H61(B)
Navigation Receiver
Assembly
CANH
CANL
9 A
10 A (*8)
9 B
10 B (*9)
H51
Radio & Display Receiver
Assembly
CANH
CANL
9
10
W
(*7)
P
(*7)
W
(*6)
P
(*6)
39 GH1
40 GH1
LG
W
LG
W
Y
W
P
(*6, *7)
W
(*6, *7)
6
17
5
16
2
13
G100
Junction Connector
3
14
4
15
1
12
G
(*1)
W
(*1)
R
W
GR
W
W
GR
4
3
CANH
CANL
G33
Steering Sensor
3
2
CANH
CANL
G52
Yaw Rate Sensor Assembly

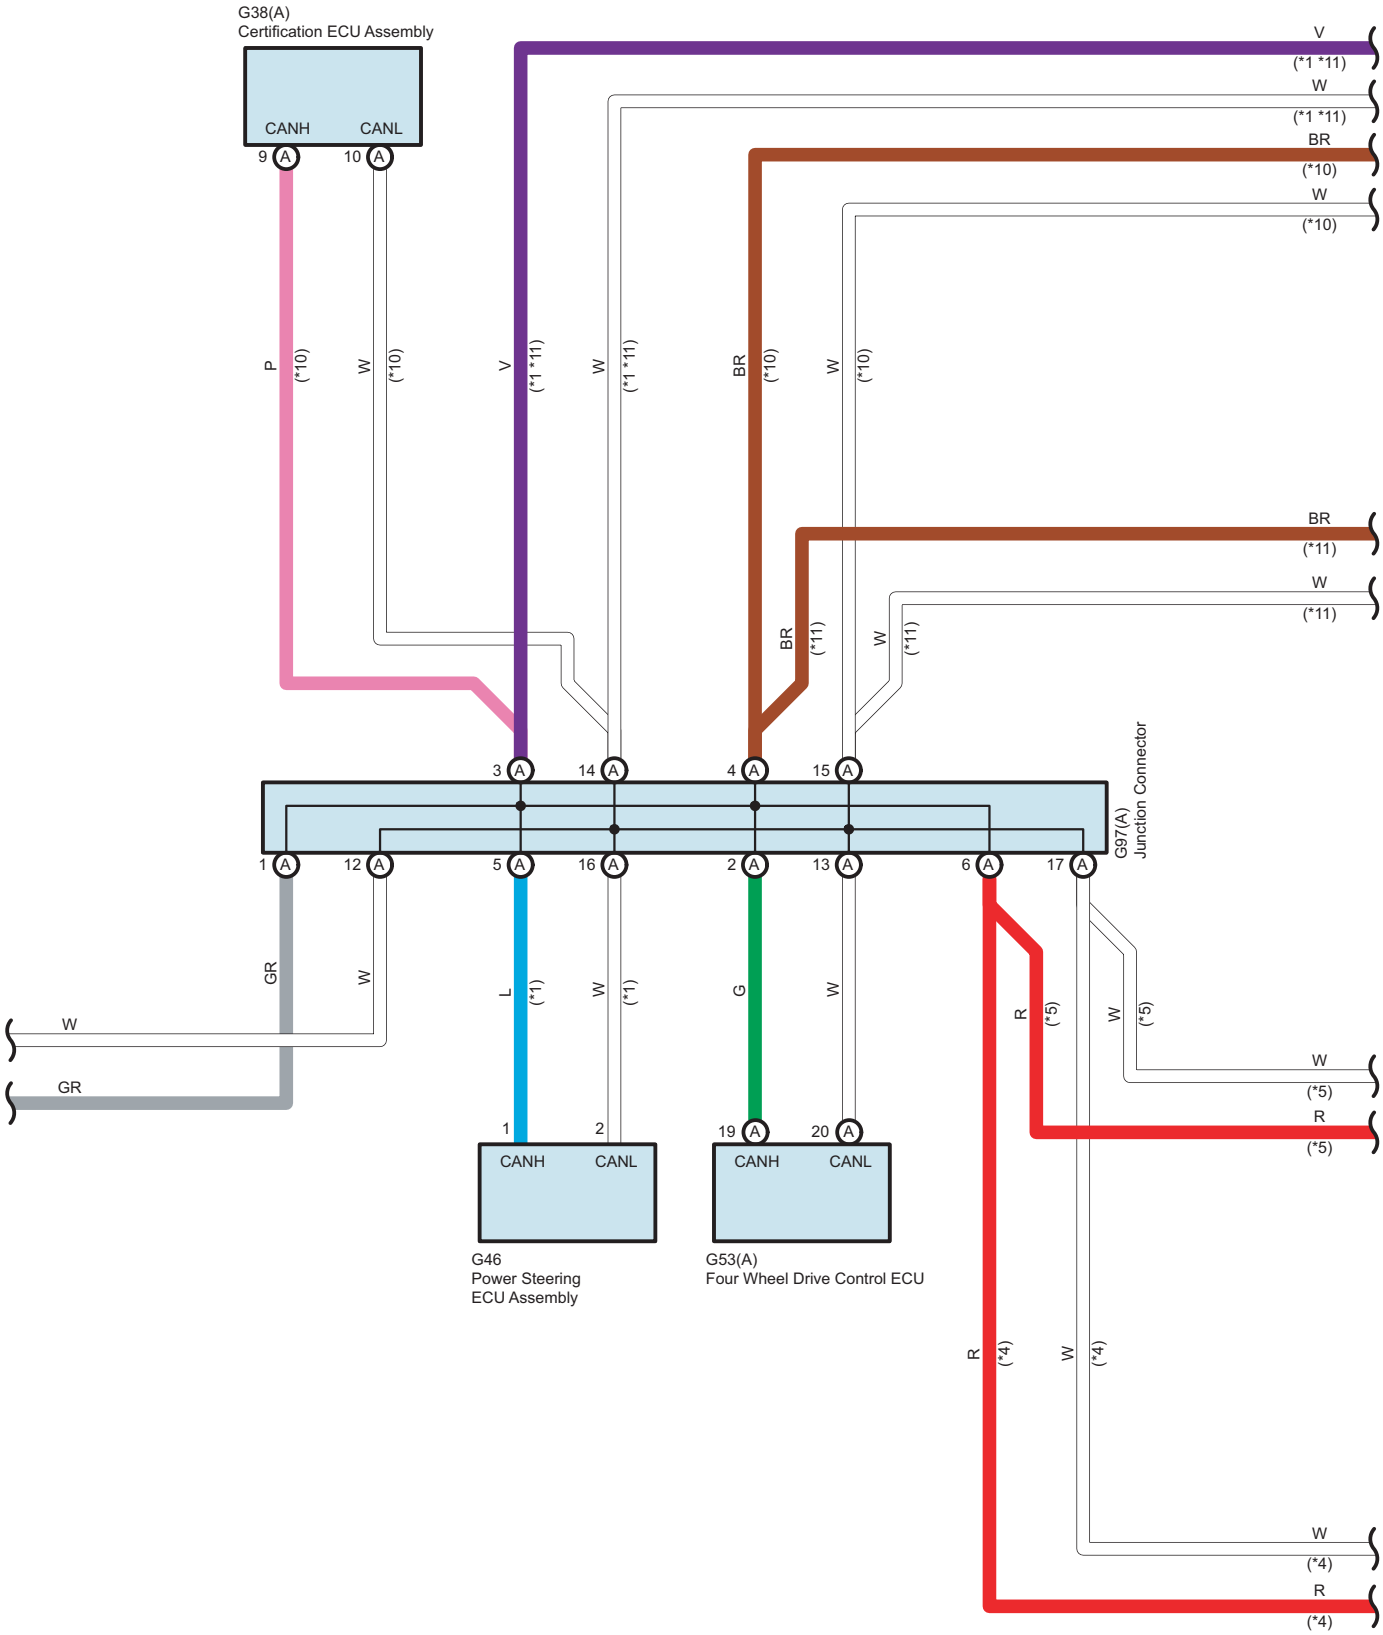

* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E
* 6 :Radio & Display Receiver Assembly Type
* 7 :Navigation Receiver Assembly Type
* 8 :Except China
* 9 :China
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System

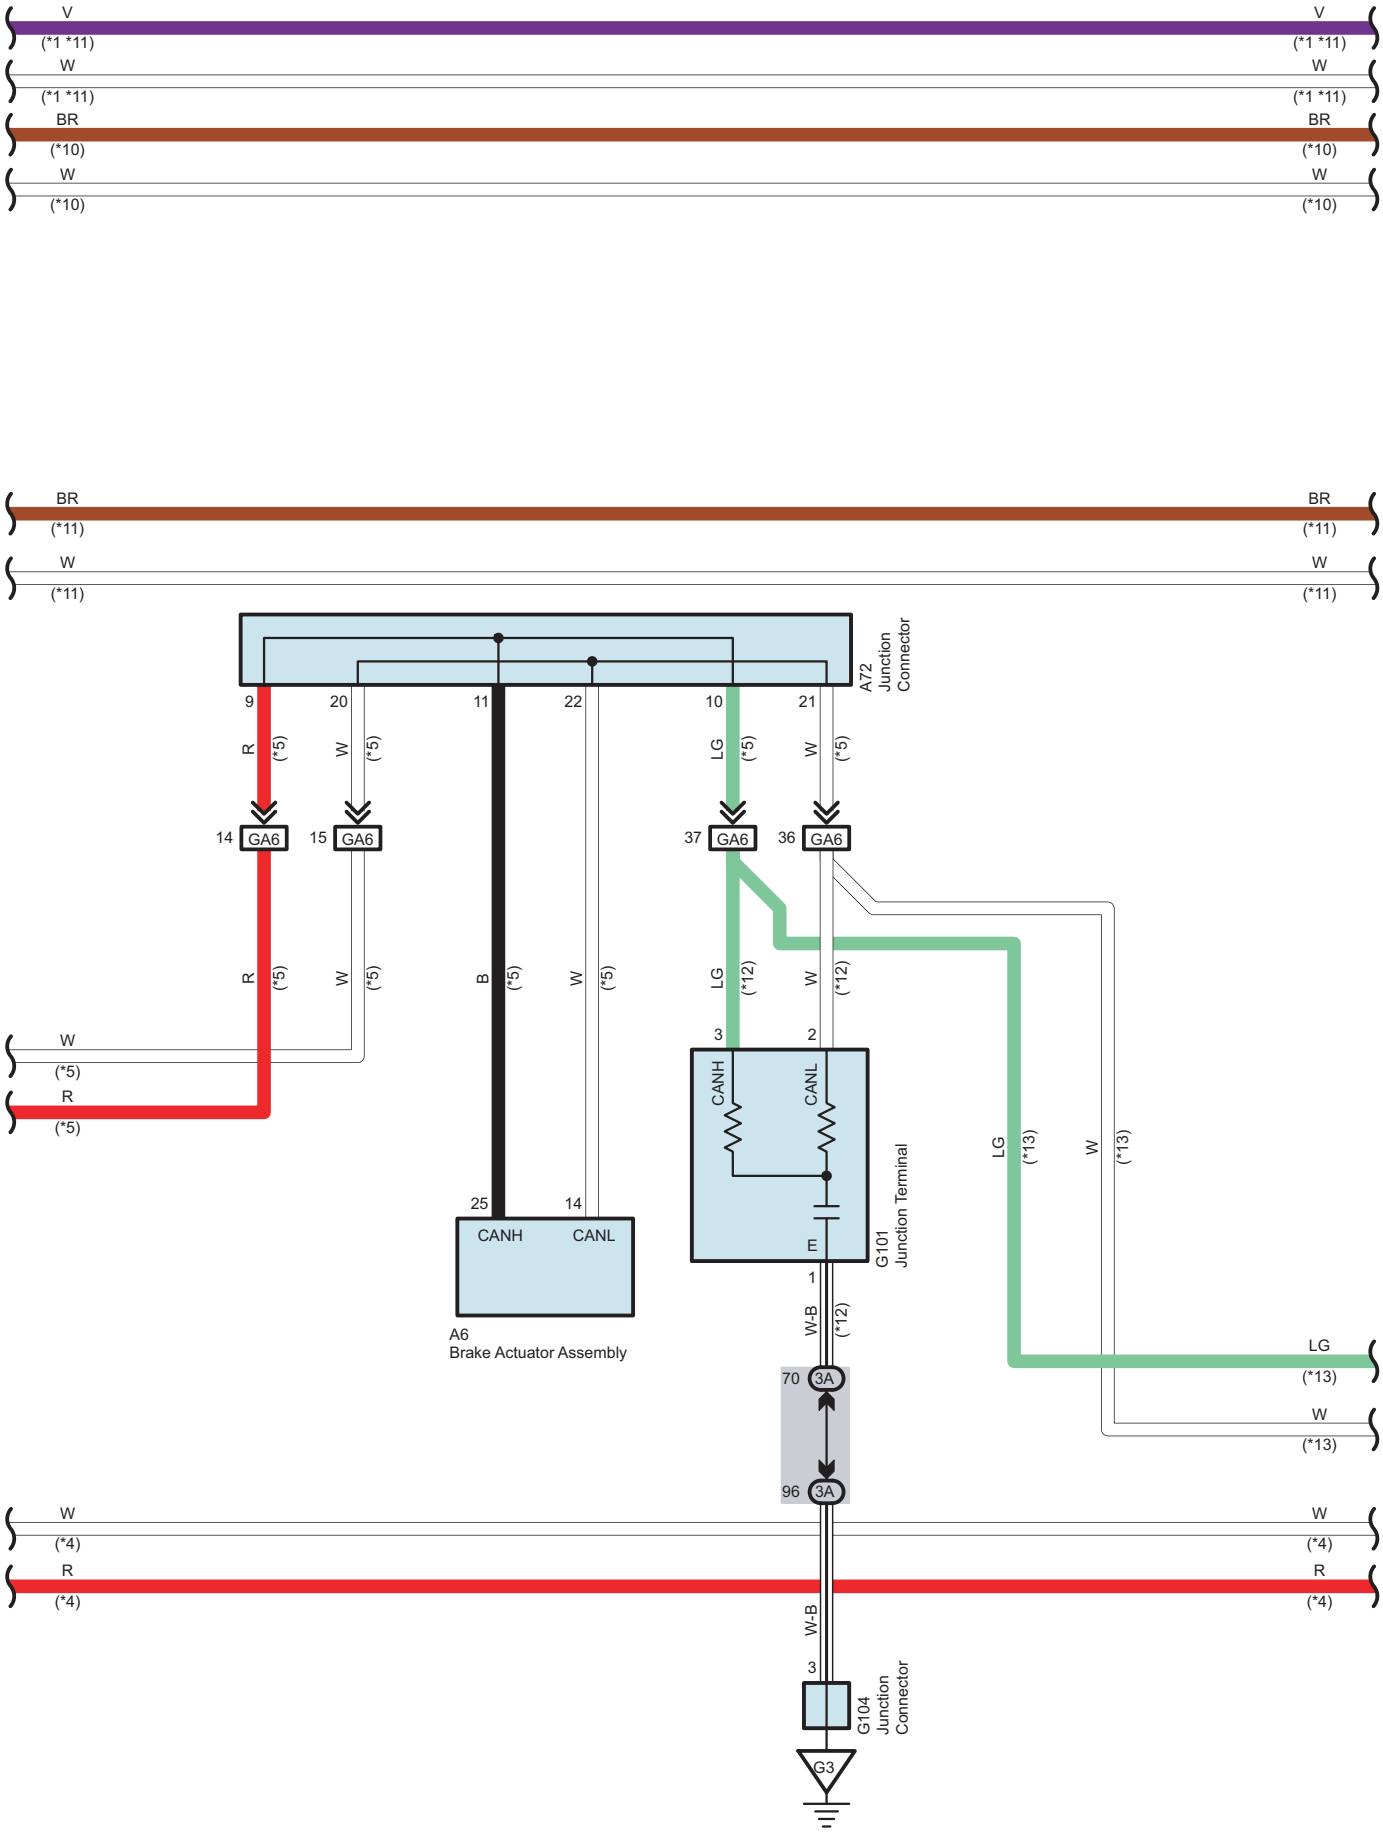
V
(*1 *11)
W
(*1 *11)
BR
(*10)
W
(*10)
BR
(*11)
W
(*11)
A72
Junction
Connector
9
20
11
22
10
21
R
(*5)
W
(*5)
LG
(*5)
W
(*5)
14
GA6
15
GA6
37
GA6
36
GA6
R
(*5)
W
(*5)
B
(*5)
W
(*5)
LG
(*12)
W
(*12)
3
2
CANH
CANL
E
G101
Junction Terminal
LG
(*13)
W
(*13)
25
14
CANH
CANL
A6
Brake Actuator Assembly
1
W-B
(*12)
70
3A
96
3A
W
(*4)
R
(*4)
W-B
3
G104
Junction
Connector
G3

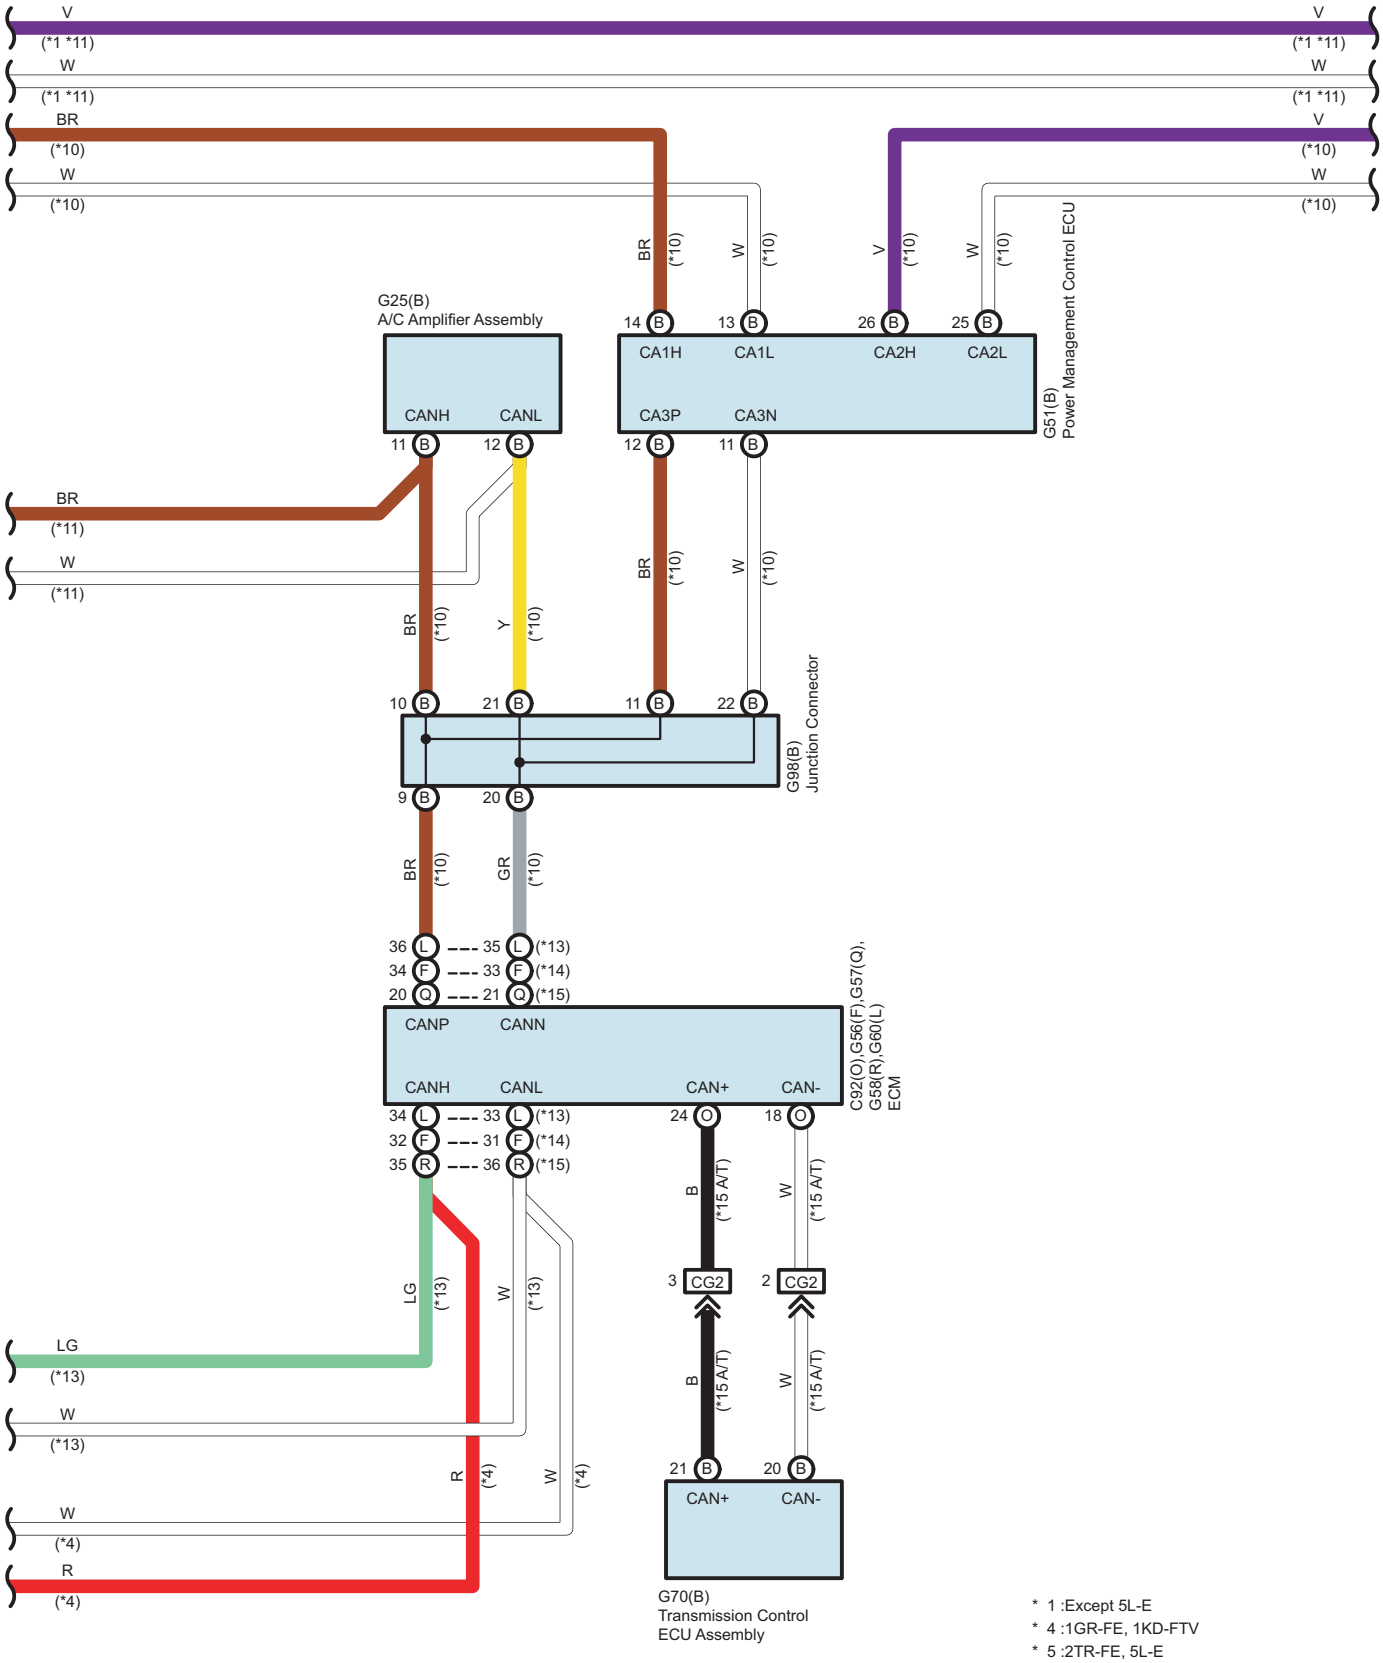

* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 5 :2TR-FE, 5L-E
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 12 :5L-E
* 13 :2TR-FE
* 14 :1GR-FE
* 15 :1KD-FTV

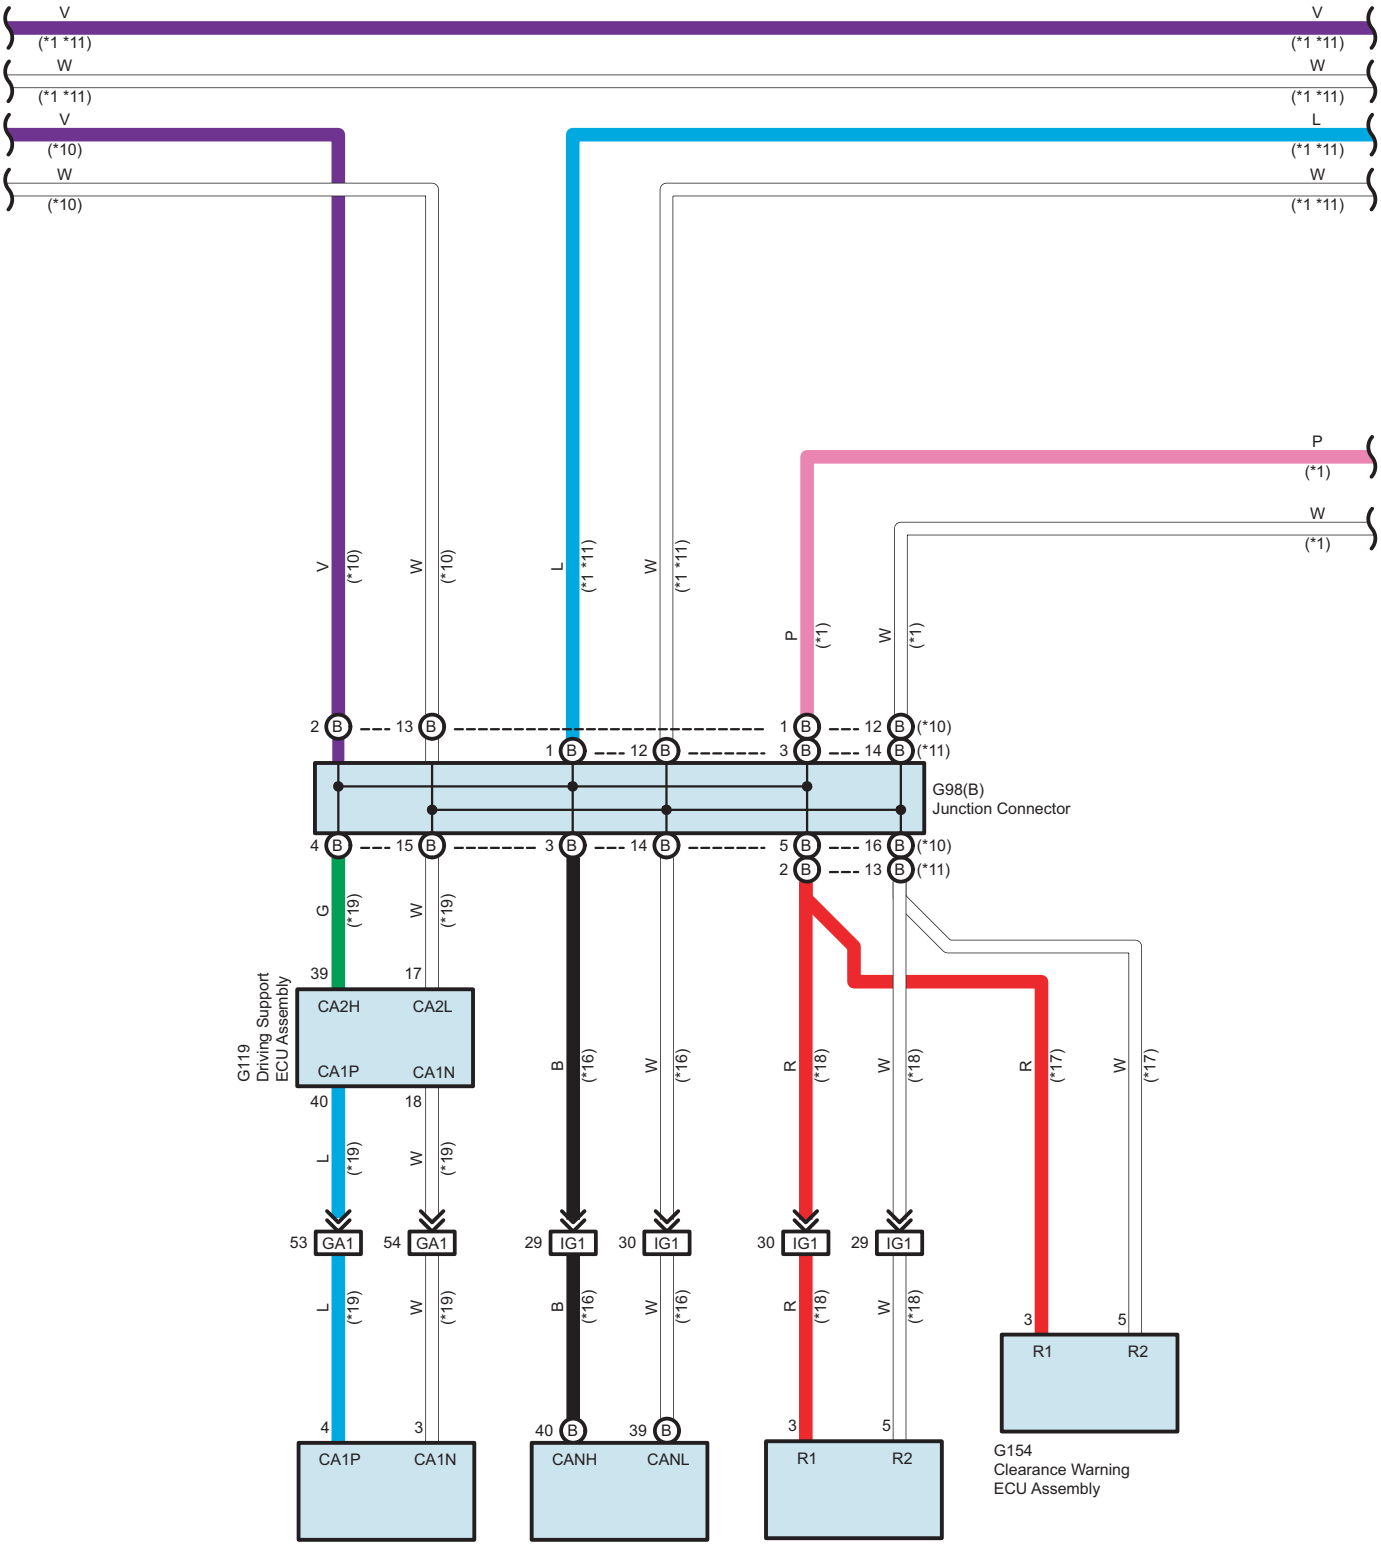

* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 16 :w/ Multi-Terrain Monitor
* 17 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
* 18 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 20 :w/ Blind Spot Monitor System
* 21 :w/o Blind Spot Monitor System
* 22 :w/ Electronic Modulated Air Suspension
* 23 :LED Type

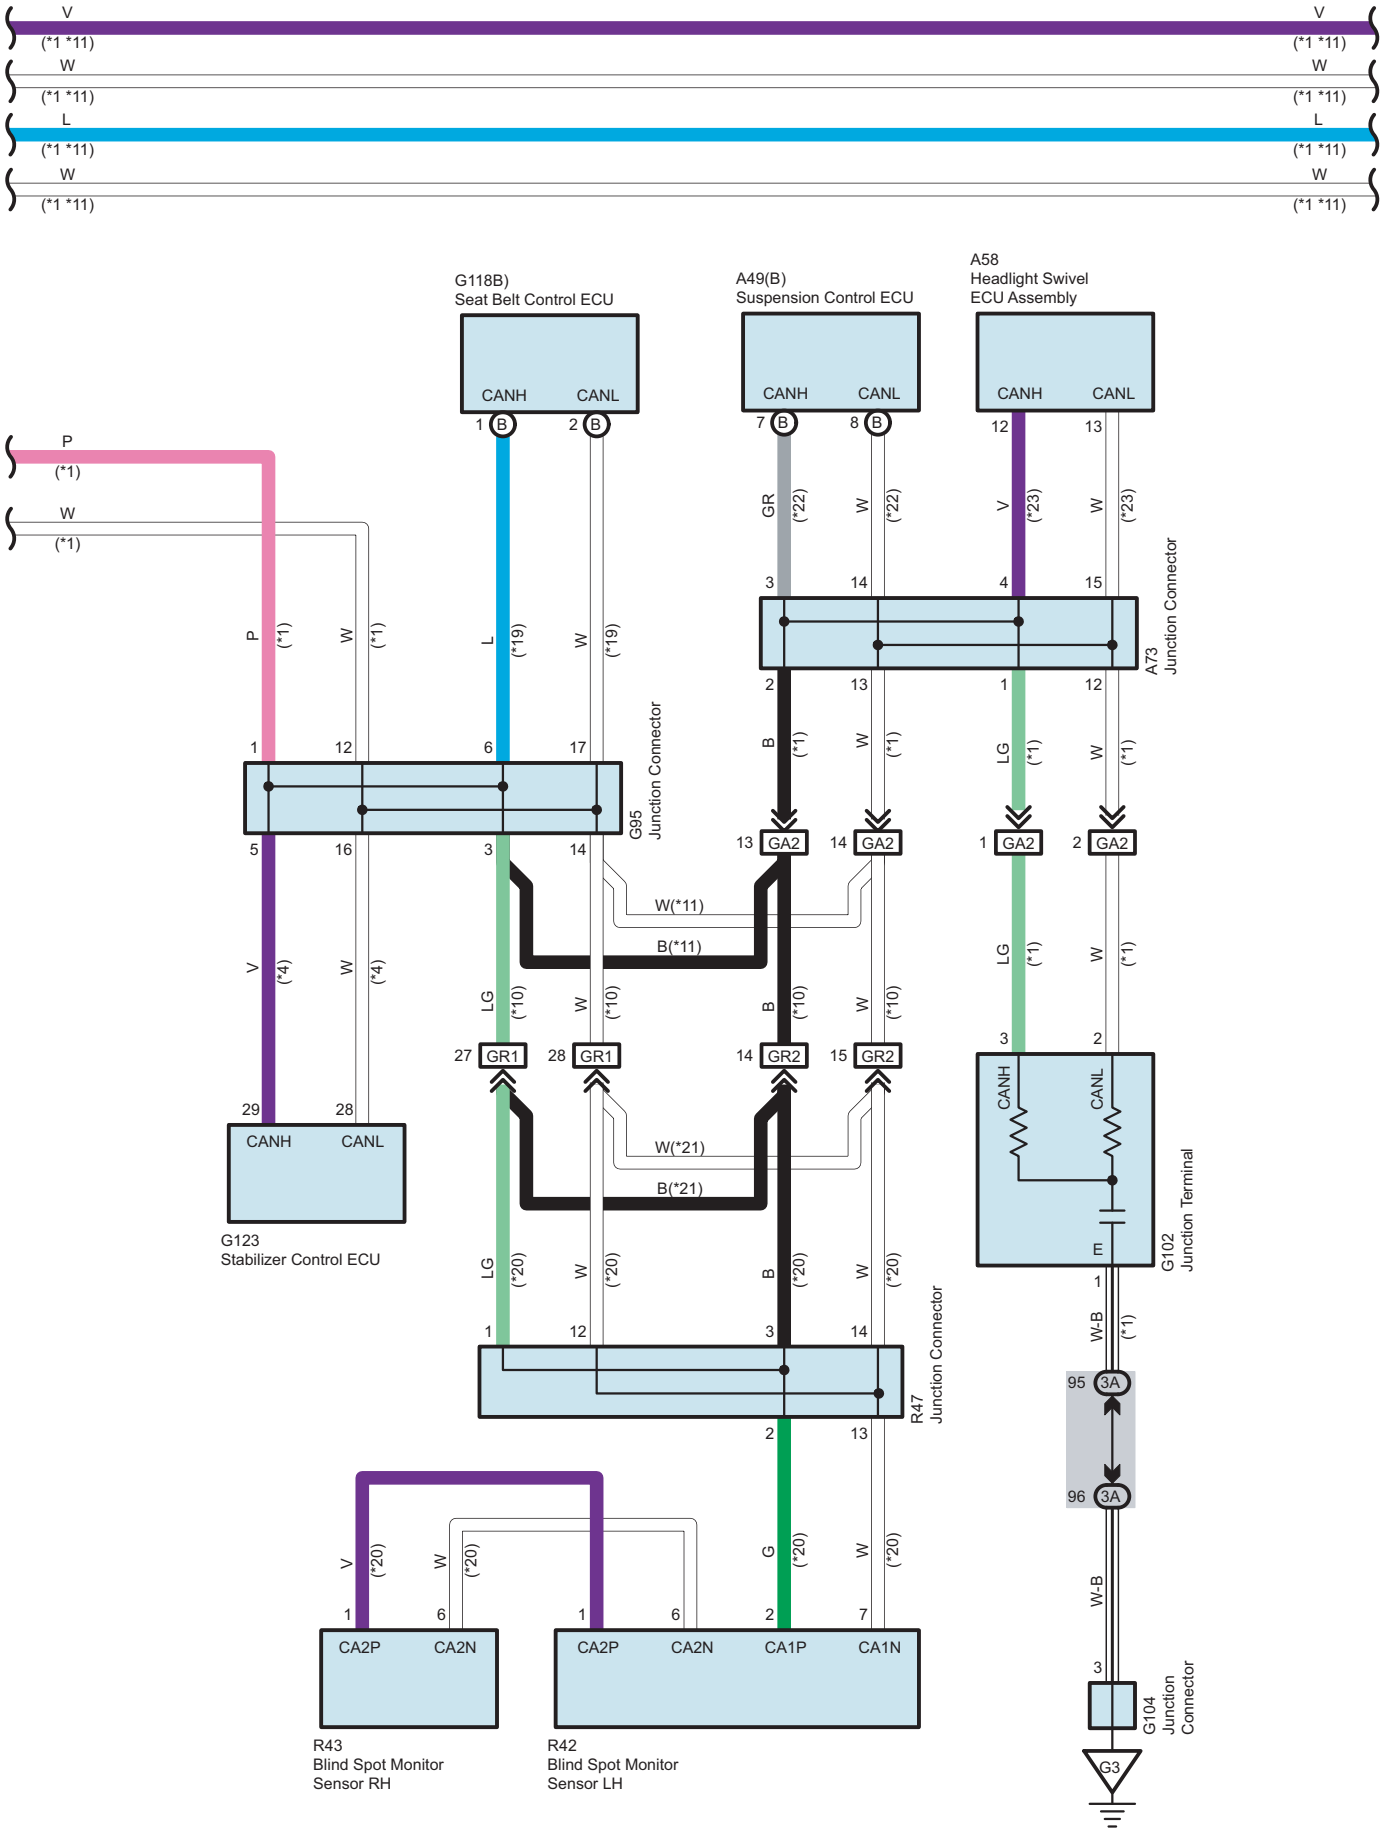
V (*1 *11)
W (*1 *11)
L (*1 *11)
W (*1 *11)
G118B)
Seat Belt Control ECU
A49(B)
Suspension Control ECU
A58
Headlight Swivel
ECU Assembly
CANH
CANL
P (*1)
W (*1)
A73
Junction Connector
G95
Junction Connector
GA2
GR1
GR2
W(*11)
B(*11)
W(*21)
B(*21)
G123
Stabilizer Control ECU
R47
Junction Connector
G102
Junction Terminal
W-B
3A
G104
Junction
Connector
G3
CA2P
CA2N
CA1P
CA1N
R43
Blind Spot Monitor
Sensor RH
R42
Blind Spot Monitor
Sensor LH

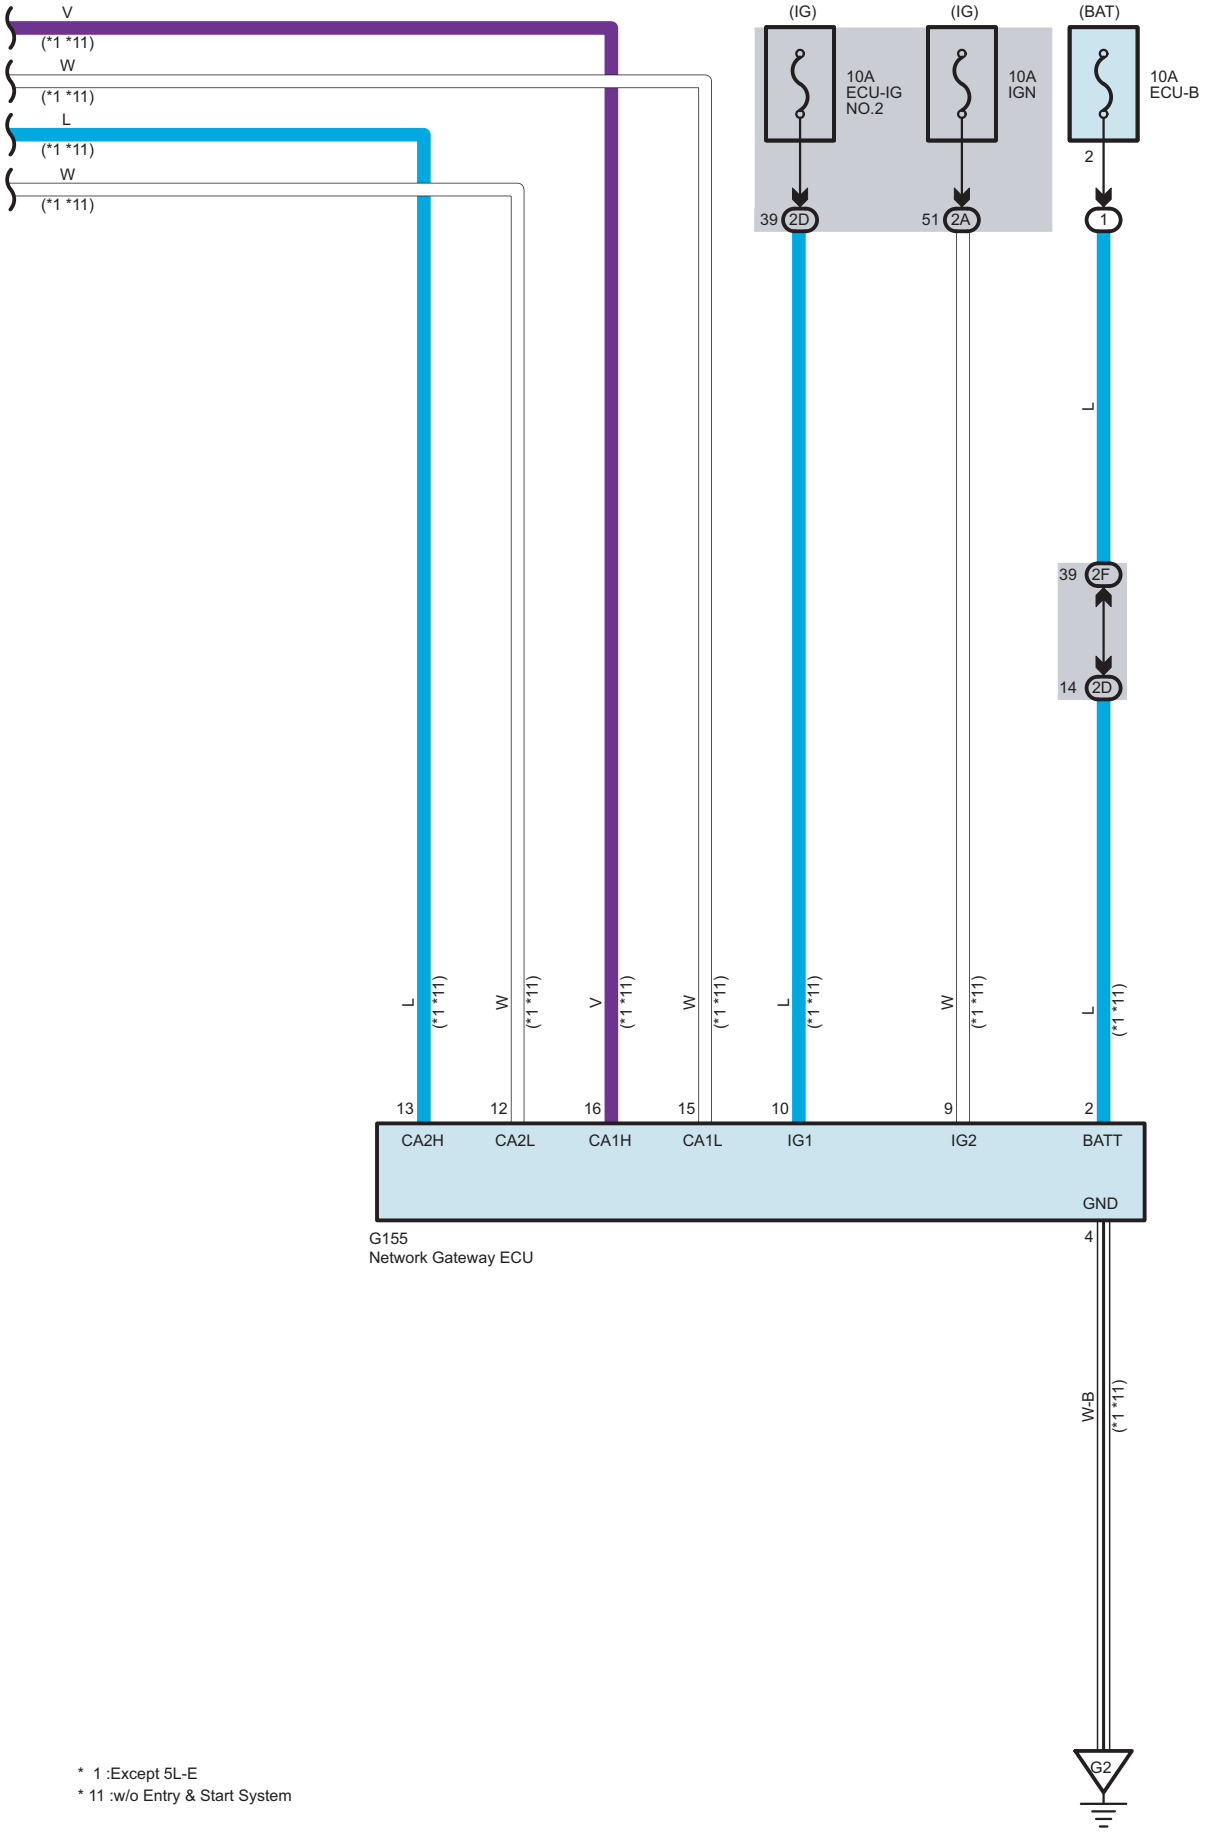

* 1 :Except 5L-E
* 11 :w/o Entry & Start System

A6
Black

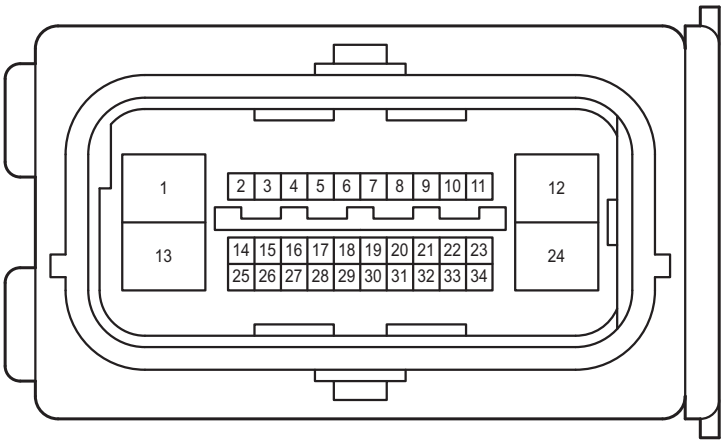

A7
Black

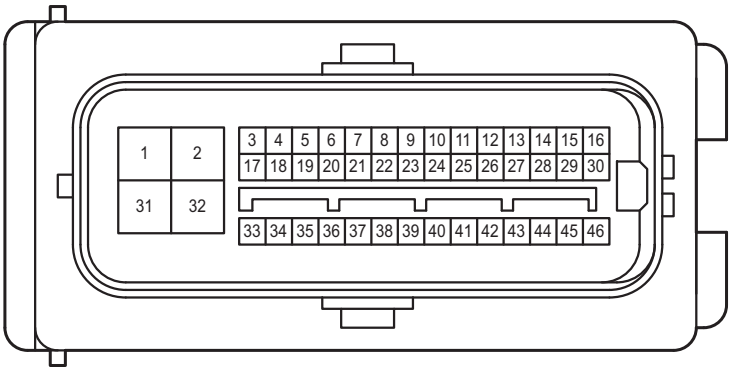

A15
Black

A47
Gray

A48
Gray

A49
Black

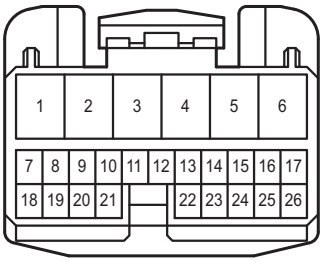

A58
White

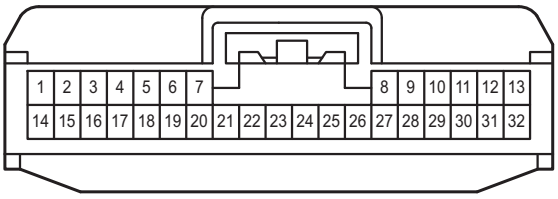

A72
White

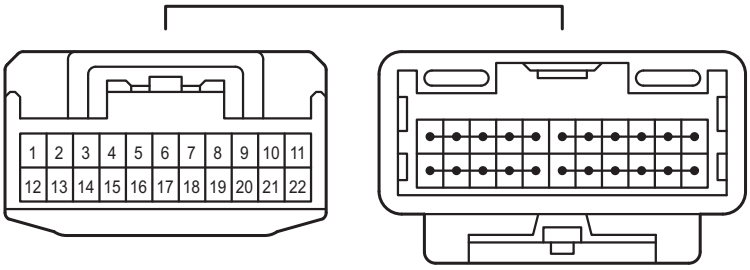

A73
White

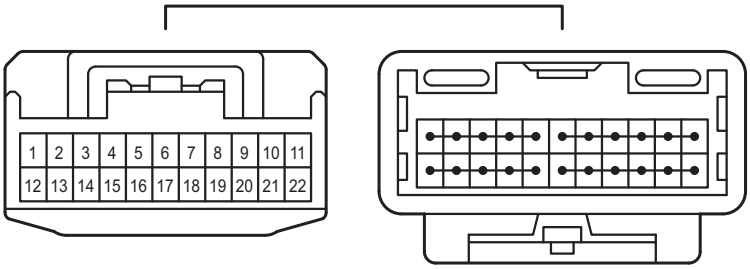

C92
White

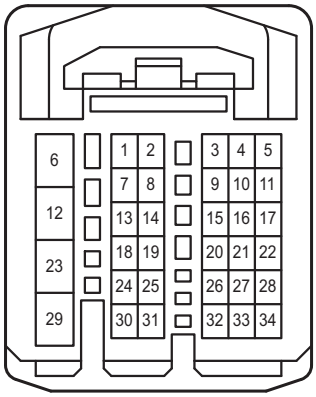

G1
Yellow

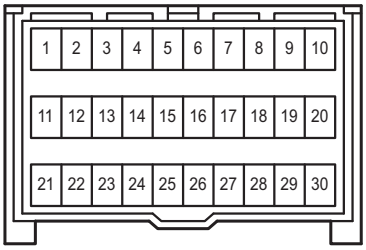

G6
Black

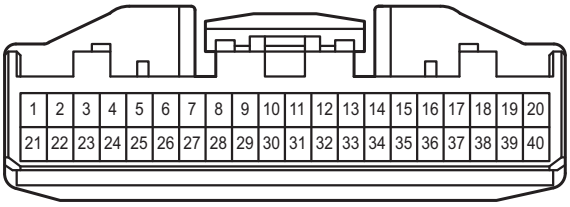

G25
White

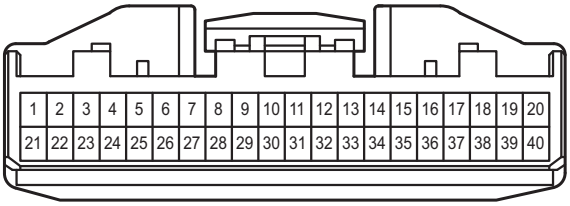

G33
White

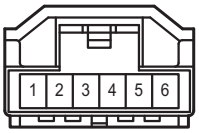

G38
White

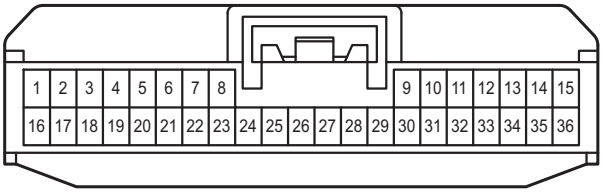

G46
White

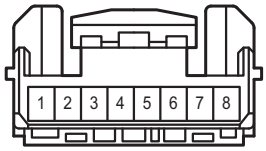

G48
White

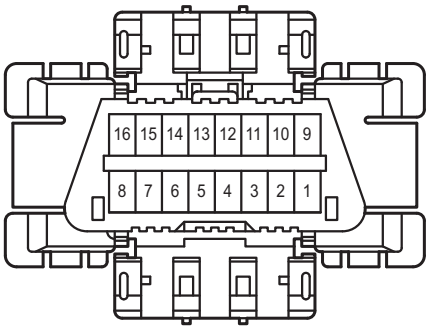

G51
Black

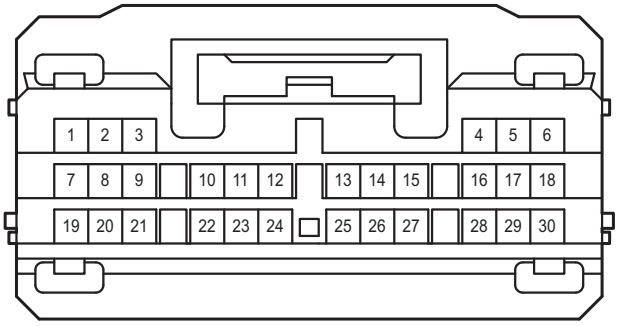

G52
Black

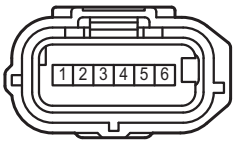

G53
Black

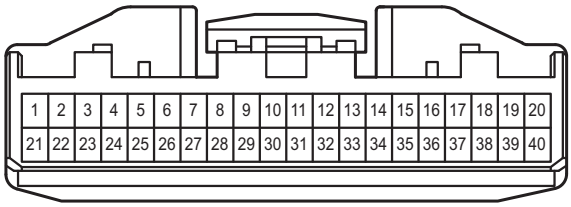

G56
White

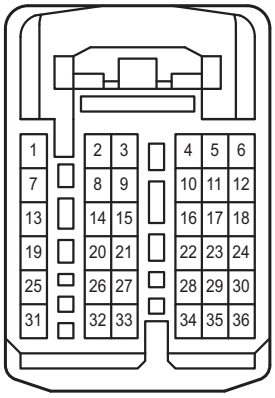

G57
White

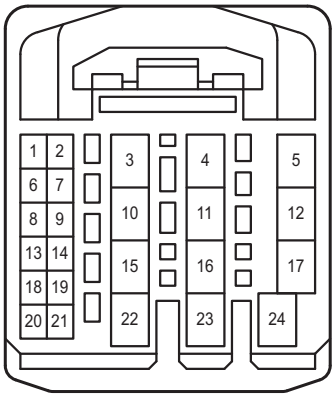

G58
White

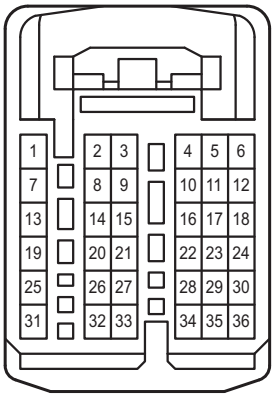

G60
White

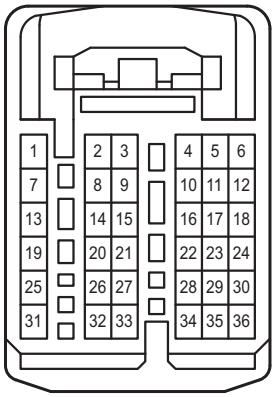

G63
White

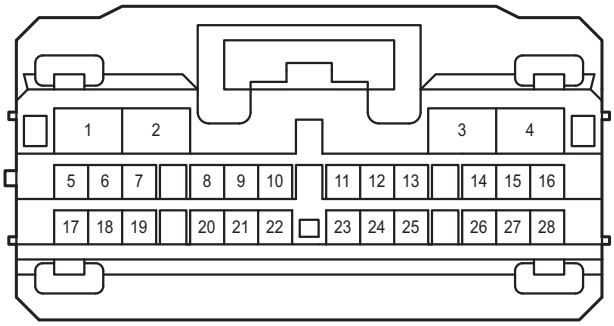

G64
White

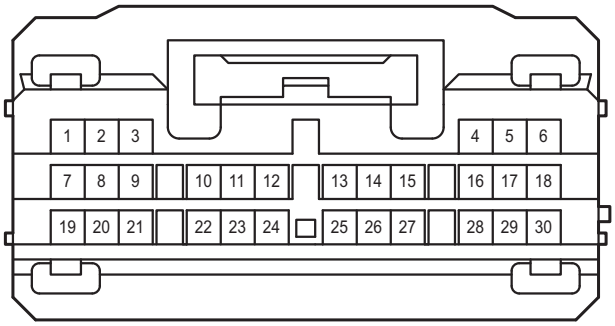

G70
White

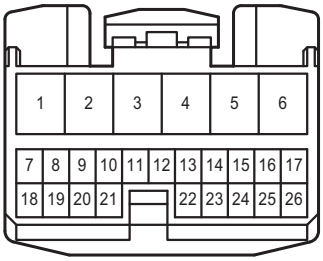

G76
Black

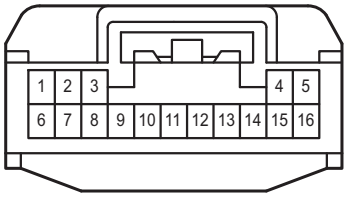

G94
White

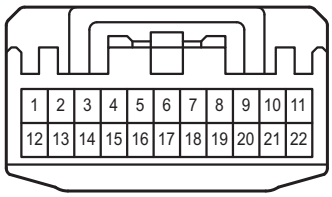

G95
White

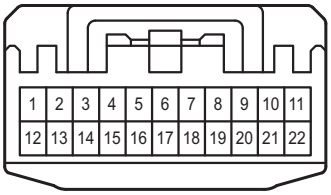

G96
White

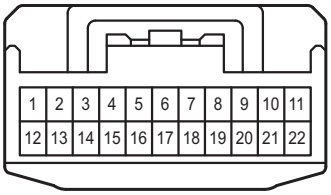

G97
White

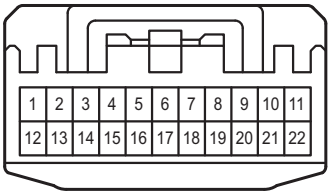

G98
White

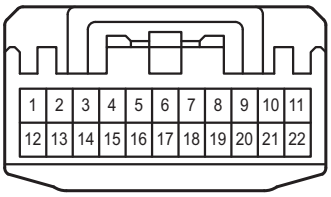

G100
Gray

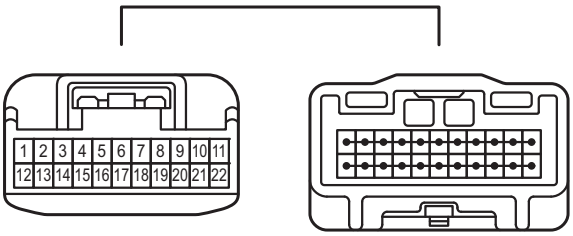

G101
White

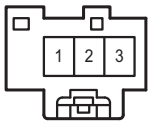

G102
White

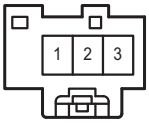

G103
White

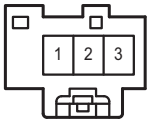

G104
White

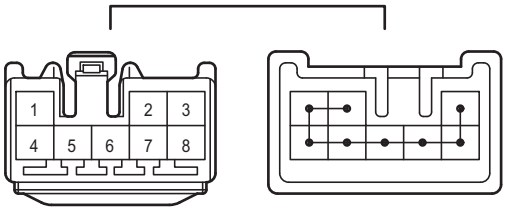

G116
White

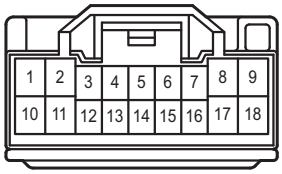

G118
White

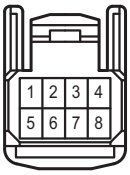

G119
White

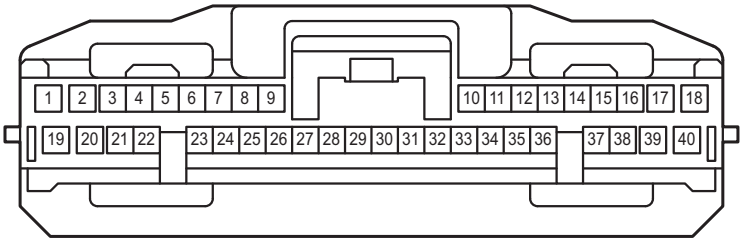

G123
White

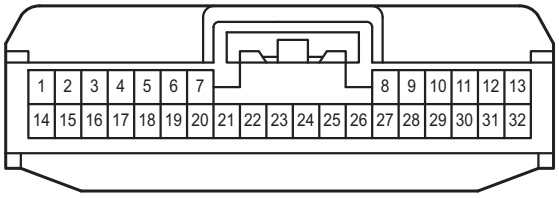

G154
White

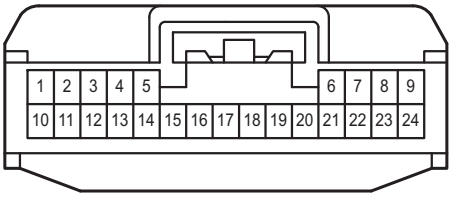

G155
White

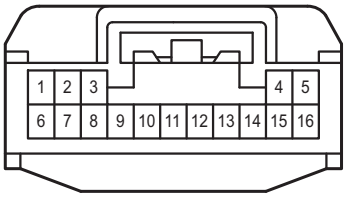

G163
White

H51
White

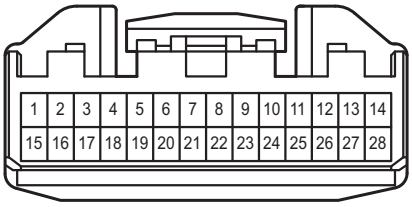

H56
White

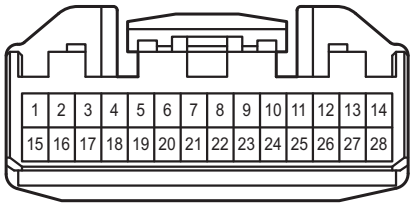

H61
White

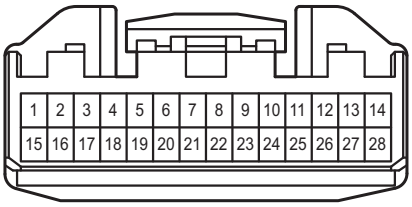

I1
White

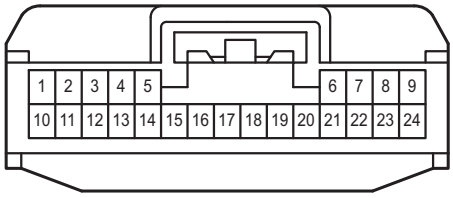

I7
Black

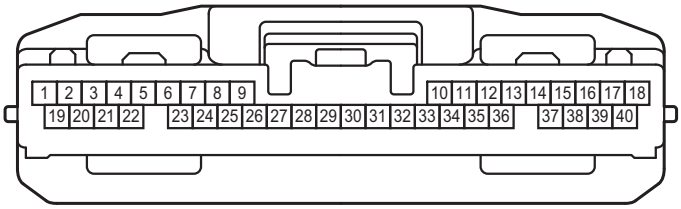

R42
Black

R43
Black

R47
Gray

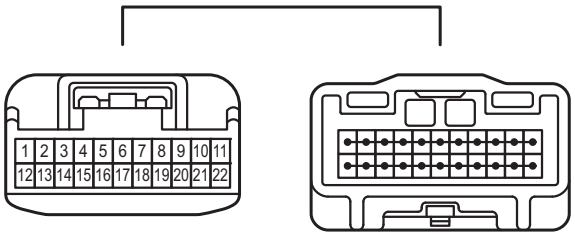

b5
White

2A
White

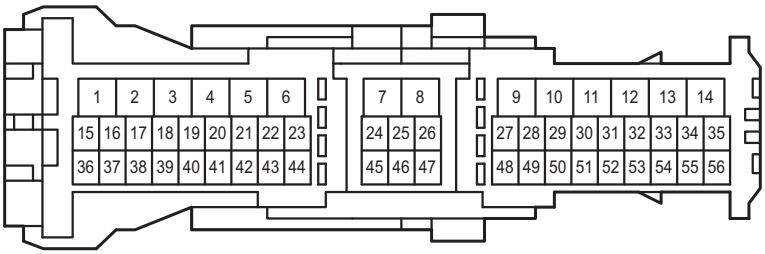

2D
White

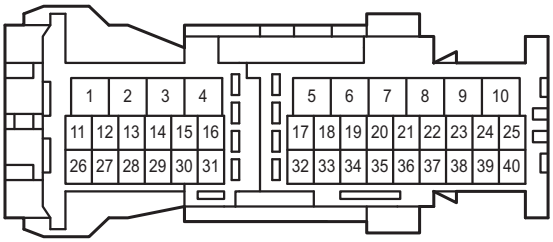

2F
White

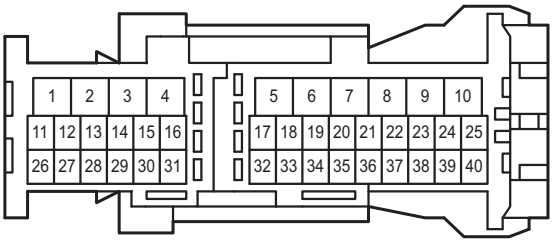

3A
White

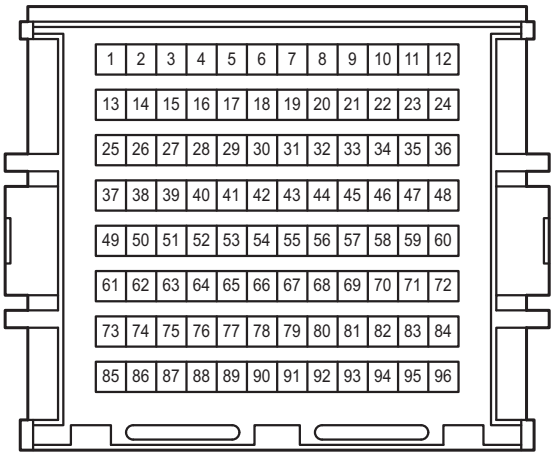

CG2
White

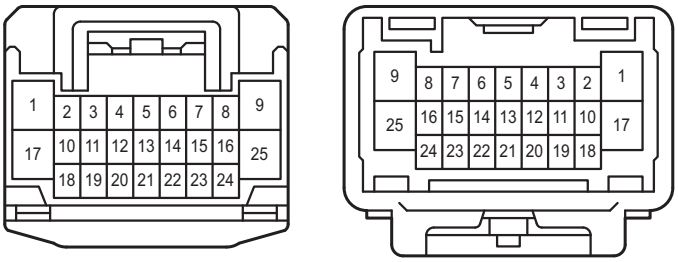

GA1

White

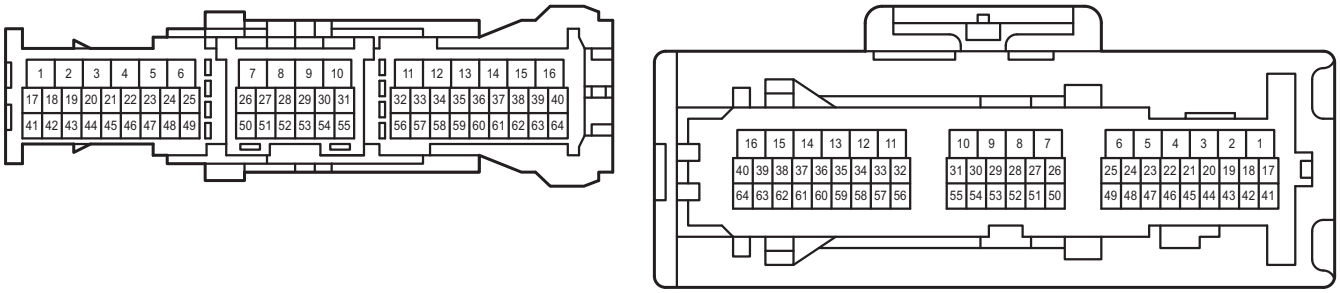

GA2

White

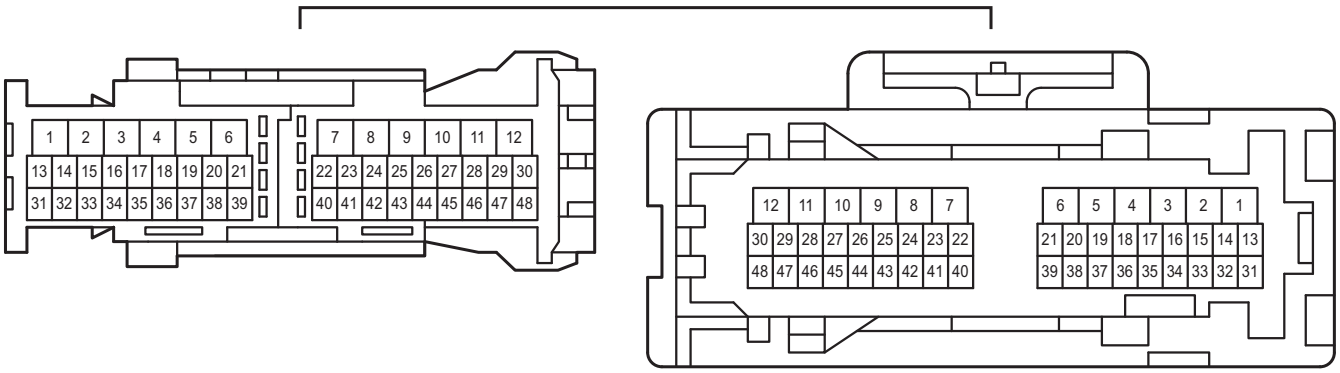

GA6

White

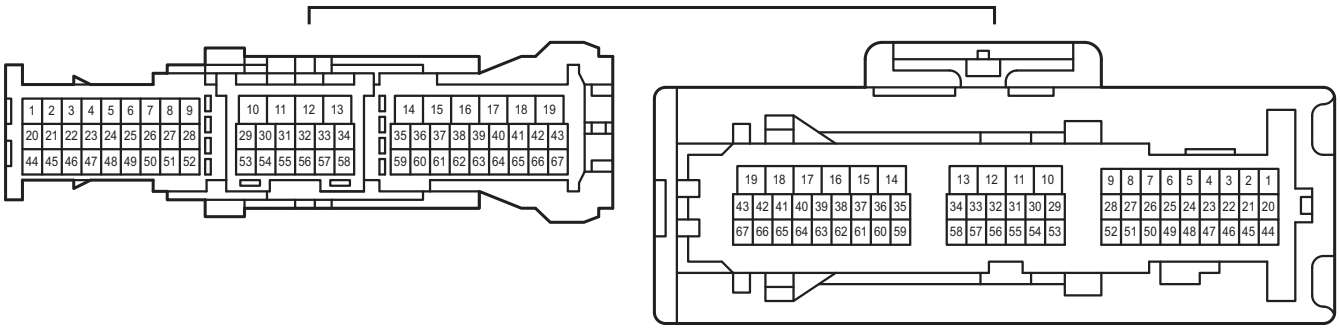

GH1

White

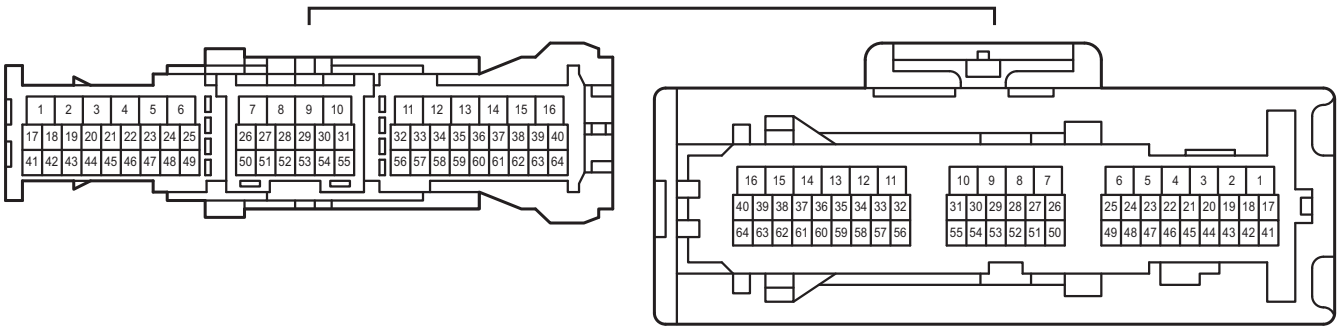

GR1
White

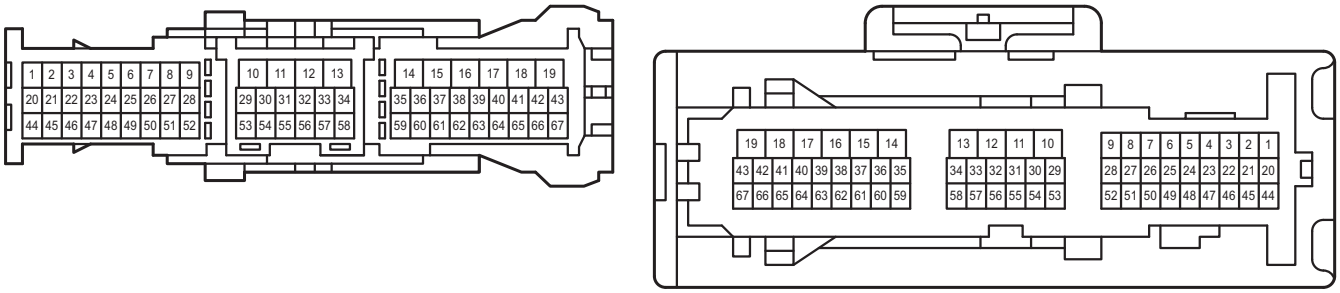

GR2
Gray

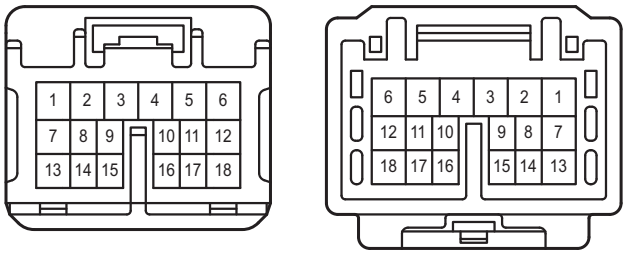

GR3
Blue

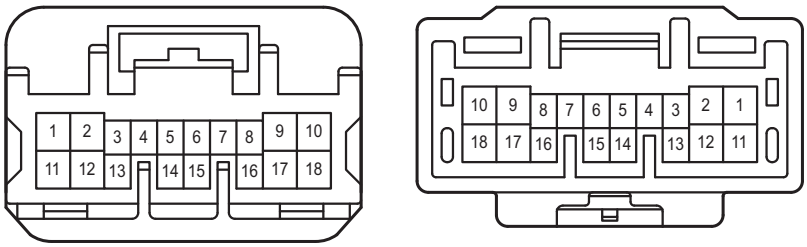

IG1
White

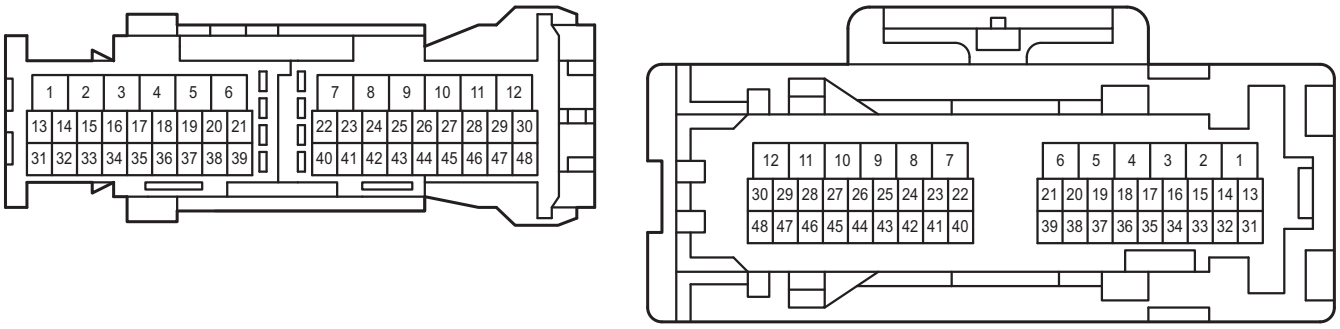

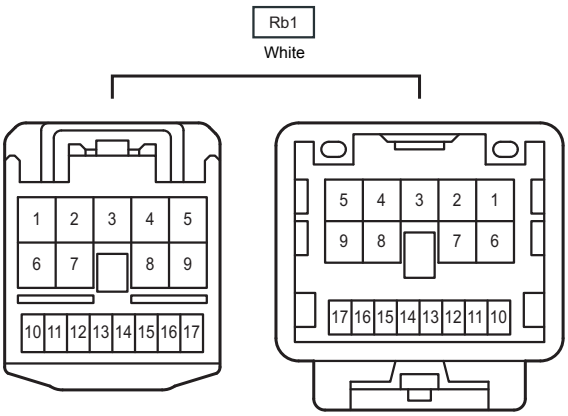
Rb1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10