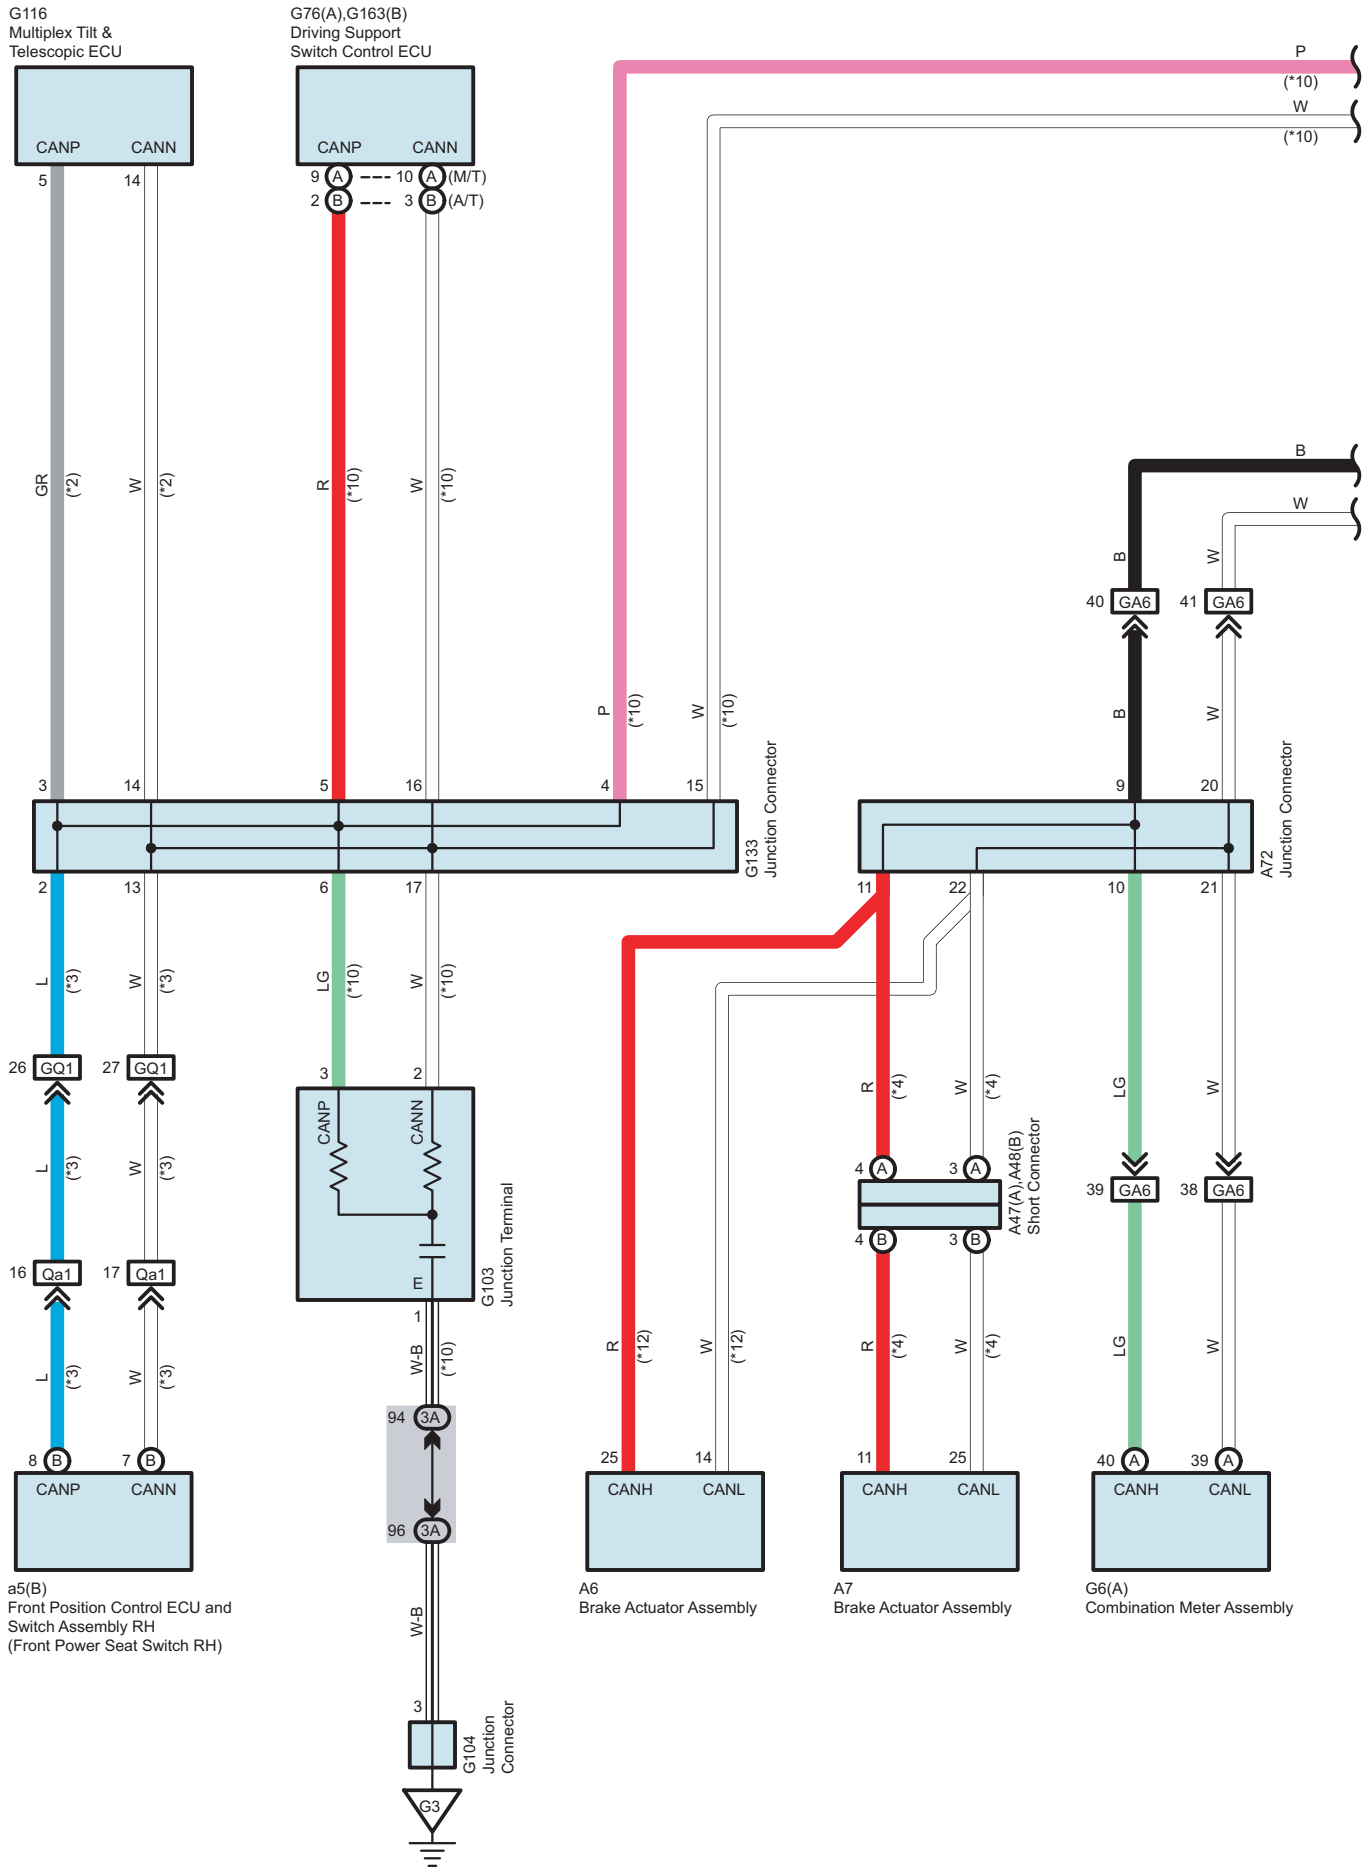
G116
Multiplex Tilt &
Telescopic ECU
CANP
CANN
G76(A),G163(B)
Driving Support
Switch Control ECU
CANP
CANN
(M/T)
(A/T)
P
(*10)
W
(*10)
GR
(*2)
W
(*2)
R
(*10)
W
(*10)
B
W
GA6
GA6
P
(*10)
W
(*10)
B
W
G133
Junction Connector
A72
Junction Connector
L
(*3)
W
(*3)
LG
(*10)
W
(*10)
GQ1
GQ1
Qa1
Qa1
CANP
CANN
G103
Junction Terminal
R
(*4)
W
(*4)
LG
W
A47(A),A48(B)
Short Connector
GA6
GA6
W-B
(*10)
R
(*12)
W
(*12)
R
(*4)
W
(*4)
LG
W
CANH
CANL
CANH
CANL
CANH
CANL
CANP
CANN
W-B
G104
Junction
Connector
G3
a5(B)
Front Position Control ECU and
Switch Assembly RH
(Front Power Seat Switch RH)
A6
Brake Actuator Assembly
A7
Brake Actuator Assembly
G6(A)
Combination Meter Assembly

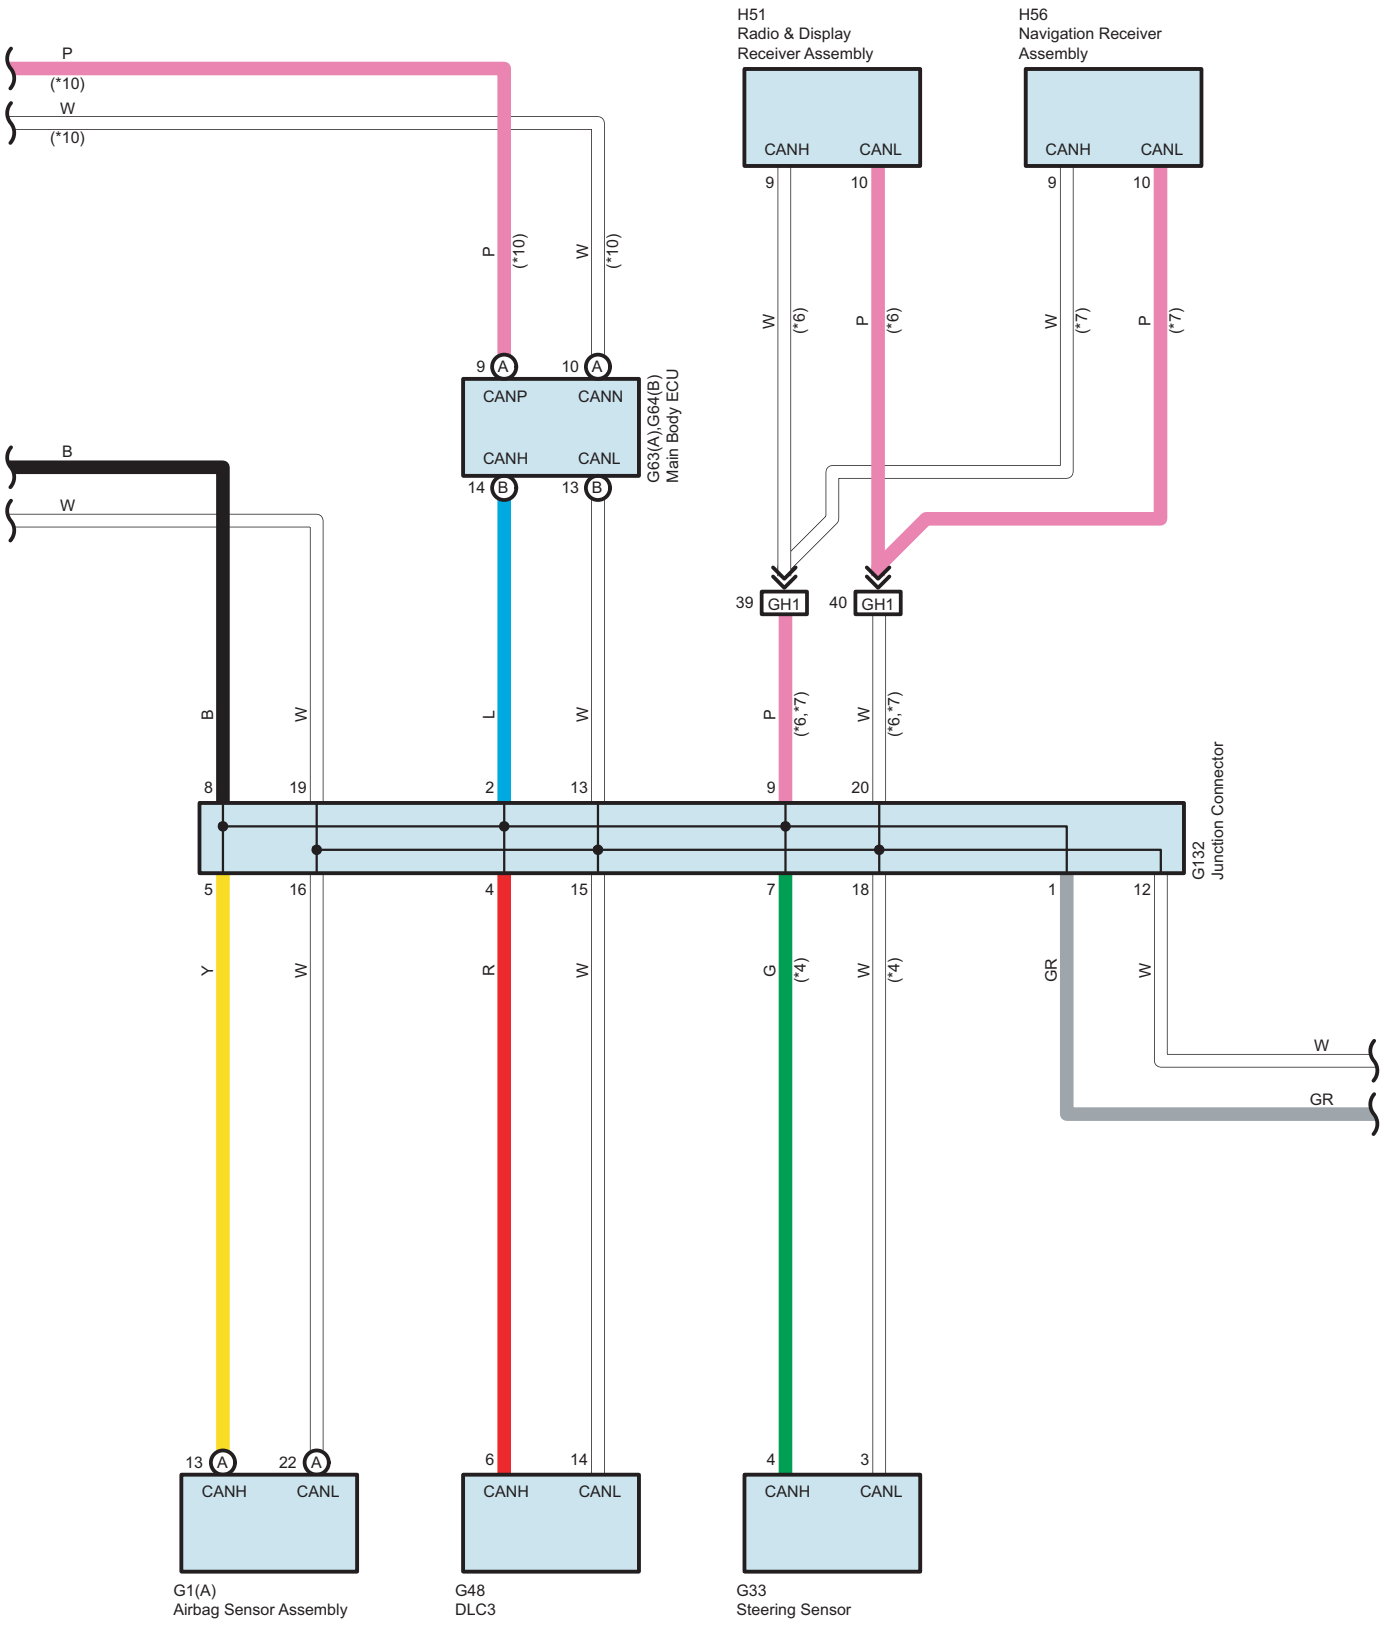

* 2 :w/ Power Tilt and Power Telescopic
* 3 :w/ Power Seat (RHD Driver's Seat w/ Seat Position Memory)
* 4 :1GR-FE, 1KD-FTV
* 6 :Radio & Display Receiver Assembly Type
* 7 :Navigation Receiver Assembly Type
* 10 :w/ Entry & Start System
* 12 :5L-E

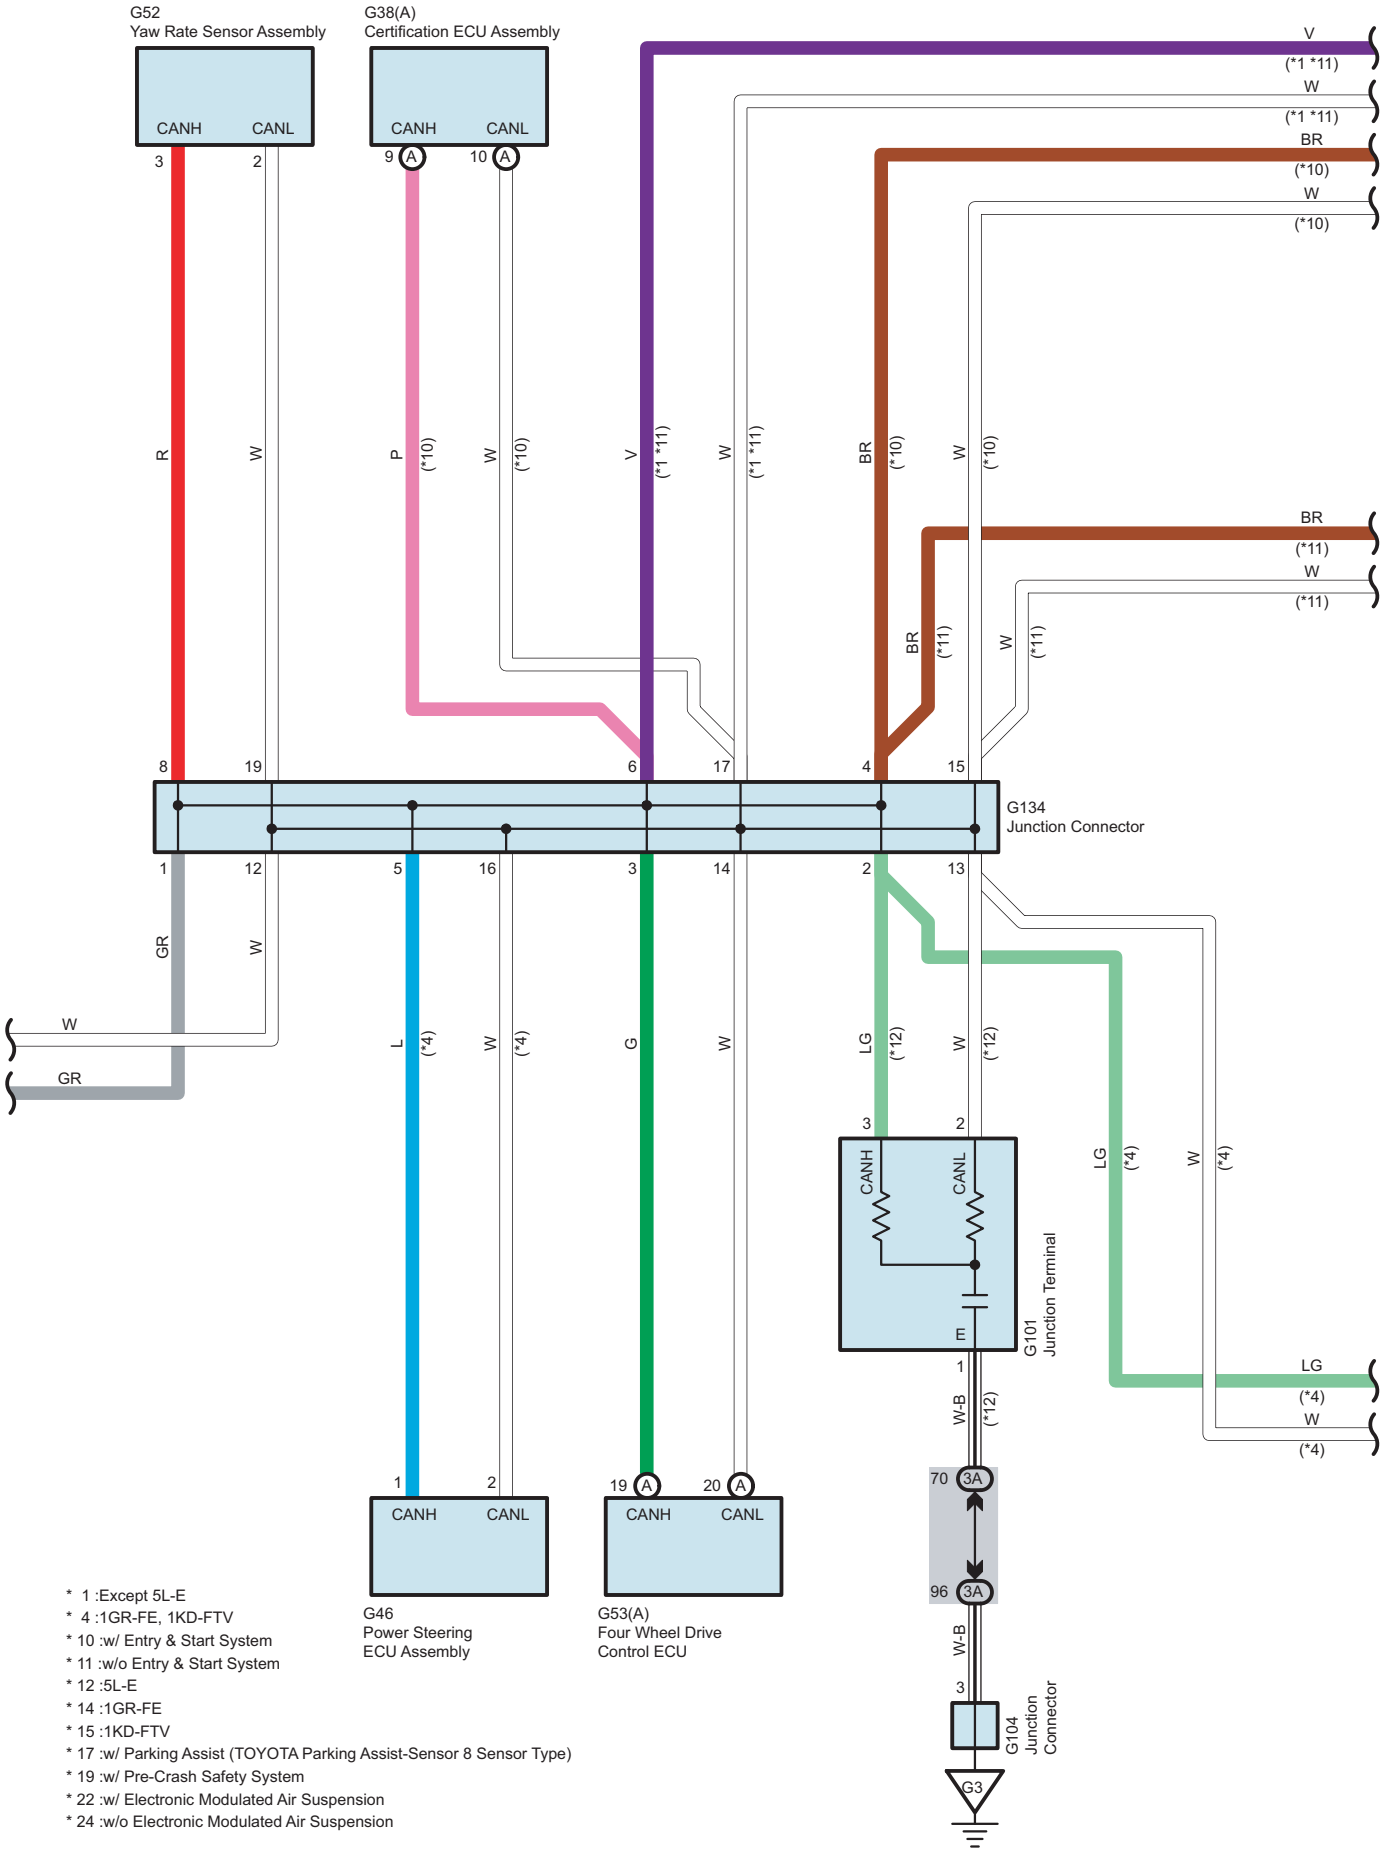

* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 12 :5L-E
* 14 :1GR-FE
* 15 :1KD-FTV
* 17 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 22 :w/ Electronic Modulated Air Suspension
* 24 :w/o Electronic Modulated Air Suspension

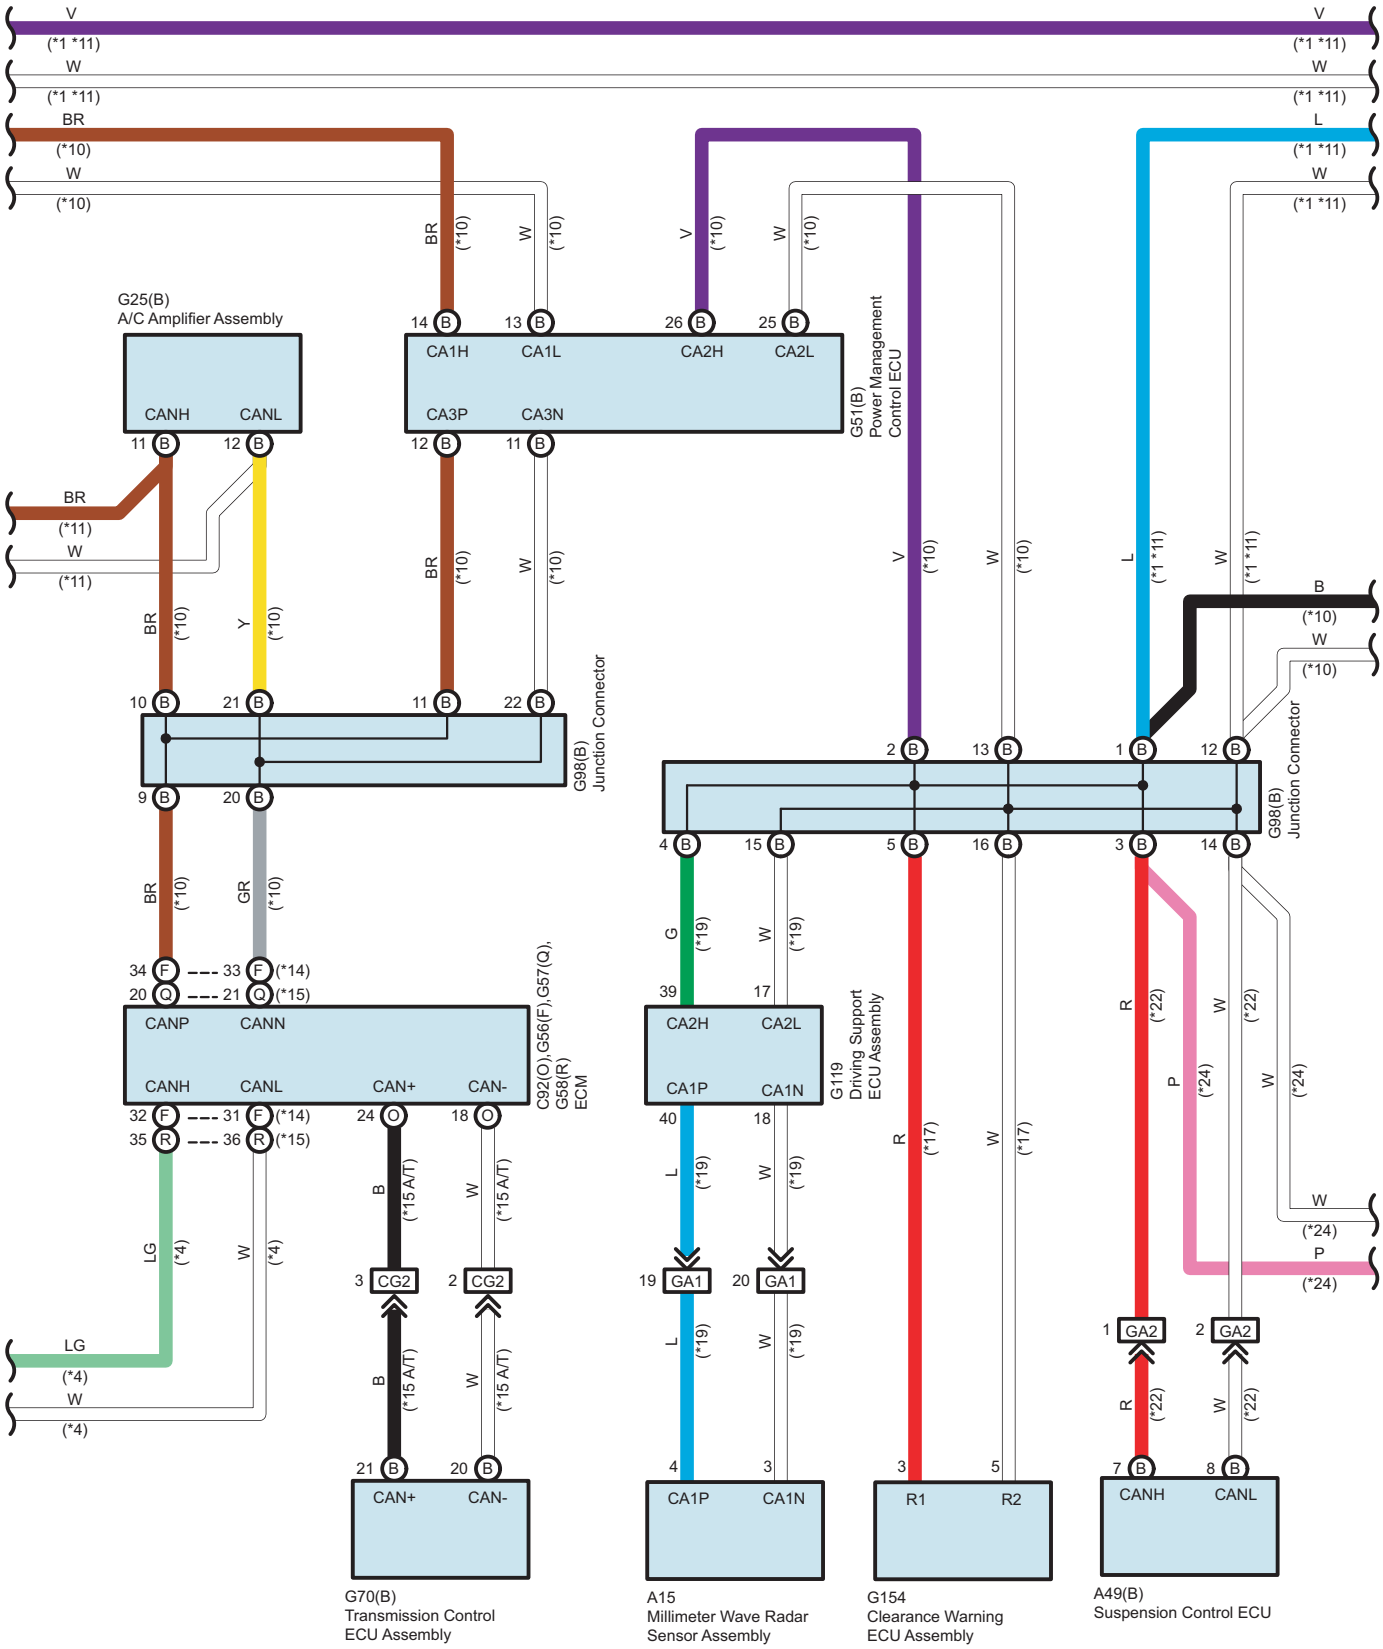
G25(B)
A/C Amplifier Assembly
CANH
CANL
CA1H
CA1L
CA2H
CA2L
CA3P
CA3N
G51(B)
Power Management
Control ECU
G98(B)
Junction Connector
C92(O),G56(F),G57(Q),
G58(R)
ECM
CANP
CANN
CAN+
CAN-
CG2
G119
Driving Support
ECU Assembly
GA1
GA2
G70(B)
Transmission Control
ECU Assembly
A15
Millimeter Wave Radar
Sensor Assembly
G154
Clearance Warning
ECU Assembly
R1
R2
A49(B)
Suspension Control ECU

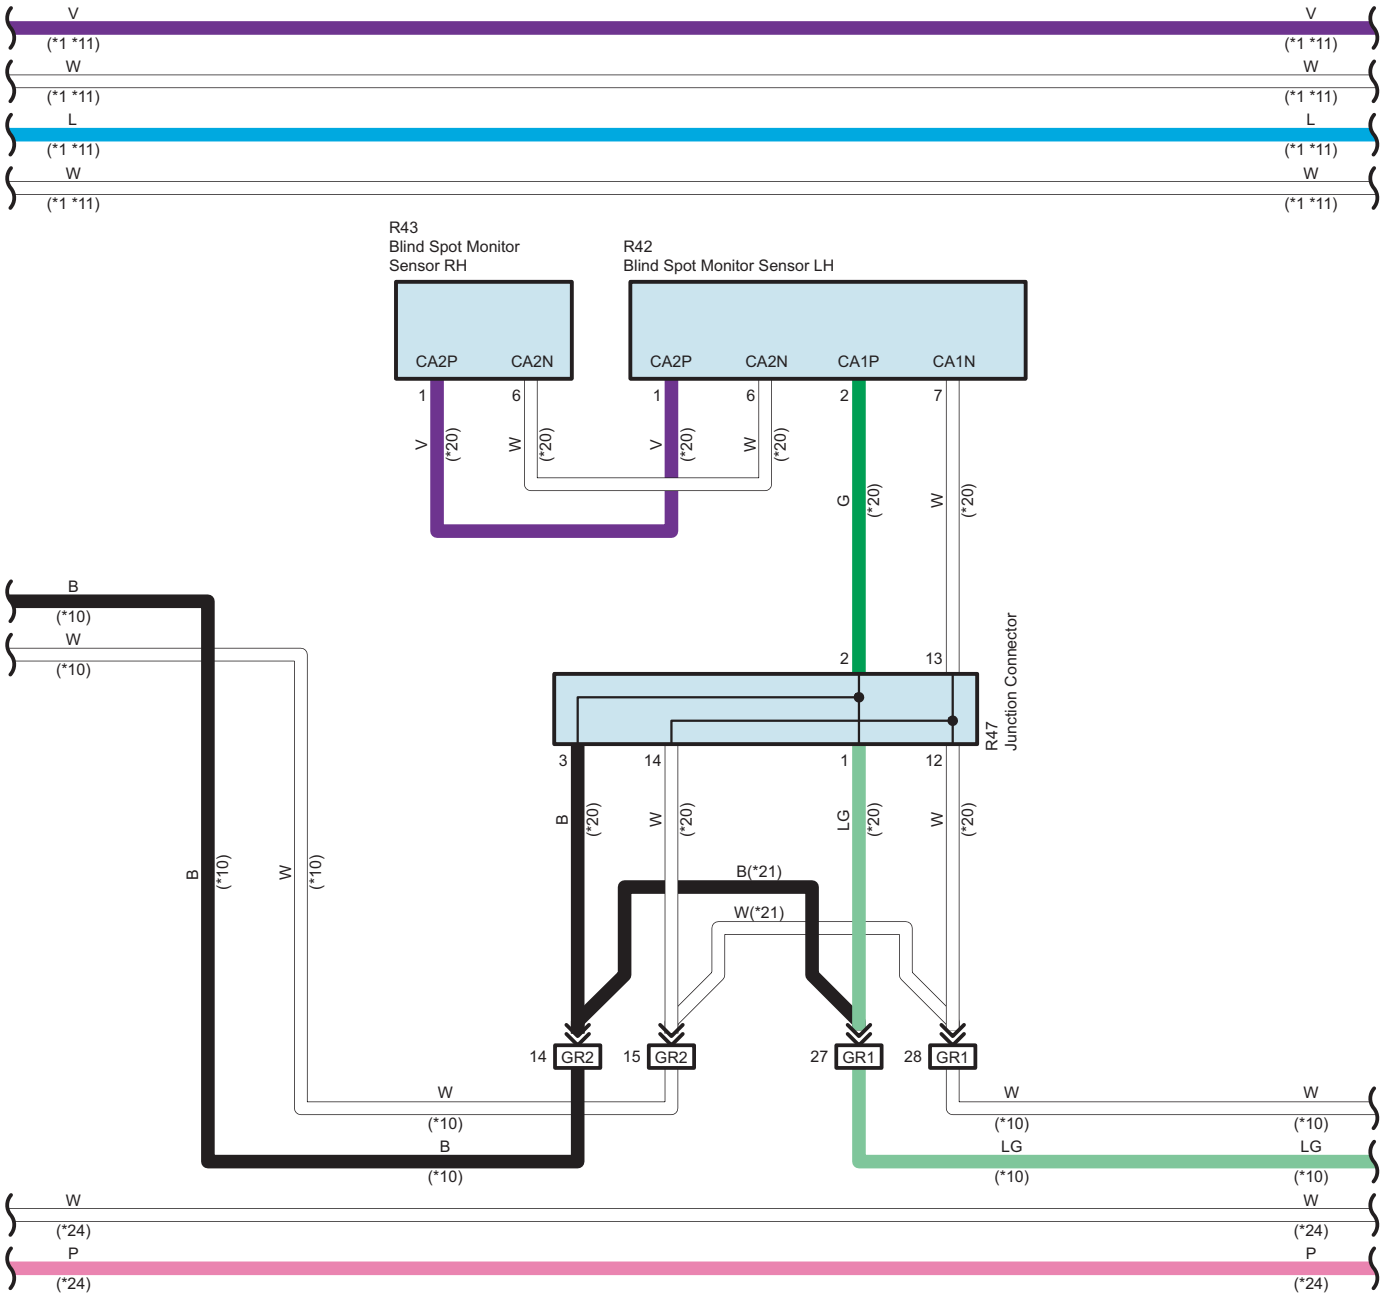

* 1 :Except 5L-E
* 4 :1GR-FE, 1KD-FTV
* 10 :w/ Entry & Start System
* 11 :w/o Entry & Start System
* 16 :w/ Multi-Terrain Monitor
* 18 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
* 19 :w/ Pre-Crash Safety System
* 20 :w/ Blind Spot Monitor System
* 21 :w/o Blind Spot Monitor System
* 23 :LED Type
* 24 :w/o Electronic Modulated Air Suspension

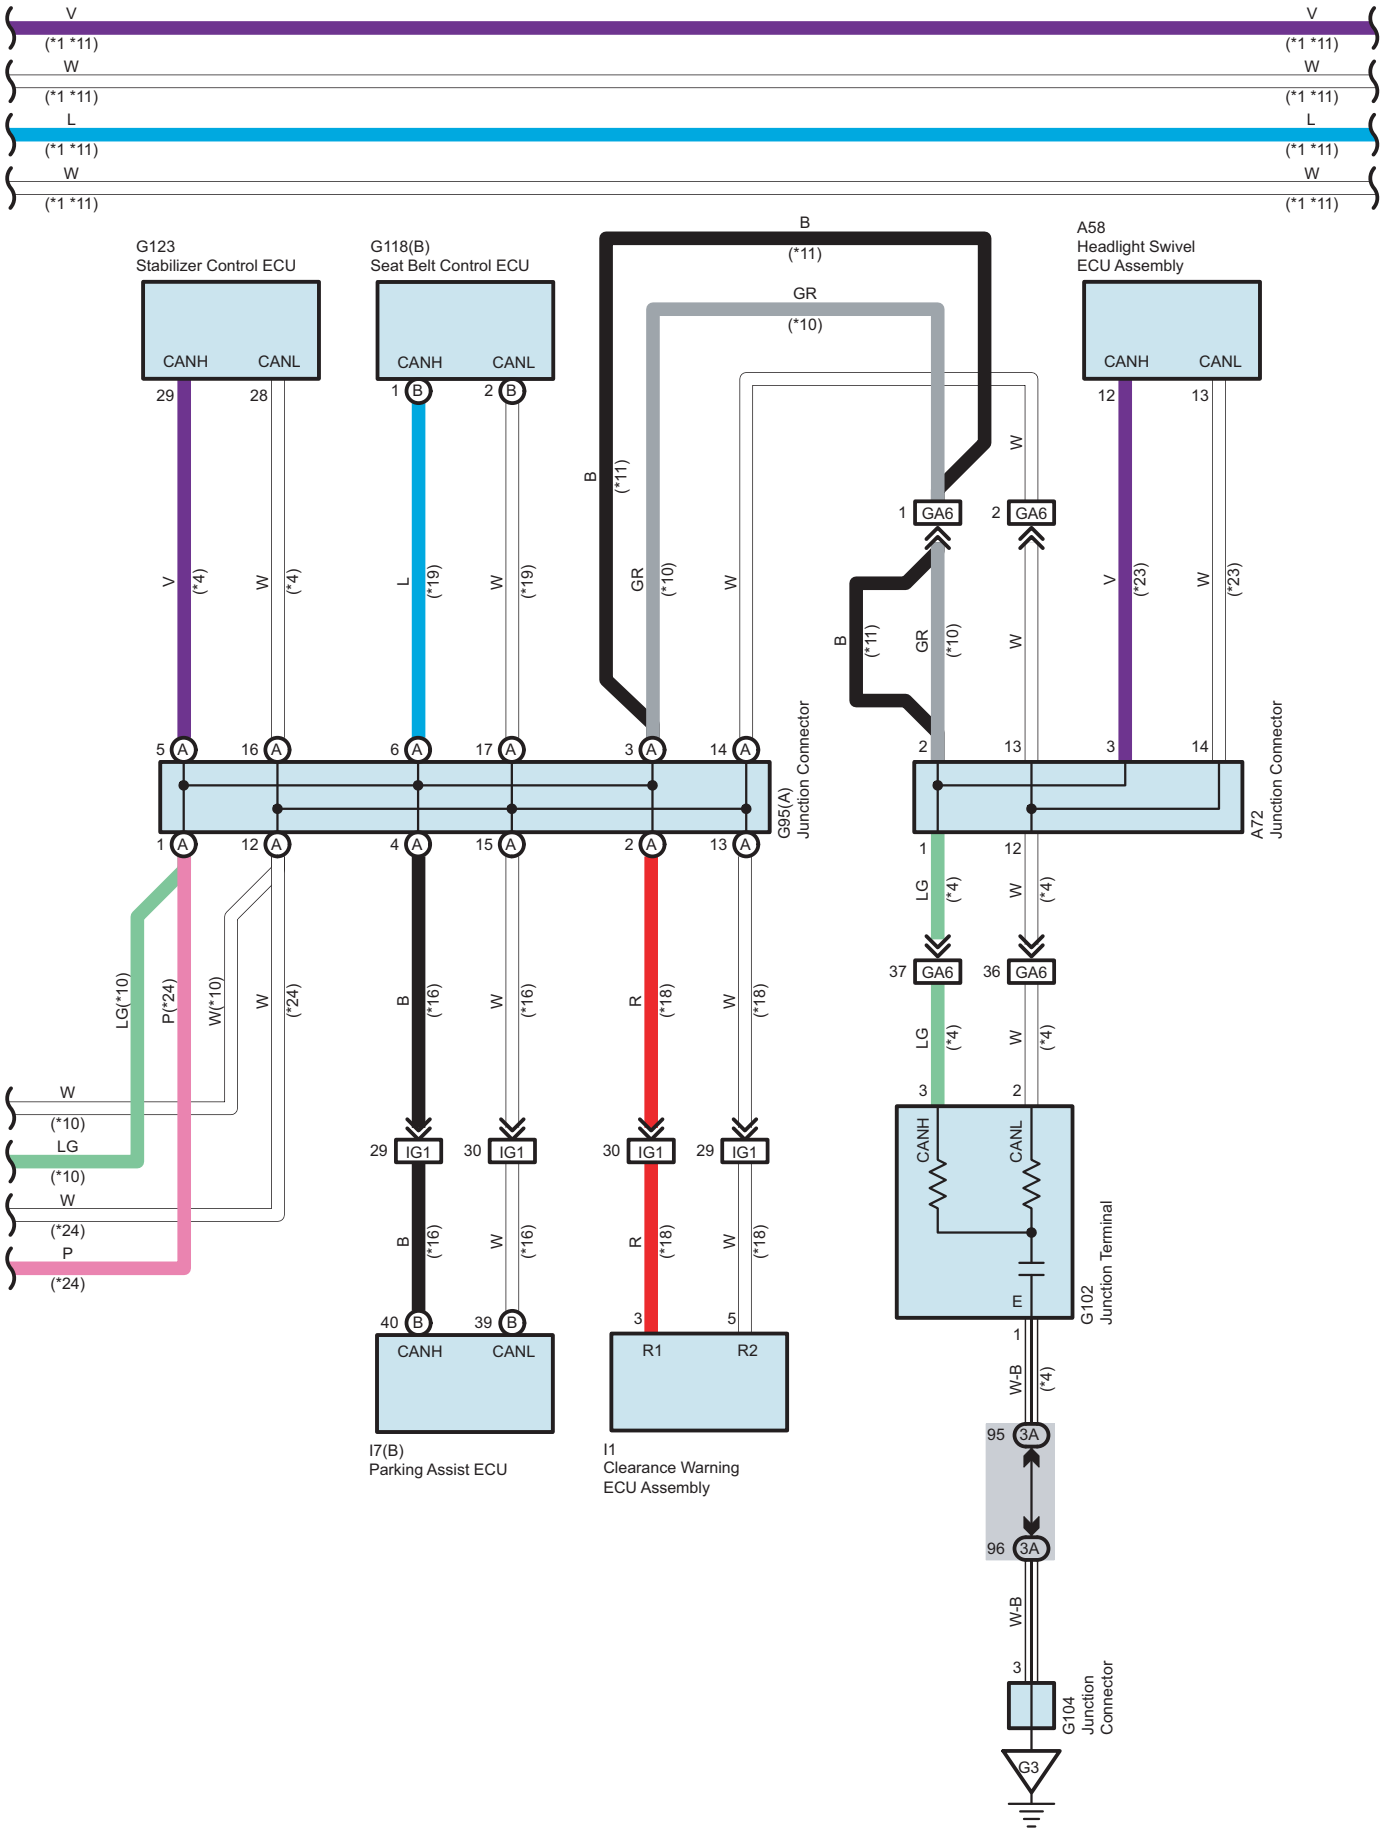
G123
Stabilizer Control ECU
G118(B)
Seat Belt Control ECU
A58
Headlight Swivel
ECU Assembly
CANH
CANL
G95(A)
Junction Connector
A72
Junction Connector
G102
Junction Terminal
G104
Junction Connector
I7(B)
Parking Assist ECU
I1
Clearance Warning
ECU Assembly
GA6
IG1
R1
R2
G3

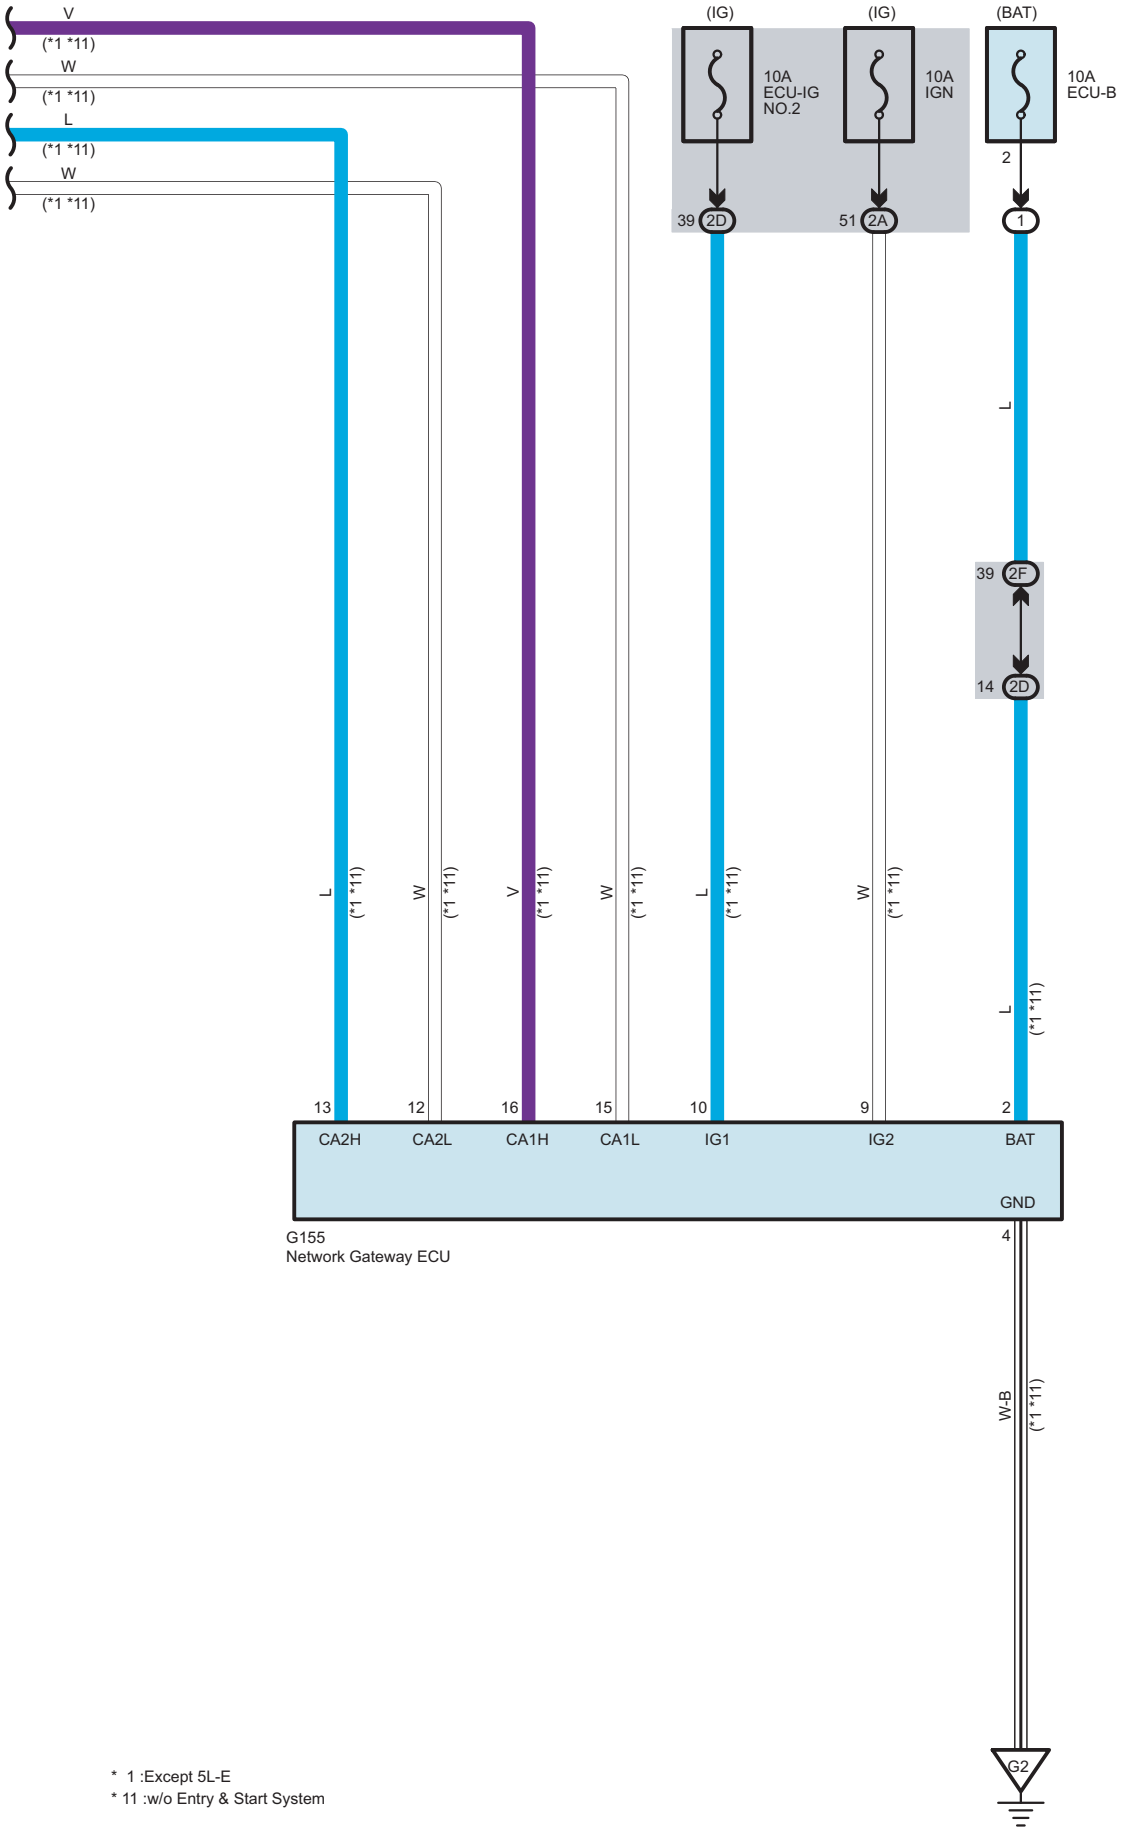

* 1 :Except 5L-E
* 11 :w/o Entry & Start System

A6
Black

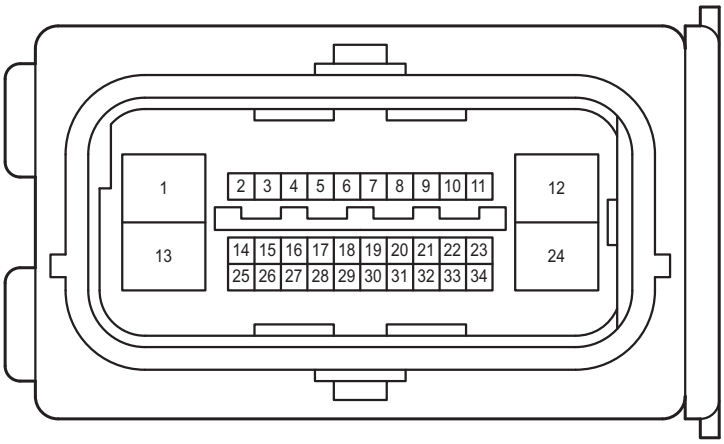

A7
Black

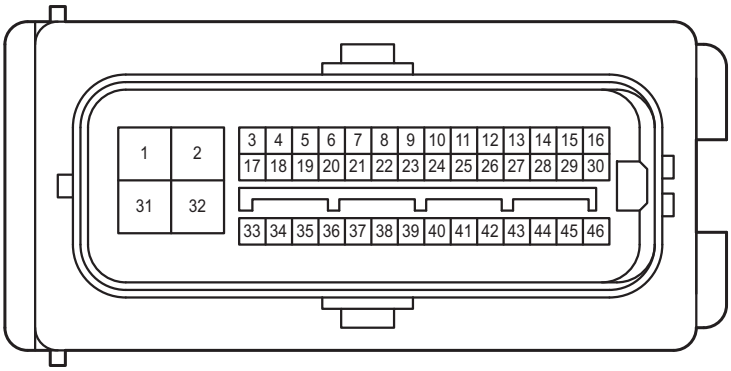

A15
Black

A47
Gray

A48
Gray

A49
Black

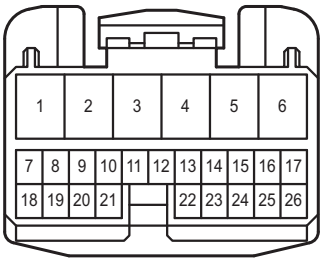

A58
White

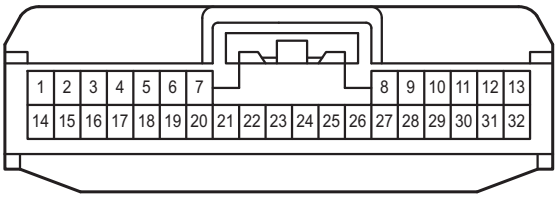

A72
White

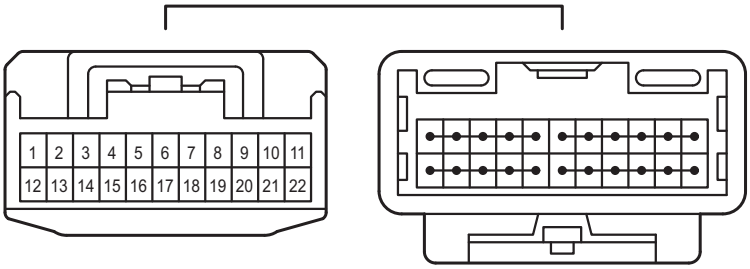

C92
White

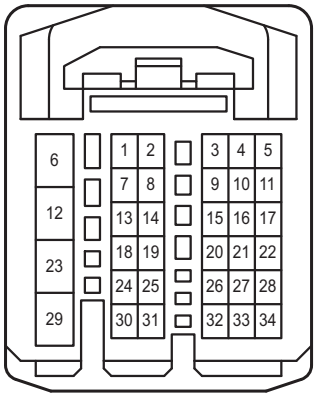

G1
Yellow

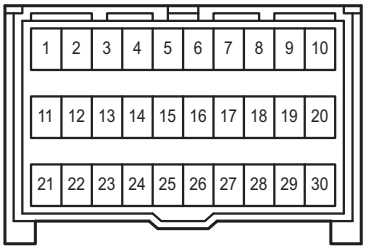

G6
Black

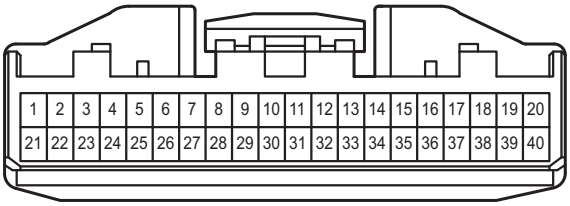

G25
White

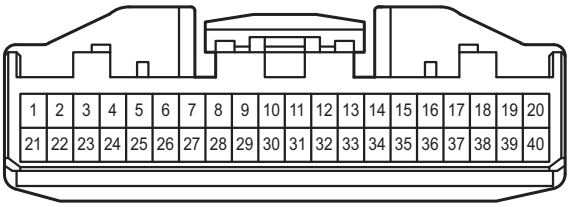

G33
White

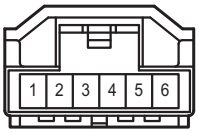

G38
White

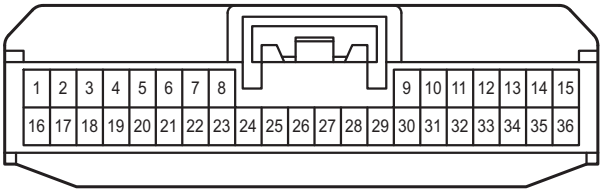

G46
White

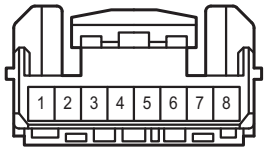

G48
White

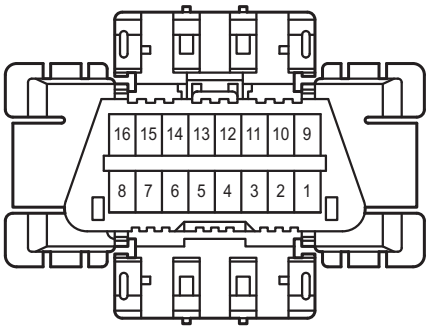

G51
Black

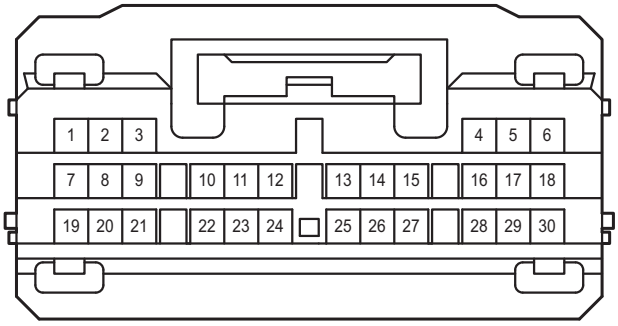

G52
Black

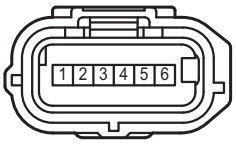

G53
Black

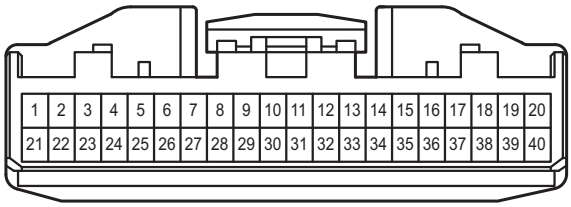

G56
White

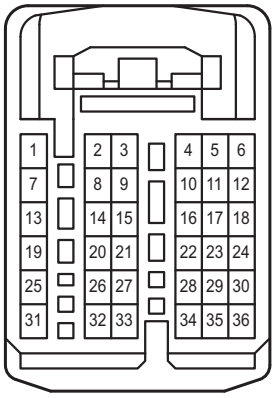

G57
White

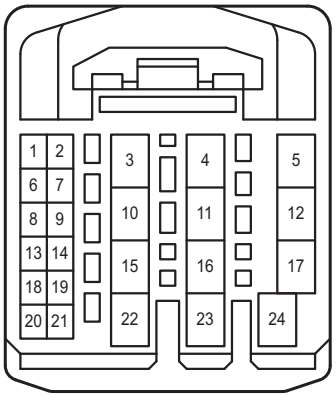

G58
White

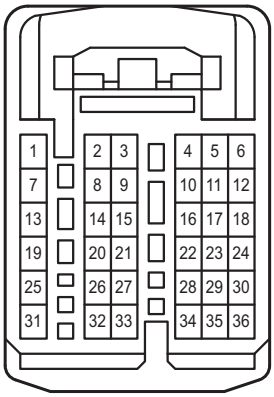

G63
White

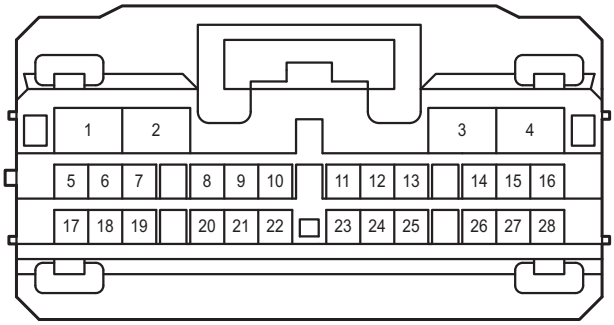

G64
White

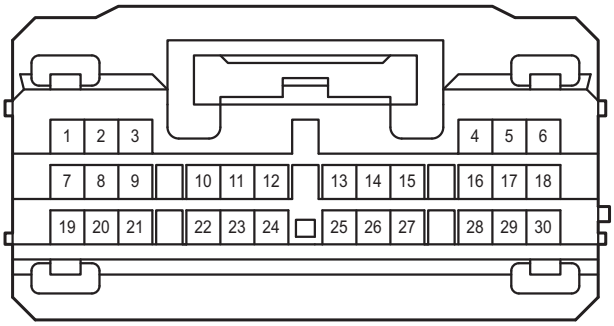

G70
White

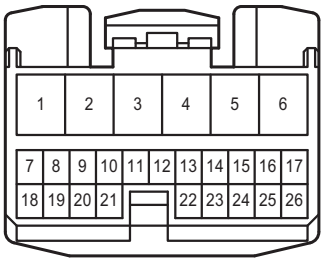

G76
Black

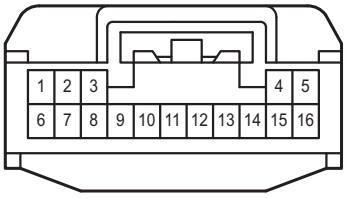

G95
White

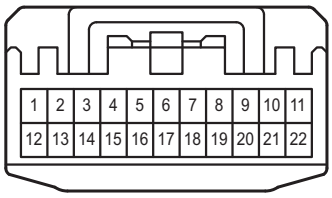

G98
White

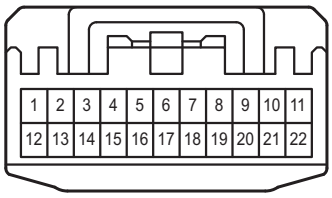

G101
White

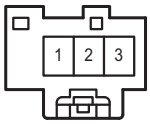

G102
White

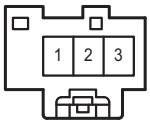

G103
White

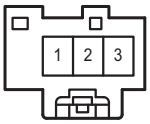

G104
White

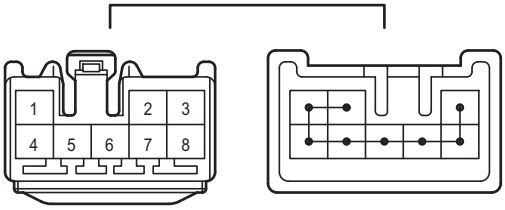

G116
White

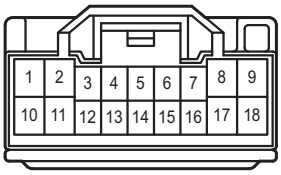

G118
White

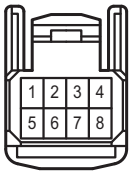

G119
White

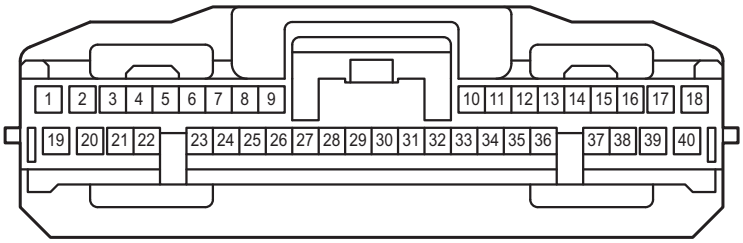

G123
White

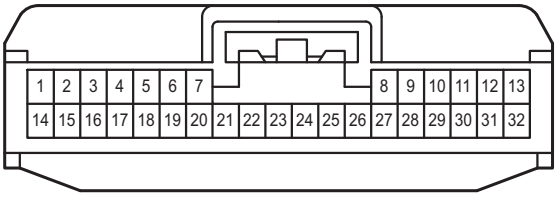

G132
Gray

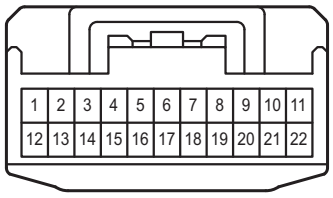

G133
White

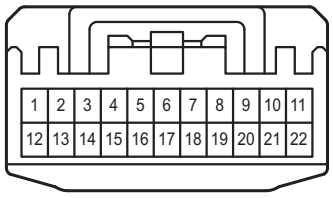

G134
Gray

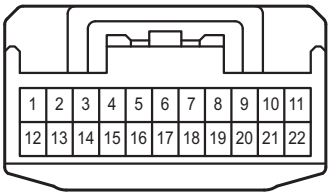

G154
White

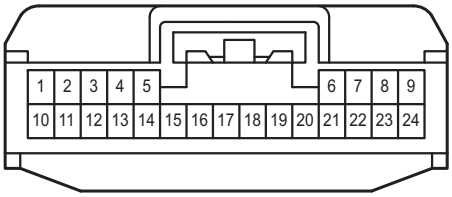

G155
White

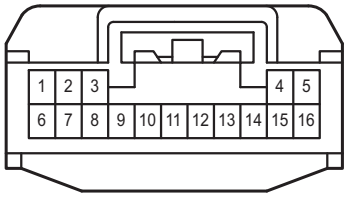

G163
White

H51
White

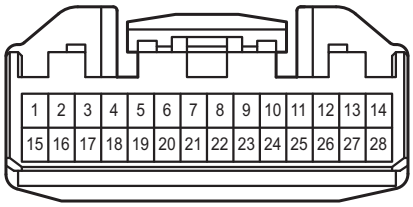

H56
White

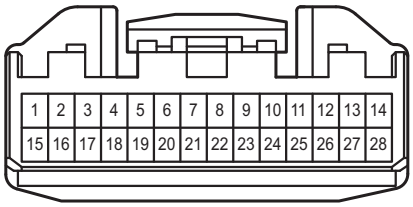

I1
White

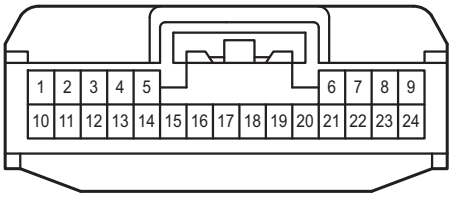

I7
Black

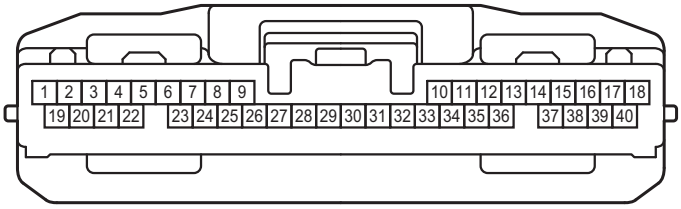

R42
Black

R43
Black

R47
Gray

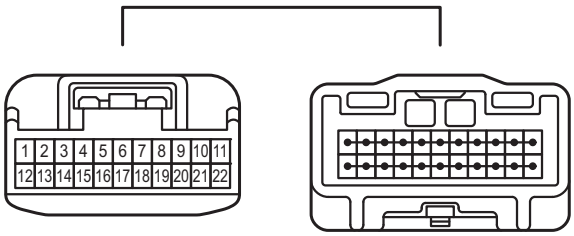

a5
White

2A
White

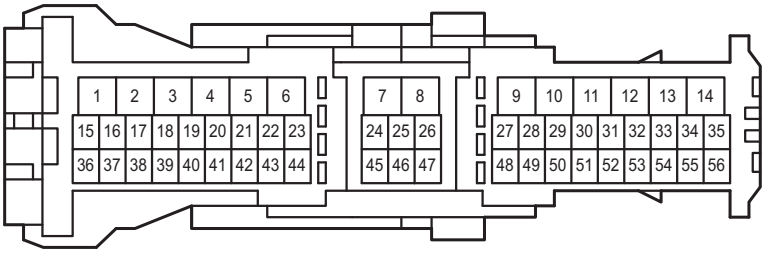

2D
White

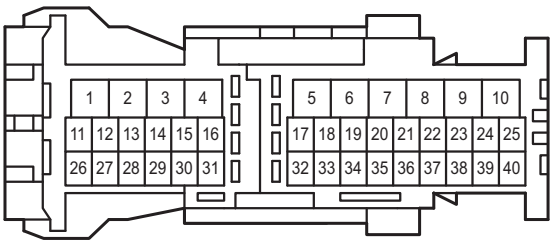

2F
White

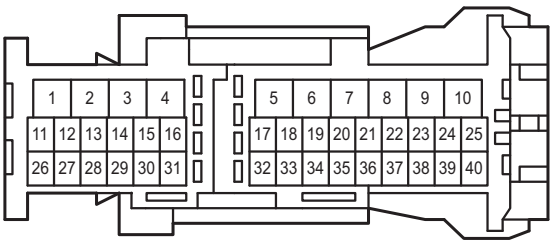

3A
White

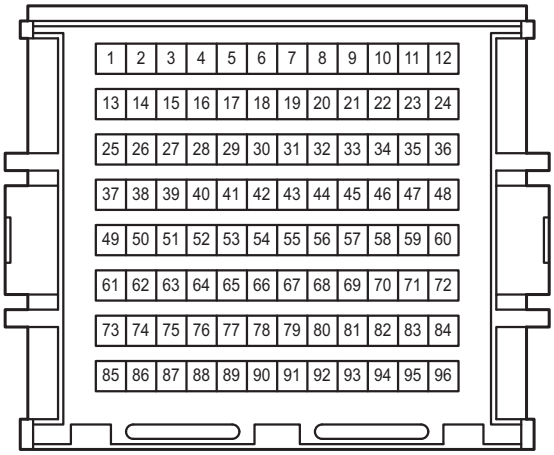

CG2
White

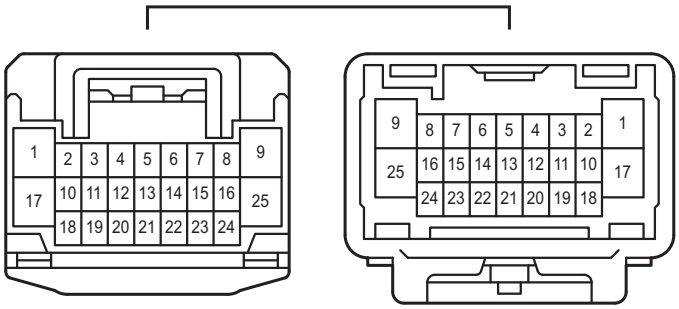

GA1
White

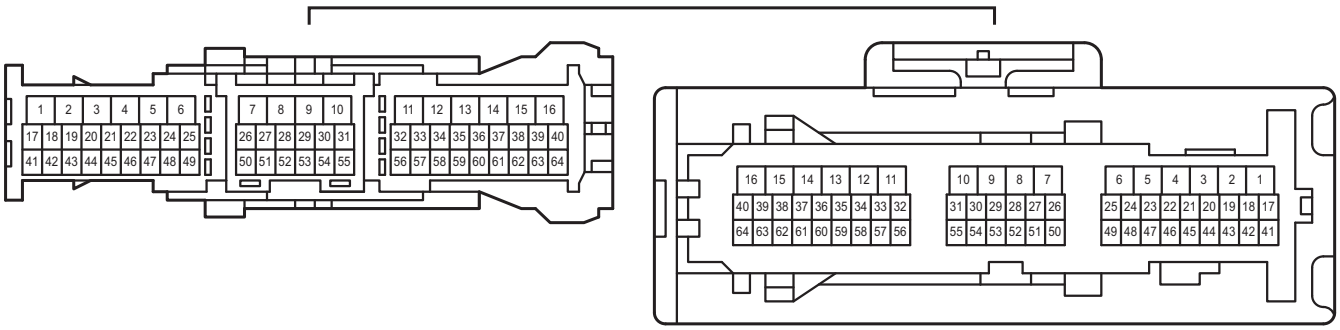

GA2
White

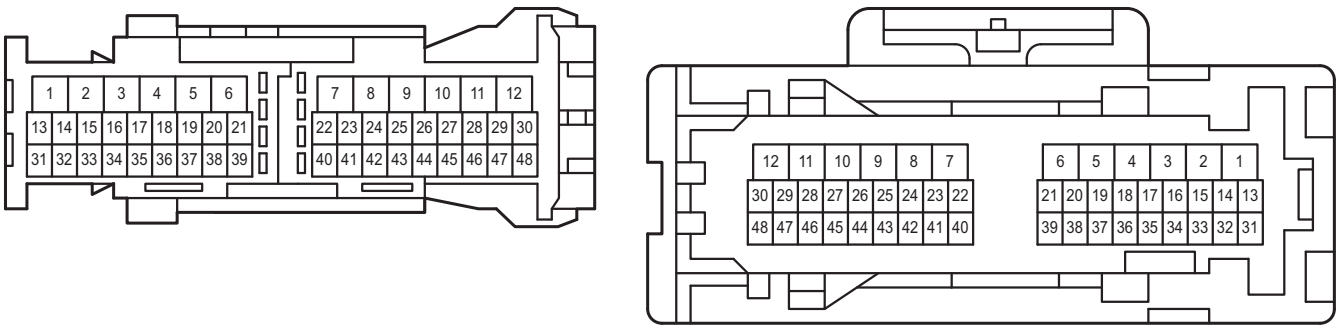

GA6

White

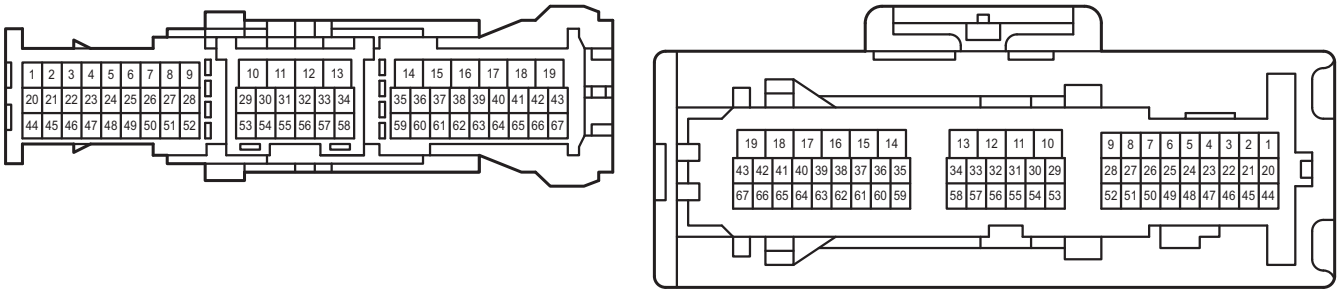

GH1

White

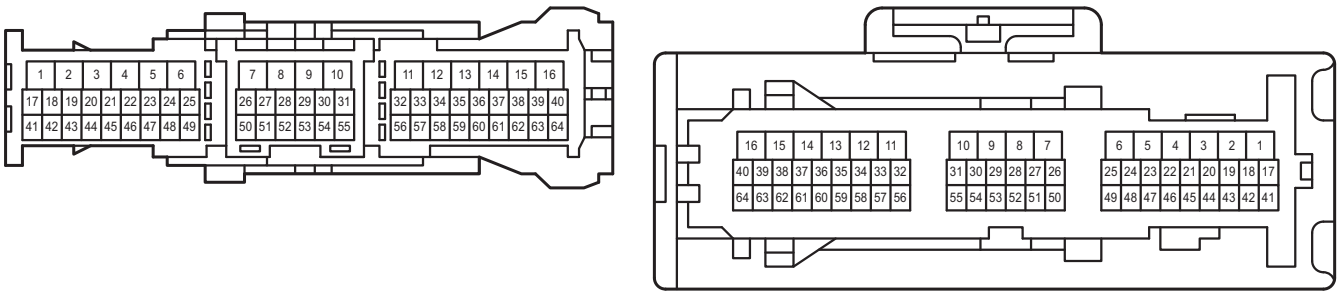

GQ1

White

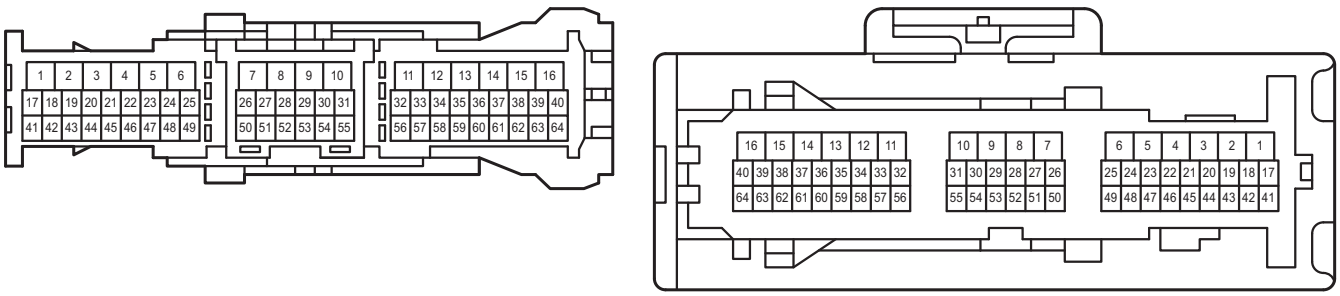

GR1

White

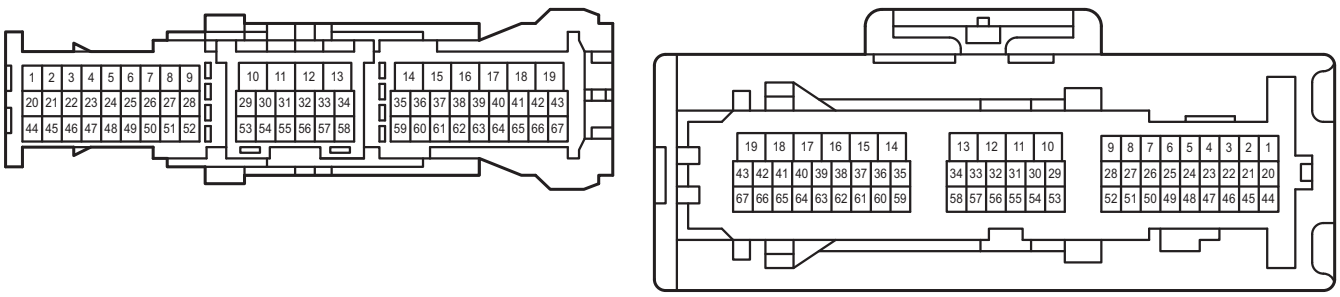

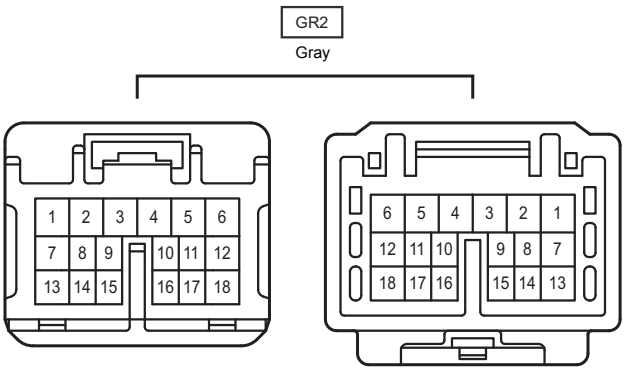
GR2
Gray
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

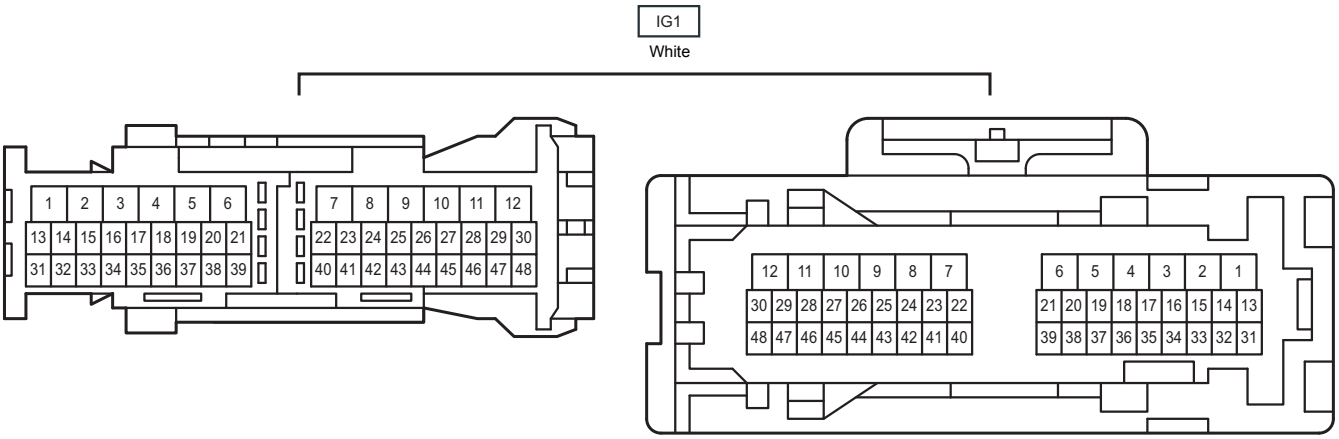
IG1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7
30 29 28 27 26 25 24 23 22
48 47 46 45 44 43 42 41 40
6 5 4 3 2 1
21 20 19 18 17 16 15 14 13
39 38 37 36 35 34 33 32 31

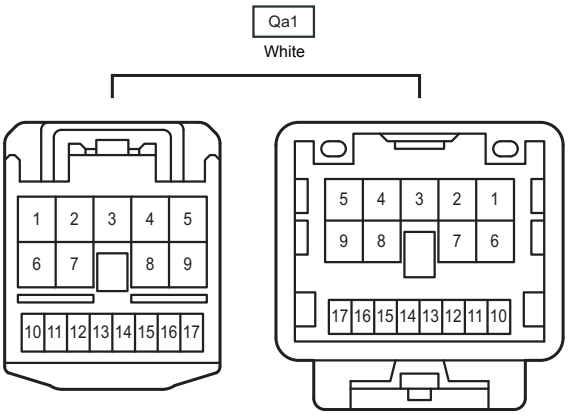
Qa1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10