(Cont. next page)

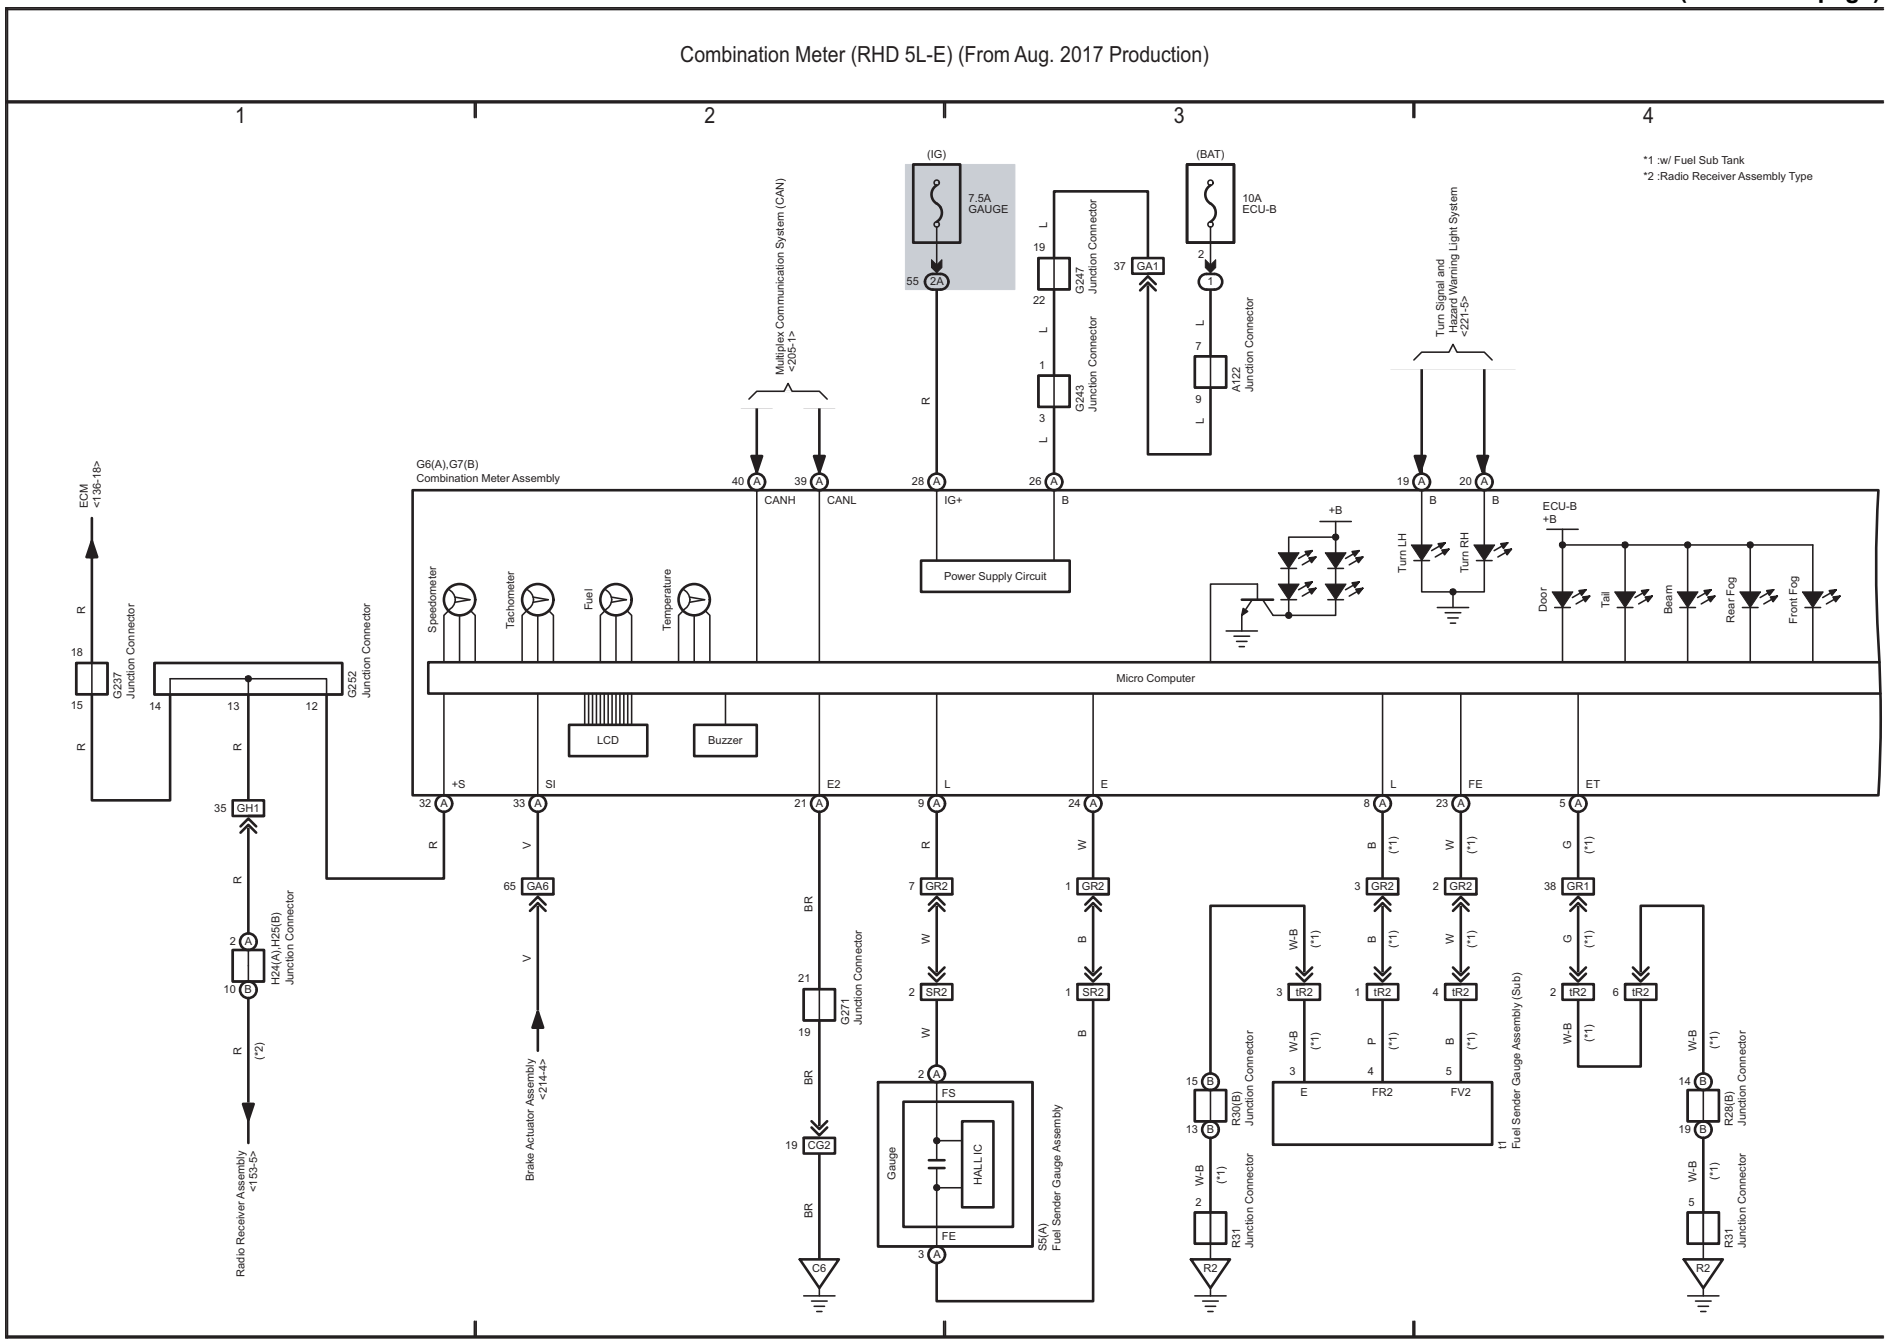

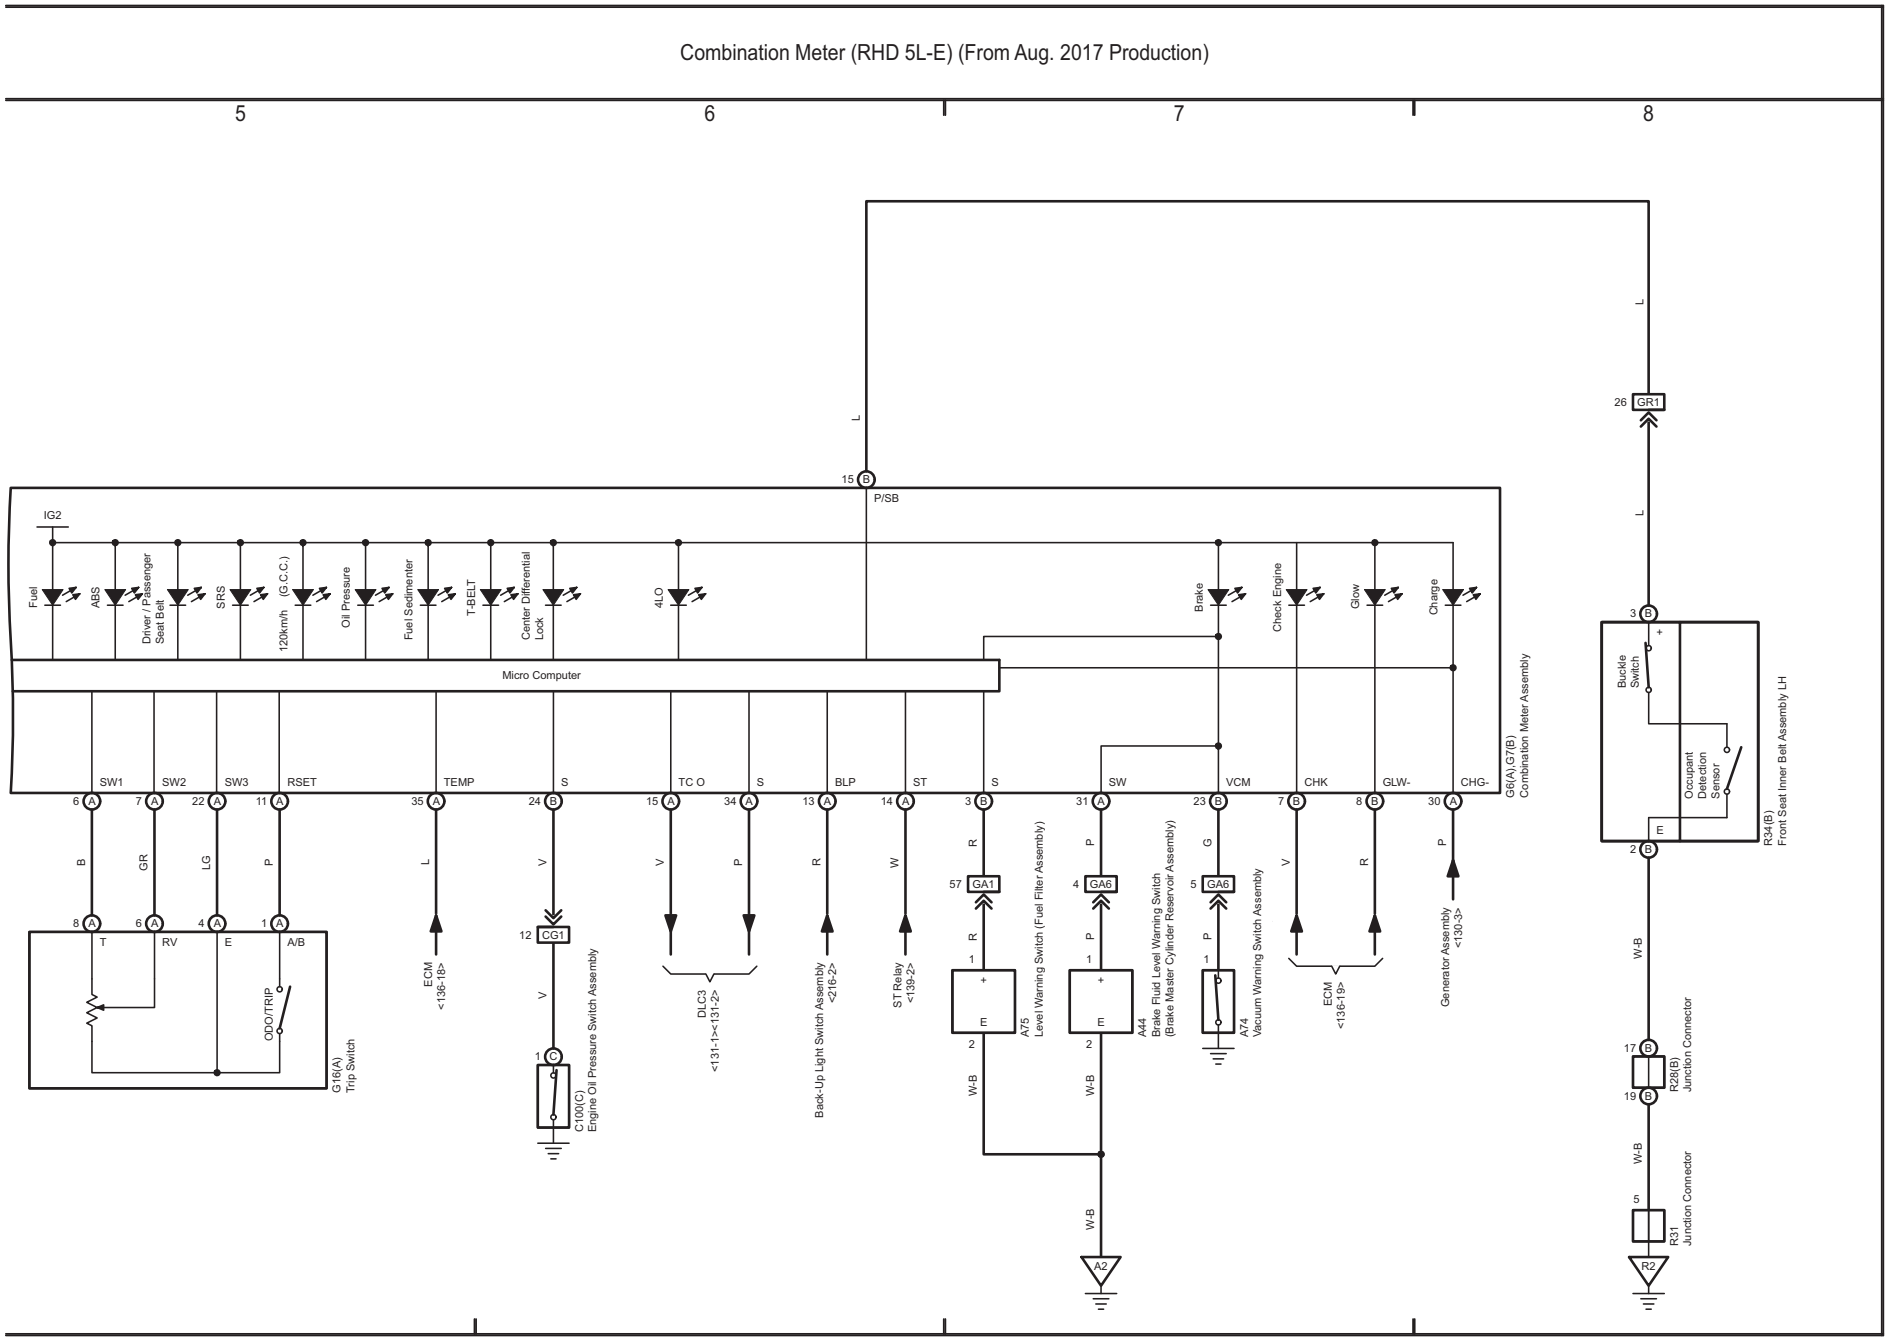
Combination Meter (RHD 5L-E) (From Aug. 2017 Production)
5
6
7
8
IG2
Fuel
ABS
Driver / Passenger Seat Belt
SRS
120km/h (G.C.C.)
Oil Pressure
Fuel Sedimenter
T-BELT
Center Differential Lock
4LO
Brake
Check Engine
Glow
Charge
Micro Computer
15 B P/SB
L
SW1
SW2
SW3
RSET
TEMP
S
TC O
S
BLP
ST
S
SW
VCM
CHK
GLW-
CHG-
G6(A),G7(B) Combination Meter Assembly
6 A
7 A
22 A
11 A
35 A
24 B
15 A
34 A
13 A
14 A
3 B
31 A
23 B
7 B
8 B
30 A
B
GR
LG
P
L
V
V
P
R
W
R
P
G
V
R
P
8 A
6 A
4 A
1 A
T
RV
E
A/B
ODO/TRIP
G16(A) Trip Switch
ECM <136-18>
12 CG1
1 C
C100(C) Engine Oil Pressure Switch Assembly
DLC3 <131-1><131-2>
Back-Up Light Switch Assembly <216-2>
ST Relay <139-2>
57 GA1
A75 Level Warning Switch (Fuel Filter Assembly)
4 GA6
A44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
5 GA6
A74 Vacuum Warning Switch Assembly
ECM <136-19>
Generator Assembly <130-3>
W-B
A2
26 GR1
3 B
Buckle Switch
Occupant Detection Sensor
2 B
R34(B) Front Seat Inner Belt Assembly LH
17 B
19 B
R28(B) Junction Connector
5
R31 Junction Connector
R2