F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 24)

(LHD Before Aug. 2015 Production)

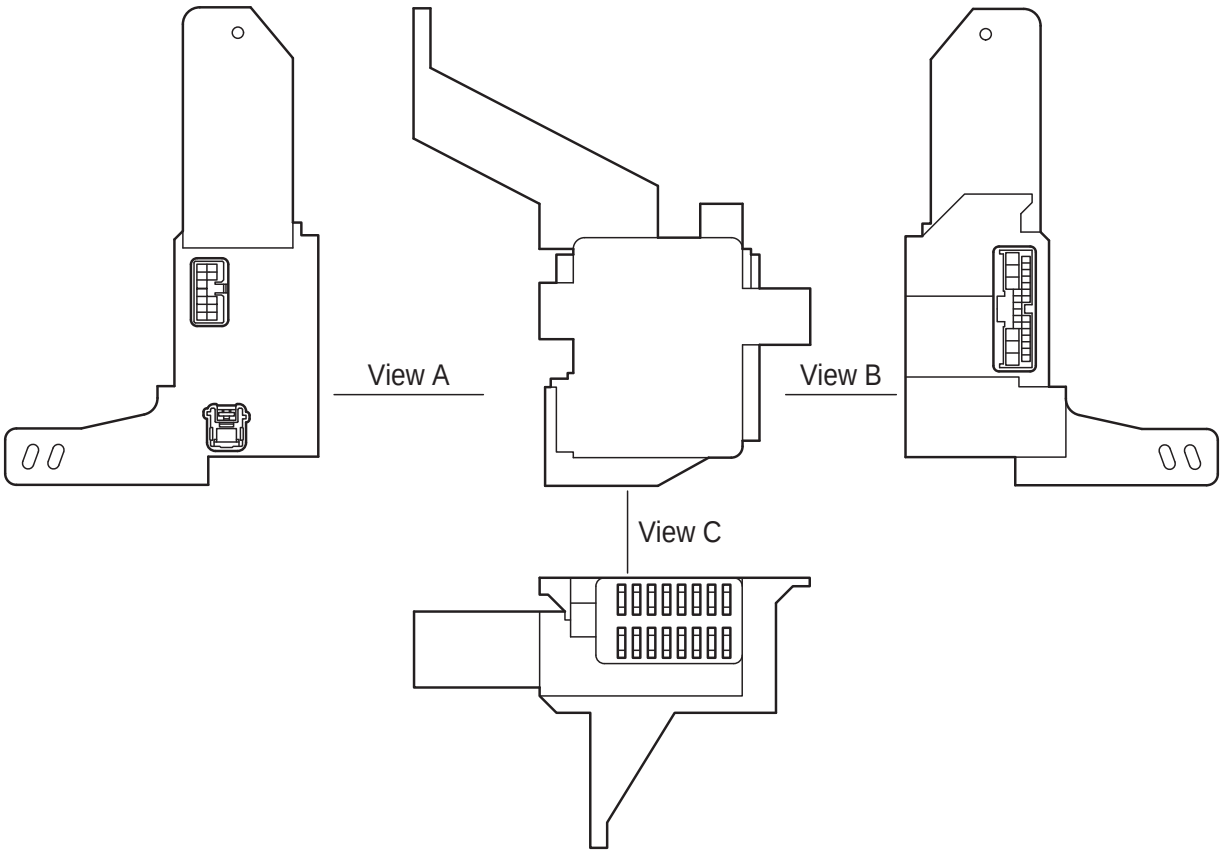

View A

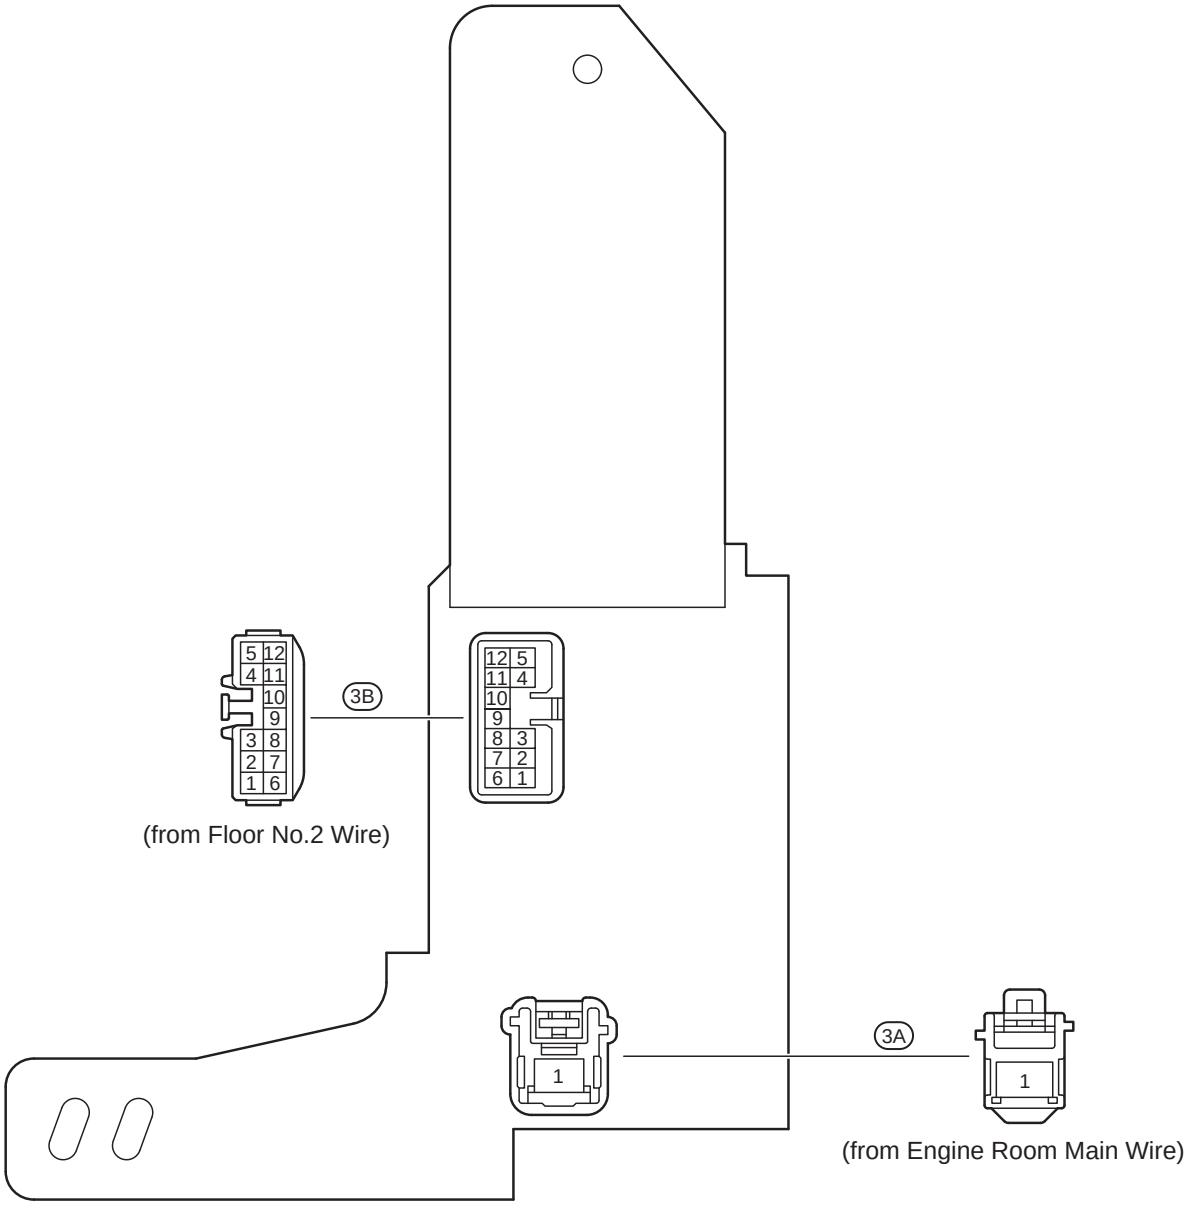
5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 24)

(LHD Before Aug. 2015 Production)

View B

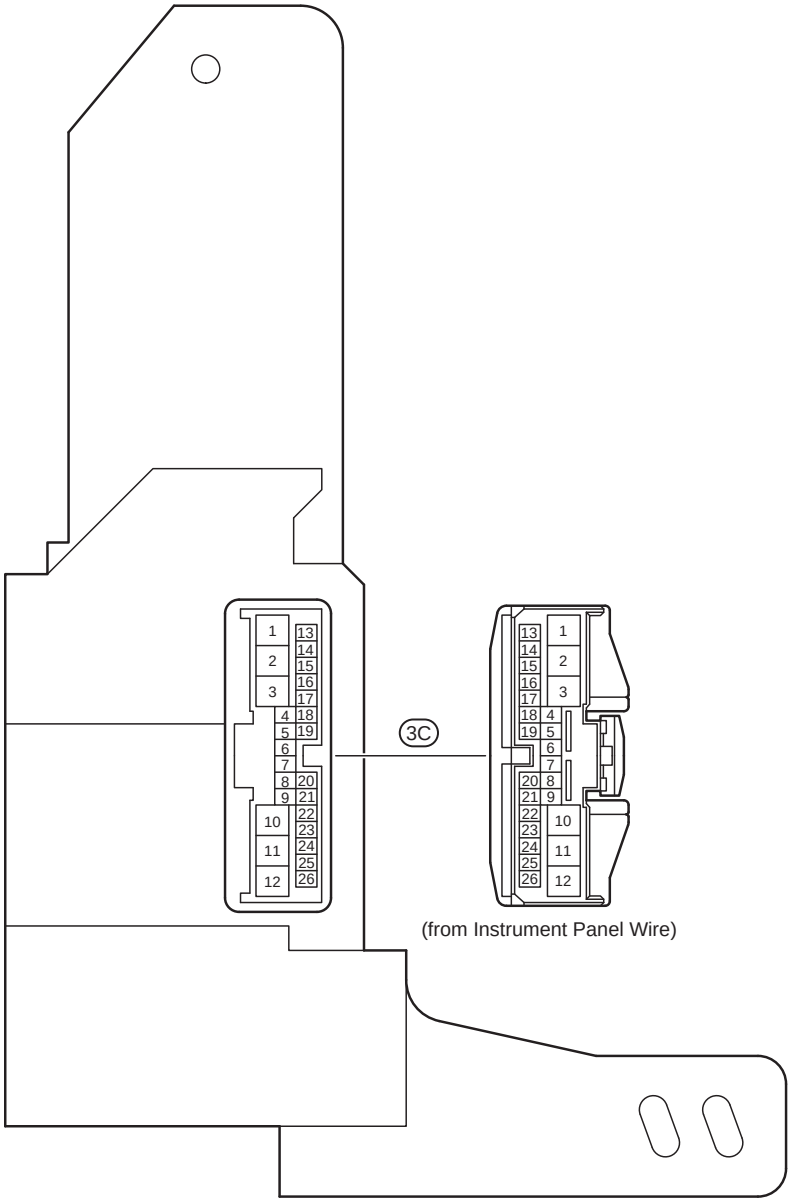

View C

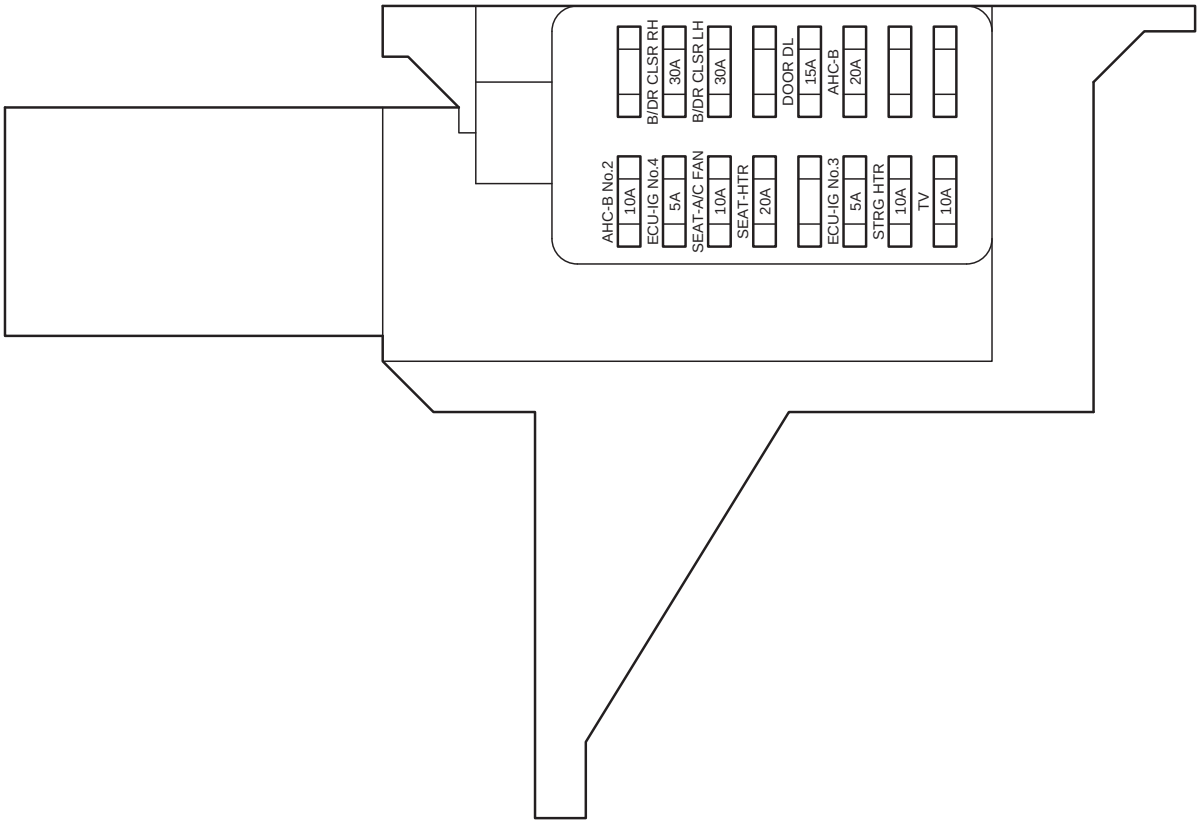
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
DOOR DL
15A
AHC-B
20A

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 25)

(RHD Before Aug. 2015 Production)

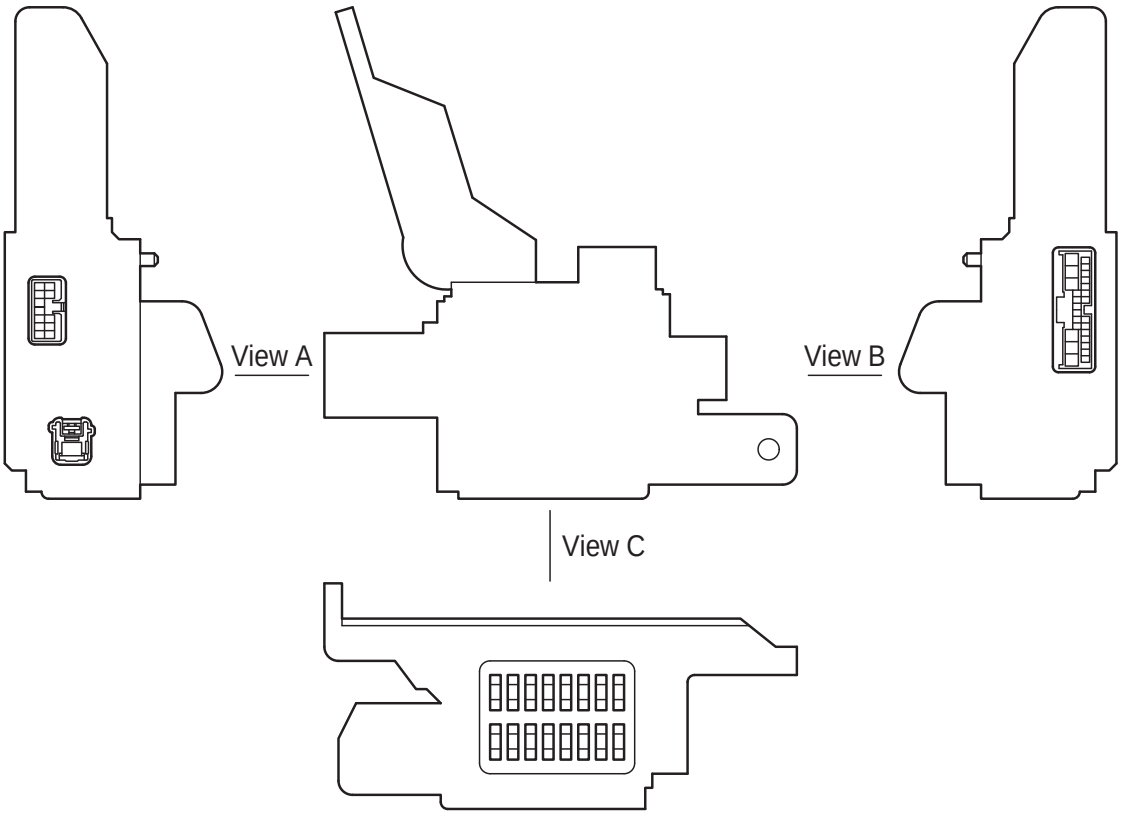

View A

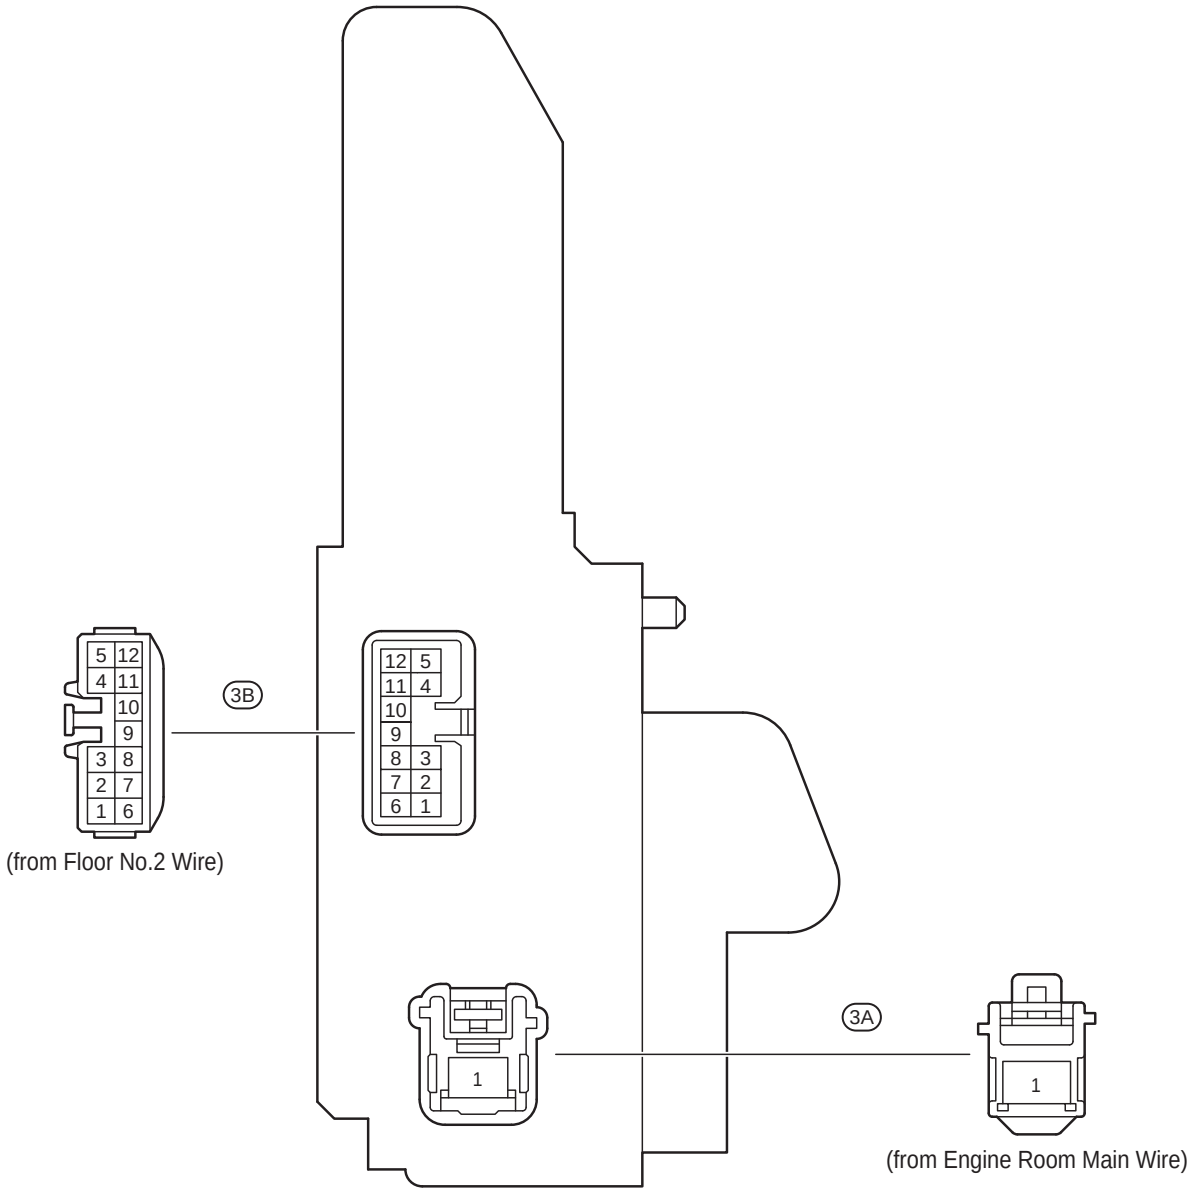
5 12
4 11
10
9
3 8
2 7
1 6
(from Floor No.2 Wire)
3B
12 5
11 4
10
9
8 3
7 2
6 1
1
3A
1
(from Engine Room Main Wire)

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 25)

(RHD Before Aug. 2015 Production)

View B

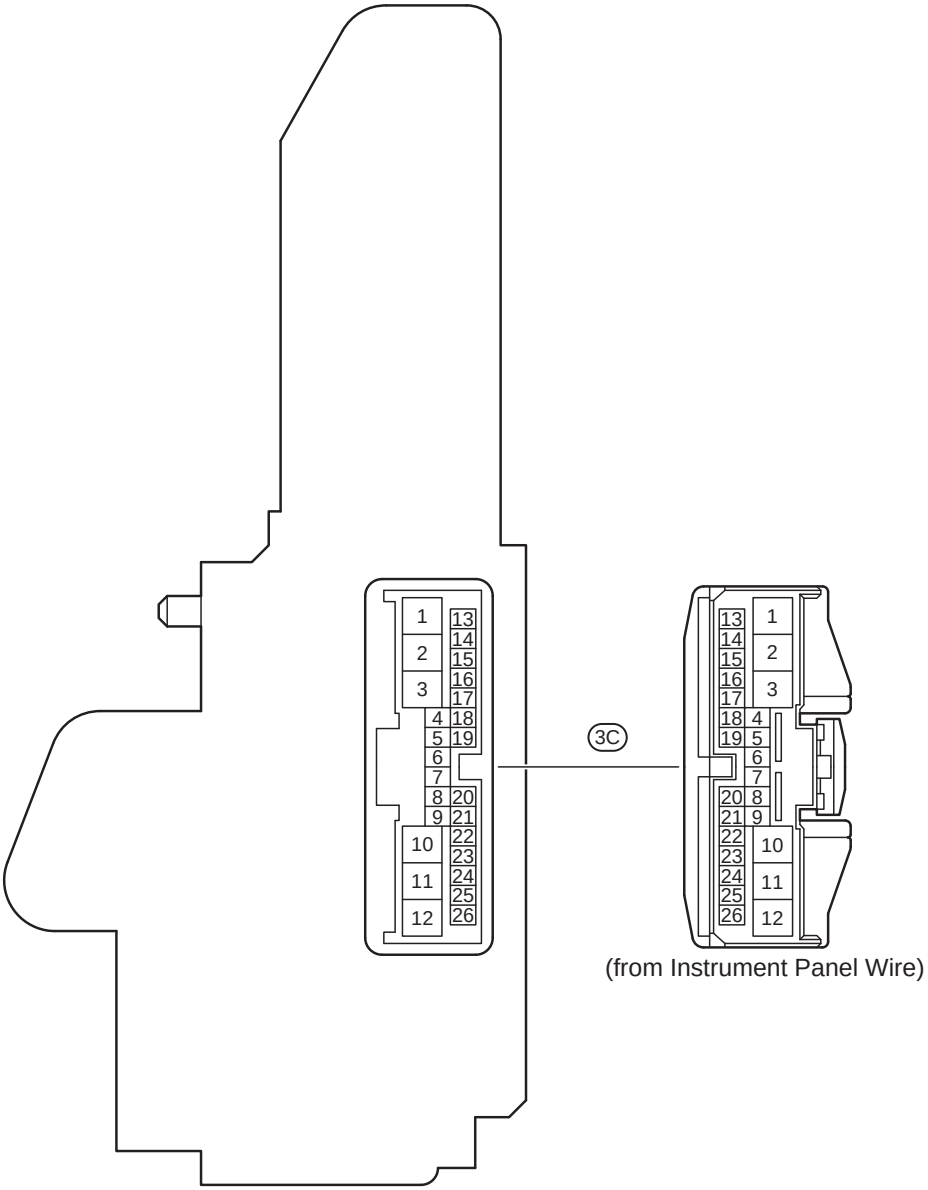

View C

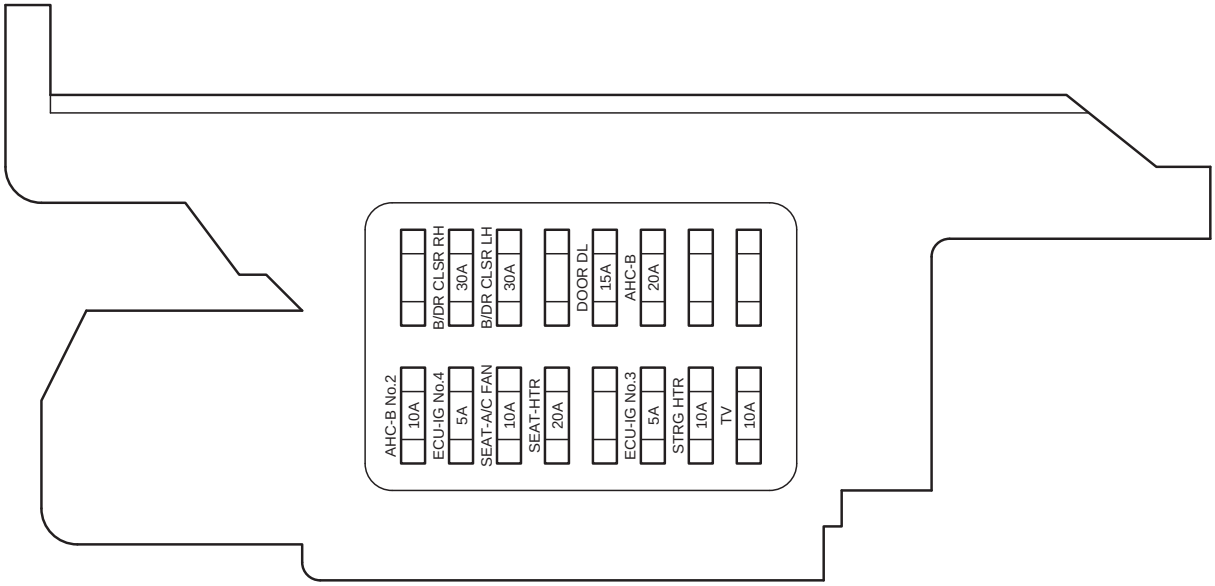
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
DOOR DL
15A
AHC-B
20A

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 26)

(LHD From Aug. 2015 Production)

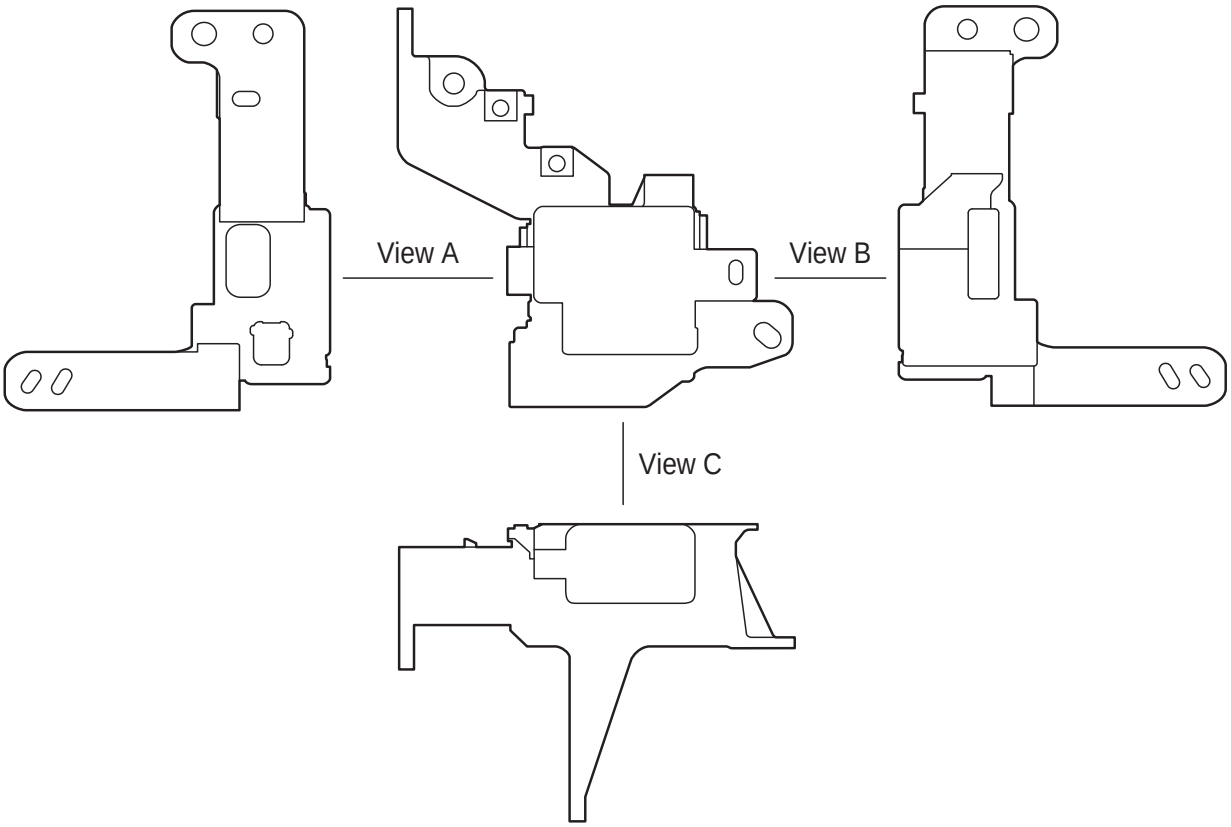

View A

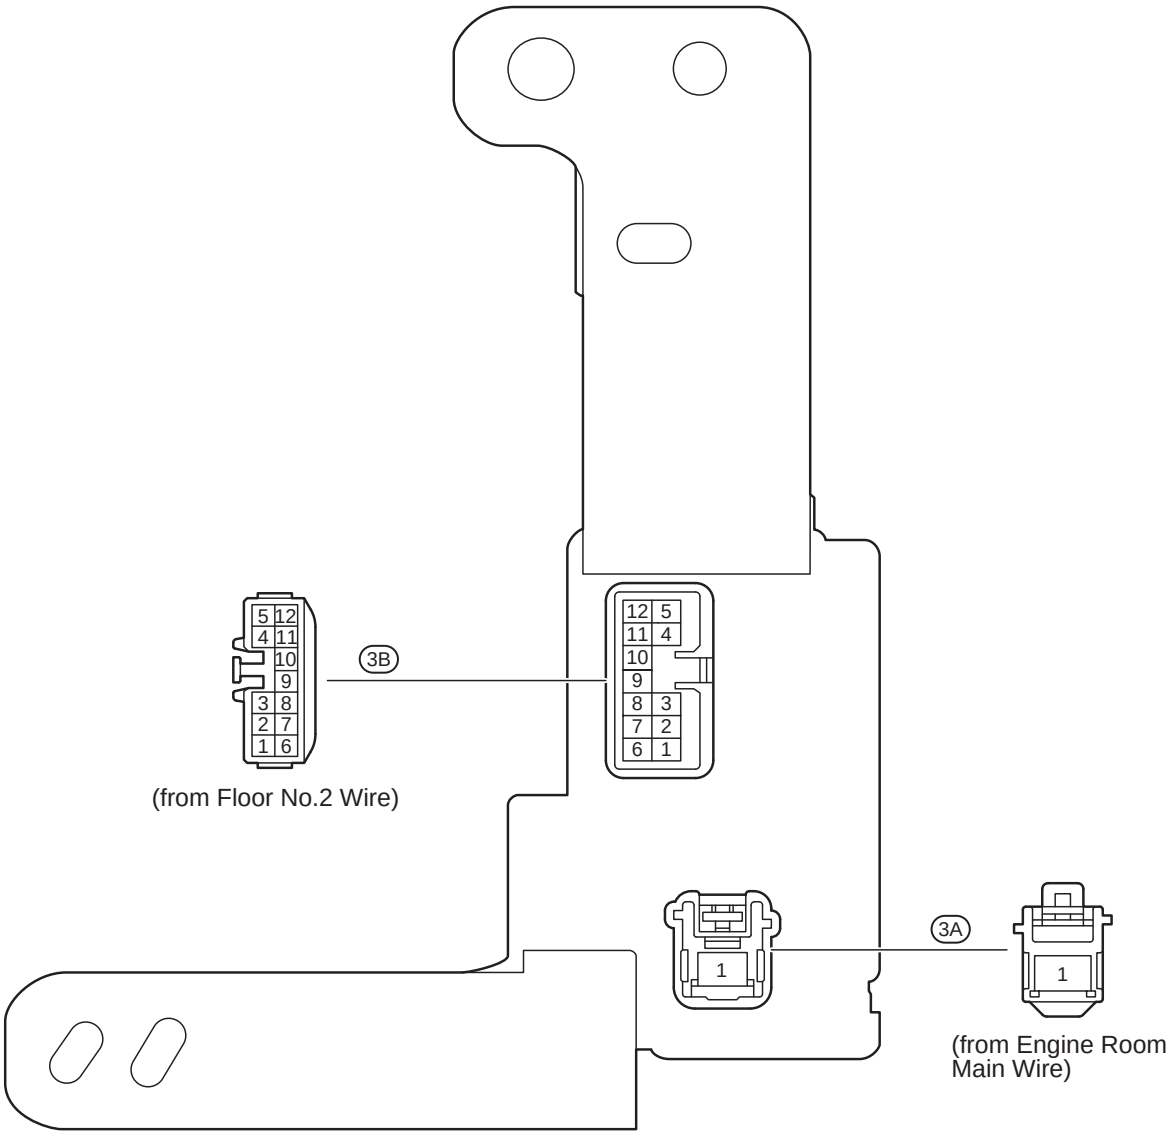
5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room
Main Wire)

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 26)

(LHD From Aug. 2015 Production)

View B

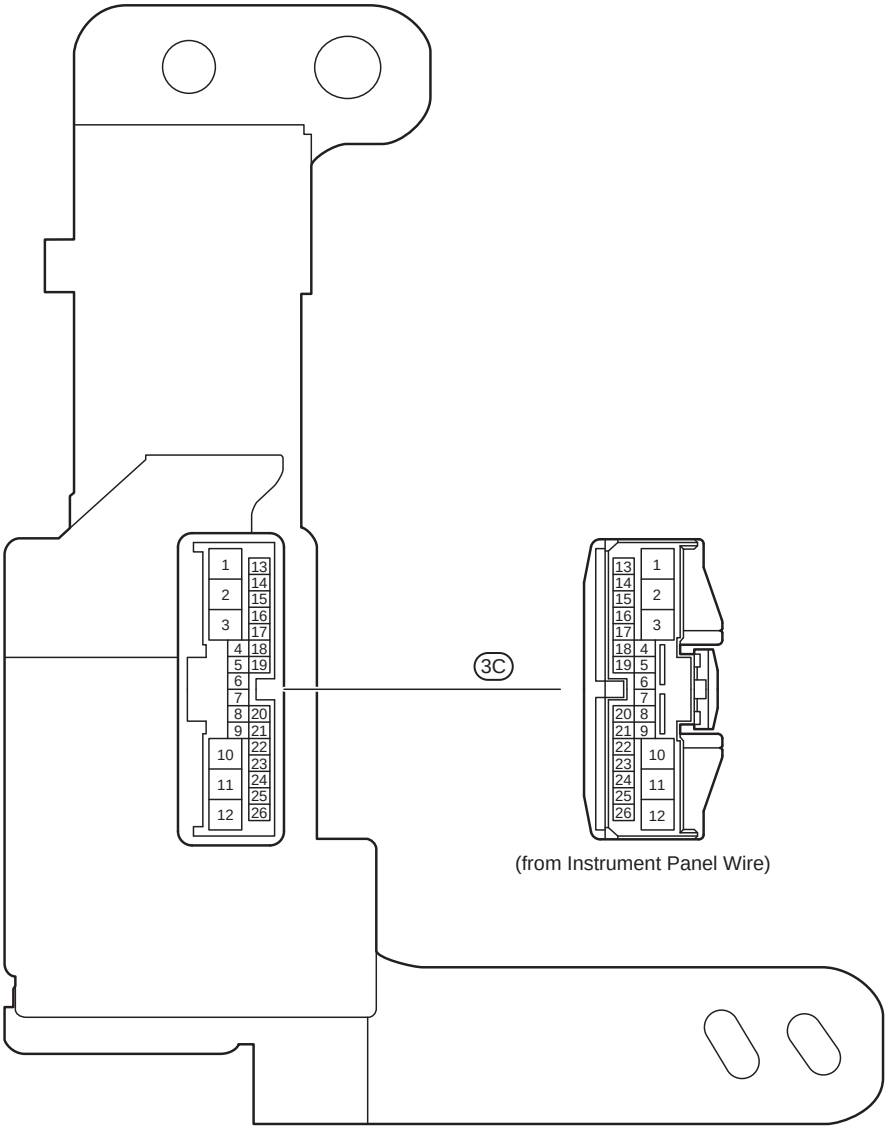

View C

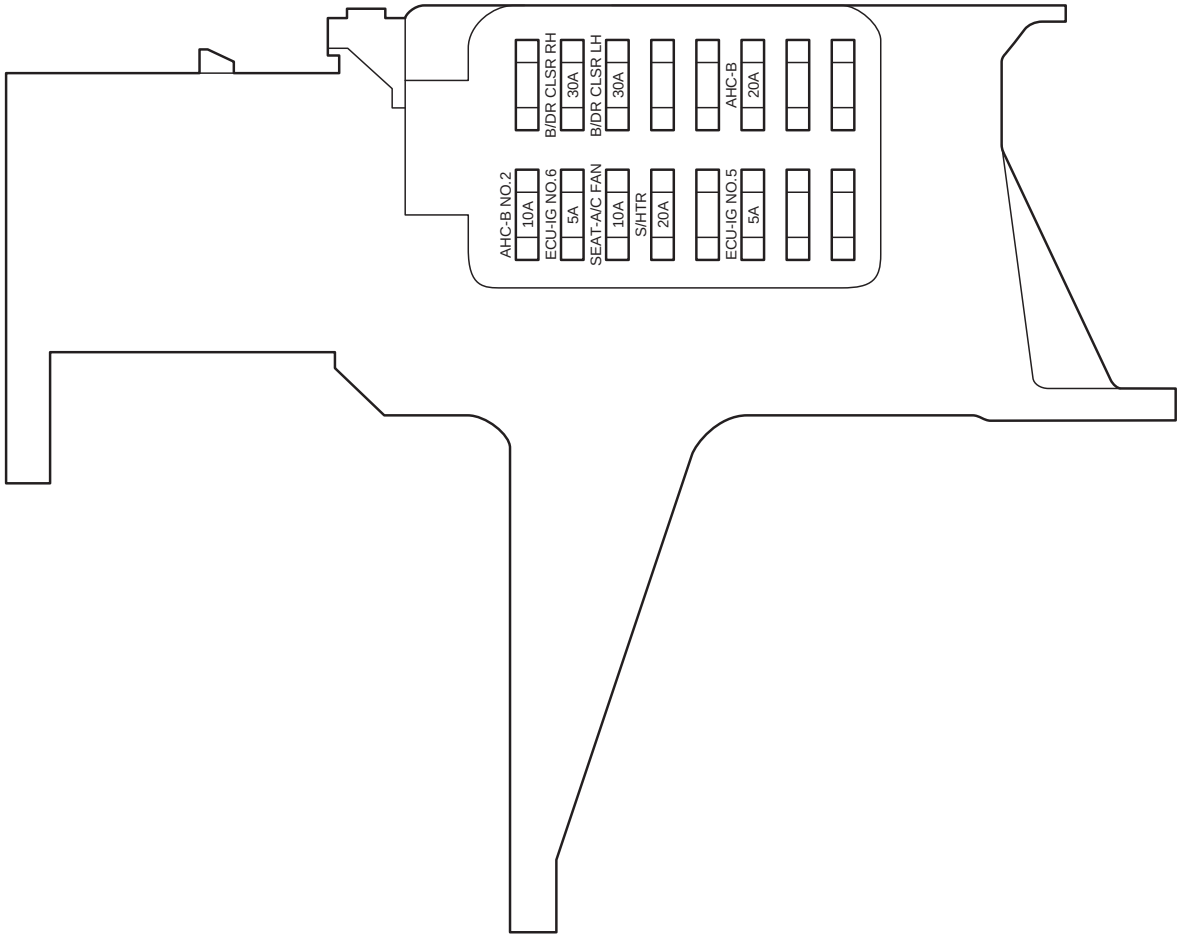
AHC-B NO.2
10A
ECU-IG NO.6
5A
SEAT-A/C FAN
10A
S/HTR
20A
ECU-IG NO.5
5A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
AHC-B
20A

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 27)

(RHD From Aug. 2015 Production)

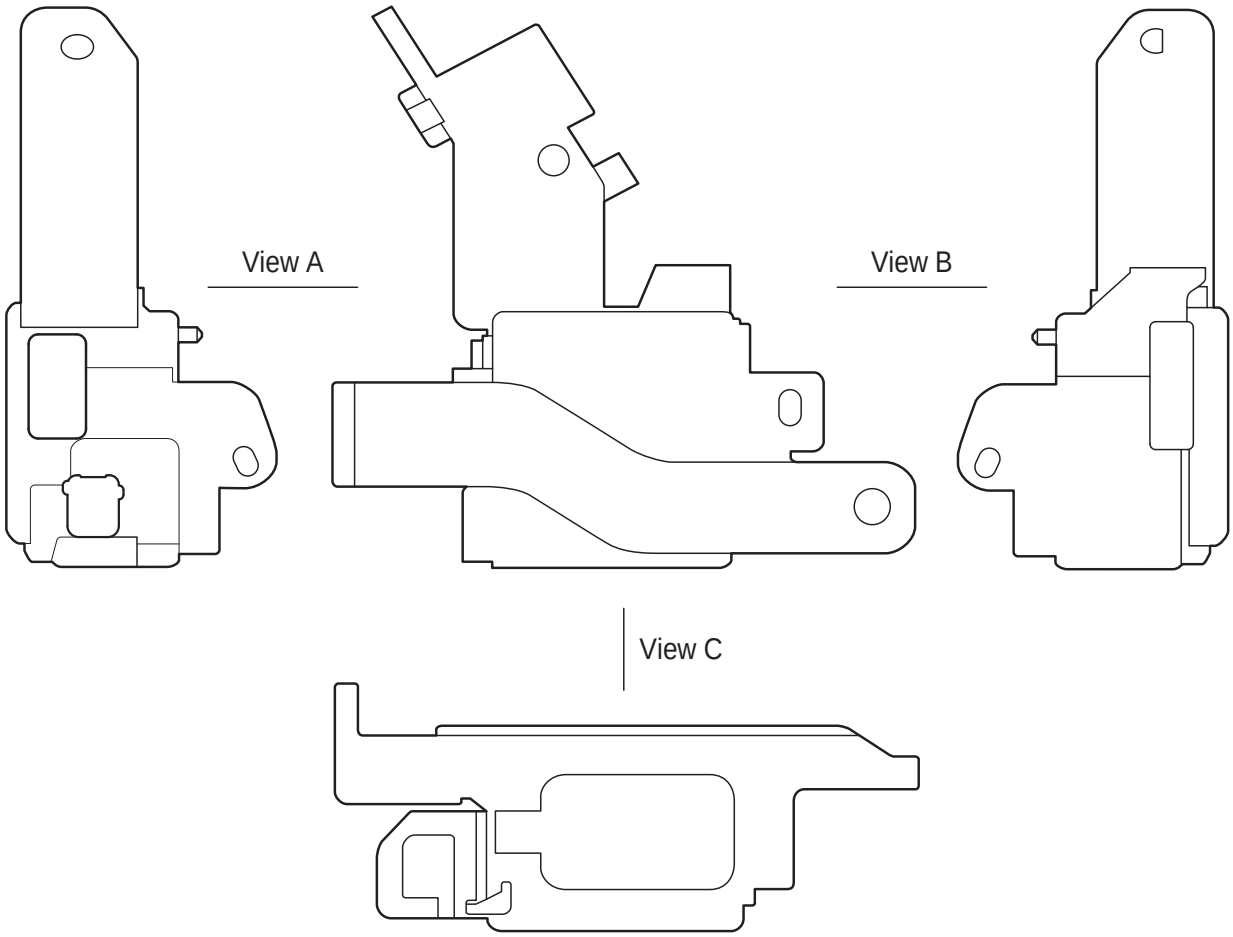

View A

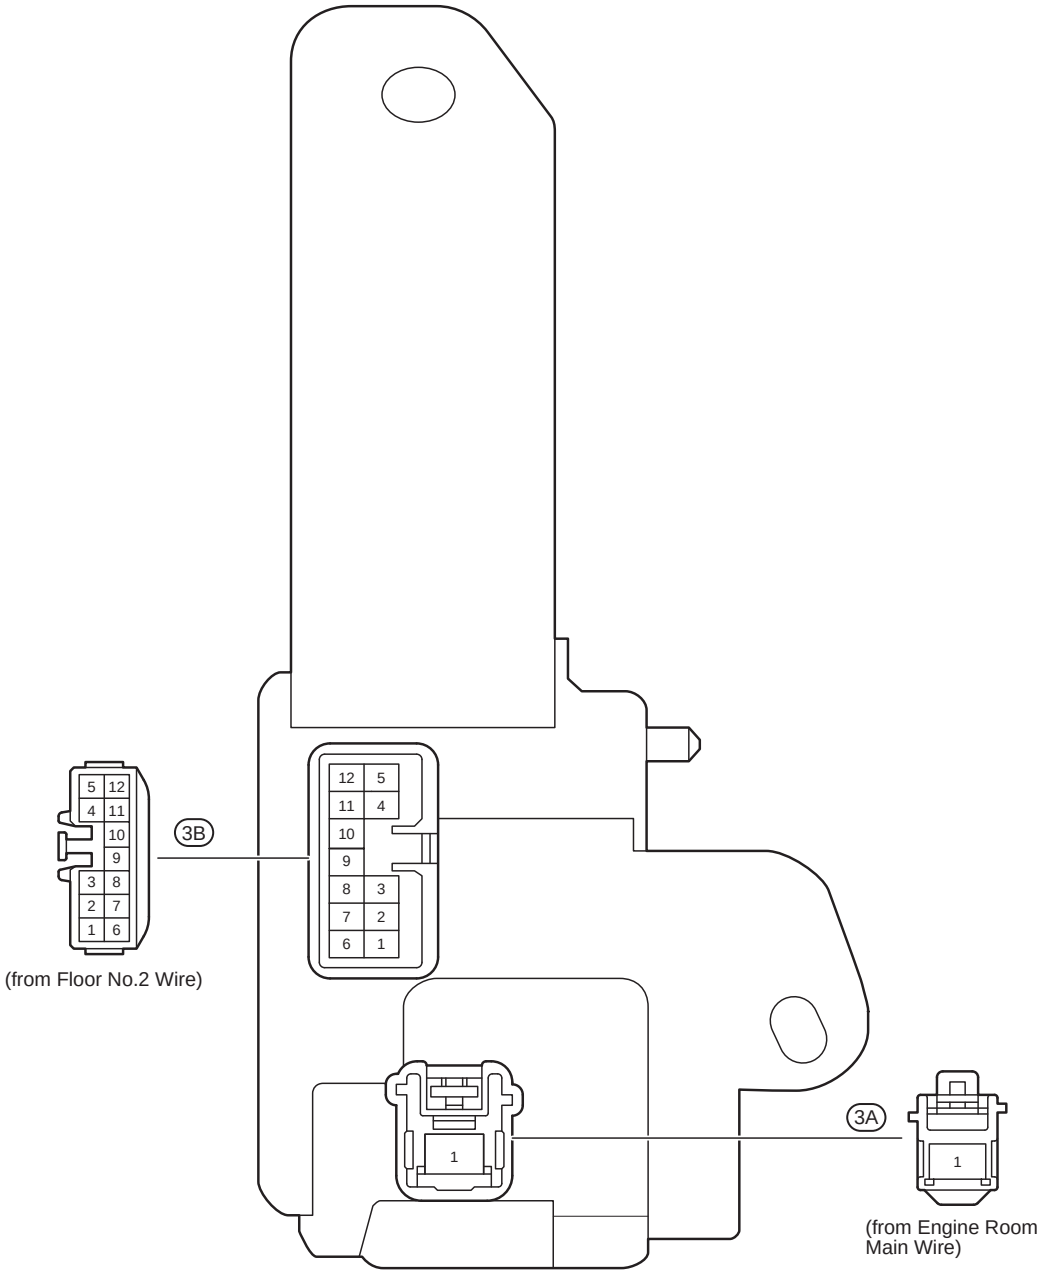
5 12
4 11
10
9
3 8
2 7
1 6
3B
(from Floor No.2 Wire)
12 5
11 4
10
9
8 3
7 2
6 1
1
3A
1
(from Engine Room
Main Wire)

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 27)

(RHD From Aug. 2015 Production)

View B

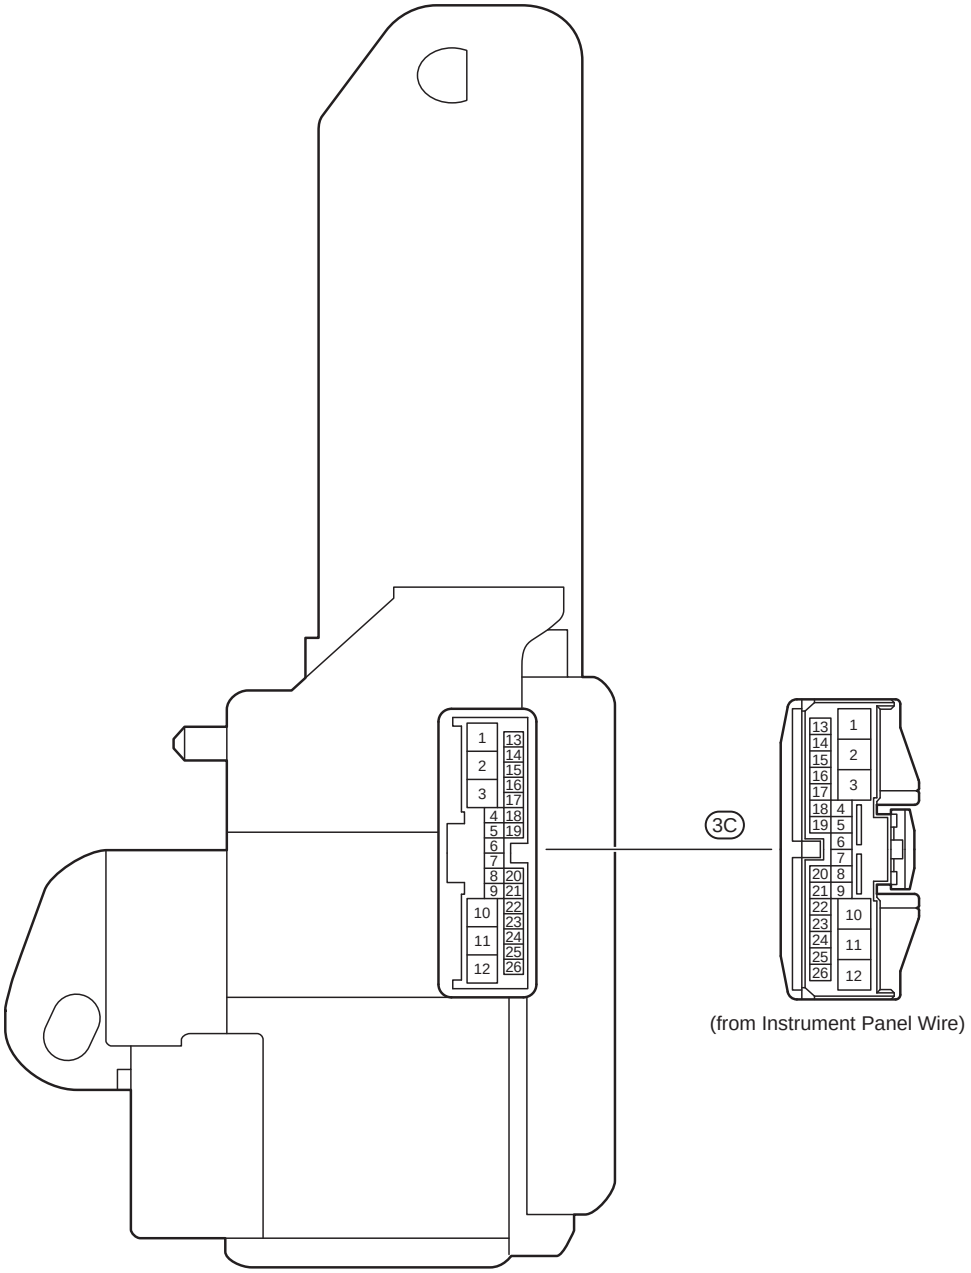

View C

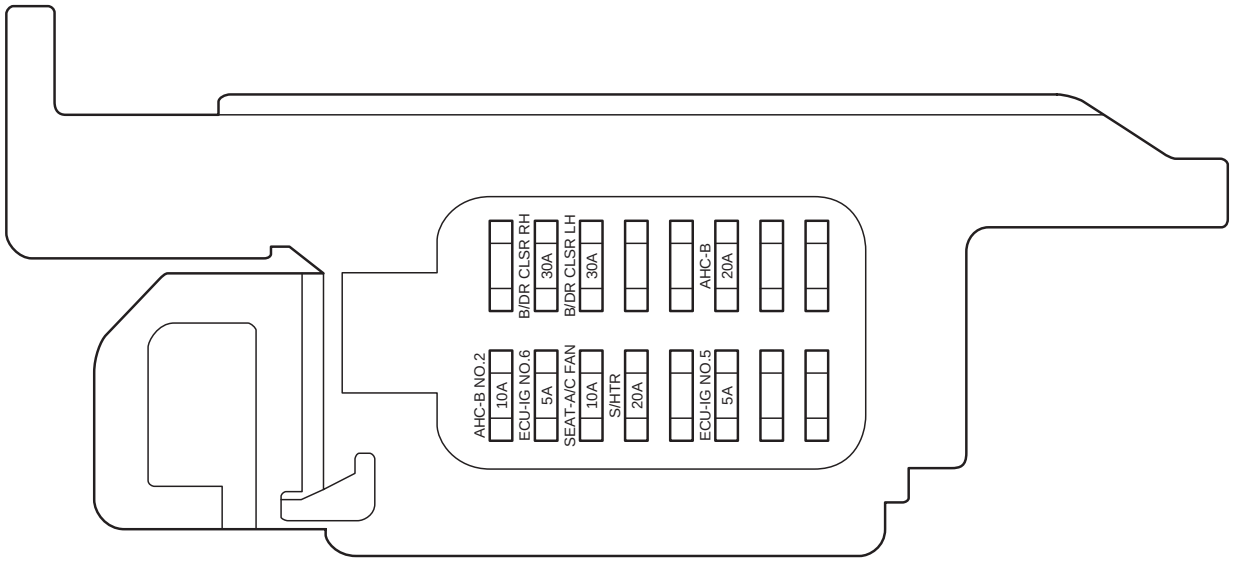
AHC-B NO.2
10A
ECU-IG NO.6
5A
SEAT-A/C FAN
10A
S/HTR
20A
ECU-IG NO.5
5A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
AHC-B
20A