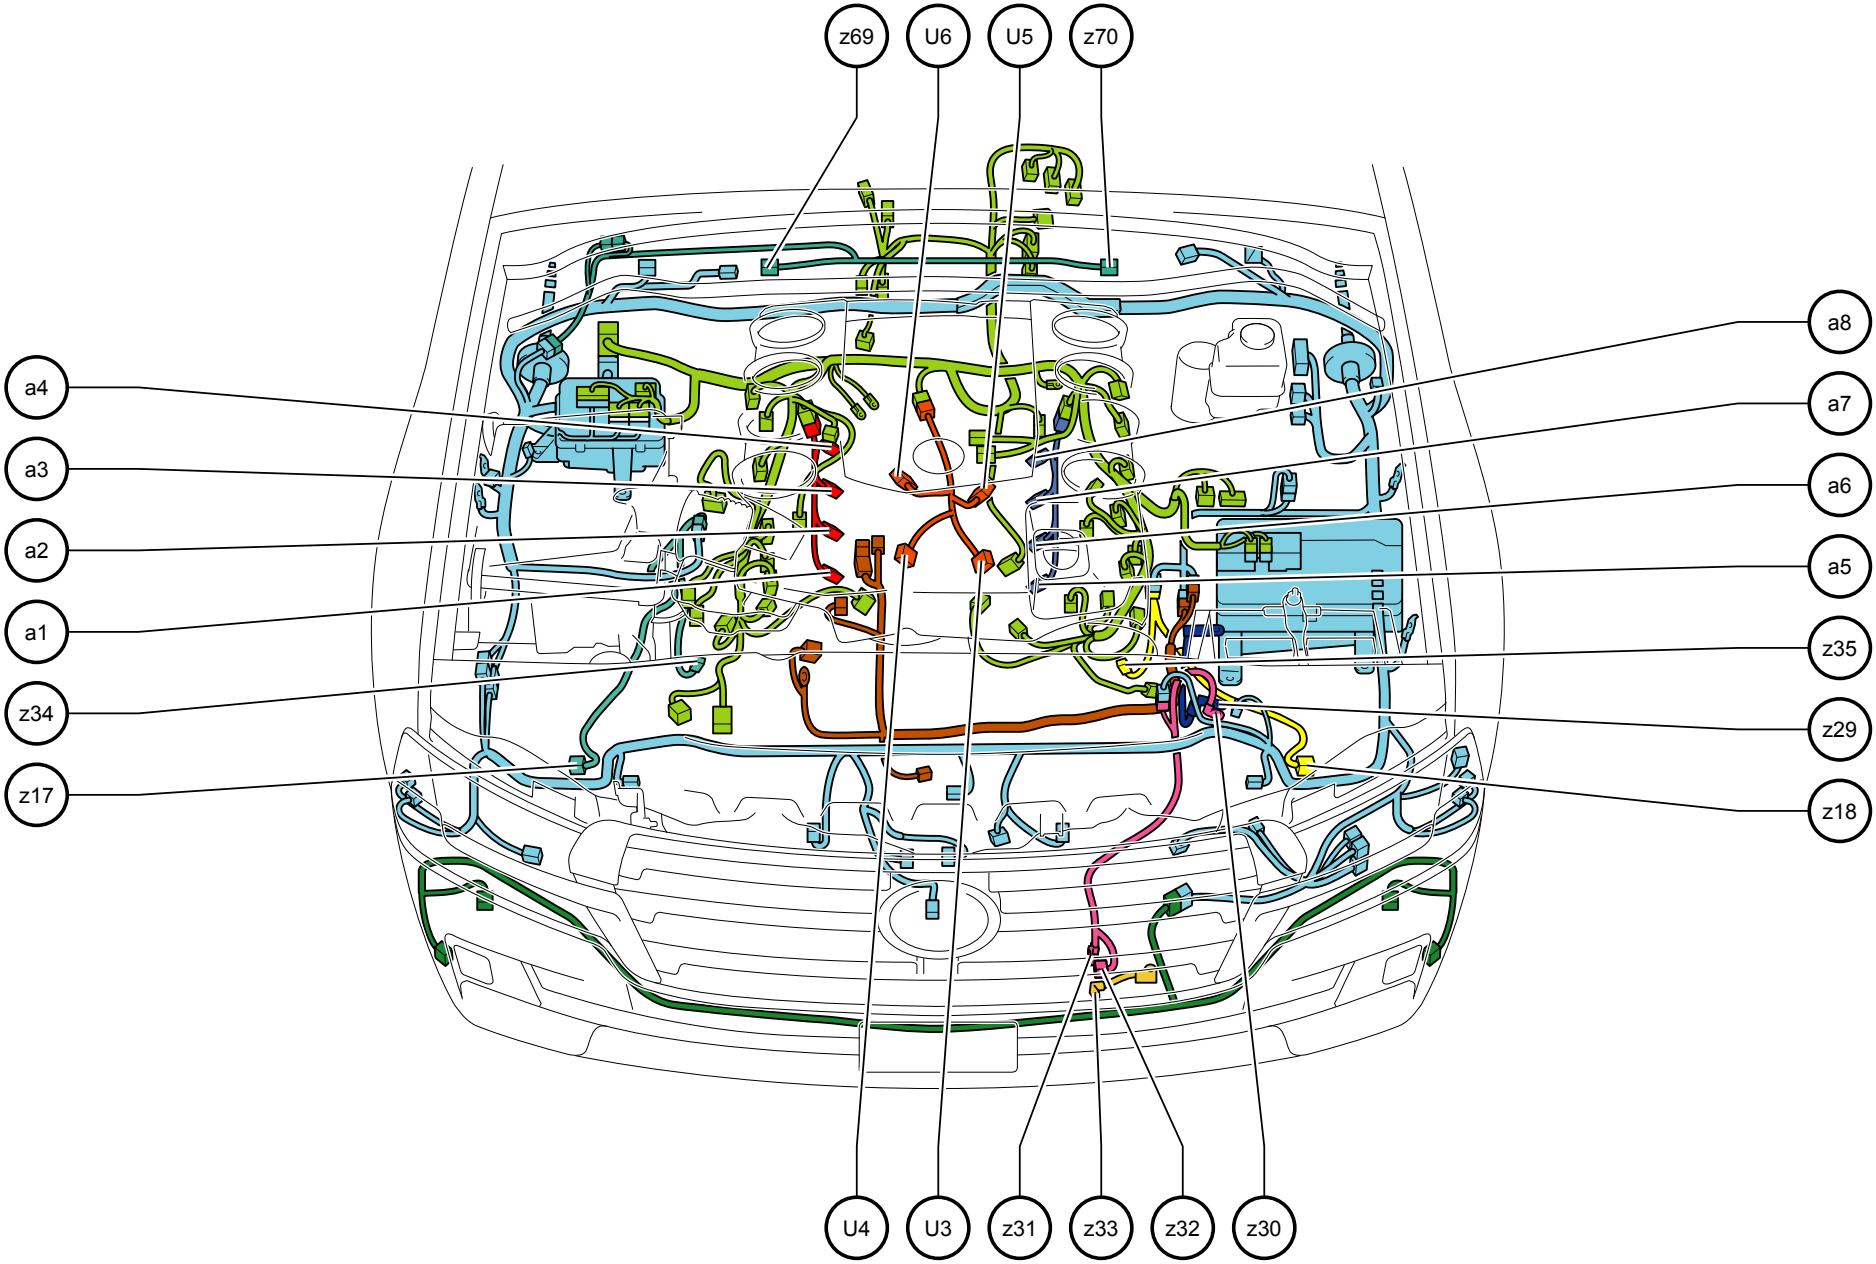
z69
U6
U5
z70
a8
a4
a7
a3
a6
a2
a5
a1
z35
z34
z29
z17
z18
U4
U3
z31
z33
z32
z30

U	3	Knock Control Sensor (Bank 1 Sensor 1)
U	4	Knock Control Sensor (Bank 2 Sensor 1)
U	5	Knock Control Sensor (Bank 1 Sensor 2)
U	6	Knock Control Sensor (Bank 2 Sensor 2)

a	1	Fuel Injector Assembly No.2
a	2	Fuel Injector Assembly No.4
a	3	Fuel Injector Assembly No.6
a	4	Fuel Injector Assembly No.8
a	5	Fuel Injector Assembly No.1
a	6	Fuel Injector Assembly No.3
a	7	Fuel Injector Assembly No.5
a	8	Fuel Injector Assembly No.7

z	17	Front Speed Sensor RH
z	18	Front Speed Sensor LH
z	29	Winch Main Relay (No.1 Magnet Switch Assembly)
z	30	Winch Main Relay (No.1 Magnet Switch Assembly)
z	31	With Magnet Switch Winch Motor Assembly
z	32	With Magnet Switch Winch Motor Assembly
z	33	With Magnet Switch Winch Motor Assembly
z	34	Front Height Control Sensor Sub-Assembly RH
z	35	Front Height Control Sensor Sub-Assembly LH
z	69	Washer Nozzle Sub-Assembly RH
z	70	Washer Nozzle Sub-Assembly LH

U 3
Gray



U 4
Black



U 5
Gray



U 6
Black



a 1
Black

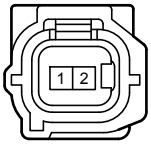

a 2
Black

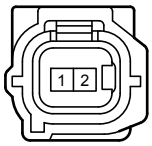

a 3
Black

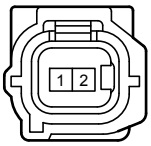

a 4
Black

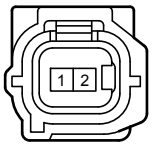

a 5
Black

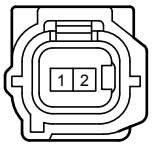

a 6
Black

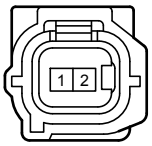

a 7
Black

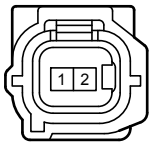

a 8
Black

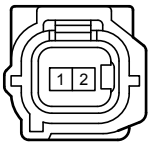

z 17
Black

z 18
Black

z 29



z 30



z 31



z 32
Gray

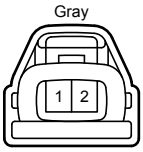

z 33



z 34
Black

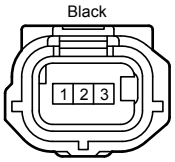

z 35
Black

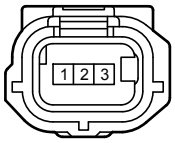

z 69
Gray

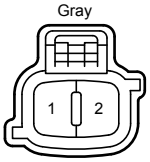
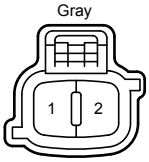
z 70
Gray