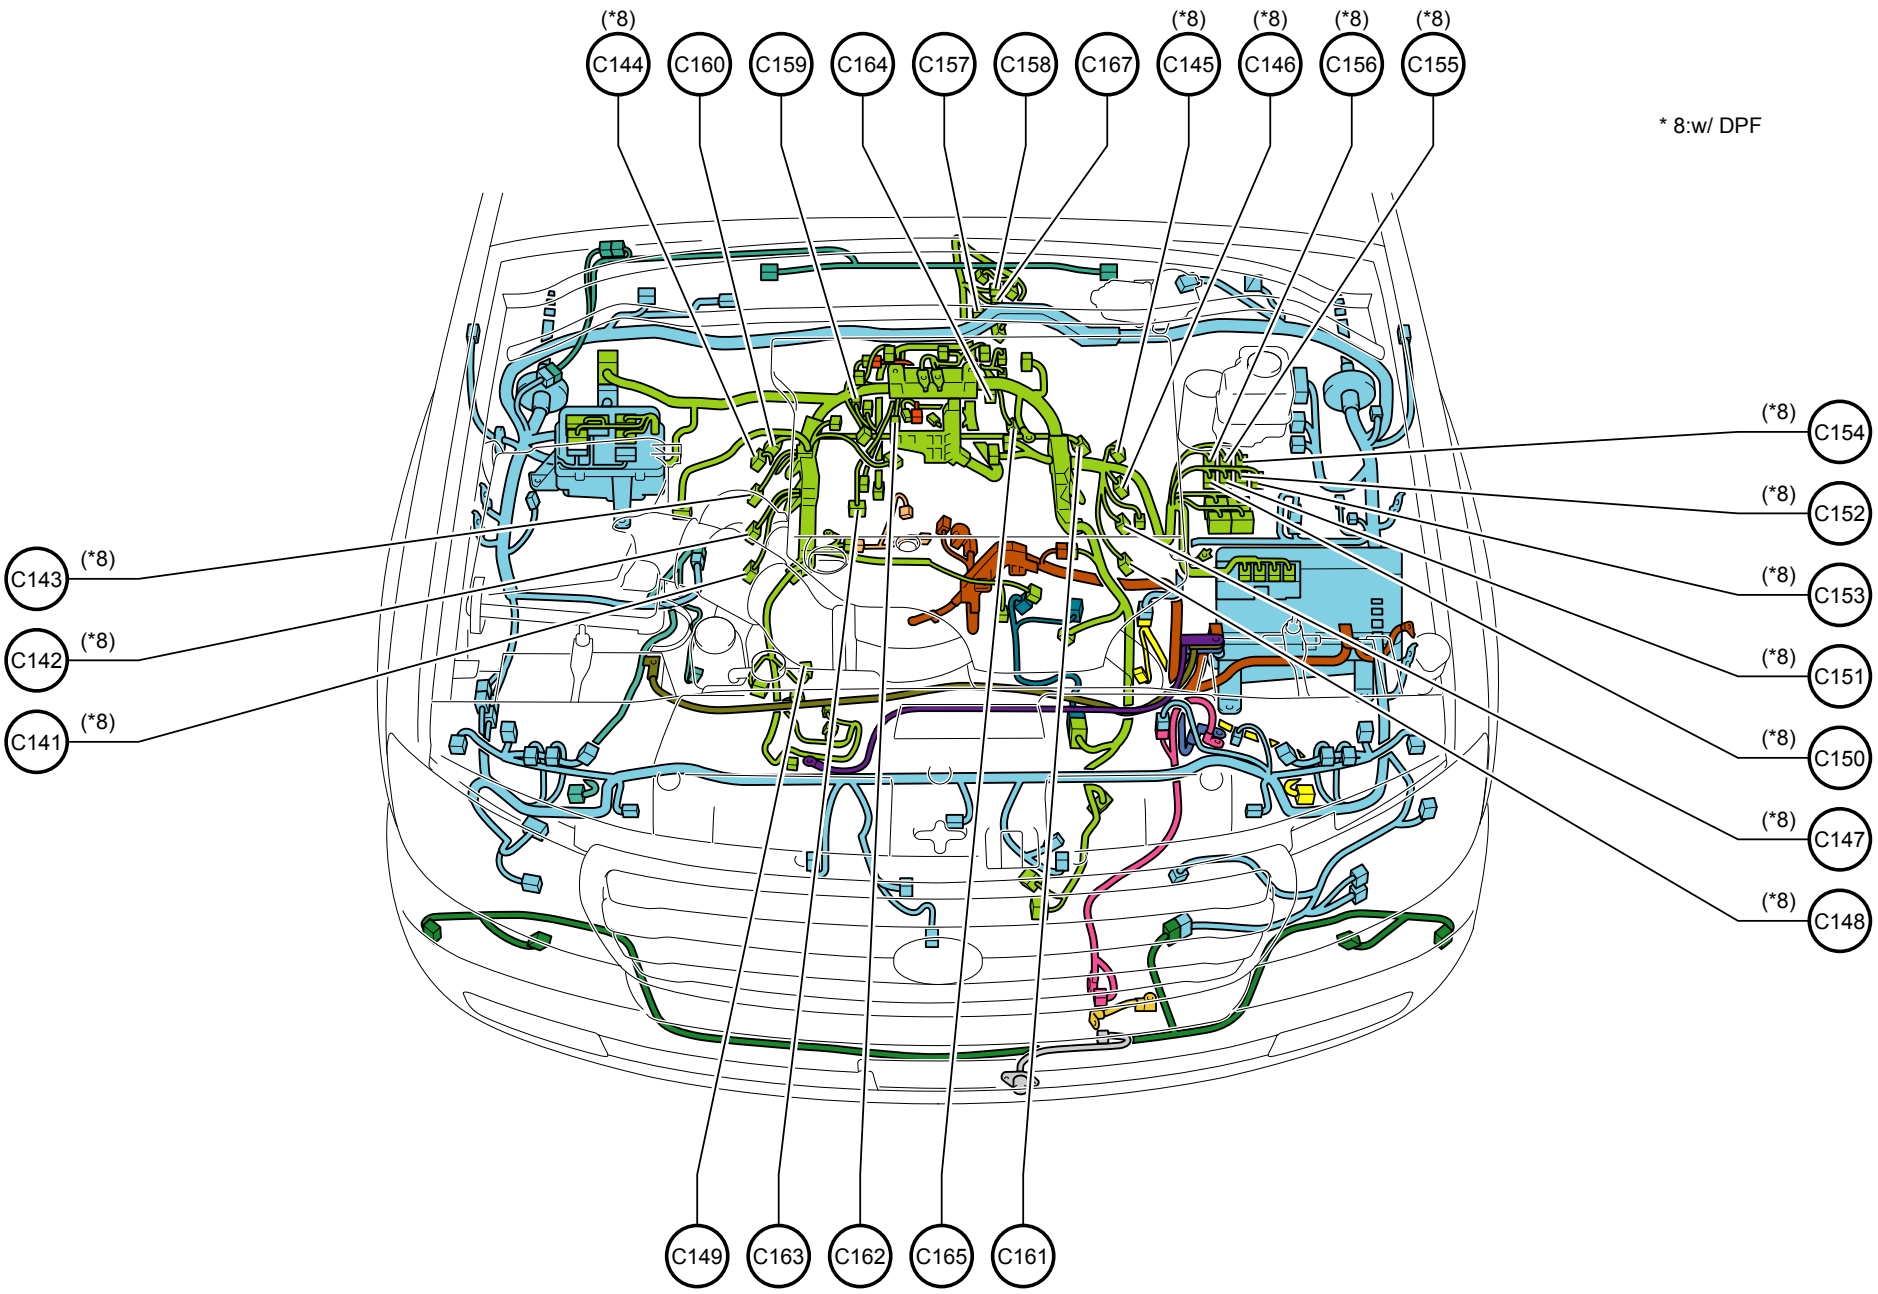
(*8)
C144
C160
C159
C164
C157
C158
C167
(*8)
C145
(*8)
C146
(*8)
C156
(*8)
C155
* 8:w/ DPF
(*8)
C154
(*8)
C152
(*8)
C153
(*8)
C151
(*8)
C150
(*8)
C147
(*8)
C148
C143
(*8)
C142
(*8)
C141
(*8)
C149
C163
C162
C165
C161

C 141 Fuel Injector Assembly No.1
C 142 Fuel Injector Assembly No.3
C 143 Fuel Injector Assembly No.5
C 144 Fuel Injector Assembly No.7
C 145 Fuel Injector Assembly No.8
C 146 Fuel Injector Assembly No.6
C 147 Fuel Injector Assembly No.4
C 148 Fuel Injector Assembly No.2
C 149 Vane Pump Assembly
C 150 Injector Driver (No.1)
C 151 Injector Driver (No.1)
C 152 Injector Driver (No.1)
C 153 Injector Driver (No.1)
C 154 Injector Driver (No.2)
C 155 Injector Driver (No.2)
C 156 Injector Driver (No.2)
C 157 Differential Pressure Sensor LH
C 158 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 159 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 160 Exhaust Fuel Addition Injector Assembly RH
C 161 Exhaust Fuel Addition Injector Assembly LH
C 162 Exhaust Gas Temperature Sensor
C 163 No.2 Exhaust Gas Temperature Sensor
C 164 No.3 Exhaust Gas Temperature Sensor
C 165 No.4 Exhaust Gas Temperature Sensor
C 167 DPF Temperature Sensor LH (Exhaust Gas Temperature Sensor)

C141
Gray

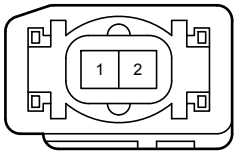

C142
Black

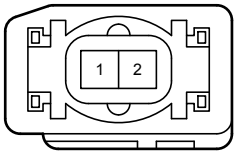

C143
Gray

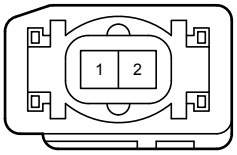

C144
Black

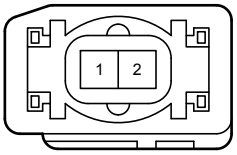

C145
Gray

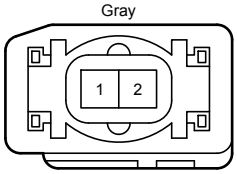

C146
Black

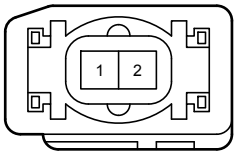

C147
Gray

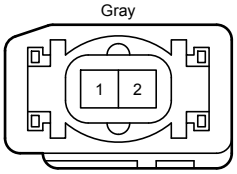

C148
Black

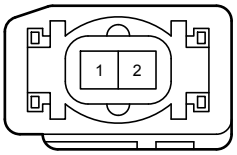

C149
Black

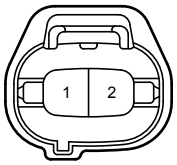

C150
Black



C151
Black

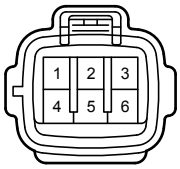

C152
Black

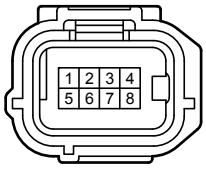

C153
Black

C154
Black

C155
Black

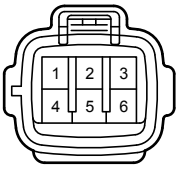

C156
Black

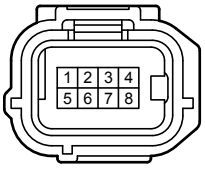

C157
Black

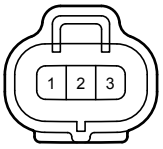

C158
Dark Gray

C159
Dark Gray

C160
Black

C161
Black

C162
Gray

C163
Gray

C164
Gray

C165
Gray

C167
Gray