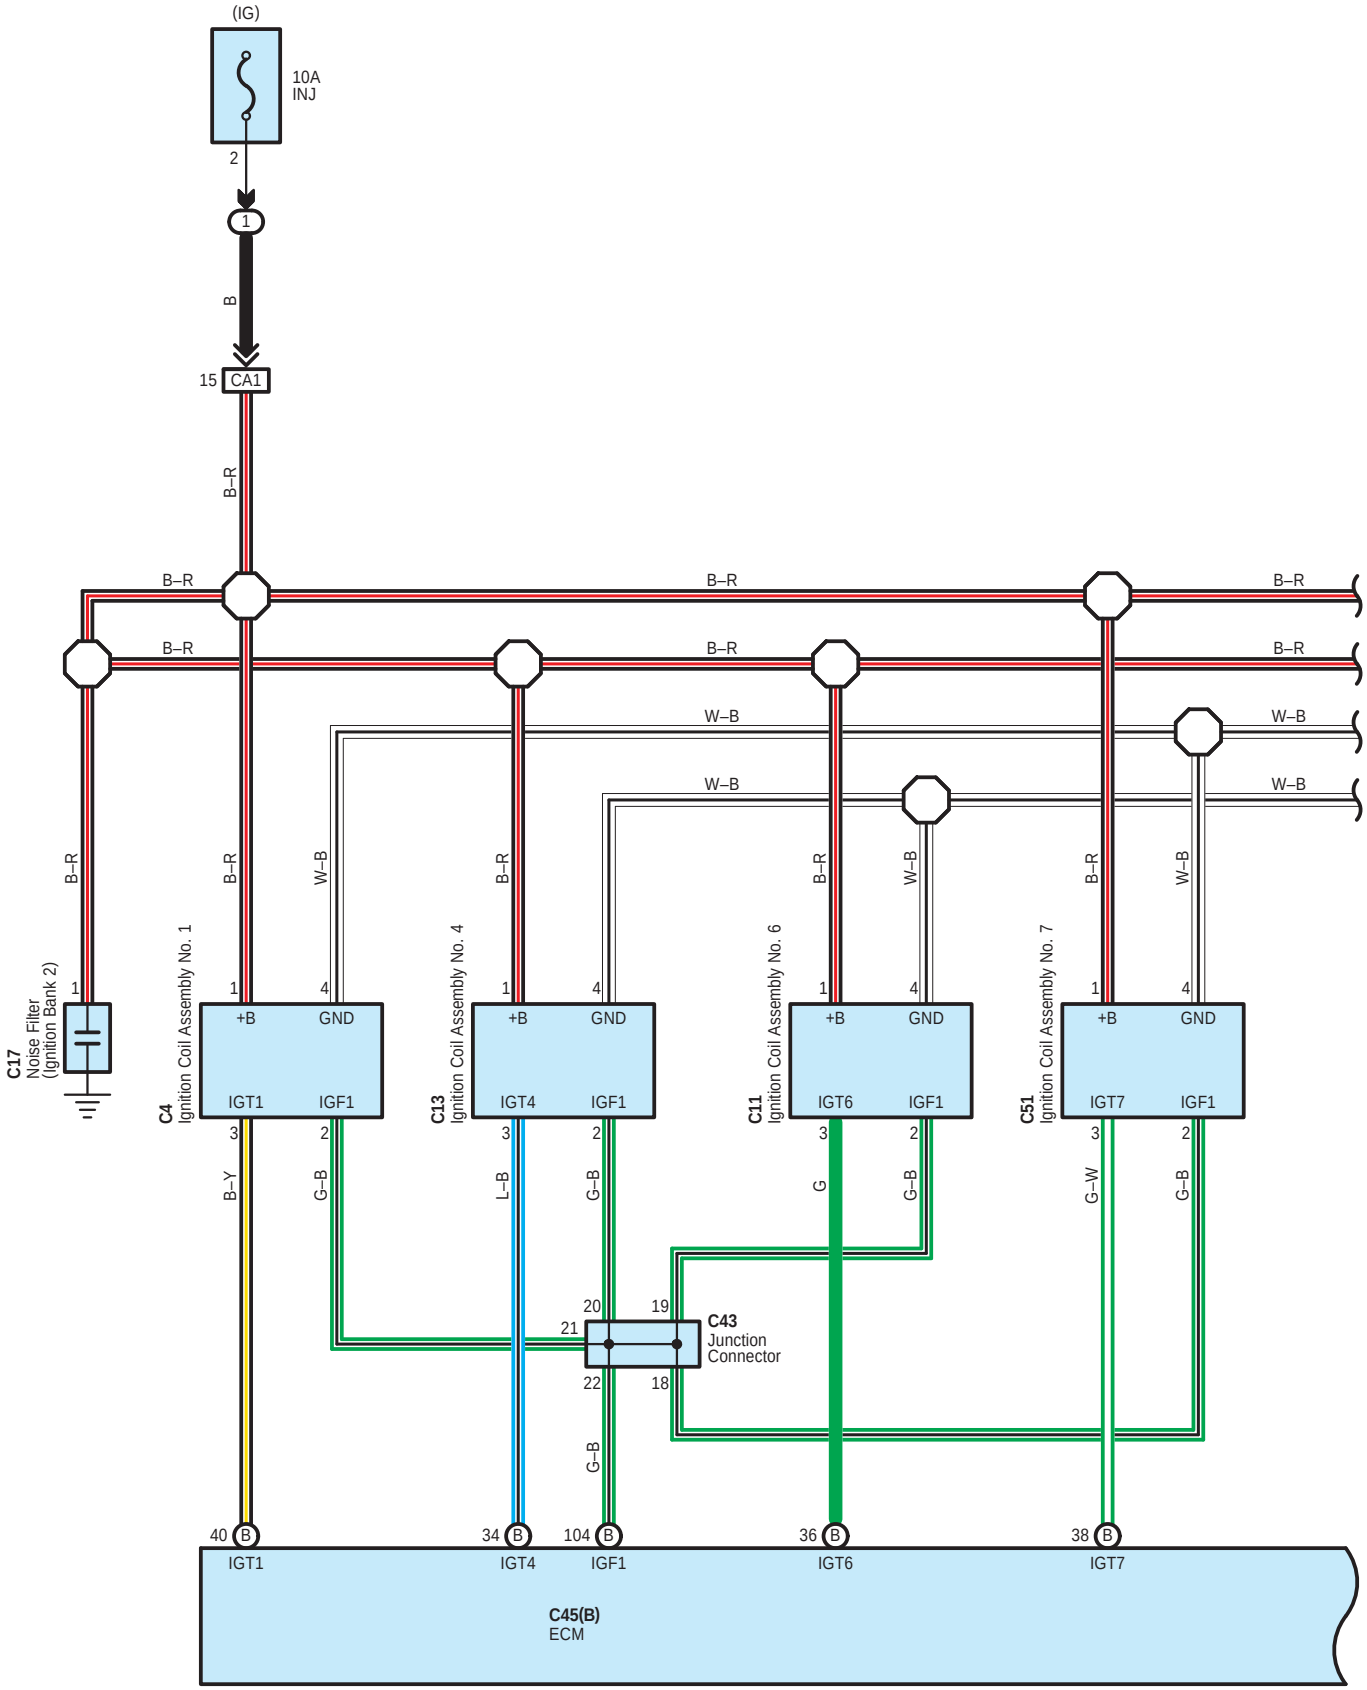
(IG)
10A
INJ
2
1
B
15
CA1
B–R
W–B
C17
Noise Filter
(Ignition Bank 2)
C4
Ignition Coil Assembly No. 1
C13
Ignition Coil Assembly No. 4
C11
Ignition Coil Assembly No. 6
C51
Ignition Coil Assembly No. 7
+B
GND
IGT1
IGF1
IGT4
IGT6
IGT7
B–Y
G–B
L–B
G
G–W
C43
Junction
Connector
20
19
21
22
18
40
34
104
36
38
C45(B)
ECM

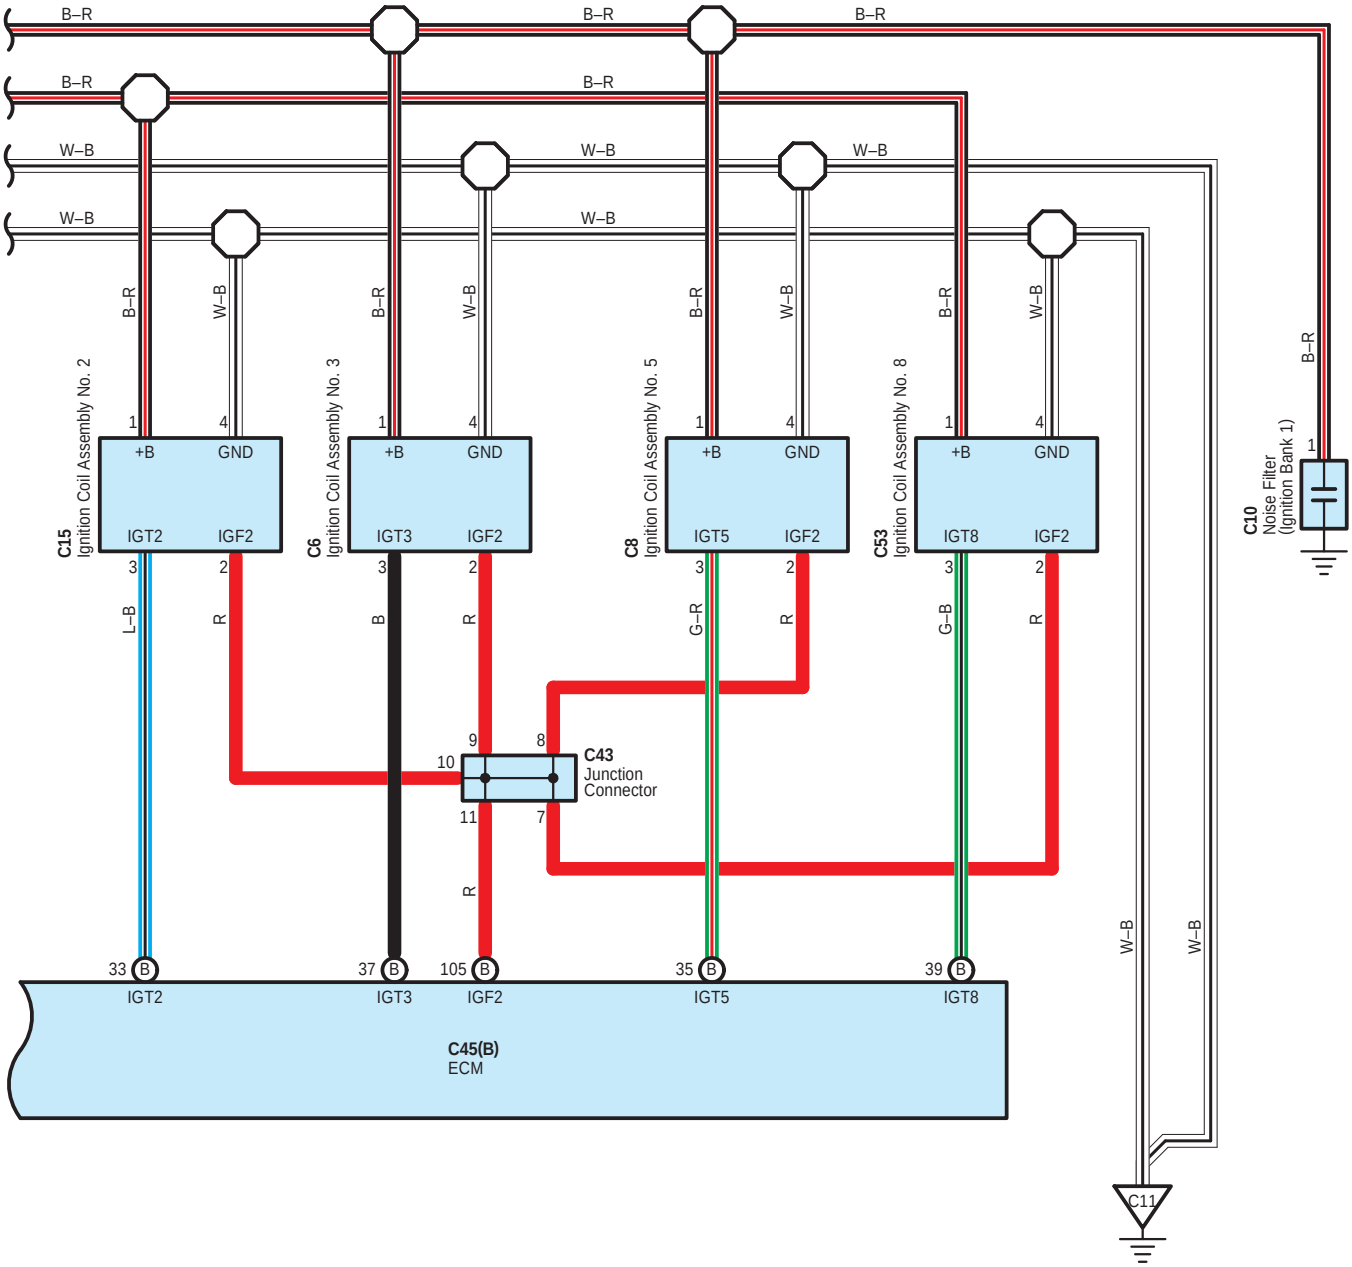
B–R
W–B
C15
Ignition Coil Assembly No. 2
C6
Ignition Coil Assembly No. 3
C8
Ignition Coil Assembly No. 5
C53
Ignition Coil Assembly No. 8
+B
GND
IGT2
IGF2
IGT3
IGT5
IGT8
L–B
R
B
G–R
G–B
C43
Junction
Connector
C10
Noise Filter
(Ignition Bank 1)
C45(B)
ECM
C11

C 4
Black



C 6
Black



C 8
Black



C 10
Gray

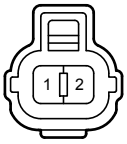

C 11
Black



C 13
Black



C 15
Black



C 17
Gray

C 43
White

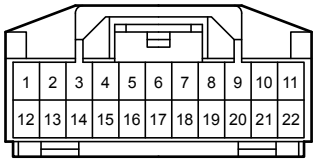

C 45
Black

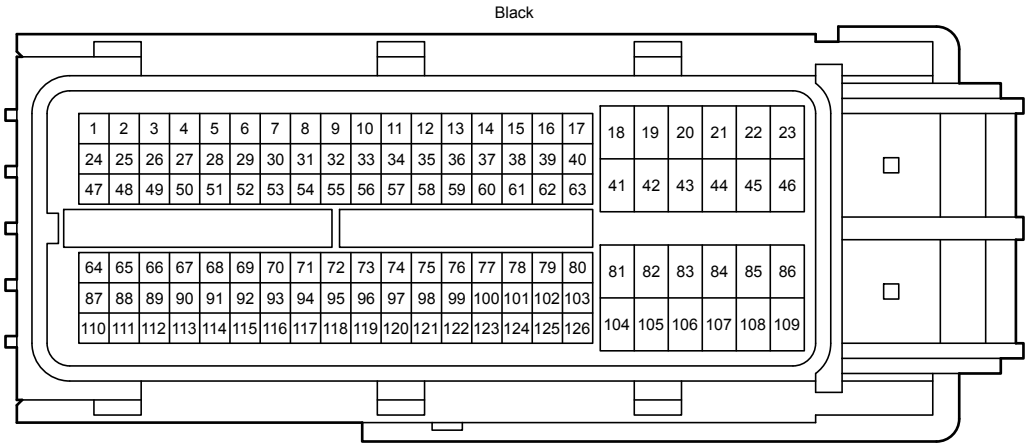

C 51
Black



C 53
Black


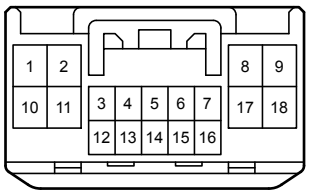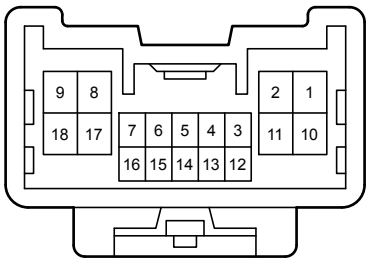
CA1
White