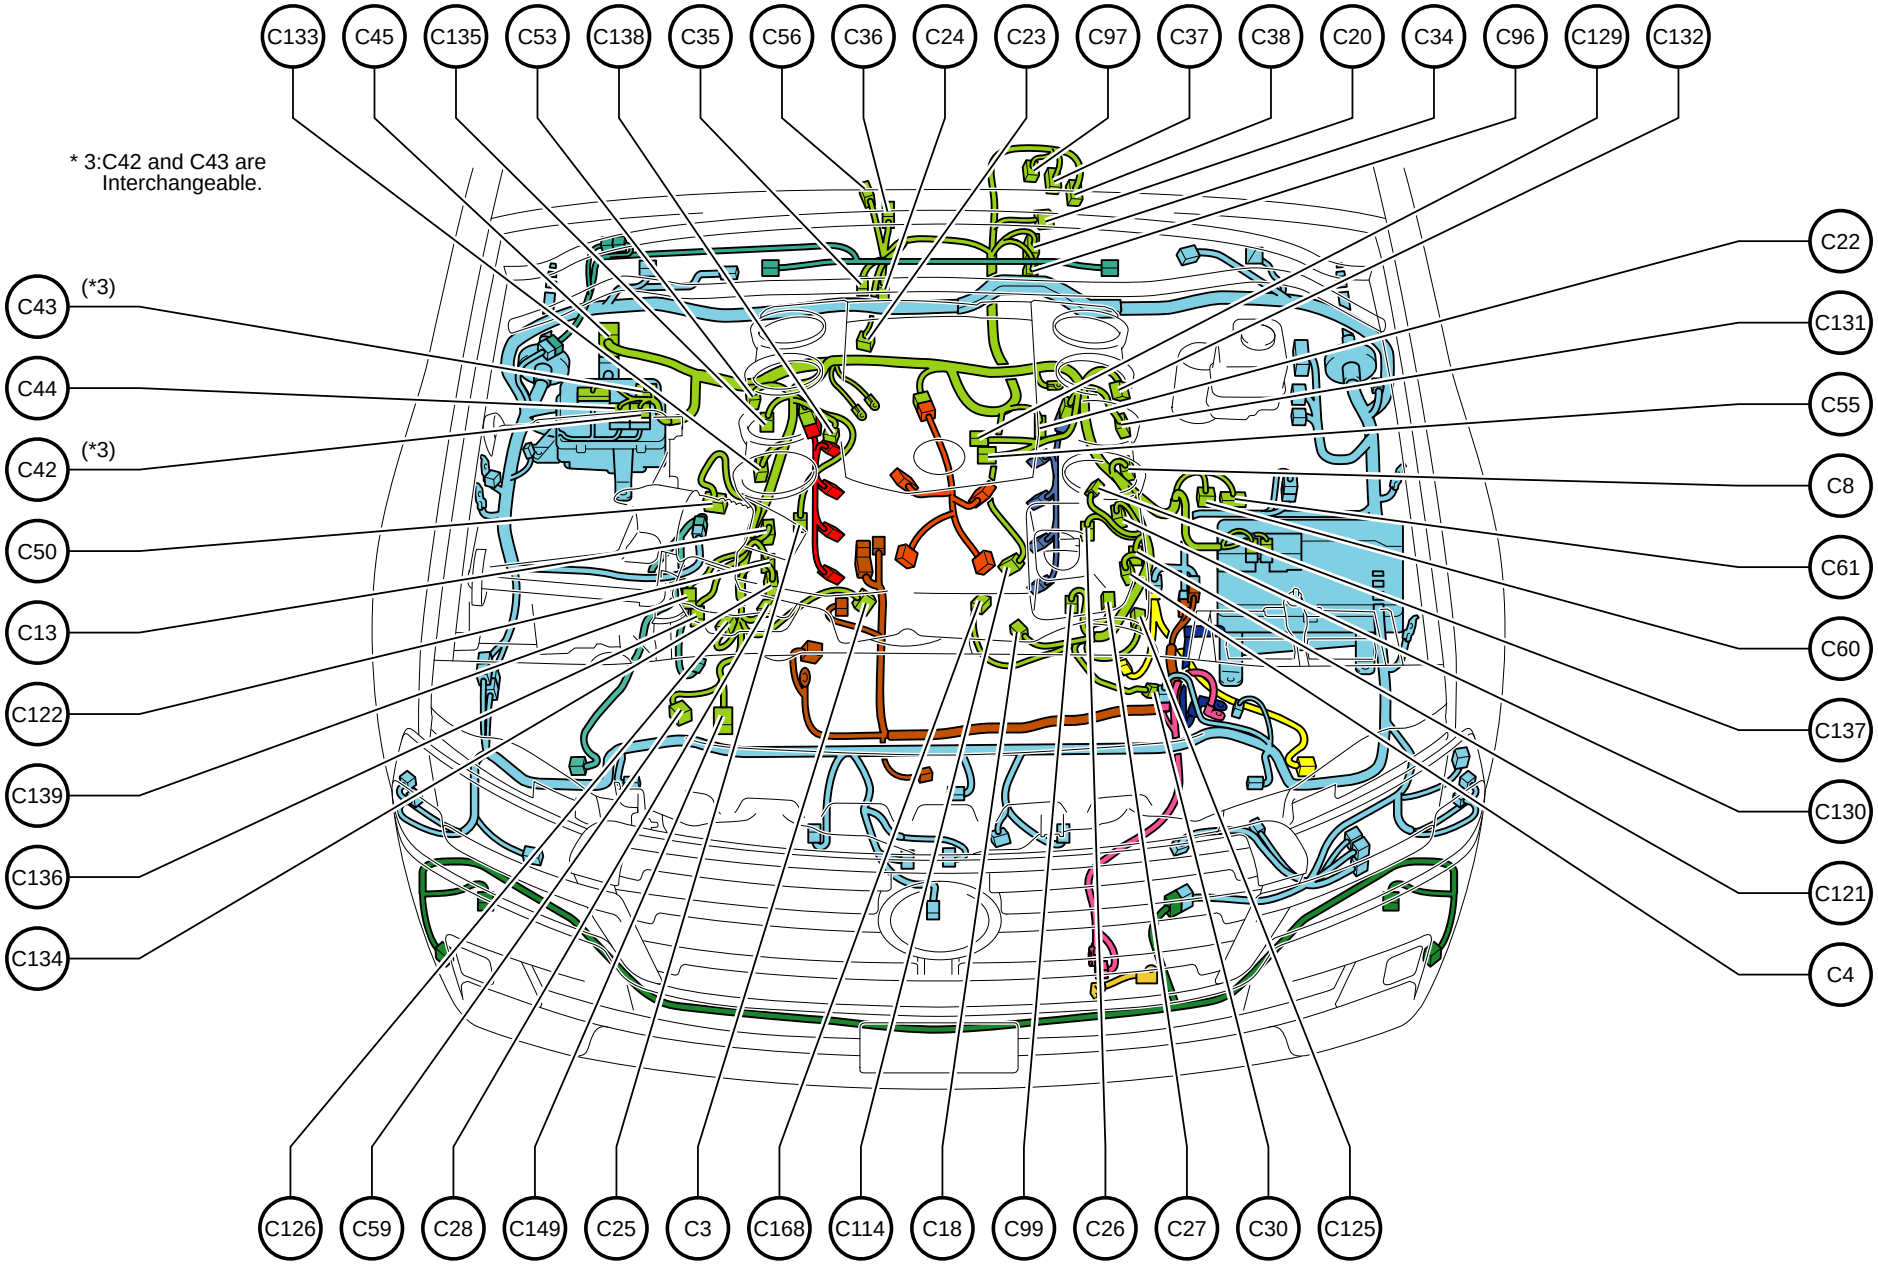
C133
C45
C135
C53
C138
C35
C56
C36
C24
C23
C97
C37
C38
C20
C34
C96
C129
C132
* 3:C42 and C43 are Interchangeable.
C43
(*3)
C44
C42
(*3)
C50
C13
C122
C139
C136
C134
C22
C131
C55
C8
C61
C60
C137
C130
C121
C4
C126
C59
C28
C149
C25
C3
C168
C114
C18
C99
C26
C27
C30
C125

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 8 Ignition Coil Assembly No.5
C 13 Ignition Coil Assembly No.4
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 25 VVT Sensor (Bank 2 Intake Side)
C 26 VVT Sensor (Bank 1 Intake Side)
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 50 Mass Air Flow Meter
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 96 Electronically Controlled Transmission Solenoid
C 97 Transfer Shift Actuator Assembly
C 99 Camshaft Position Sensor
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)
C 130 Ignition Coil Assembly No.3
C 131 Ignition Coil Assembly No.7
C 132 Noise Filter (Ignition Bank 1)
C 133 Ignition Coil Assembly No.6
C 134 Ignition Coil Assembly No.2
C 135 Noise Filter (Ignition Bank 2)
C 136 Air Pump Assembly
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 149 Vane Pump Assembly
C 168 E.F.I. Vacuum Sensor Assembly

C 3
Black

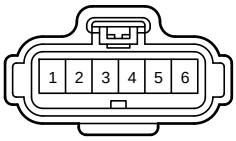

C 4
Black



C 8
Black



C 13
Black



C 18
Dark Gray

C 20
Dark Gray

C 22
Dark Gray

C 23
Dark Gray

C 24
Gray

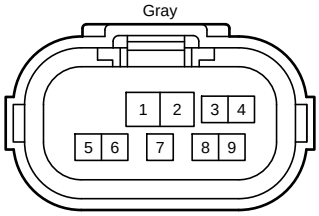

C 25
Black

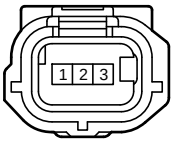

C 26
Black

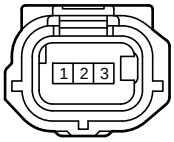

C 27
Black

C 28
Black

C 30
Gray

C 34
Gray

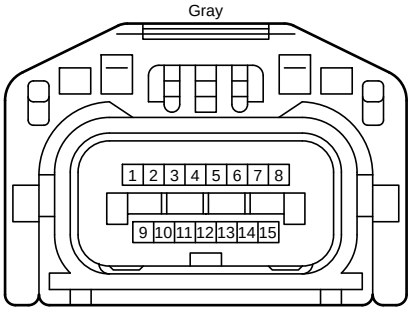

C 35
Black

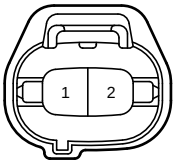

C 36
Black

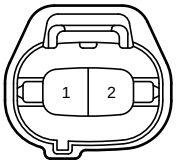

C 37
Black

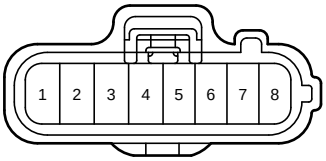

C 38
Dark Gray

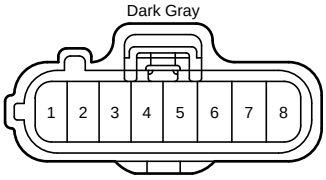

C 42
White

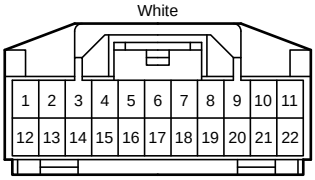

C 43
White

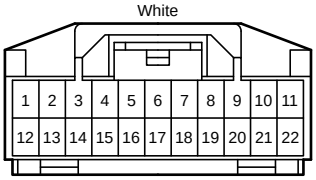

C 44
Blue

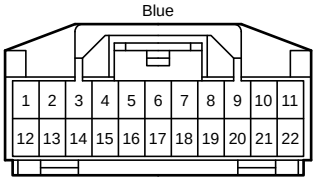

C 45
Black

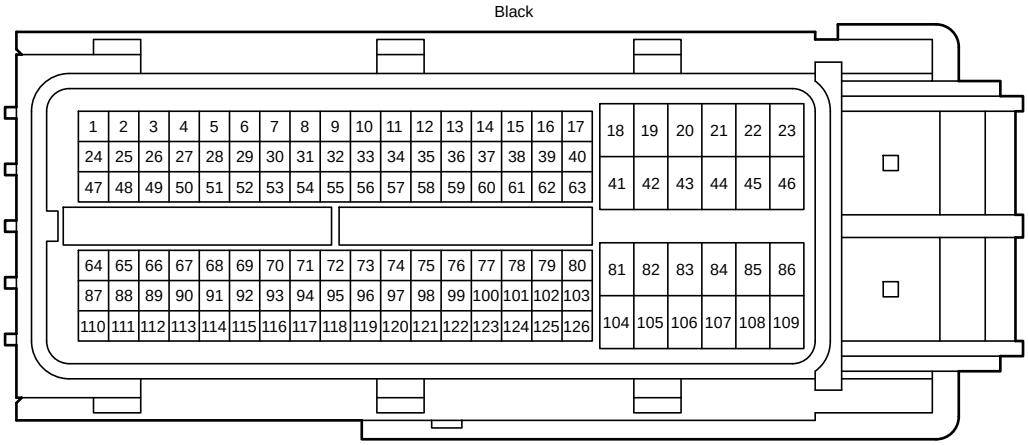

C 50
Black

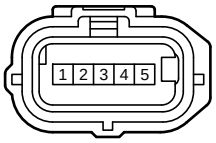

C 53
Black



C 55
Black

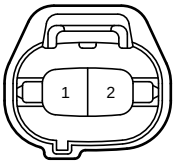

C 56
Dark Gray

C 59
Gray

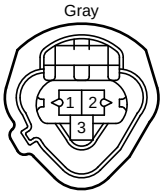

C 60
Black

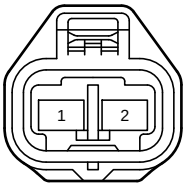

C 61
Black

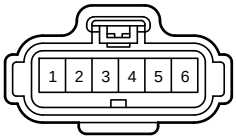

C 96
Gray

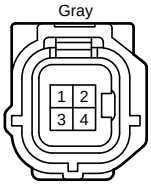

C 97
Black

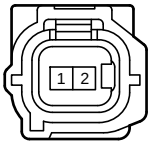

C 99
Black

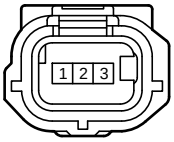

C114
Black

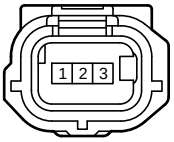

C121
Black

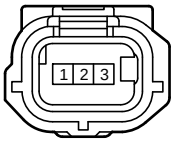

C122
Black

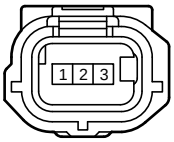

C125
Black

C126
Black

C129
Black

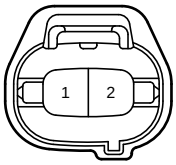

C130
Gray

C131
Gray

C132
Gray

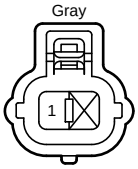

C133
Gray

C134
Gray

C135
Gray

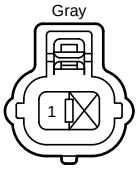

C136
Gray

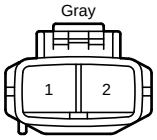

C137
Black

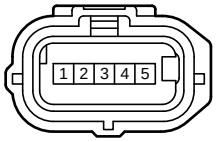

C138
Black

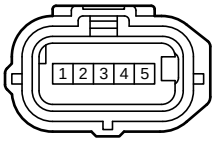

C139
Black

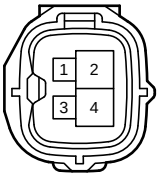

C149
Black

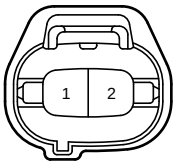

C168
Black