
| Fuse Block<br>No. 1 (Ex. Europe) | LHD: Left Kick Panel (See Page 27, 28)<br>RHD: Right Kick Panel (See Page 27, 28) |
|---|---|

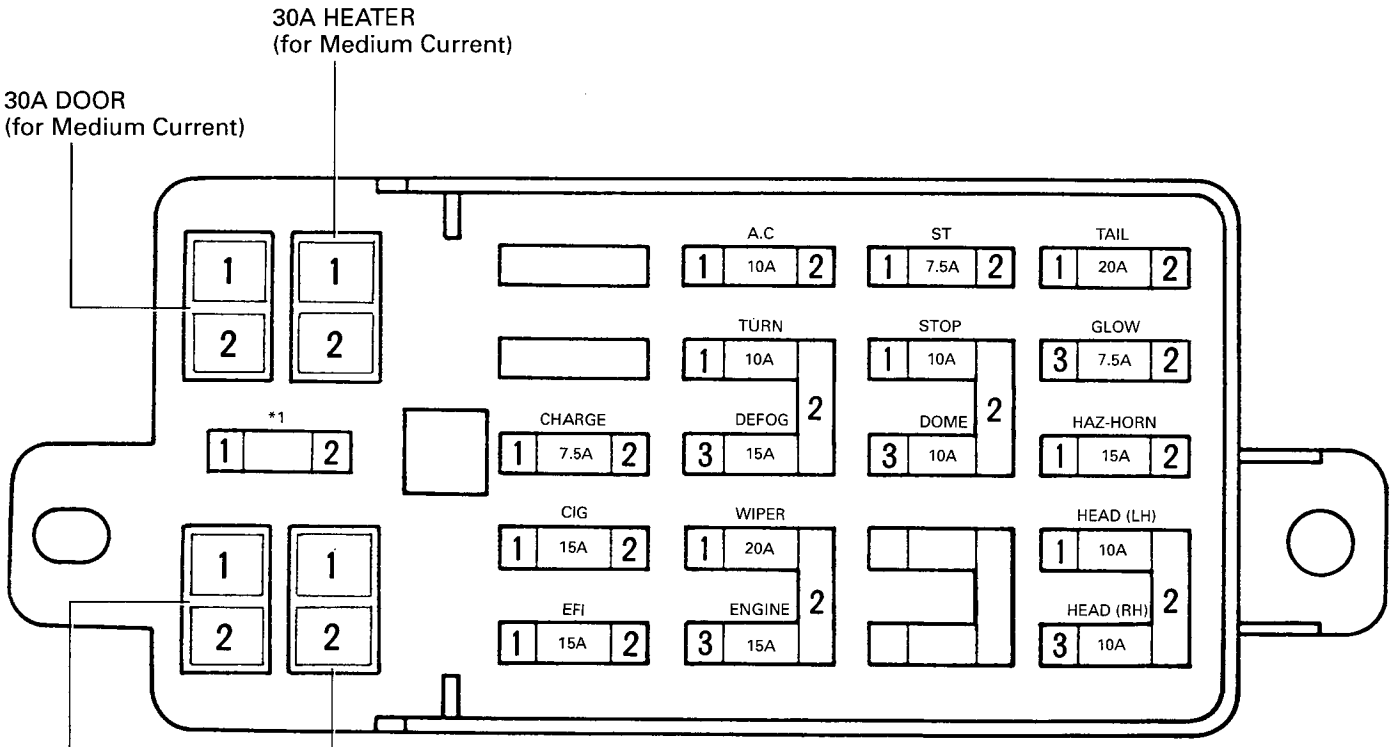




*1: 7.5A IGN (1FZ-FE)
15A FUEL-HEATER (Diesel)