
D RELAY LOCATIONS

Fuse Block No.1 (Except Europe)	LHD : Left Kick Panel (See Page 23) RHD : Right Kick Panel (See Page 23)

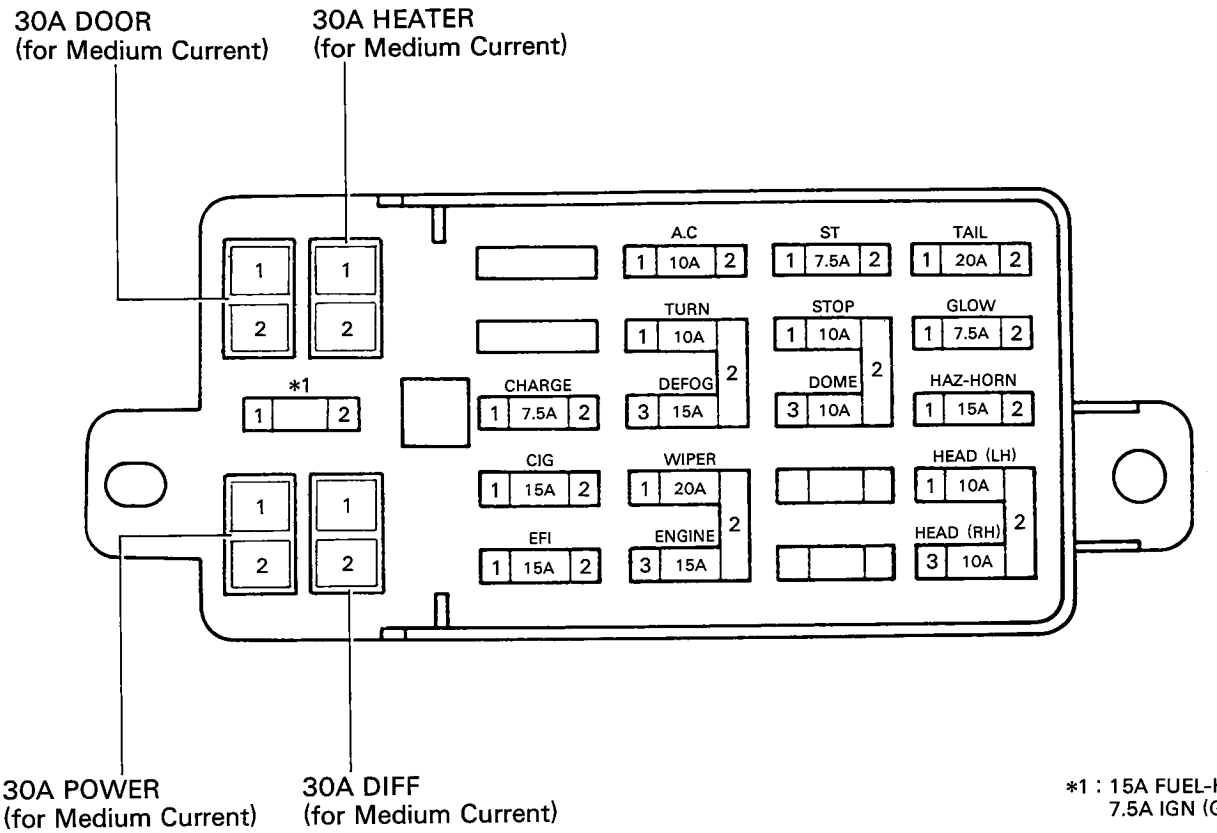

*1 : 15A FUEL-HTR (Diesel)
7.5A IGN (Gasoline)

Fuse Block No.1 (Europe)	Left Kick Panel (See Page 23)

