
Connector Joining Wire Harness and Wire Harness

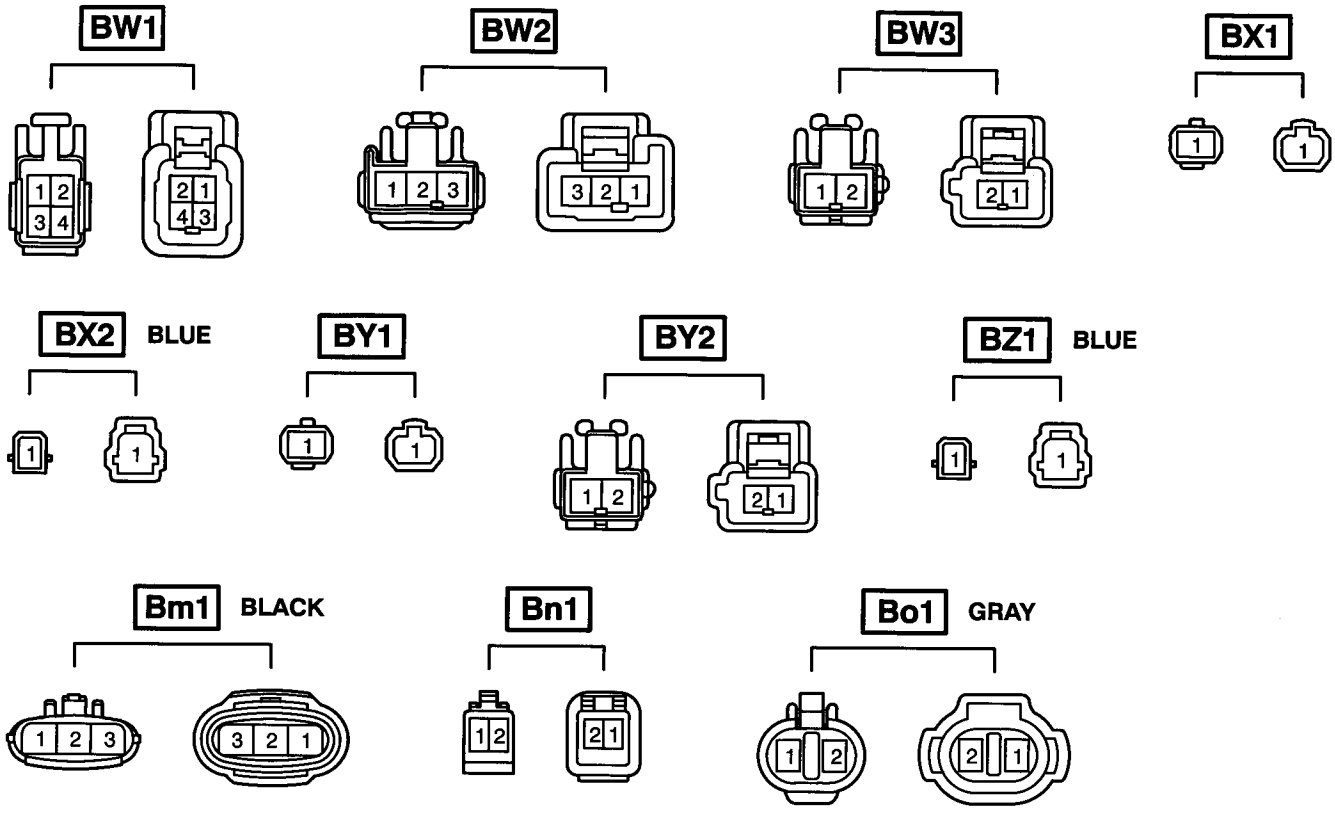

Code	Joining Wire Harness and Wire Harness (Connector Location)
BW1	Luggage Room No.3 Wire and Floor No.2 Wire (Left Quarter Panel Inner)
BW2	
BW3	
BX1	Rear Window No.1 Wire and Back Door No.1 Wire (Right Quarter Panel Inner)
BX2	
BY1	Back Door No.2 Wire and Roof No.2 Wire (Back Door Left)
BY2	
BZ1	Rear Window No.2 Wire and Roof No.2 Wire (Back Door Left)
Bm1	Frame No.2 Wire and Floor No.2 Wire (Under the Lower Back Panel)
Bn1	Roof No.2 Wire and Roof Wire (Rear Side of Roof)
Bo1	Floor No.2 Wire and Frame No.2 Wire (Under the Lower Back Panel)