
Connector Joining Wire Harness and Wire Harness

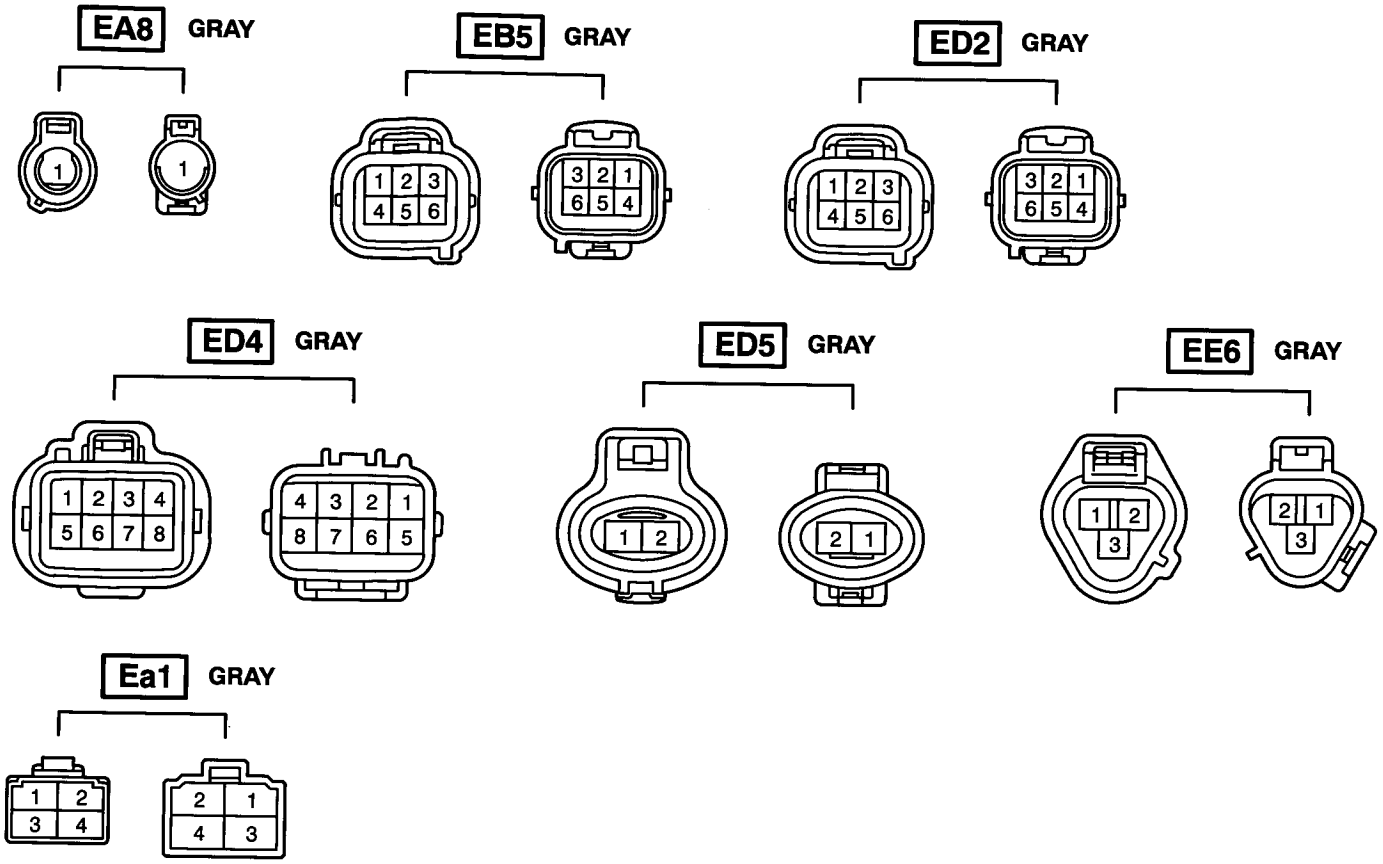

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA8	Cowl Wire and Engine Wire (Near the Alternator)
EB5	Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner)
ED2	Engine Wire and Transmission Wire (On the Transmission)
ED4	
ED5	
EE6	Cowl Wire and Engine No.4 Wire (Under the Air Cleaner)
Ea1	Cowl Wire and Thermo Sensor Wire (Right Side of Radiator)