
# Connector Joining Wire Harness and Wire Harness

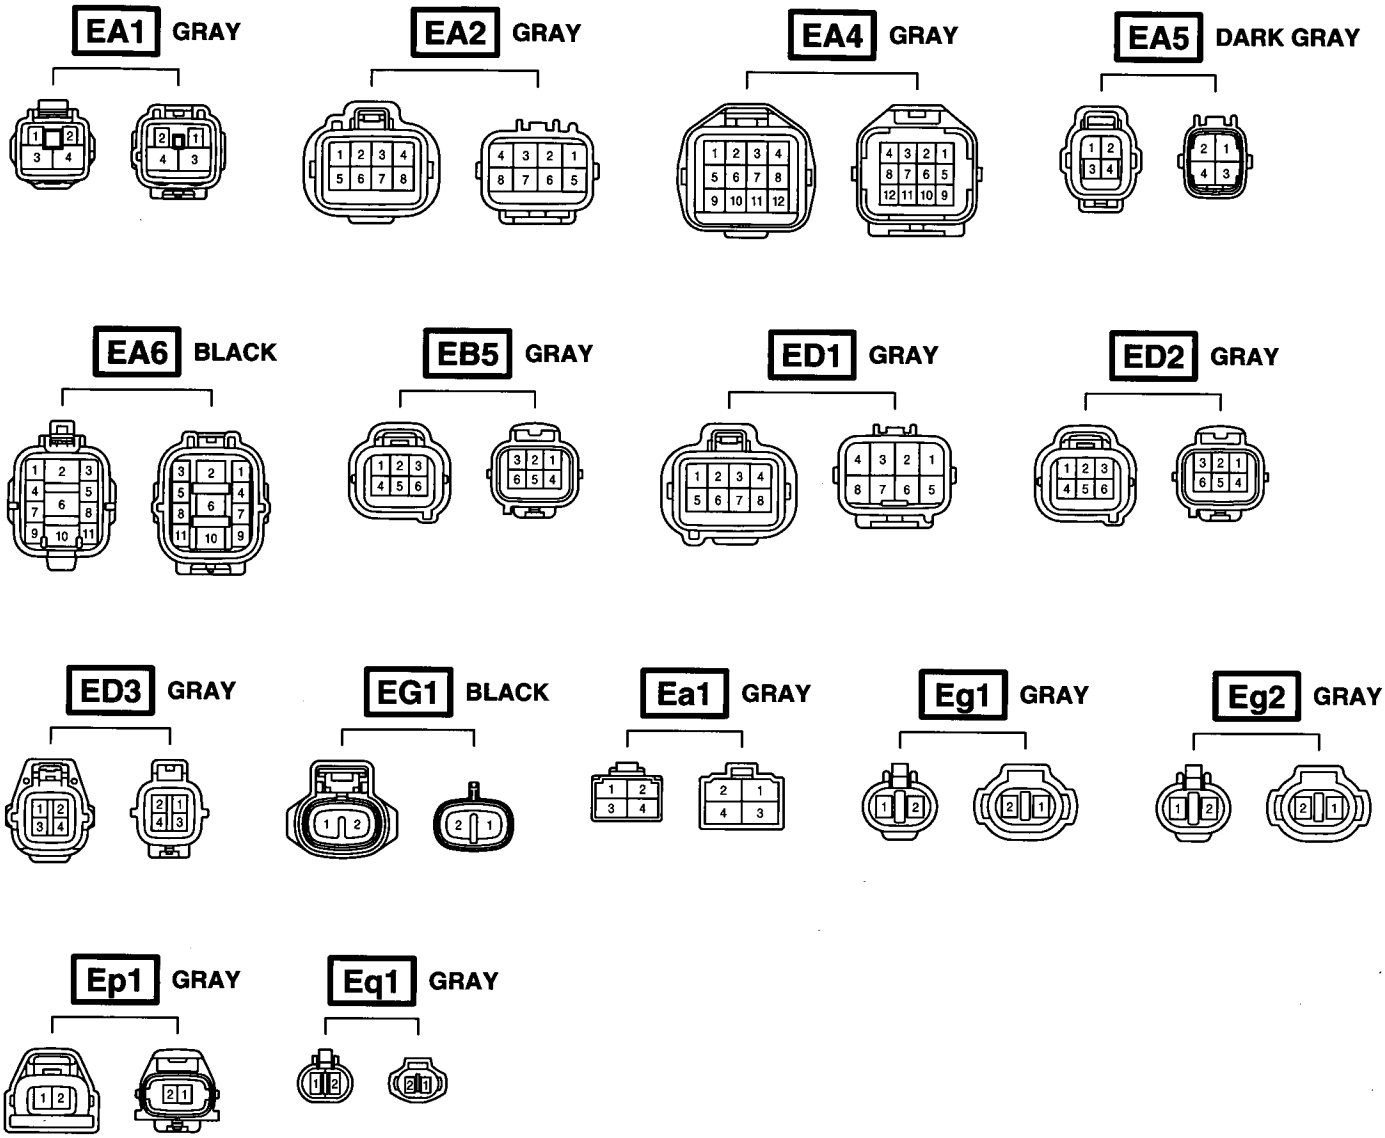


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| EA1 | Cowl Wire and Engine Wire (Near the Battery) |
| EA2 | |
| EA4 | |
| EA5 | |
| EA6 | |
| EB5 | Cowl Wire and Engine Room No.2 Wire (Under the Air Cleaner) |
| ED1 | Engine Wire and Transmission Wire (On the Transmission) |
| ED2 | |
| ED3 | |
| EG1 | Cowl Wire and Winch No.1 Wire (Left Side of Radiator) |
| Ea1 | Cowl Wire and Thermo Sensor Wire (Right Side of Radiator) |
| Eg1 | Cowl Wire and Cowl No.2 Wire (Left Side of Radiator) |
| Eg2 | Cowl Wire and Cowl No.2 Wire (Right Side of Radiator) |
| Ep1 | Engine Wire and Engine Room No.2 Wire (Left side of Battery RH) |
| Eq1 | Transmission Wire and Frame No.2 Wire (On the Transmission) |