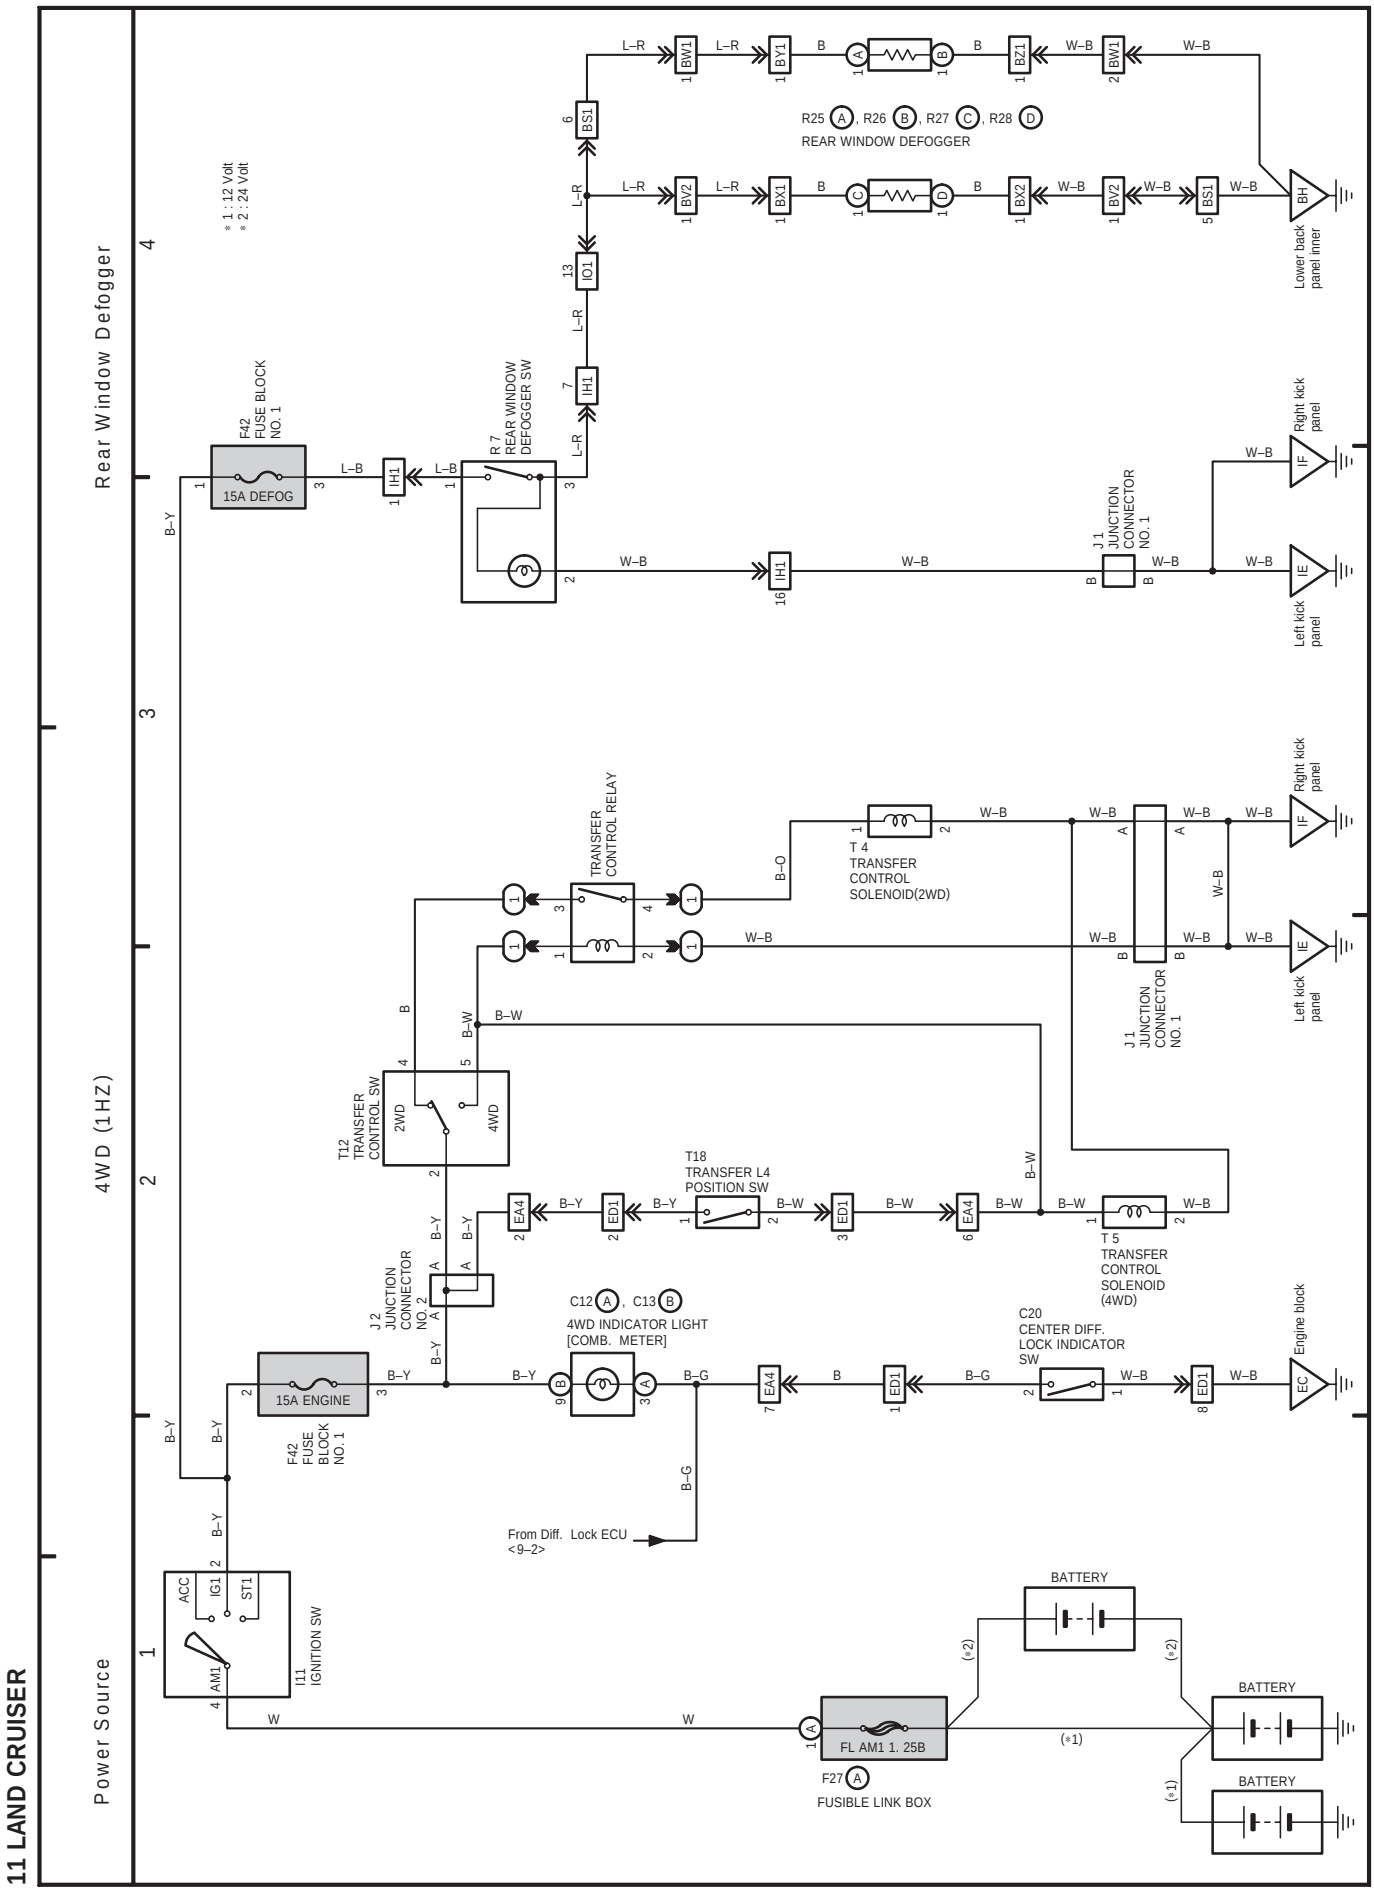
11 LAND CRUISER
Power Source
4WD (1HZ)
Rear Window Defogger
1
2
3
4
* 1 : 12 Volt
* 2 : 24 Volt
R25 A, R26 B, R27 C, R28 D
REAR WINDOW DEFOGGER
Lower back panel inner
F42 FUSE BLOCK NO. 1
15A DEFOG
R 7 REAR WINDOW DEFOGGER SW
J 1 JUNCTION CONNECTOR NO. 1
Right kick panel
Left kick panel
TRANSFER CONTROL RELAY
T 4 TRANSFER CONTROL SOLENOID(2WD)
T12 TRANSFER CONTROL SW
2WD
4WD
T18 TRANSFER L4 POSITION SW
T 5 TRANSFER CONTROL SOLENOID (4WD)
J 2 JUNCTION CONNECTOR NO. 2
C12 A, C13 B
4WD INDICATOR LIGHT [COMB. METER]
C20 CENTER DIFF. LOCK INDICATOR SW
15A ENGINE
Engine block
From Diff. Lock ECU <9–2>
I11 IGNITION SW
ACC
IG1
ST1
AM1
BATTERY
FL AM1 1. 25B
F27 A
FUSIBLE LINK BOX