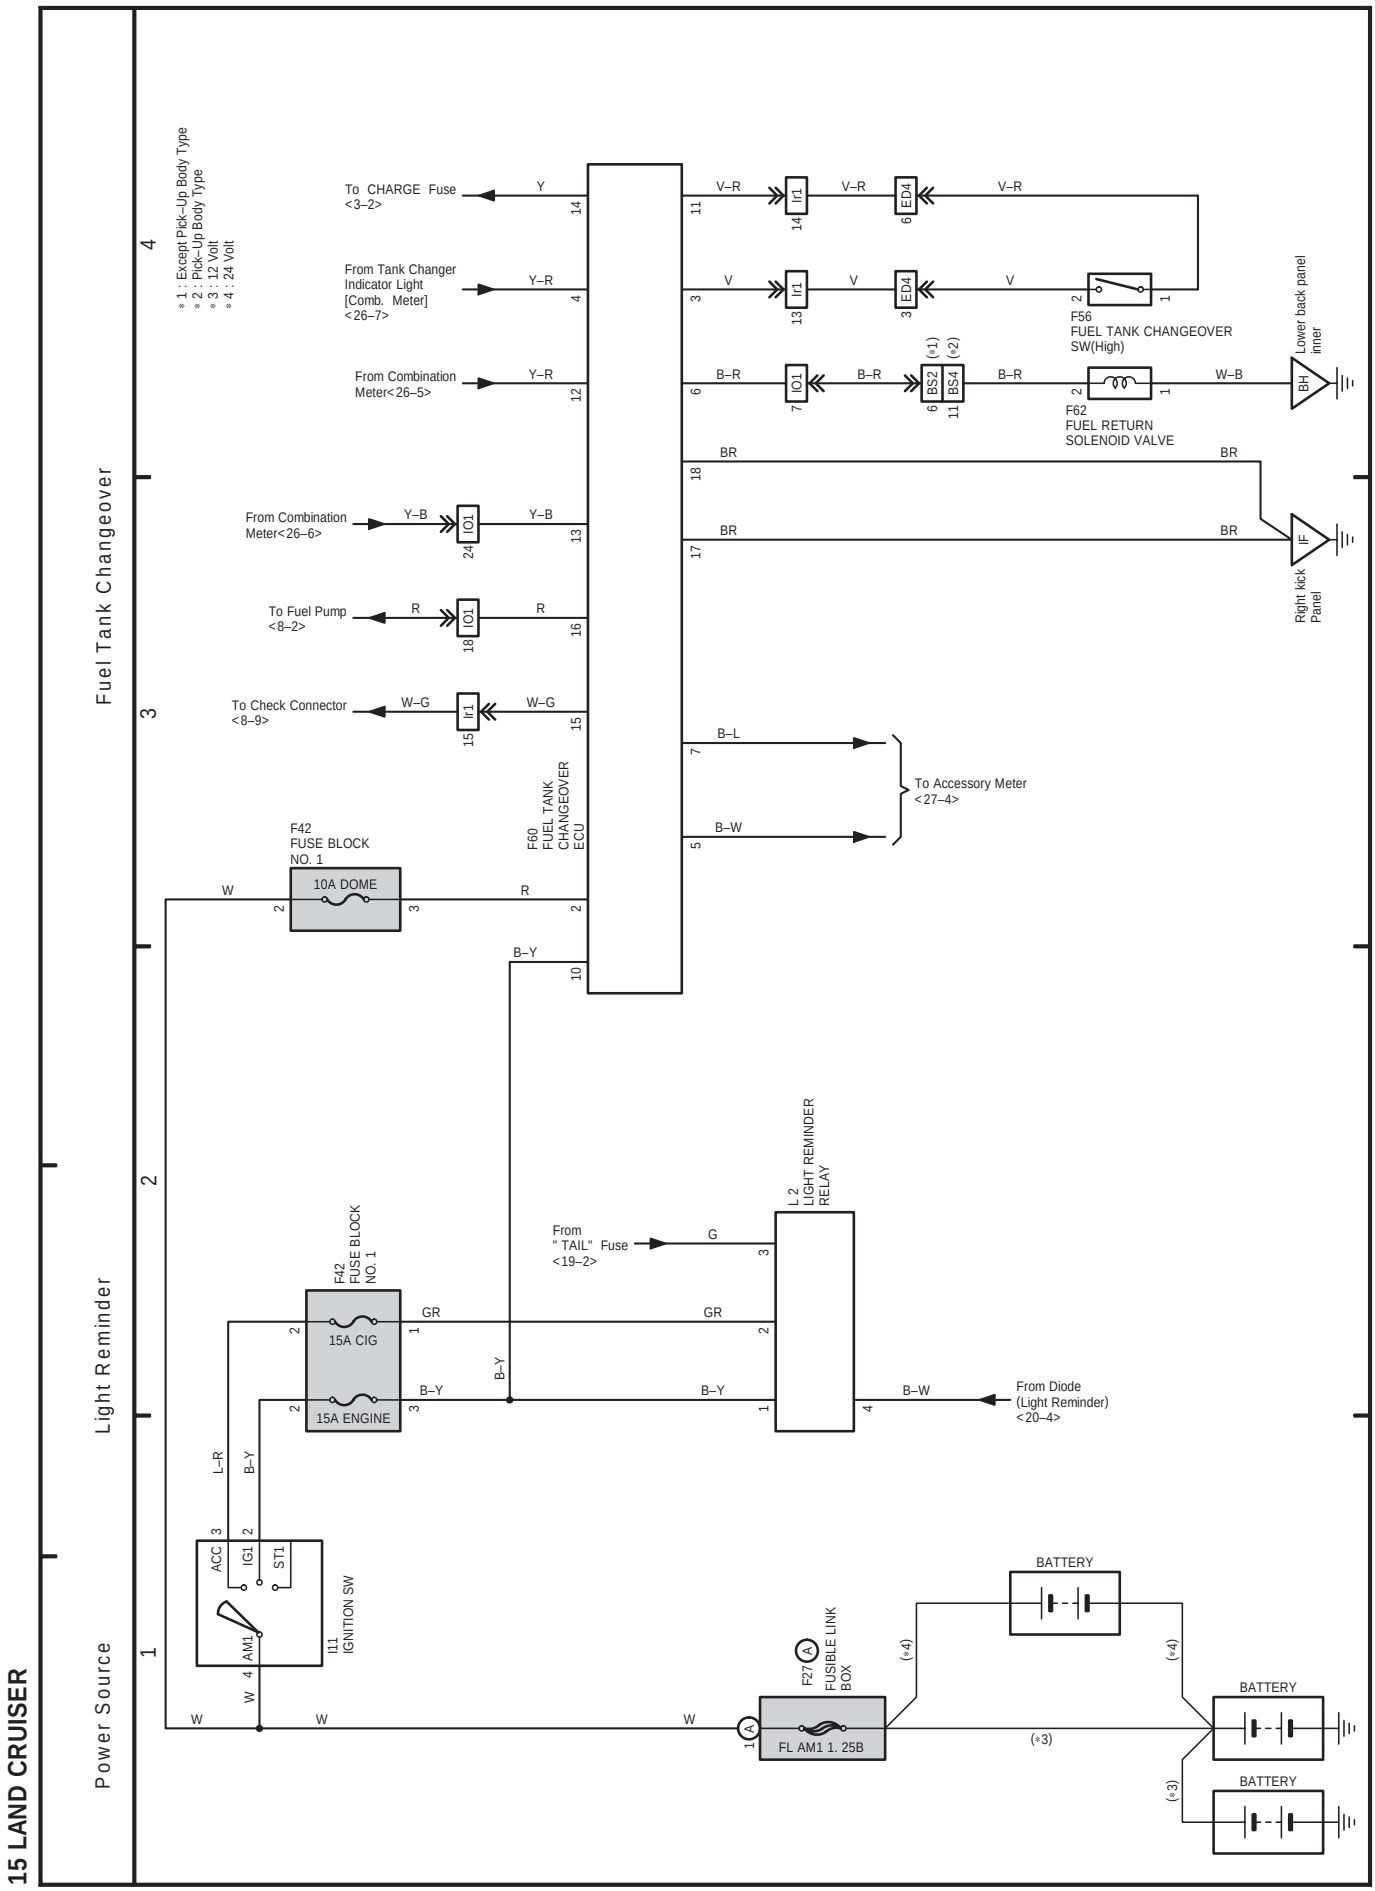
15 LAND CRUISER
Power Source
Light Reminder
Fuel Tank Changeover
1
2
3
4
* 1 : Except Pick–Up Body Type
* 2 : Pick–Up Body Type
* 3 : 12 Volt
* 4 : 24 Volt
To CHARGE Fuse <3–2>
From Tank Changer Indicator Light [Comb. Meter] <26–7>
From Combination Meter<26–5>
From Combination Meter<26–6>
To Fuel Pump <8–2>
To Check Connector <8–9>
F60 FUEL TANK CHANGEOVER ECU
To Accessory Meter <27–4>
F56 FUEL TANK CHANGEOVER SW(High)
F62 FUEL RETURN SOLENOID VALVE
Lower back panel inner
Right kick Panel
F42 FUSE BLOCK NO. 1
10A DOME
15A CIG
15A ENGINE
From " TAIL" Fuse <19–2>
L 2 LIGHT REMINDER RELAY
From Diode (Light Reminder) <20–4>
i11 IGNITION SW
ACC
IG1
ST1
AM1
F27 FUSIBLE LINK BOX
FL AM1 1. 25B
BATTERY
BATTERY
BATTERY
BATTERY