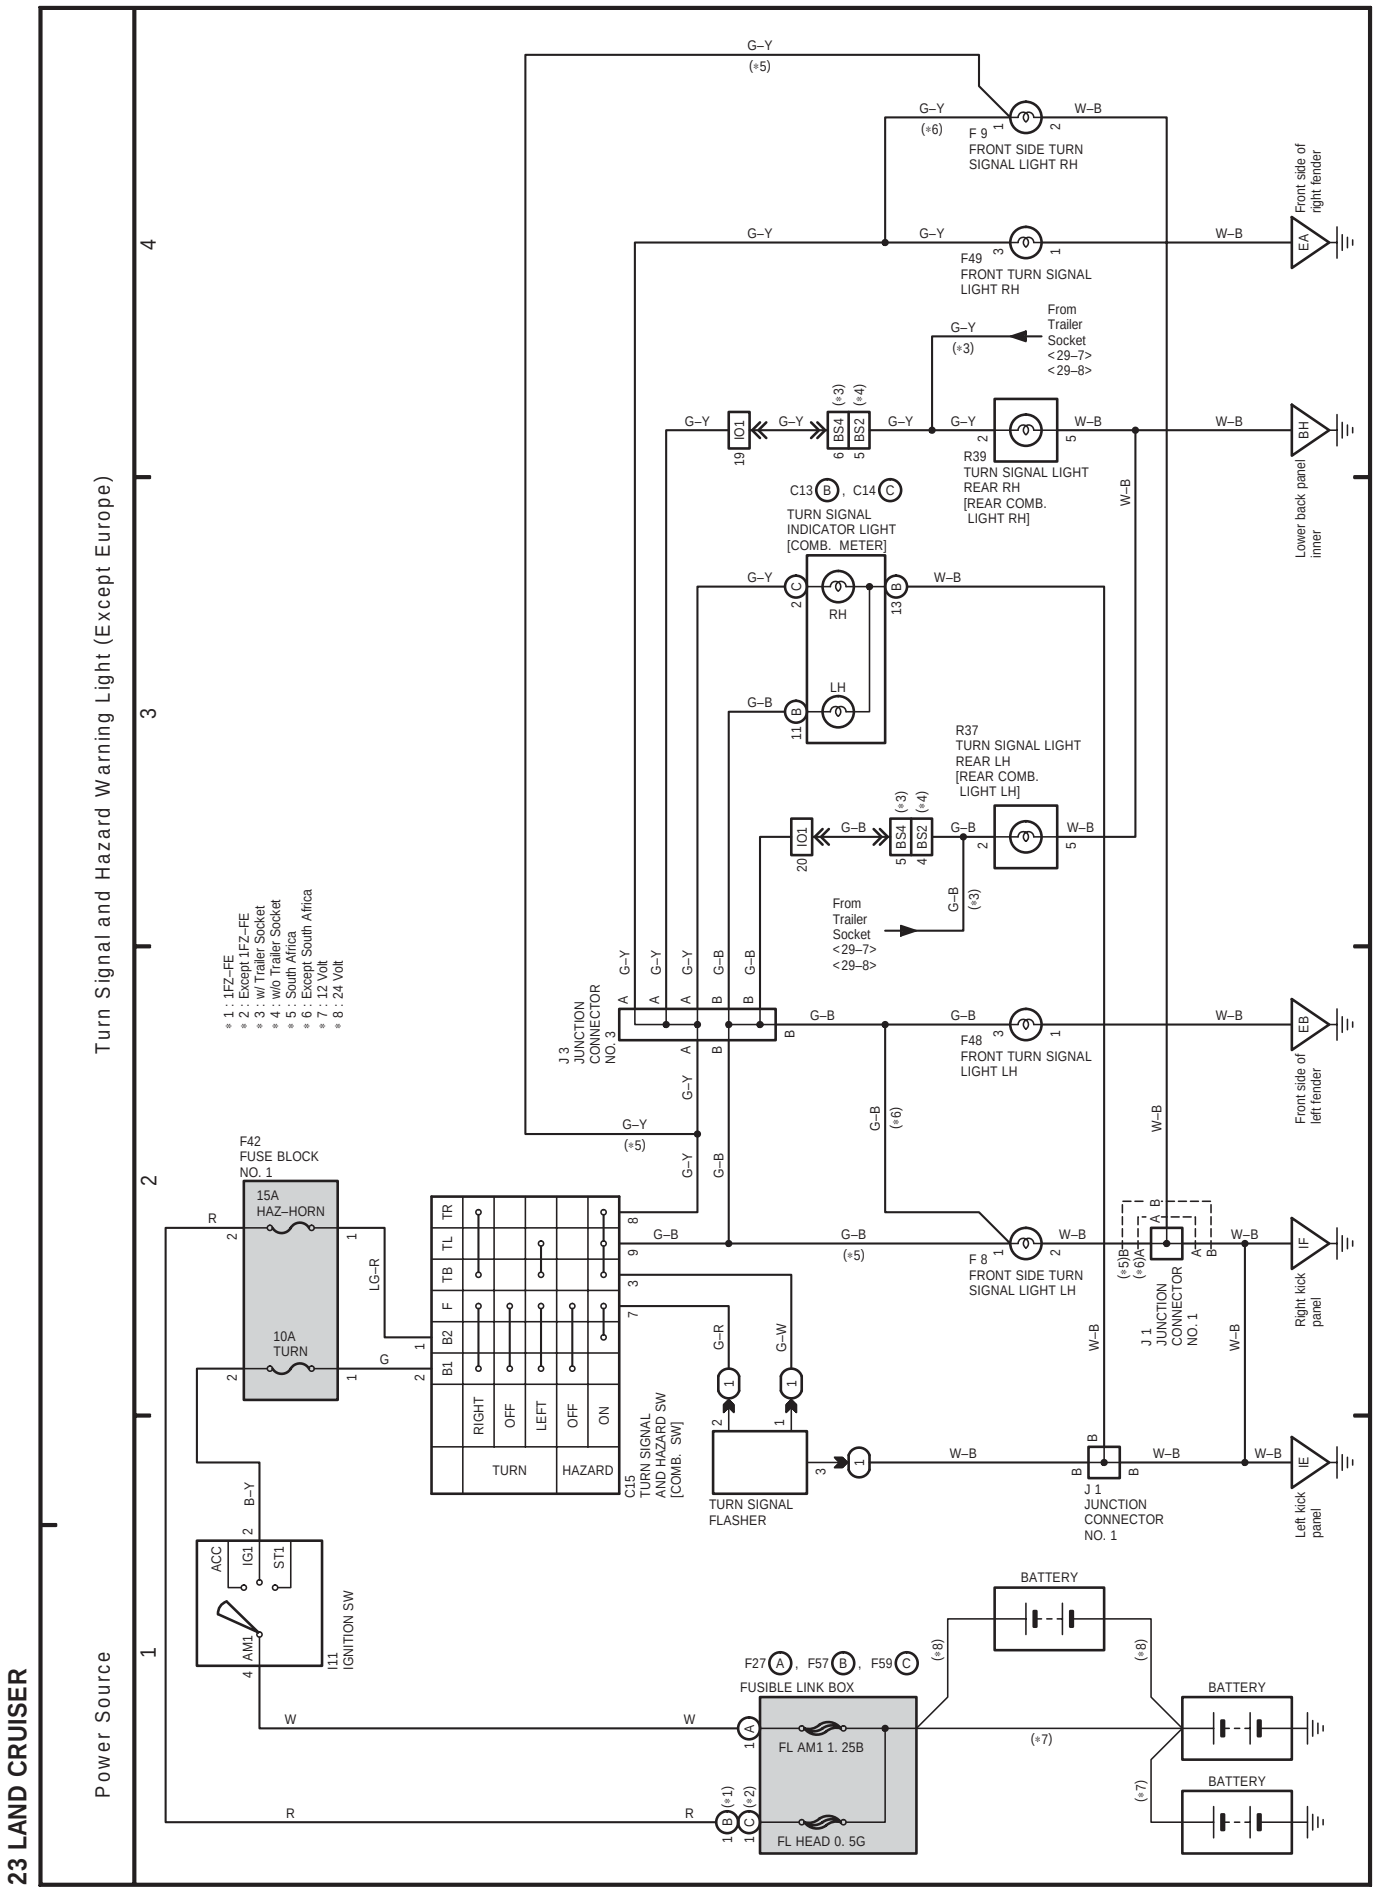
23 LAND CRUISER
Power Source
Turn Signal and Hazard Warning Light (Except Europe)
1
2
3
4
* 1 : 1FZ–FE
* 2 : Except 1FZ–FE
* 3 : w/ Trailer Socket
* 4 : w/o Trailer Socket
* 5 : South Africa
* 6 : Except South Africa
* 7 : 12 Volt
* 8 : 24 Volt
G–Y
(*5)
G–Y
(*6)
F 9
FRONT SIDE TURN SIGNAL LIGHT RH
W–B
Front side of right fender
EA
F49
FRONT TURN SIGNAL LIGHT RH
From Trailer Socket <29–7> <29–8>
(*3)
(*4)
IO1
BS4
BS2
R39
TURN SIGNAL LIGHT REAR RH [REAR COMB. LIGHT RH]
BH
Lower back panel inner
C13 (B), C14 (C)
TURN SIGNAL INDICATOR LIGHT [COMB. METER]
RH
LH
R37
TURN SIGNAL LIGHT REAR LH [REAR COMB. LIGHT LH]
J 3
JUNCTION CONNECTOR NO. 3
F48
FRONT TURN SIGNAL LIGHT LH
EB
Front side of left fender
F42
FUSE BLOCK NO. 1
15A HAZ–HORN
10A TURN
LG–R
G
R
B–Y
TR
TL
TB
F
B2
B1
RIGHT
OFF
LEFT
OFF
ON
TURN
HAZARD
C15
TURN SIGNAL AND HAZARD SW [COMB. SW]
G–R
G–W
TURN SIGNAL FLASHER
F 8
FRONT SIDE TURN SIGNAL LIGHT LH
J 1
JUNCTION CONNECTOR NO. 1
IF
Right kick panel
IE
Left kick panel
J 1
JUNCTION CONNECTOR NO. 1
ACC
IG1
ST1
AM1
I11
IGNITION SW
BATTERY
F27 (A), F57 (B), F59 (C)
FUSIBLE LINK BOX
FL AM1 1. 25B
FL HEAD 0. 5G
W
R