
Position of Parts in Instrument Panel

[LHD]

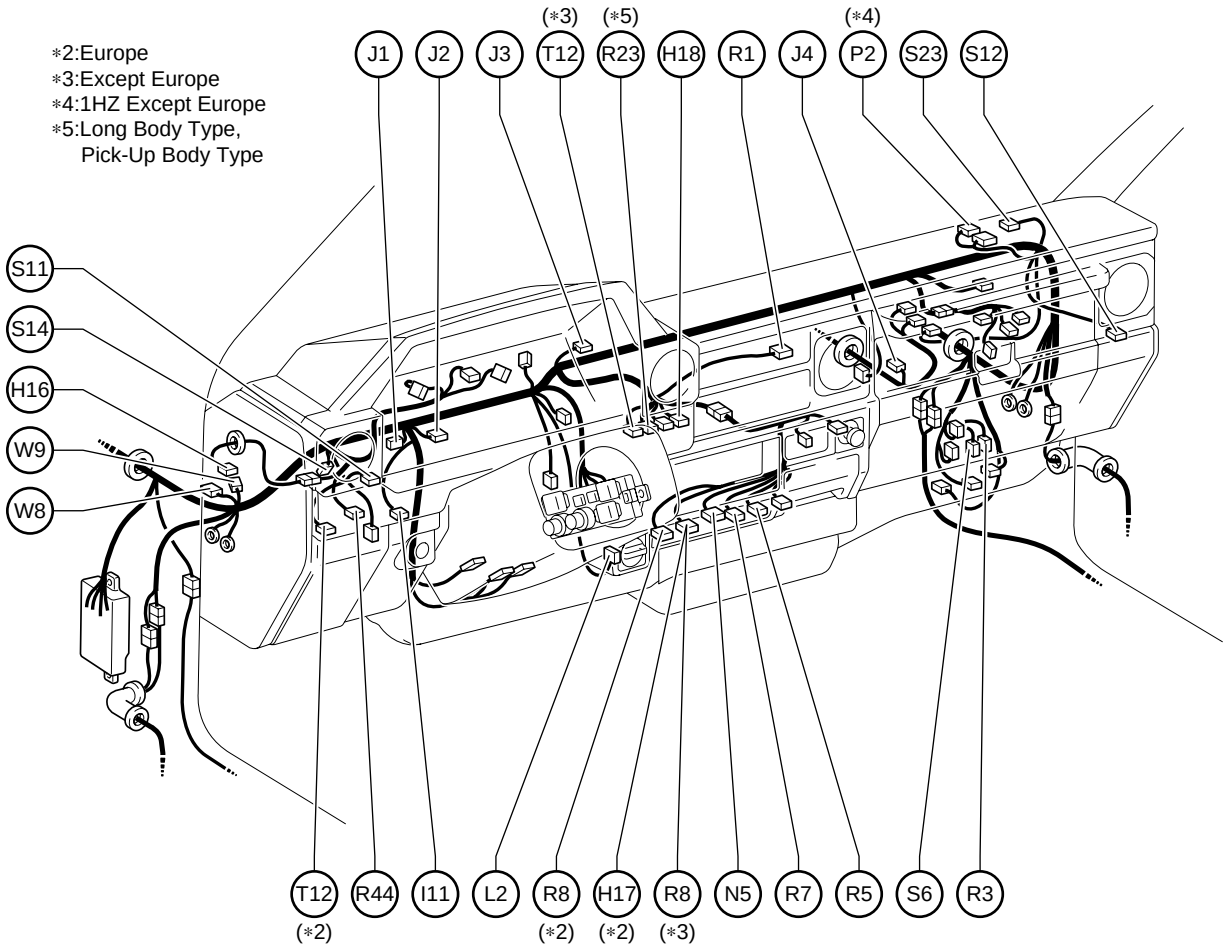

H16 Headlight Beam Level Control SW
H17 Headlight Cleaner SW
H18 Heater Illumination

I 11 Ignition SW

J 1 Junction Connector No.1
J 2 Junction Connector No.2
J 3 Junction Connector No.3
J 4 Junction Connector No.4

L 2 Light Reminder Relay

N 5 No.1 Instrument Cluster Illumination

P 2 Pre–Heating Timer

R 1 Radio and Player
R 3 Rear Fog Light Relay
R 5 Rear Fog Light SW
R 7 Rear Window Defogger SW
R 8 Rear Wiper and Washer SW
R23 Rear Heater Blower SW
R44 Remote Control Mirror SW

S 6 Seat Belt Warning Relay
S 11 Speaker Front LH
S 12 Speaker Front RH
S 14 Stop Light SW
S 23 Sub Fuel Pump Forcing Driving Relay

T 12 Transfer Control SW

W 8 Wiper Lock Relay
W 9 Wiper Lock SW