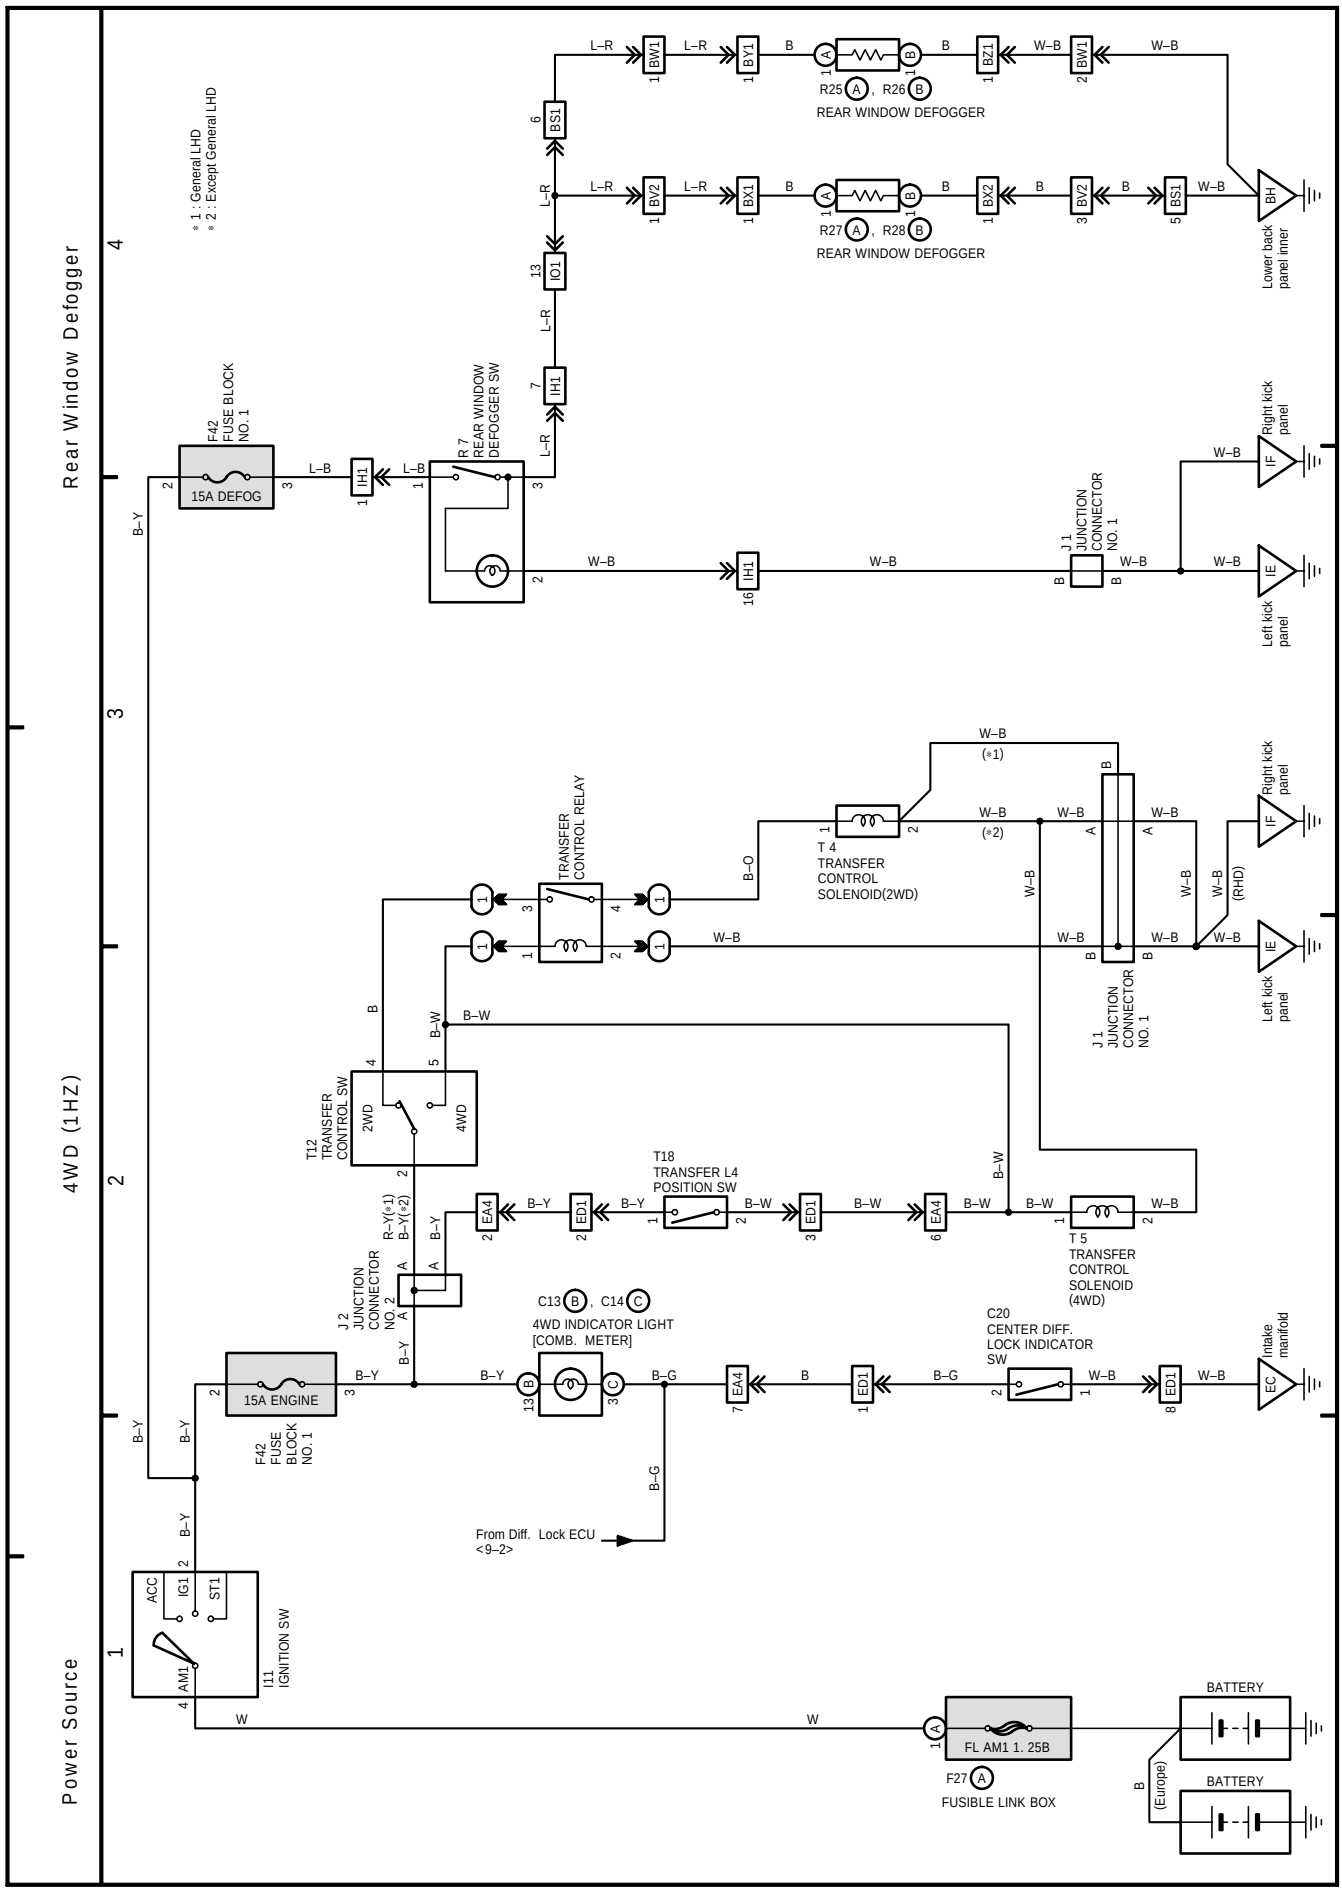
Power Source
4WD (1HZ)
Rear Window Defogger
1
2
3
4
* 1 : General LHD
* 2 : Except General LHD
ACC
IG1
ST1
AM1
I11
IGNITION SW
15A ENGINE
F42
FUSE BLOCK NO. 1
15A DEFOG
F42
FUSE BLOCK NO. 1
R 7
REAR WINDOW DEFOGGER SW
R25 (A), R26 (B)
REAR WINDOW DEFOGGER
R27 (A), R28 (B)
REAR WINDOW DEFOGGER
Lower back panel inner
BH
Right kick panel
IF
Left kick panel
IE
J 1
JUNCTION CONNECTOR NO. 1
TRANSFER CONTROL RELAY
T 4
TRANSFER CONTROL SOLENOID(2WD)
T12
TRANSFER CONTROL SW
2WD
4WD
T18
TRANSFER L4 POSITION SW
T 5
TRANSFER CONTROL SOLENOID (4WD)
J 2
JUNCTION CONNECTOR NO. 2
C13 (B), C14 (C)
4WD INDICATOR LIGHT [COMB. METER]
C20
CENTER DIFF. LOCK INDICATOR SW
Intake manifold
EC
From Diff. Lock ECU
<9–2>
FL AM1 1. 25B
F27 (A)
FUSIBLE LINK BOX
BATTERY
(Europe)
BATTERY
(*1)
(*2)
(RHD)