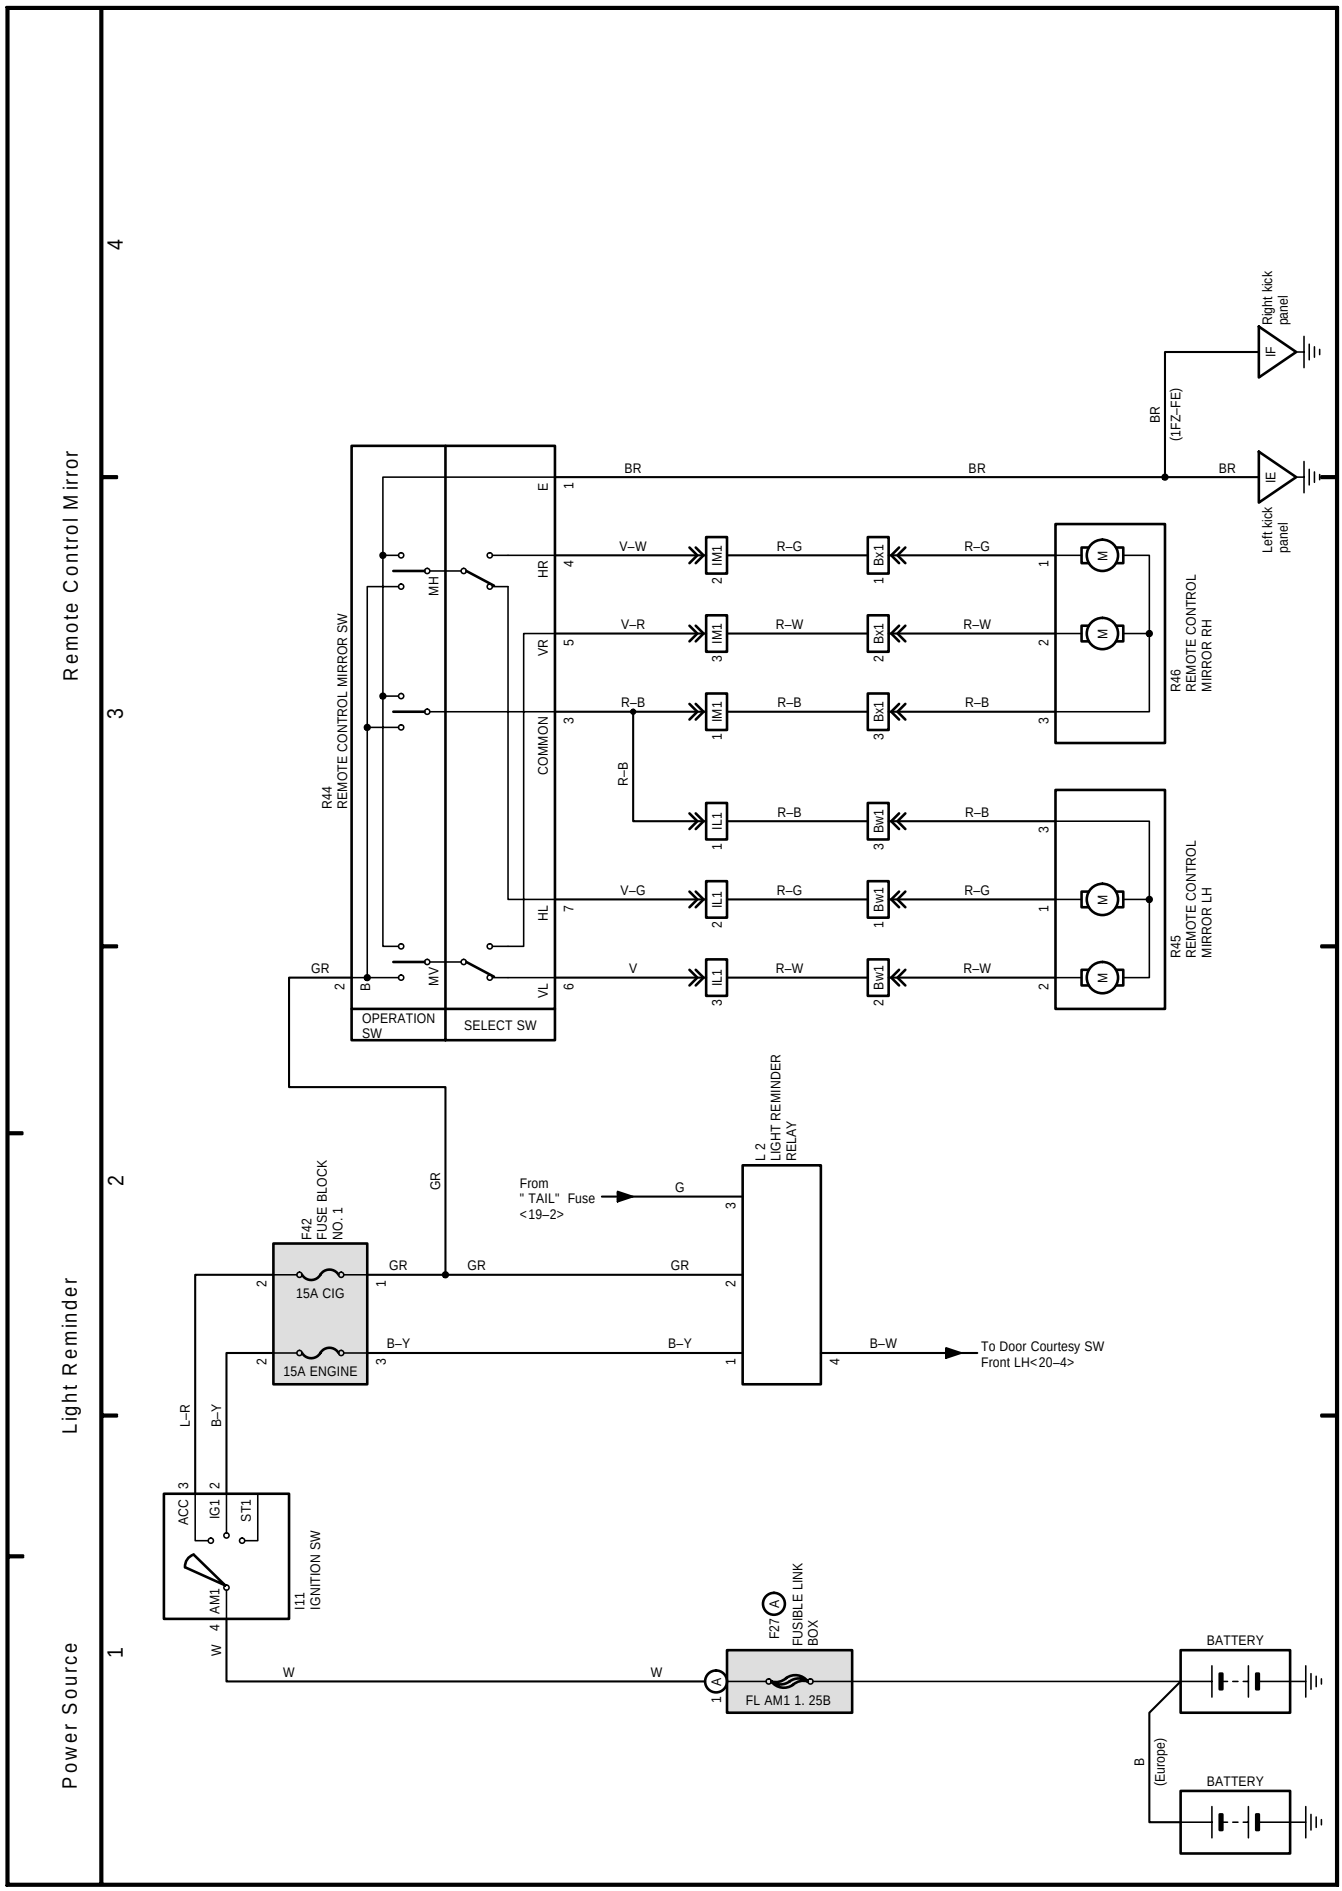
15 LAND CRUISER
Power Source
Light Reminder
Remote Control Mirror
1
2
3
4
R44
REMOTE CONTROL MIRROR SW
OPERATION SW
SELECT SW
COMMON
MH
MV
E
HR
VR
HL
VL
GR
B
BR
V–W
V–R
R–B
V–G
V
R–G
R–W
IM1
IL1
Bx1
Bw1
M
R46
REMOTE CONTROL MIRROR RH
R45
REMOTE CONTROL MIRROR LH
BR
(1FZ–FE)
IF
Right kick panel
IE
Left kick panel
L 2
LIGHT REMINDER RELAY
From " TAIL" Fuse <19–2>
G
B–W
To Door Courtesy SW Front LH<20–4>
F42
FUSE BLOCK NO. 1
15A CIG
15A ENGINE
B–Y
L–R
ACC
IG1
ST1
AM1
I11
IGNITION SW
W
F27
FUSIBLE LINK BOX
FL AM1 1. 25B
BATTERY
B
(Europe)