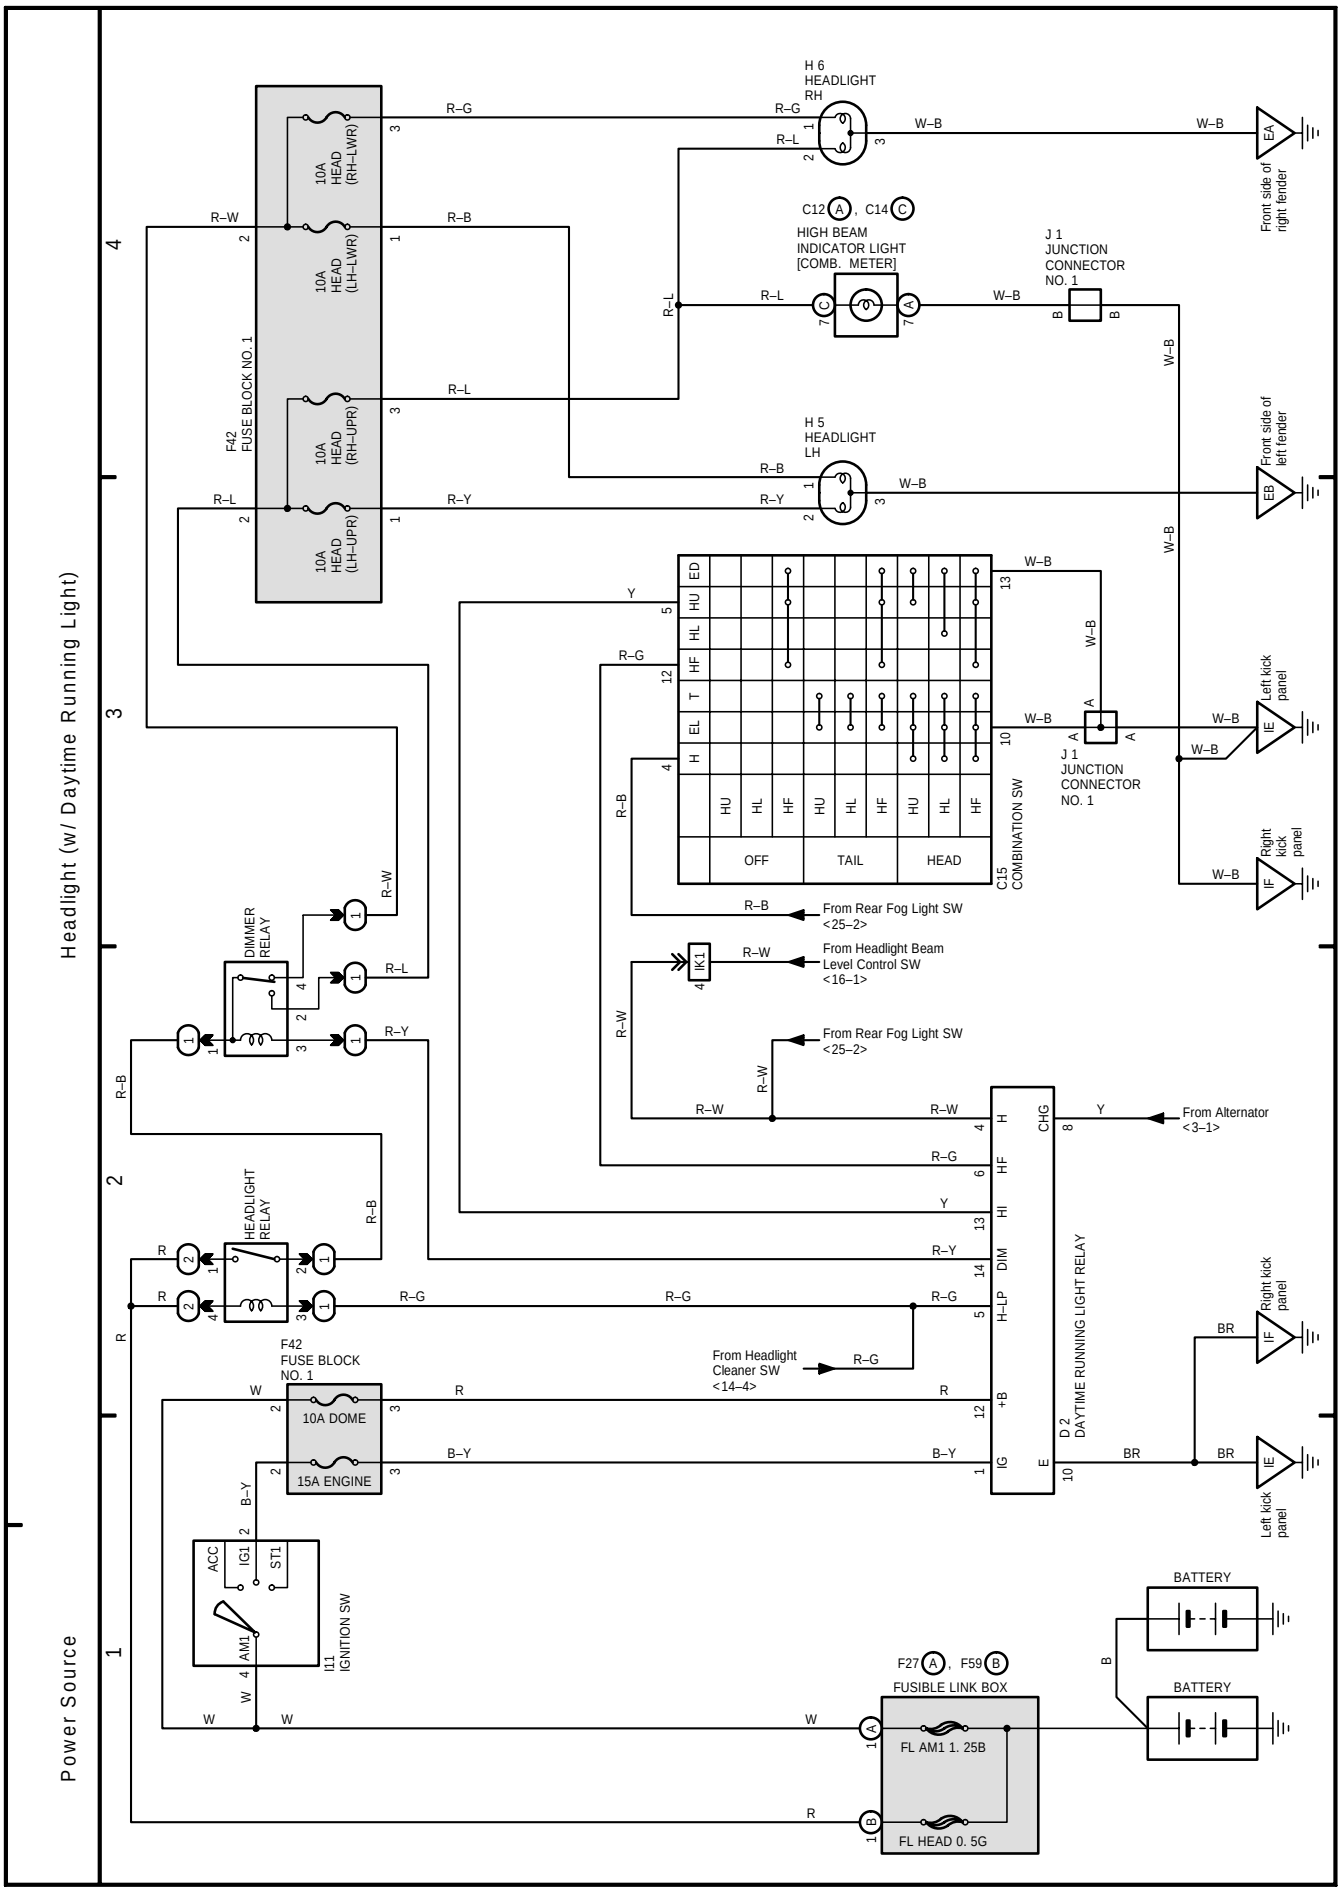
22 LAND CRUISER
Power Source
Headlight (w/ Daytime Running Light)
H 6 HEADLIGHT RH
H 5 HEADLIGHT LH
HIGH BEAM INDICATOR LIGHT [COMB. METER]
C12 A , C14 C
J 1 JUNCTION CONNECTOR NO. 1
F42 FUSE BLOCK NO. 1
10A HEAD (RH–LWR)
10A HEAD (LH–LWR)
10A HEAD (RH–UPR)
10A HEAD (LH–UPR)
Front side of right fender
Front side of left fender
Left kick panel
Right kick panel
C15 COMBINATION SW
OFF
TAIL
HEAD
DIMMER RELAY
HEADLIGHT RELAY
From Rear Fog Light SW <25–2>
From Headlight Beam Level Control SW <16–1>
From Alternator <3–1>
From Headlight Cleaner SW <14–4>
D 2 DAYTIME RUNNING LIGHT RELAY
10A DOME
15A ENGINE
I11 IGNITION SW
ACC
IG1
ST1
AM1
BATTERY
F27 A , F59 B
FUSIBLE LINK BOX
FL AM1 1. 25B
FL HEAD 0. 5G