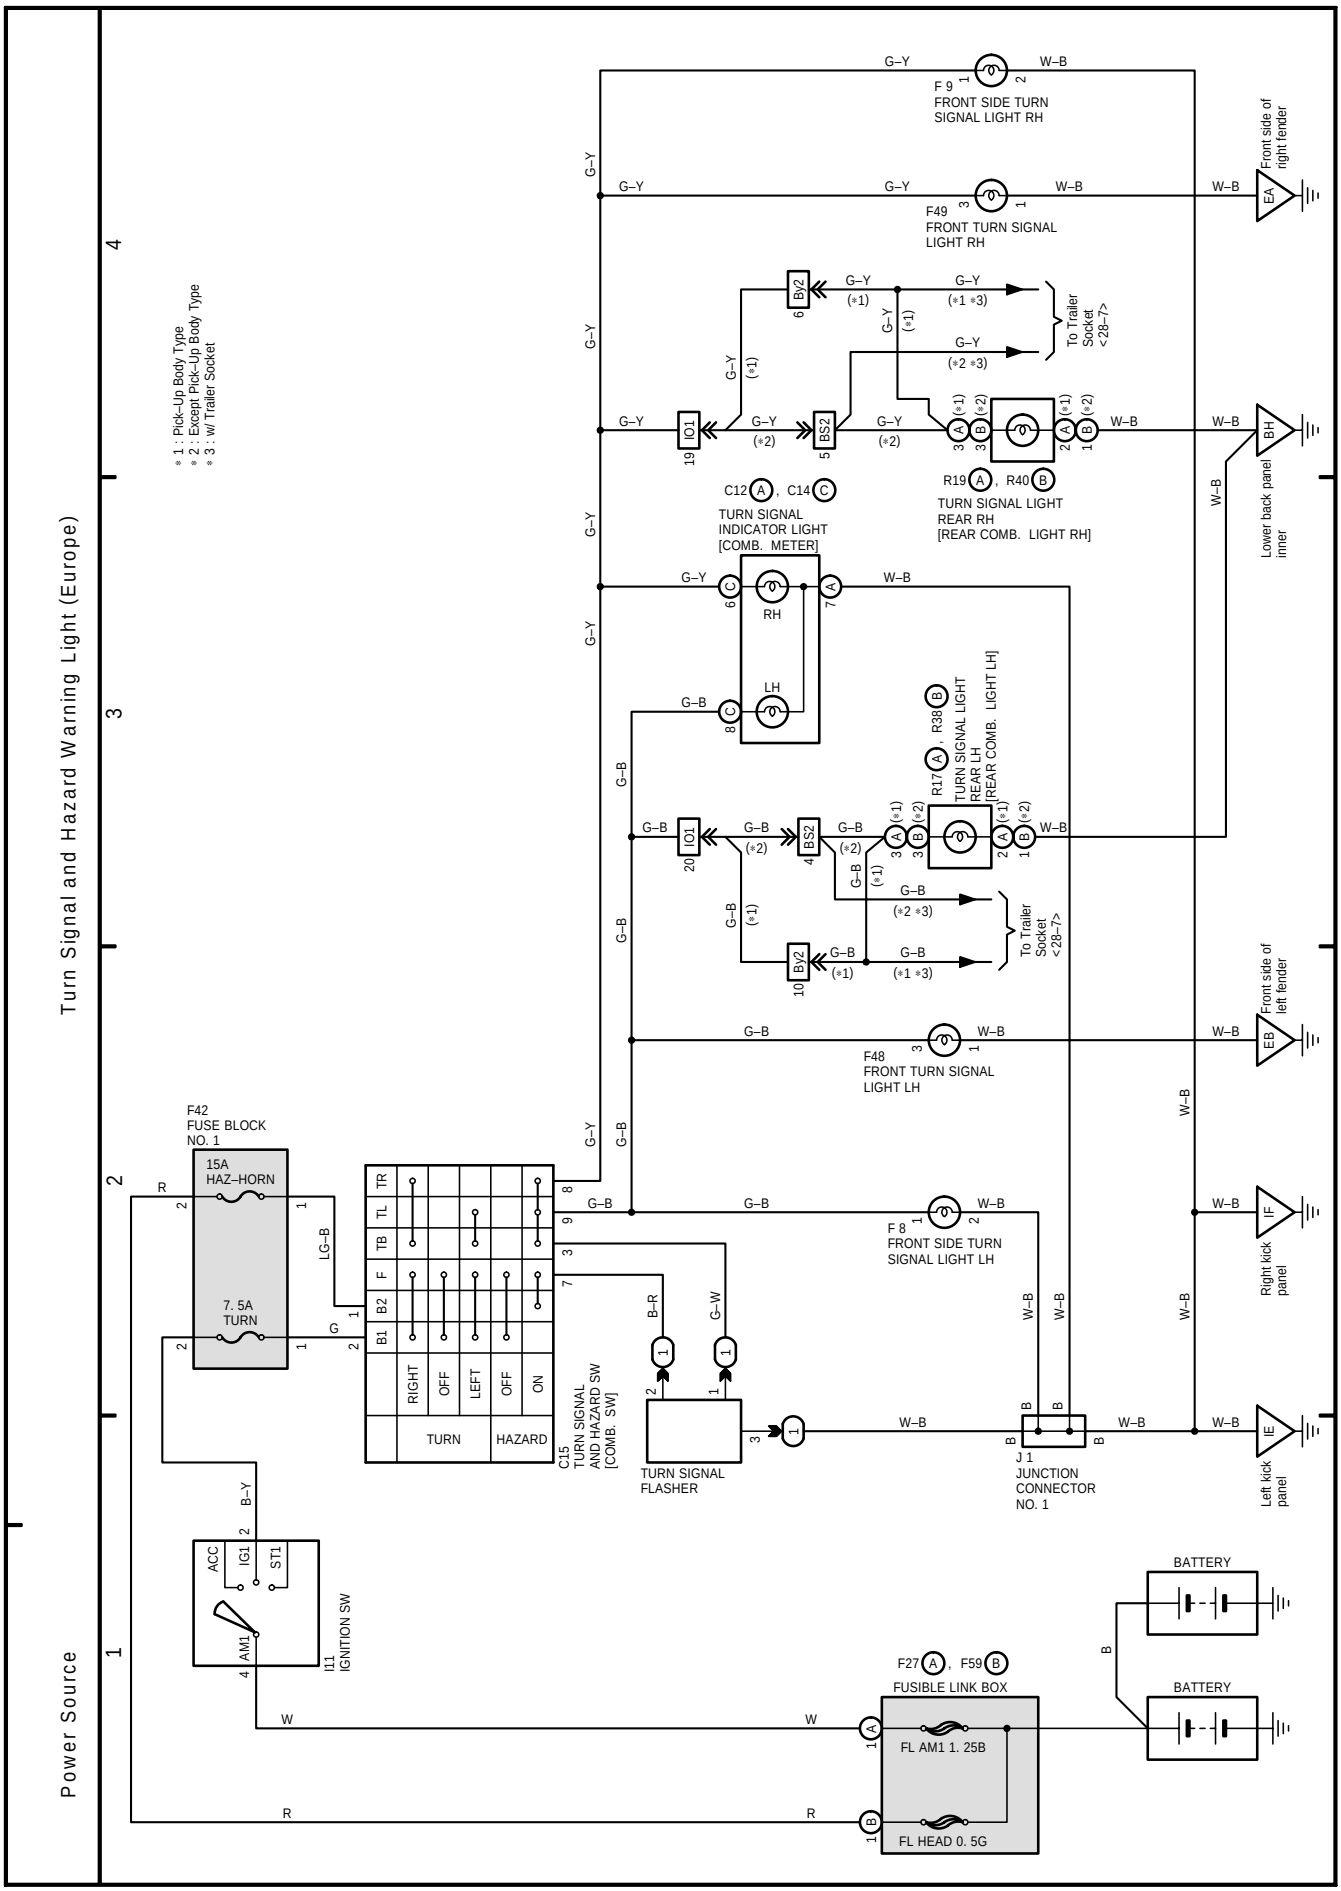
24 LAND CRUISER
Power Source
Turn Signal and Hazard Warning Light (Europe)
1
2
3
4
* 1 : Pick–Up Body Type
* 2 : Except Pick–Up Body Type
* 3 : w/ Trailer Socket
F 9
FRONT SIDE TURN SIGNAL LIGHT RH
F49
FRONT TURN SIGNAL LIGHT RH
Front side of right fender
To Trailer Socket <28–7>
C12 (A), C14 (C)
TURN SIGNAL INDICATOR LIGHT [COMB. METER]
RH
LH
R19 (A), R40 (B)
TURN SIGNAL LIGHT REAR RH [REAR COMB. LIGHT RH]
Lower back panel inner
R17 (A), R38 (B)
TURN SIGNAL LIGHT REAR LH [REAR COMB. LIGHT LH]
F48
FRONT TURN SIGNAL LIGHT LH
Front side of left fender
F42
FUSE BLOCK NO. 1
15A HAZ–HORN
7. 5A TURN
C15
TURN SIGNAL AND HAZARD SW [COMB. SW]
TR
TL
TB
F
B2
B1
RIGHT
OFF
LEFT
OFF
ON
TURN
HAZARD
TURN SIGNAL FLASHER
F 8
FRONT SIDE TURN SIGNAL LIGHT LH
Right kick panel
J 1
JUNCTION CONNECTOR NO. 1
Left kick panel
I11
IGNITION SW
ACC
IG1
ST1
AM1
BATTERY
BATTERY
F27 (A), F59 (B)
FUSIBLE LINK BOX
FL AM1 1. 25B
FL HEAD 0. 5G