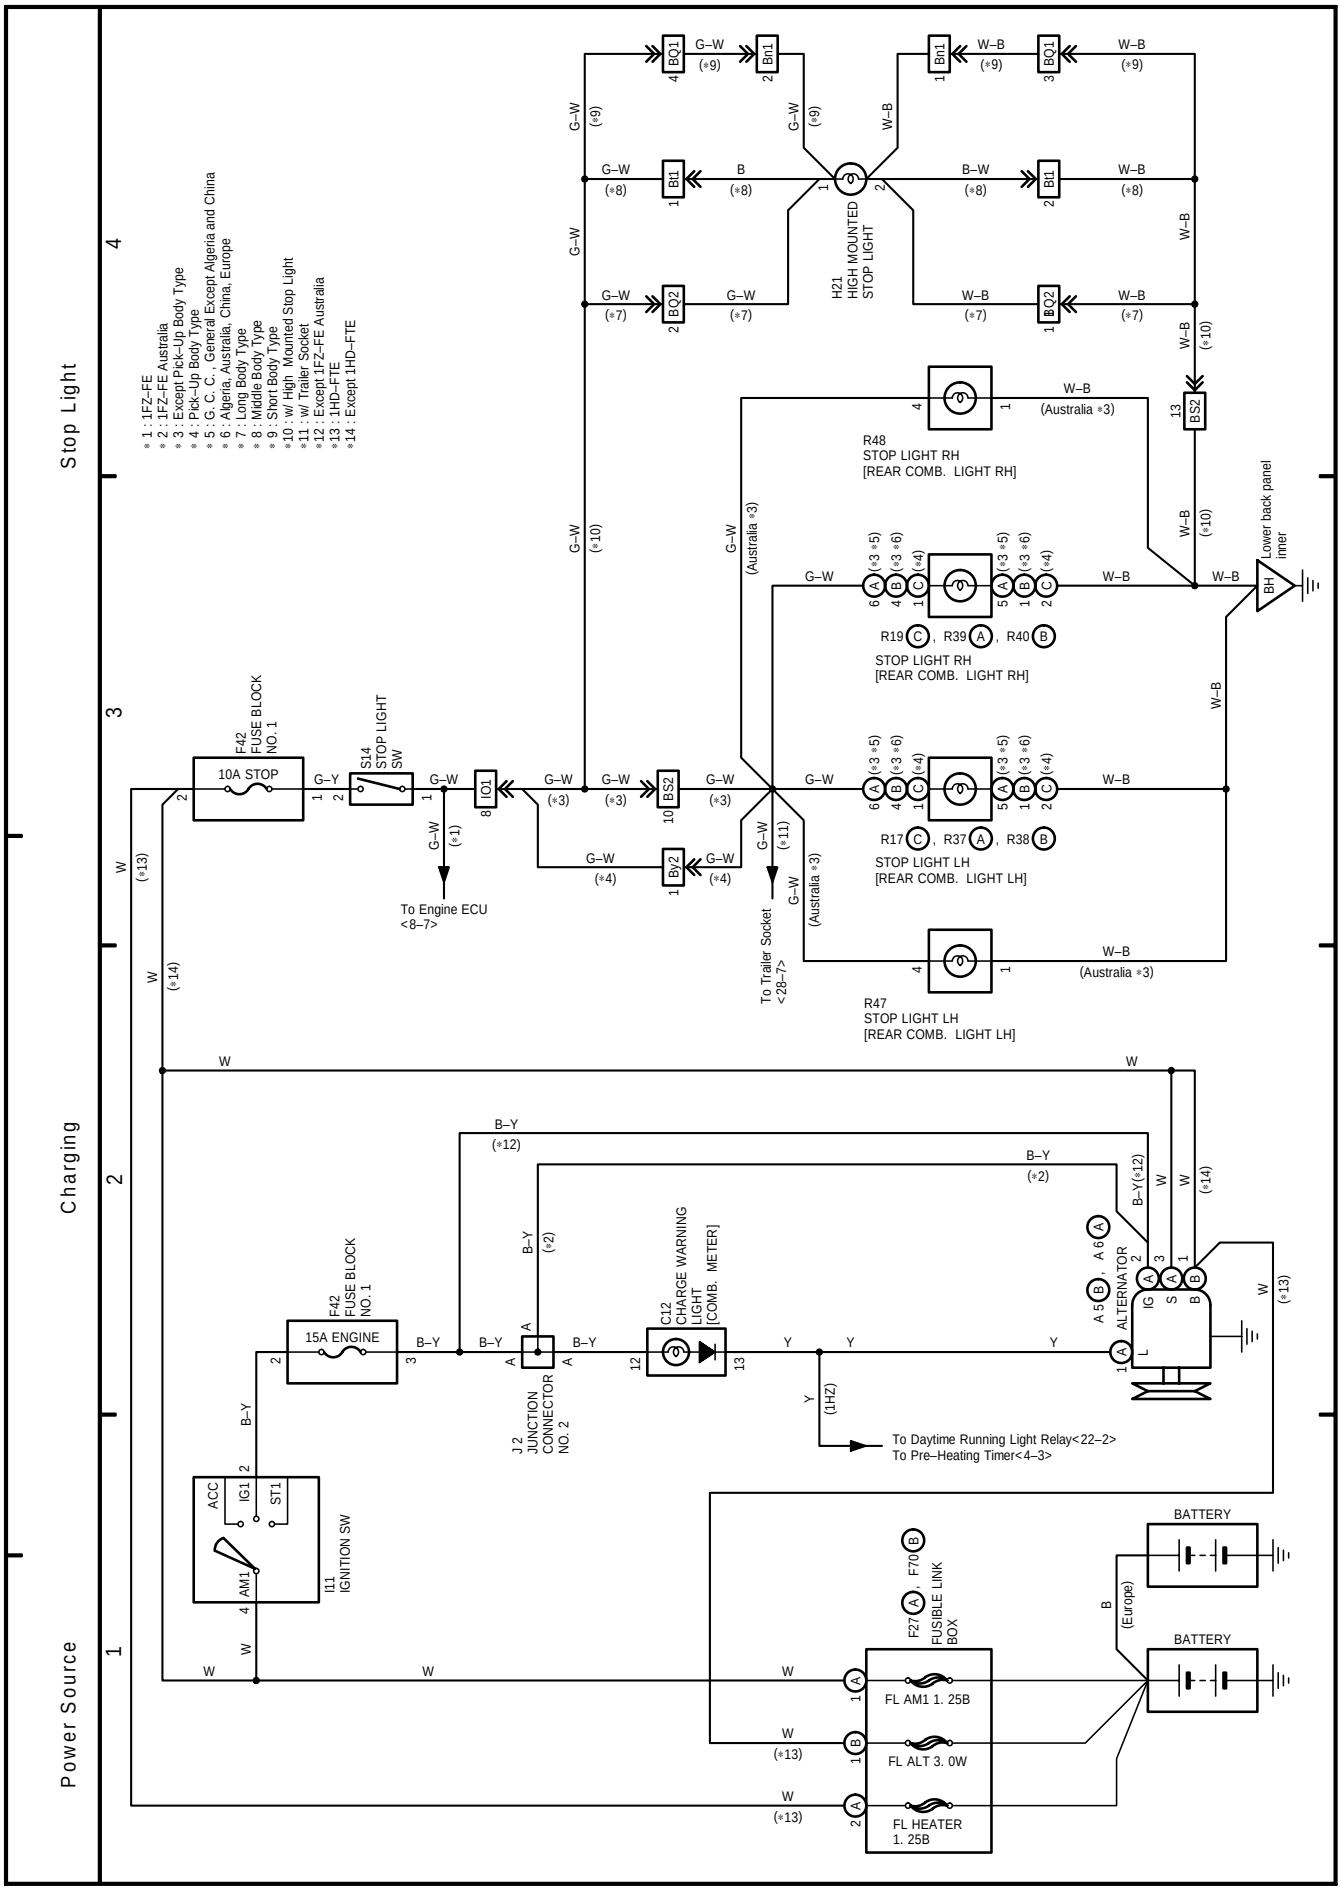
Power Source
Charging
Stop Light
1
2
3
4
* 1 : 1FZ–FE
* 2 : 1FZ–FE Australia
* 3 : Except Pick–Up Body Type
* 4 : Pick–Up Body Type
* 5 : G. C. C. , General Except Algeria and China
* 6 : Algeria, Australia, China, Europe
* 7 : Long Body Type
* 8 : Middle Body Type
* 9 : Short Body Type
*10 : w/ High Mounted Stop Light
*11 : w/ Trailer Socket
*12 : Except 1FZ–FE Australia
*13 : 1HD–FTE
*14 : Except 1HD–FTE
F42 FUSE BLOCK NO. 1
10A STOP
S14 STOP LIGHT SW
To Engine ECU <8–7>
To Trailer Socket <28–7>
H21 HIGH MOUNTED STOP LIGHT
R48 STOP LIGHT RH [REAR COMB. LIGHT RH]
R19 C, R39 A, R40 B
STOP LIGHT RH [REAR COMB. LIGHT RH]
R17 C, R37 A, R38 B
STOP LIGHT LH [REAR COMB. LIGHT LH]
R47 STOP LIGHT LH [REAR COMB. LIGHT LH]
Lower back panel inner
BH
F42 FUSE BLOCK NO. 1
15A ENGINE
J 2 JUNCTION CONNECTOR NO. 2
C12 CHARGE WARNING LIGHT [COMB. METER]
A 5 B, A 6 A
ALTERNATOR
To Daytime Running Light Relay<22–2>
To Pre–Heating Timer<4–3>
I11 IGNITION SW
ACC
IG1
ST1
AM1
F27 A, F70 B
FUSIBLE LINK BOX
FL AM1 1. 25B
FL ALT 3. 0W
FL HEATER 1. 25B
BATTERY
BATTERY
(Europe)
(Australia *3)
(1HZ)